

VOLVO
for life

VOLVO
WIRING DIAGRAM S40 (04-)N50/C70 (06-)

TP 3999202

2007

Vehicles with SRS (Airbag)/SIPS bag/ IC (Inflatable Curtain)

Warning!

Extra caution must be exercised when working on vehicles equipped with SRS/SIPS bag/IC in order to avoid:

1. Personal injuries when performing repair work.
2. Damage or malfunction of the SRS/SIPS bag/IC system.

Work involving the SRS/SIPS bag/IC systems or other components in the vehicle that may affect the SRS/SIPS bag/IC systems must always be performed by an authorized Volvo workshop.

In case of doubt, consult the SRS and SIPS bag/IC service manual.

Is the vehicle equipped with SRS/SIPS bag/IC?

Vehicles with SRS are most easily recognized by the letters SRS in the center of the steering wheel. If the vehicle also has a passenger side airbag, the letters SRS are stamped on the dashboard above the glove compartment. SRS vehicles from 1993 and onward also have explosive seat belt tensioners. SIPS bags are only installed on SRS vehicles from 1995 and onward. SIPS bag decals are located on the windshield and seat compartment. Vehicles with IC can be recognized by the letters IC on the C/D panel (4 door) or the B panel (5 door).

General recommendations

- Be especially careful when working on or around SRS, SIPS, and IC components.
- Make sure that no wires are pinched, frayed, or pierced.
- Never install accessories by the sensors.
- Where applicable, work on the steering wheel, steering shaft, or steering gear must be done in accordance with the methods in the SRS section of VIDA.
- Certain components of the aforementioned systems must be grounded while working. Read the appropriate sections in VIDA.
- Install no accessories in the areas between the A and B posts, the B and C posts, and the C and D posts.

Test terminal

Data link connector in the passenger compartment.

Changes introduced up to April 2006

Any changes made to the vehicles after this date are not included in the manual. If necessary refer to service bulletins.

Volvo models are sold in versions adapted for different markets. These adaptations depend on factors such as legal requirements, taxation, and market demands.

This manual may therefore include illustrations and text that do not apply to the vehicles in your country.

Order number TP 3999202

Replaces previous publication 3999201 at Electronic Wiring Diagram (EWD)
TP 39101001

Also available at Electronic Wiring Diagram (EWD) TP 39102001

We retain the right to make modifications.

Table of Contents 1:3

Vehicles with SRS (Airbag)/SIPS bag/ IC (Inflatable Curtain).....	2
Abbreviations	7
How to use the wiring diagrams 1:2.....	8
Electrical distribution 1:2.....	10
 Fuses	
Engine compartment distribution box F1-F10.....	12
Engine compartment distribution box F11-F18.....	13
Engine compartment distribution box F20-F31.....	14
Engine compartment distribution box F32-F34.....	15
Engine compartment distribution box F35-FH1	16
Central Electronic Module (CEM) F43-F49.....	17
Central Electronic Module (CEM) F51-F63.....	18
Central Electronic Module (CEM) F64-F74.....	19
Central Electronic Module (CEM) F77-F86.....	20
Battery PF1-PF2.....	21
 Relays	
Ignition switch and relays.....	22
Distribution box in engine compartment R2-R14	23
Central Electronic Module (CEM) R15-R18.....	24
Central Electronic Module (CEM) R1-R11B	25
Other relays	26
 Ground connections	
Overview.....	27
31/3 - 31/10	28
31/11 - 31/52	29
31/66 - 31/67	30
31/80 - 31/107	31
31/110 - 31/116	32
31/117 - Ground connections in chassis.....	33
 Control modules	
Overview of locations.....	34
Overview of designations.....	35
Central Electronic Module (CEM) 1:2	36
Data communication, Low speed CAN 1:2	38
Data communication, High speed CAN	40
Data communication, MOST S40/V50	41
Data communication, MOST C70	42
Data communication, LIN 1:2	43
Start Control Module (SCU)	45
Accessory Electronic Module (AEM)	46
 Group 23 Fuel system	
Engine management system Diesel, 5-cyl. 2.4l 1:3.....	47
Engine management system, 4-cyl. 1.6l 1:2.....	50
Engine management system, 4-cyl. 1.8l & 2.0l 1:2.....	52
Engine management system, 5-cyl. 1:2.....	54
Engine management system, 5-cyl. Turbo 1:2	56
Engine management system Diesel, 4-cyl. 1.6l 1:2	58
Engine management system Diesel, 4-cyl. 2.0l 1:2	60
Emission control, 4-cyl. 1.6l	62
Emission control, 4-cyl. 1.8l & 2.0l	63
Emission control, 5-cyl.....	64
Emission control, 5-cyl. Turbo.....	65
 Group 26 Cooling system	
Cooling fan.....	66
Cooling fan Diesel.....	67
 Group 27 Engine control	
Cruise control, 4-cyl.....	68
Cruise control, 5-cyl.....	69
 Group 32 Alternator and voltage regulator	
Power supply, 4-cyl.....	70
Power supply, 5-cyl.....	71
 Group 33 Starting system	
Starting system, 4-cyl.....	72
Starting system, 5-cyl.....	73
Starting system, 5-cyl. Diesel.....	74
 Group 35 Lighting	
Follow-me-home lighting.....	75
High and low beam	76
High and low beam (Bi-Xenon)	77
Manual beam length adjustment.....	78
Automatic beam length adjustment (Bi-Xenon)	79
Position/Parking lights, Tail lights S40/V50	80
Position/Parking lights, Tail lights (Bi-Xenon) S40/V50	81
Position/Parking lights, Tail lights C70.....	82
Position/Parking lights, Tail lights (Bi-Xenon) C70.....	83
Fog lights S40/V50	84
Fog lights C70	85
Fog lights LHD, Japan S40/V50.....	86
Fog lights LHD, Japan C70.....	87
Brake lights S40/V50	88
Brake lights C70	89
Reversing lights S40/V50.....	90
Reversing lights C70.....	91
Interior lighting S40/V50 1:2	92
Interior lighting C70 1:2.....	94
Instrument and control illumination	96
Auxiliary lights	97

Table of Contents 2:3

Group 36 Additional electrical equipment

Direction indicators and hazard warning flashers	
S40/V50	98
Direction indicators and hazard warning flashers	
(Bi-Xenon) S40/V50	99
Direction indicators and hazard warning flashers	
C70	100
Direction indicators and hazard warning flashers	
(Bi-Xenon) C70	101
Windshield wiper/washer	102
Headlight washer	103
Rear window wiper/washer V50	104
Rain sensor.....	105
Horn	106
Immobilizer/Steering column lock module (SCL)	107
Keyless vehicle S40/V50 1:2	108
Keyless vehicle C70 1:2	110
Rear parking assistance	112
Front parking assistance.....	113
Anti-theft alarm S40/V50.....	114
Anti-theft alarm C70.....	115
Accessory Electronic Module (AEM)	116

Group 37 Wiring and fuses

12V outlet S40/V50.....	117
12V outlet C70.....	118
Diagnostics system.....	119
Tow hitch cable harness, 4-pin	120
Tow hitch cable harness, 7-pin	121
Tow hitch cable harness, 13-pin	122

Group 38 Instruments

Driver information module.....	123
Seat belt reminder S40/V50.....	124
Seat belt reminder C70.....	125

Group 39 Other

Audio S40/V50 1:2.....	126
Audio C70 1:2.....	128
Audio High Performance/Premium Sound	
S40/V50 1:2	130
Audio High Performance/Premium Sound C70 1:2 ...	132
Cellular phone 1:2.....	134
Satellite radio.....	136

Multimedia & Traffic information	137
Turn by Turn navigation, Audio.....	138
Turn by Turn navigation, Audio High Performance/	
Premium Sound	139
Handsfree Universal, Audio	140
Handsfree Universal, Audio High Performance/	
Premium Sound	141
Handsfree Max with Adapter.....	142
Handsfree Max	143
Subwoofer.....	144

Group 43 Transmission

Automatic transmission AW55-51.....	145
Transmission M66.....	146
Differential Electronic Module (DEM).....	147

Group 59 Brake system

Brake control system & STC.....	148
Brake control system & DSTC	149

Group 64 Steering

Electronic power steering.....	150
--------------------------------	-----

Group 83 Doors and openings

Central locking, front doors S40/V50	151
Central locking, rear doors S40/V50	152
Central locking system C70	153
Central locking, tailgate S40/V50.....	154
Central locking, tailgate C70	155
Central locking, storage compartment C70.....	156
Child safety lock S40/V50.....	157
Central locking, fuel filler flap	158
Signal receiver, remote-control, central locking	159
Power windows, front doors S40/V50.....	160
Power windows, front doors C70	161
Power windows, rear doors S40/V50.....	162
Power sunroof S40/V50.....	163
Power roof C70	164

Group 84 Exterior decorative elements, etc.

Power door mirrors S40/V50.....	165
Power door mirrors C70.....	166
Heated door mirrors	167
Heated rear window	168
Blind Spot Information System.....	169

Table of Contents 3:3

Group 85 Interior equipment

Power driver's seat with memory function LHD S40/V50	170
Power driver's seat with memory function RHD S40/V50	171
Power driver's seat with memory function LHD C70	172
Power driver's seat with memory function RHD C70	173
Power passenger seat with memory function LHD C70	174
Power passenger seat with memory function RHD C70	175
Power driver's seat LHD	176
Power driver's seat RHD	177
Power passenger seat LHD	178
Power passenger seat RHD	179
Heated seats.....	180

Group 87 Climate control system

Climate control system PTC element	181
Climate control system, 4-cyl. Gasoline 1:2.....	182
Climate control system, 5-cyl. 1:2.....	184
Climate control system, Diesel 1.6l & 2.0l 1:2	186
Parking heater, auxiliary heater	188
Relay, electric engine heater	189
Electric engine heater Flexifuel.....	190

Group 88 Internal equipment

Auto-dimming rearview mirror.....	191
Supplemental Restraint System Module (SRS) S40/V50 1:2	192
Supplemental Restraint System Module (SRS) C70 1:2	193

Connectors	195
-------------------------	------------

Branching points	229
-------------------------------	------------

Cable harness routing in vehicle

Engine harness Gasoline, 4-cyl. 1.6l	240
Engine harness Gasoline, 4-cyl. 1.8l	240
Engine harness Gasoline, 5-cyl.	241
Engine harness Gasoline, 5-cyl., Turbo.....	241
Engine harness Diesel 1.6l	242
Engine harness Diesel 2.0l.....	242
Engine harness Diesel 2.4l.....	243
Engine compartment harness, 4-cyl.	244
Engine compartment harness, 5-cyl.	244
Dashboard harness LHD	245
Dashboard harness RHD.....	245
Floor harness S40 LHD	246
Floor harness S40 RHD.....	247
Floor harness V50 LHD	248
Floor harness V50 RHD.....	249
Floor harness C70 LHD	250
Floor harness C70 RHD.....	251
Roof harness S40	252
Roof harness V50	252
Tunnel harness S40/V50	253
Tunnel harness C70	253
Driver's door harness S40/V50	254
Passenger door harness S40/V50.....	254
Driver's door harness C70	255
Driver's door harness supplement C70.....	255
Passenger door harness C70	256
Passenger door harness supplement C70.....	256
Rear right door harness S40/V50	257
Rear left door harness S40/V50.....	257
Harness, rear side panel, left C70	258
Harness, rear side panel, right C70	258
Tailgate harness C70.....	260
Tailgate harness S40.....	259
Tailgate harness V50.....	259

Component illustrations	261
--------------------------------------	------------

Index 1:2	316
------------------------	------------

List of components 1:6	318
-------------------------------------	------------

Explanations

Abbreviations

Groups

Group 23	= Fuel system
Group 26	= Cooling system
Group 27	= Engine controls
Group 32	= Alternator and voltage regulator
Group 33	= Starting system
Group 35	= Lighting
Group 36	= Additional electrical equipment
Group 37	= Wiring and fuses
Group 38	= Instruments
Group 39	= Other
Group 43	= Transmission
Group 59	= Brake system
Group 64	= Steering
Group 83	= Doors and openings
Group 84	= Exterior decorative elements, etc.
Group 85	= Interior equipment
Group 87	= Climate control system
Group 88	= Internal equipment

Ignition switch symbols

X	= Accessories (audio position)
S	= Powered upon insertion of key
15	= Contact remains connected during start
15I	= Contact is broken while starting
30	= Constant power from the battery
50	= Start

Countries/Markets

A	= Austria
AUS	= Australia
B	= Belgium
CDN	= Canada
CH	= Switzerland
D	= Germany
DK	= Denmark
E	= Spain
EU/OS	= Markets outside USA and Canada
FIN	= Finland
GB	= Great Britain
ISR	= Israel
J	= Japan
KOR	= Korea
N	= Norway
NL	= Netherlands
S	= Sweden
USA	= United States of America
WEU	= Western Europe

Other

AUTO	= Automatic transmission
AWD	= All wheel drive
CAN	= CAN communication
D	= Diesel
DPY	= Display
ECC	= Electronic climate control system
ETA	= Engine throttle body
EXT. X	= Extended X-feed
GDL	= Gas discharge lamp
HISPEED	= High speed data bus
IR	= Infrared sensor
LIN	= LIN communication
LHD	= Left-hand drive
LOSPEED	= Low speed data bus
MAN	= Manual transmission
MEMORY	= Memory driver's seat
MMS	= Mass Movement Sensor
GASOLINE	= Gasoline
RHD	= Right-hand drive
SCR	= Screened
SRS	= Airbag
T	= Turbocharged engine
W/O	= Without
2WD	= Two-wheel drive
4CYL, I4	= 4-cylinder engine
5CYL, I5	= 5-cylinder engine

Colors

BK, SB	= Black
BN	= Brown
BU, BL	= Blue
GN	= Green
GY, GR	= Gray
LGN	= Light Green
OG, OR	= Orange
PK, P	= Pink
RD, R	= Red
VT, VO	= Violet
WH, W	= White
YE, Y	= Yellow

How to use the wiring diagrams 1:2

The descriptions below apply in general to all wiring diagram manuals, although not all sections are necessarily contained in this manual.

A. Component designation

Every component has a component designation that consists of two parts.

The first part is a type number that describes the type of component in question, for example 3/xx.

The second part of the designation is a serial number, e.g. x/2.

Together, this constitutes a component designation, e.g. 3/2.

At the end of the manual is a list of components, where, with the help of the component designation, you can read off the name of the component, for example, 3/2 = light switch.

List of type numbers

The list shows which type of component that respective type numbers refer to, for example, 3/x = switch, 6/x = electric motor, etc.

- | | |
|----|----------------------------------|
| 1 | Battery |
| 2 | Relay |
| 3 | Switch |
| 4 | Control module |
| 5 | Driver information module |
| 6 | Electric motor |
| 7 | Sensor |
| 8 | Actuator |
| 9 | Heating element |
| 10 | Light |
| 11 | Fuse |
| 15 | Electrical distribution rail/box |
| 16 | Audio |
| 17 | Service/diagnostics |
| 18 | Contact reel |
| 19 | Meter |
| 20 | Ignition component/shunt |
| 27 | Optics |
| 31 | Ground connection |
| 63 | Branching point |
| 64 | Connector |

B. Branching points

The wiring diagrams contain numbered junction points, e.g. 63/352.

This manual contains a section with a list of branching points. This list shows all the components that are connected to each branching point.

The location of the branching points is shown in the "Cable harness routing in vehicle" section.

C. Connectors

Connectors provide a bridge between two cable harnesses and are described in the "Connectors" section.

D. Electrical distribution

Operation of the fuses and relays is shown in the "Electrical distribution" section.

E. Data communication

Today's cars contain CAN and MOST networks that transfer information. Connections to these networks are not shown in their entirety in the respective wiring diagram. Complete information on CAN and MOST communication is found in the section "Control modules".


F. Abbreviations

A number of different abbreviations are used in the manual. These are explained in the section "Abbreviations".

G. Component location


There is a section at the end of the manual in which the appearance and location of components is described in numerical order.

How to use the wiring diagrams 2:2

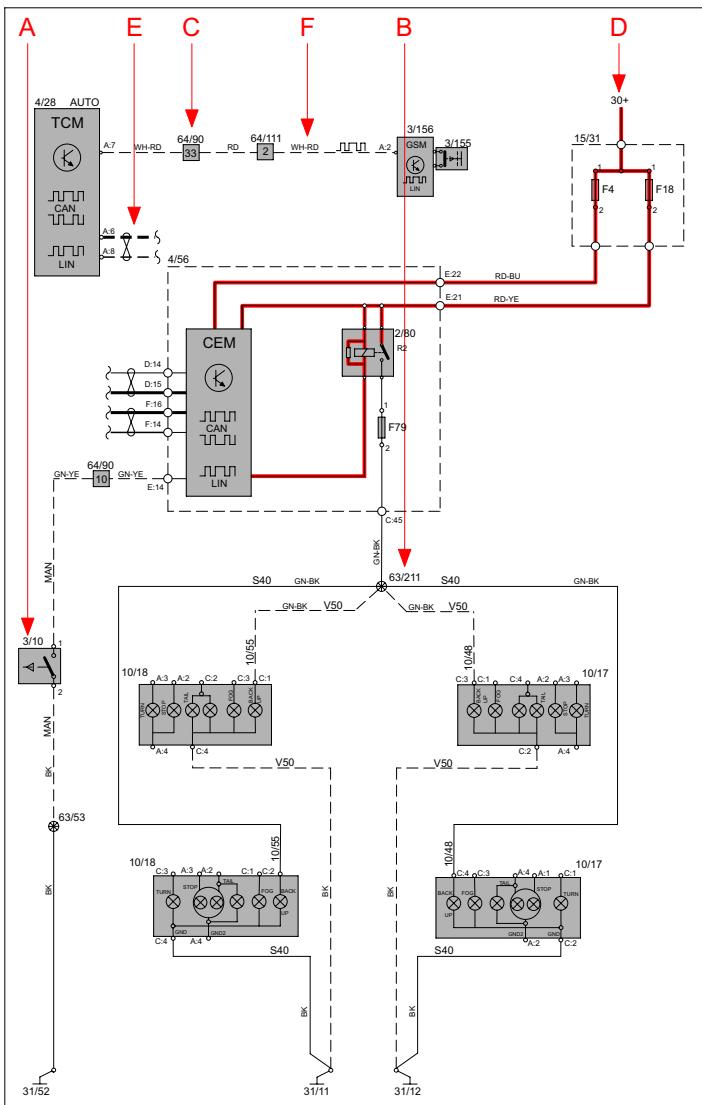


Explanation of symbols

- = System voltage
- = Ground connection via wiring
- = Ground connection in component/chassis
- = Screened wire
- = Junction point
- = Twisted cable
- = Electrical connection
- = Variant
- = CAN communication
- = CAN high data signal (CAN H)
- = CAN low data signal (CAN L)
- = LIN communication
- = DIN cable, coaxial cable, etc.
- = Data communication
- = CAN communication
- = MOST communication
- = MOST communication
- = Connection with distribution box
- = Further connection to...
- = Connector between cable harnesses
- = Connector connected in component

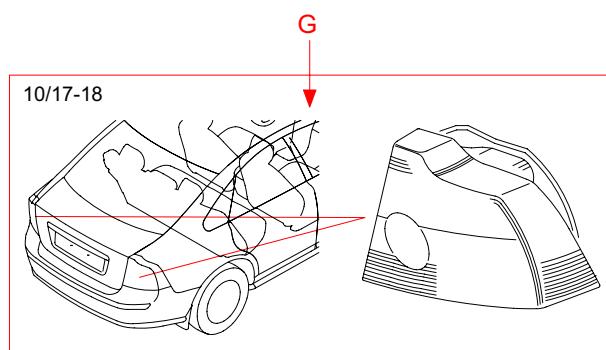


Electrical distribution 1:2

Overview

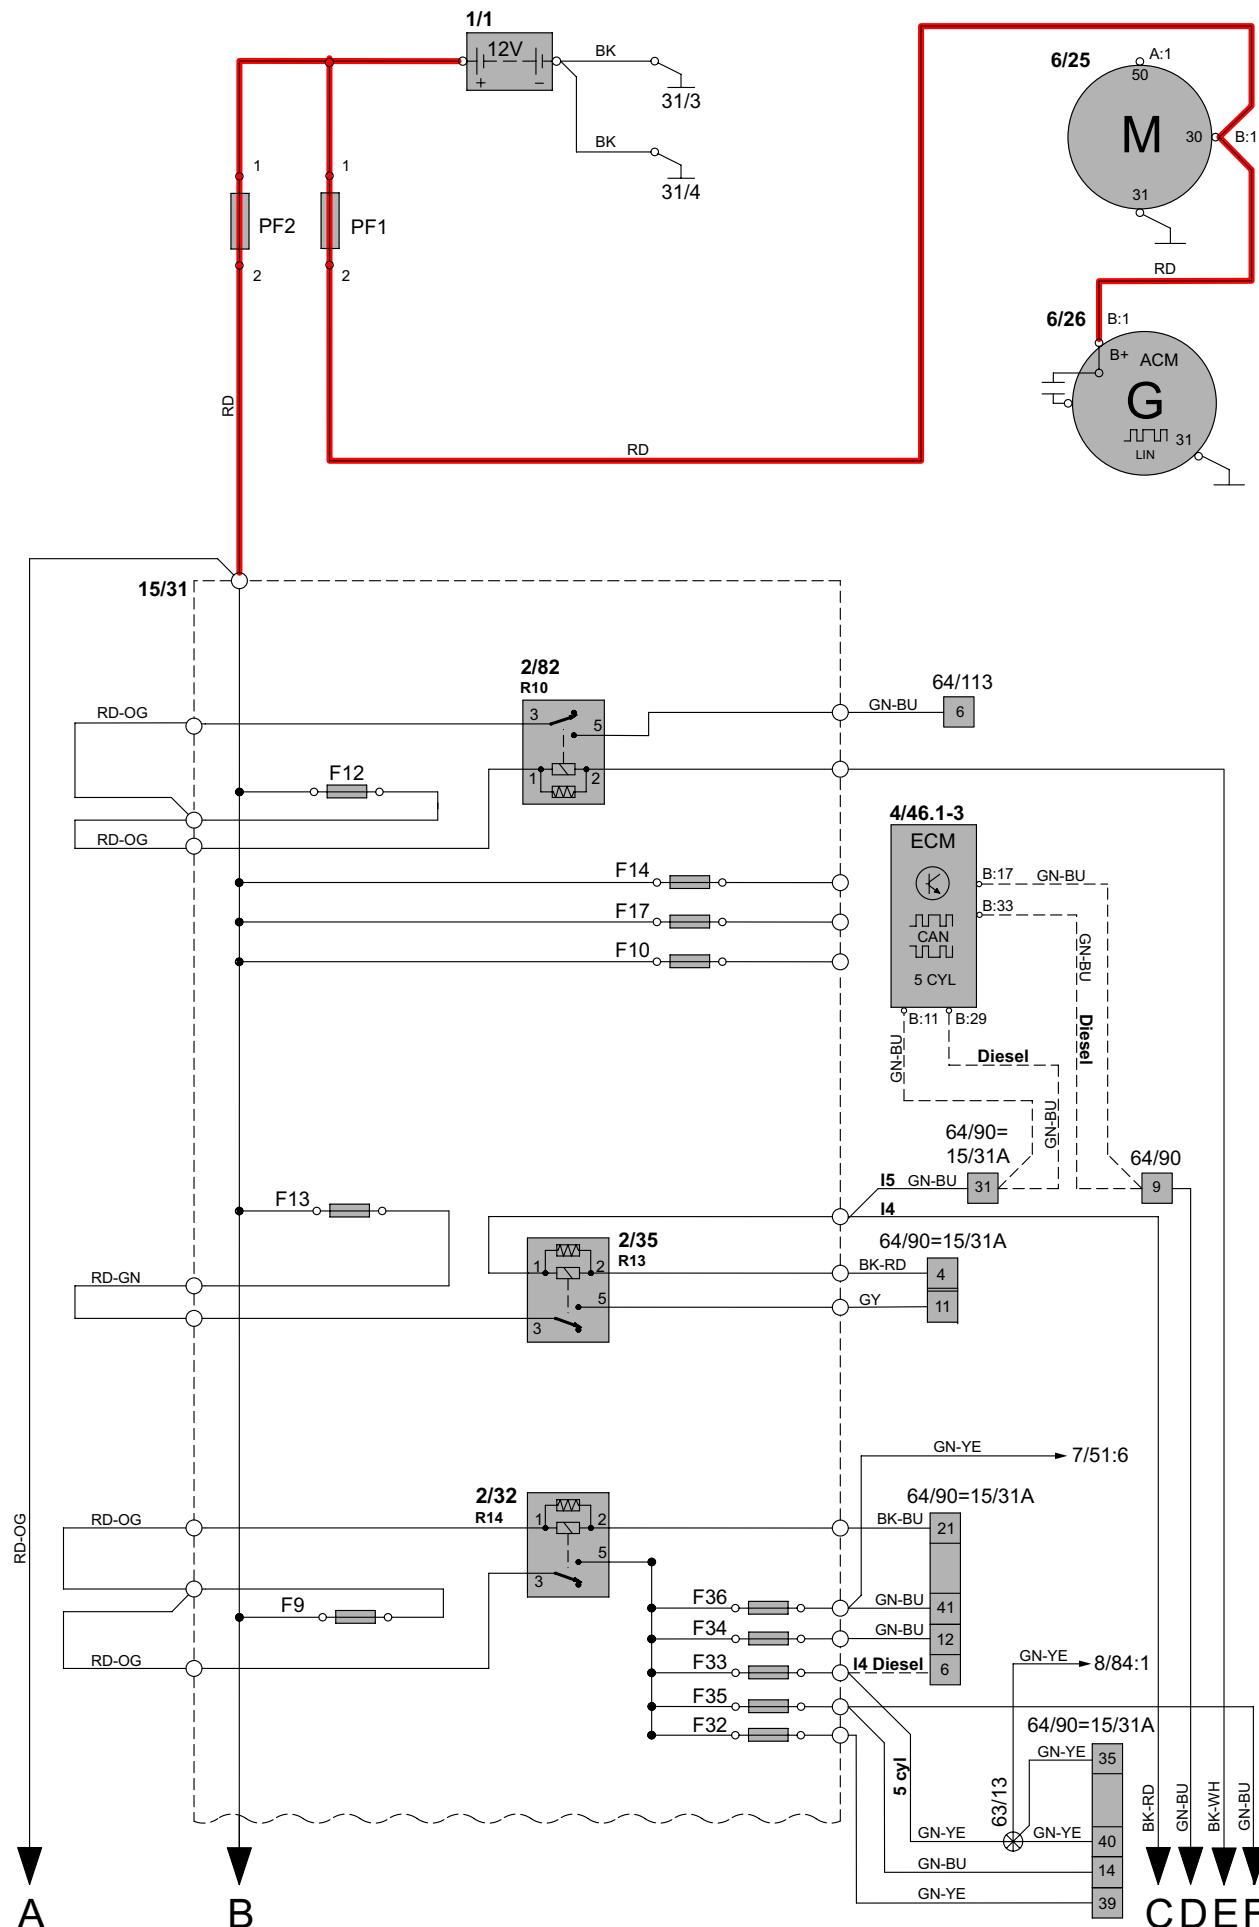


Electrical distribution 2:2

Overview

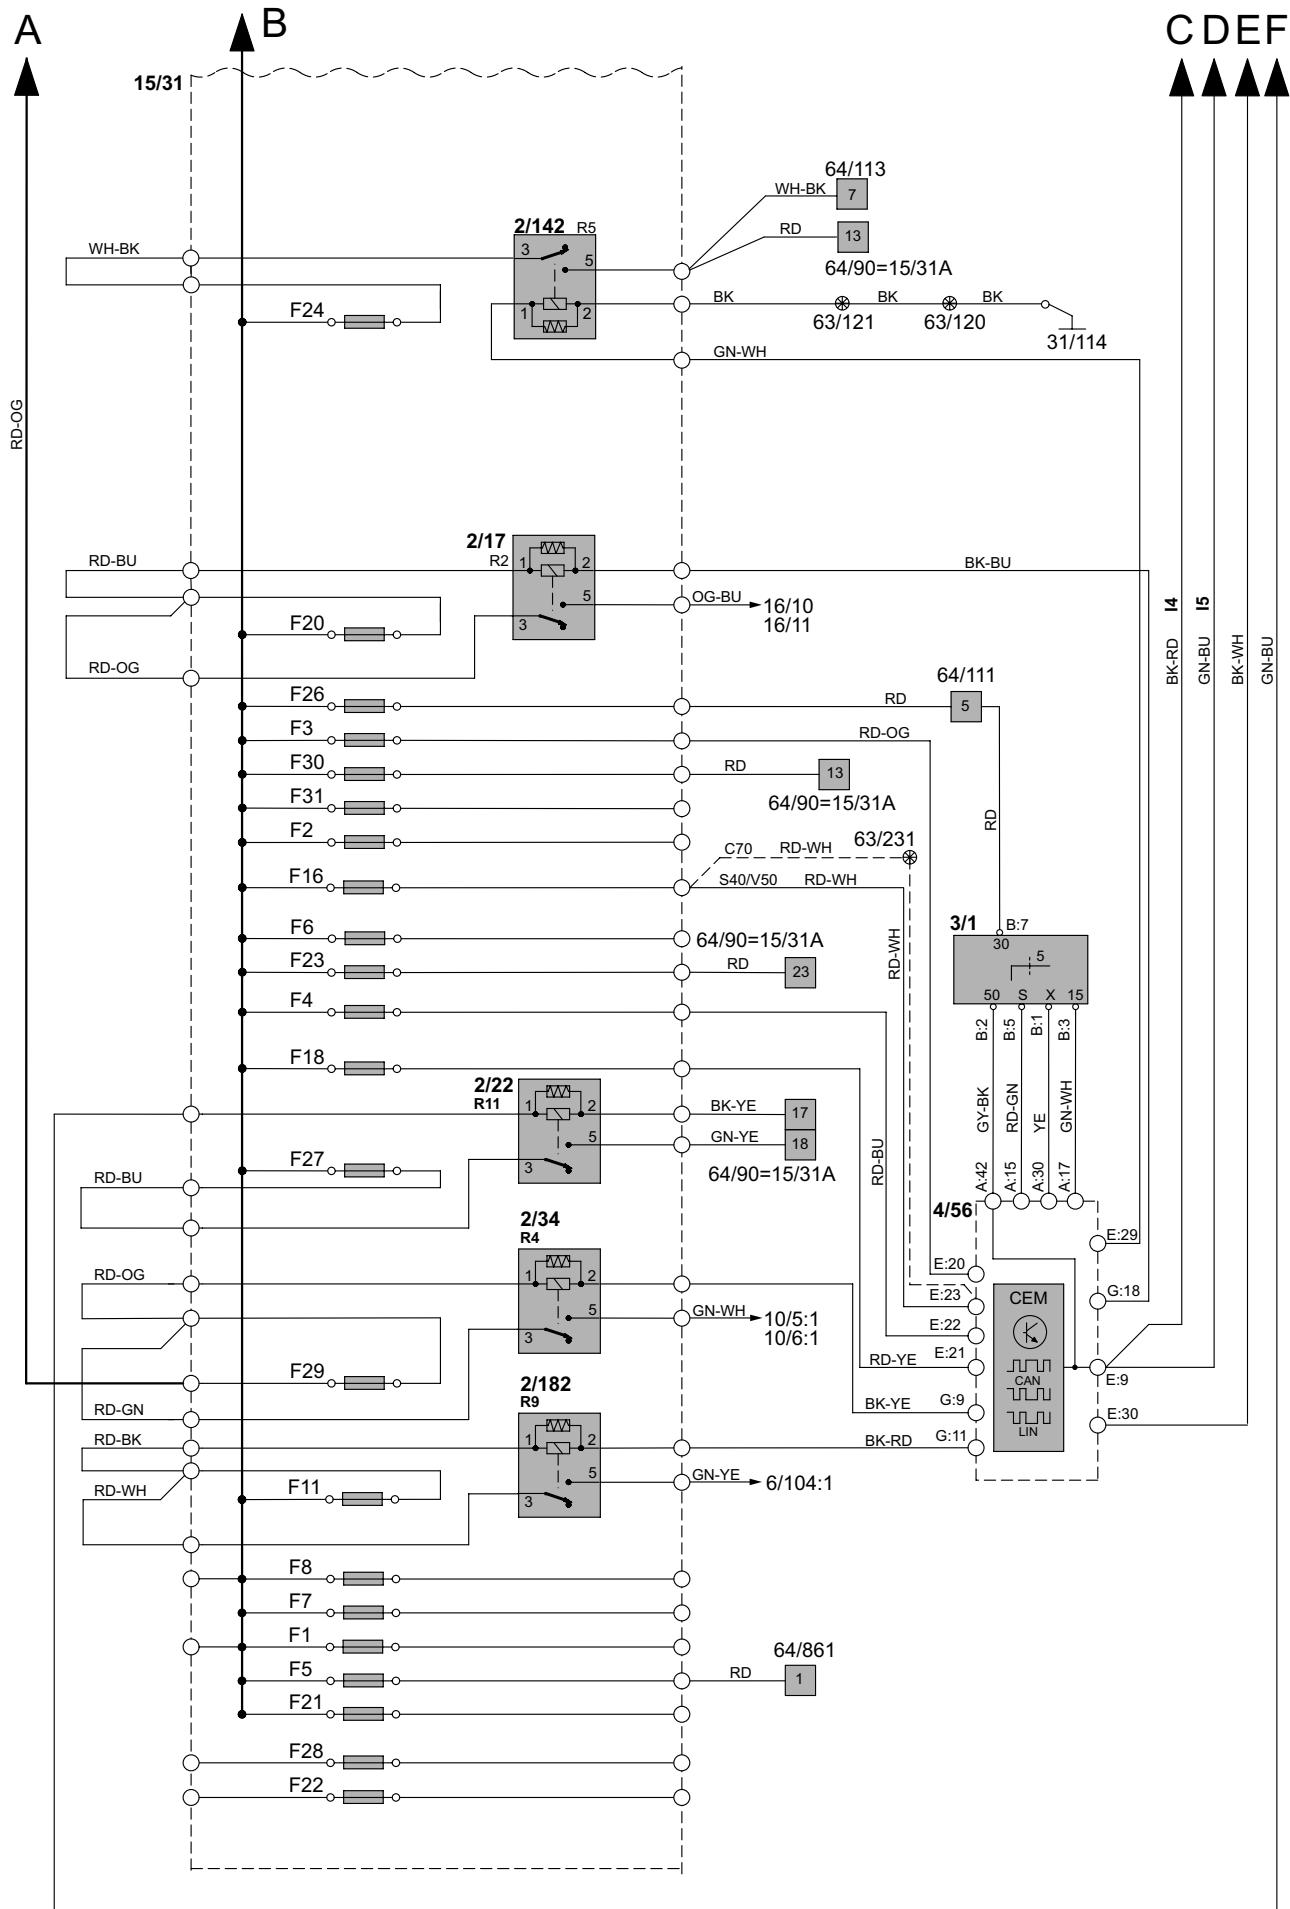

Fuses

Engine compartment distribution box F1-F10

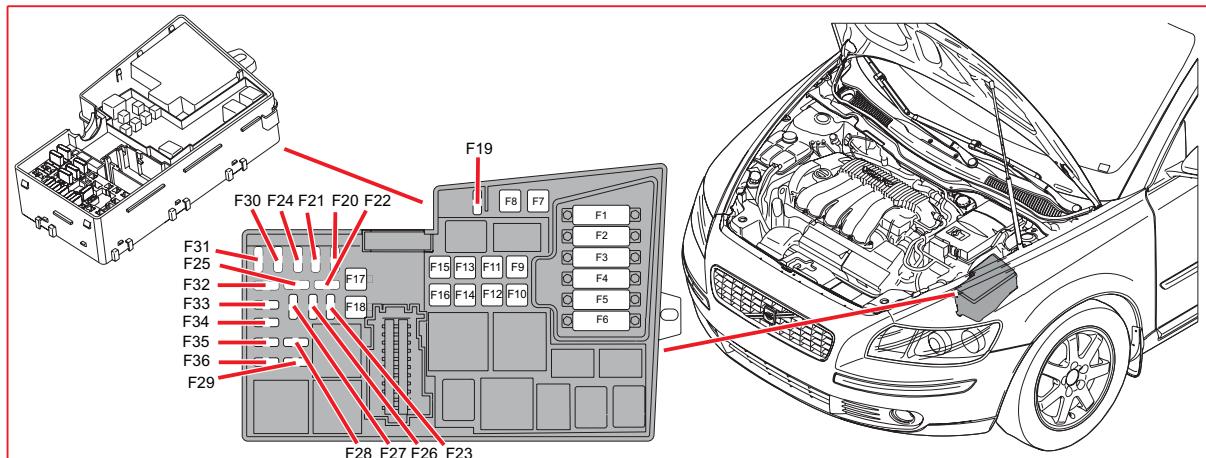


15/31 Engine compartment distribution box

No.	Fuse function	via	A
F1	4/71 Cooling fan control module	-	50
F2	6/71 Electrical Power Steering Module (EPS)	-	80
F3	2/193 Relay, comfort functions F45 Fuse in the Central Electronic Module (CEM) F48-F49 Fuses in the Central Electronic Module (CEM) F60-F61 Fuses in the Central Electronic Module (CEM) F62-F63 Fuses in the Central Electronic Module (CEM) F68-F69 Fuses in the Central Electronic Module (CEM) F84-F85 Fuses in the Central Electronic Module (CEM)	2/193 2/193 2/193 -	60
F4	2/63 Relay, high beam 4/56 Central Electronic Module (CEM) F55 Fuses in the Central Electronic Module (CEM) F58-F59 Fuses in the Central Electronic Module (CEM) F74 Fuses in the Central Electronic Module (CEM) F77 Fuses in the Central Electronic Module (CEM)	2/63	60
F5	9/41 PTC-element	-	80
F6	4/109 Glow plug control module, 4-cyl. Diesel 4/109 Glow plug control module, 5-cyl. Diesel	-	60 70
F7	4/16 Brake Control Module (BCM), pump	-	30
F8	4/16 Brake Control Module (BCM), valves	-	20
F9	2/32 Main relay, engine management system F32-F36 Fuses in the engine compartment distribution box	2/32	30
F10	4/31 Fan control module	-	40

continues

Fuses

Engine compartment distribution box F11-F18

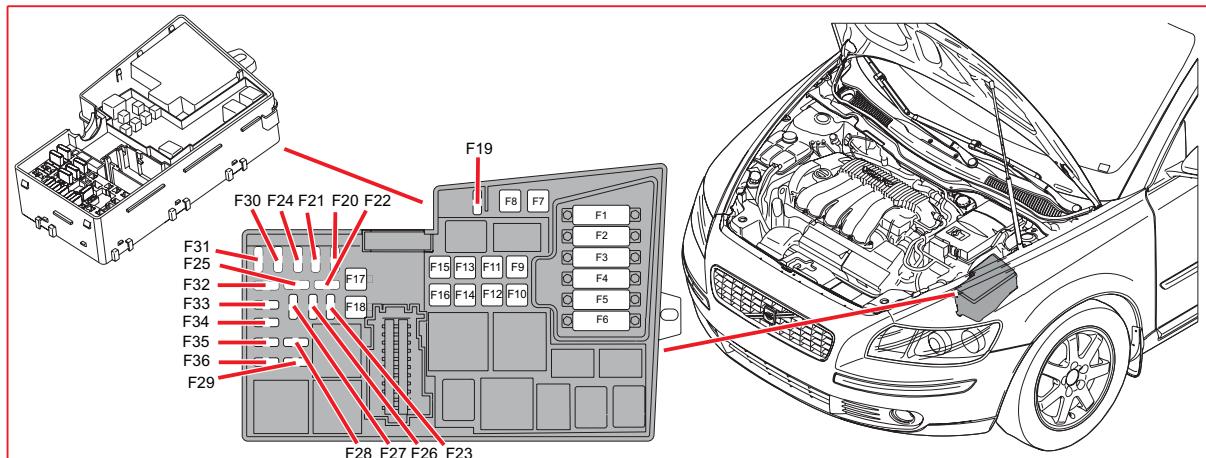


15/31 Engine compartment distribution box

No.	Fuse function	via	A
F11	2/182 Relay, headlight washer motor 6/104 Pump, high pressure headlight washer	- 2/182	20
F12	2/82 Relay, heated rear window 9/2 Heated rear window	- 2/82, 16/141	30
F13	6/25 Starter motor	2/35	30
F14	4/110 Trailer Module (TRM)	-	40
F15	4/59 Convertible Roof Module (CRM)		30
F16	2/159 Infotainment relay, S40/V50 16/105 Audio module (AUD), S40/V50 F22 Engine compartment distribution box, S40/V50 F43 Fuse in the Central Electronic Module (CEM), S40/V50 F64 Fuse in the Central Electronic Module (CEM), S40/V50 F65-F67 Fuses in the Central Electronic Module (CEM), S40/V50	- - - - - 2/159	30
F16	2/159 Infotainment relay, C70 16/105 Audio module (AUD), C70 F22 Engine compartment distribution box, C70 F43 Fuse in the Central Electronic Module (CEM), C70 F64 Fuse in the Central Electronic Module (CEM), C70 F65-F67 Fuses in the Central Electronic Module (CEM), C70	- - - - - 2/159	40
F17	6/1 Wiper Motor Module (WMM)	-	30
F18	2/80 Relay, reversing light 2/89 Relay, interior lighting 4/56 Central Electronic Module (CEM) F46-F47 Fuses in the Central Electronic Module (CEM) F56-F57 Fuses in the Central Electronic Module (CEM) F79 Fuse in the Central Electronic Module (CEM) F81-F83 Fuses in the Central Electronic Module (CEM) F86 Fuse in the Central Electronic Module (CEM)	- - - 2/89 - 2/80 - 2/89	40

continues

Fuses

Engine compartment distribution box F20-F31

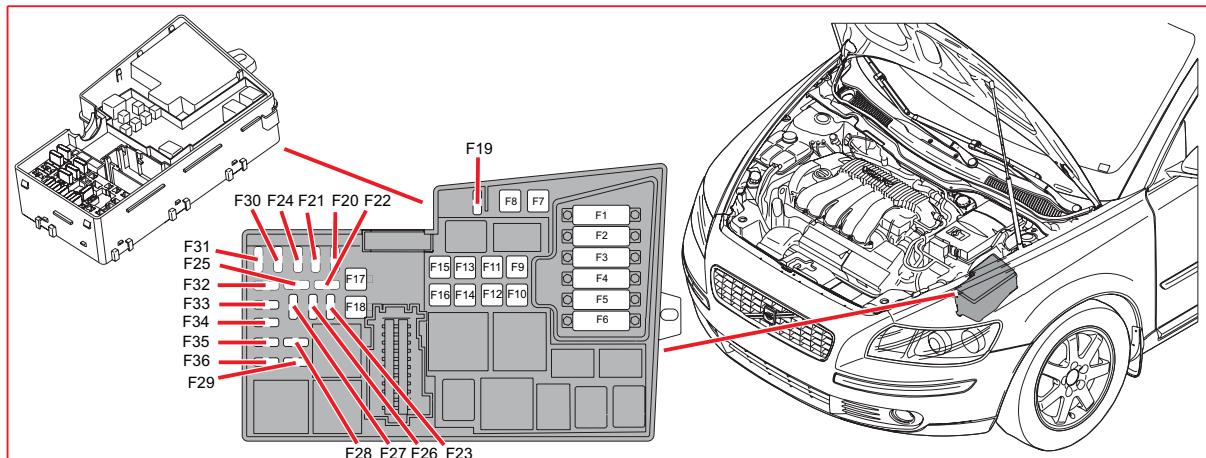


15/31 Engine compartment distribution box

No.	Fuse function	via	A
F20	2/17 Relay, horn 16/10 Horn 1 16/11 Horn 2	- 2/17 2/17	15
F21	4/7 Combustion Preheater Module (CPM)	-	20
F22	16/79 Subwoofer Module (SUB)	-	25
F23	4/28 Transmission Control Module (TCM) 4/46 Engine Control Module (ECM), 5-cyl.	- -	10
F24	9/32 PTC resistor, crankcase ventilation 9/38 Electrically heated fuel filter	2/142 2/142	20
F26	3/1 Start Control Module (SCU) 4/56 Central Electronic Module (CEM) F44 Fuse in the Central Electronic Module (CEM) F51-F54 Fuses in the Central Electronic Module (CEM) F73 Fuse in the Central Electronic Module (CEM)	- 3/1 3/1 3/1 3/1	15
F27	8/3 Electromagnetic clutch, climate control system	2/22	10
F29	2/34 Relay, front fog lights 10/5 Fog light, front left 10/6 Fog light, front right	- 2/34 2/34	15
F30	4/46 Engine control module (ECM), 4-cyl. 2.0l/1.6l Diesel	-	3
F31	6/26 Alternator, 4-cyl.	-	10

continues

Fuses

Engine compartment distribution box F32-F34

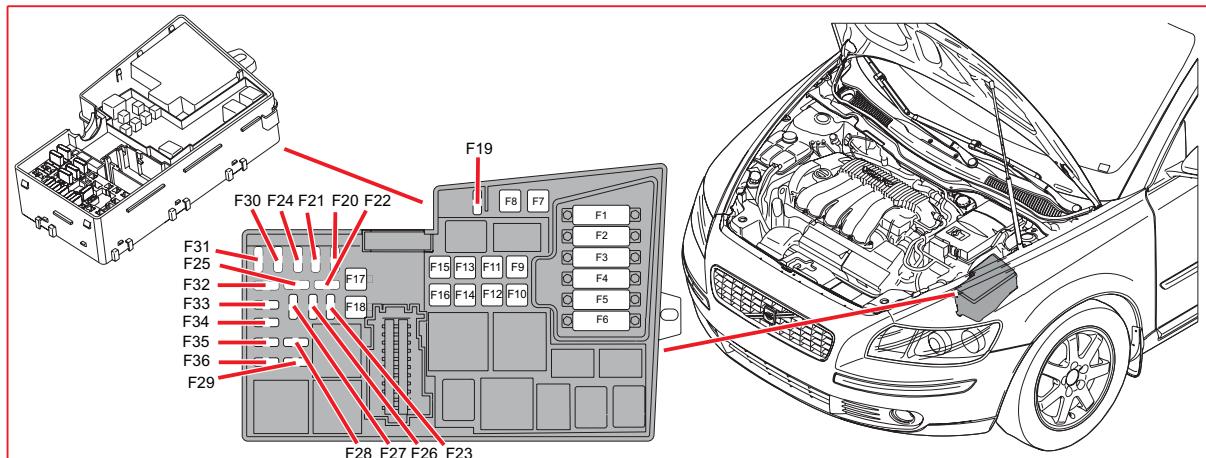


15/31 Engine compartment distribution box

No.	Fuse function	via	A
F32	6/143 Regulator motor, Turbo 7/15 Front heated oxygen sensor, 4-cyl. 7/17 Mass airflow sensor (MAF) 7/82 Rear heated oxygen sensor, 4-cyl. 8/6-8/10 Injection valves, 5-cyl. 8/121 Coolant valve, 4-cyl. 2.0l Diesel 8/122 Rear heated oxygen sensor, 4-cyl. 1.6l Diesel	-	10
F33	4/46 Engine control module (ECM), 5-cyl. Diesel 6/114 Vacuum pump, 5-cyl. 7/15 Front heated oxygen sensor, 5-cyl. 7/82 Rear heated oxygen sensor, 5-cyl. T 7/186 Rear heated oxygen sensor, not 5-cyl. 7/187 Center heated oxygen sensor, not 5-cyl. 8/84 Switch, vacuum pump 9/32 PTC resistor, crankcase ventilation 9/38 Heated fuel filter, Diesel	8/84	20
F34	8/6-8/9 Injection valves, 1.6l. 8/77 Fuel volume control valve, 4-cyl. 2.0l Diesel 8/111 High-pressure solenoid valve, 4-cyl. 1.6l Diesel 8/113 Fuel pressure bypass valve, Man 8/119 Pressure monitor, climate control system, 5-cyl. 8/120 EGR valve 8/133 Control valve fuel pressure 20/3 -20/7 Spark plug and ignition coil 20/17 Transformer, ignition coils, 1.6l	-	10

continues

Fuses

Engine compartment distribution box F35-FH1

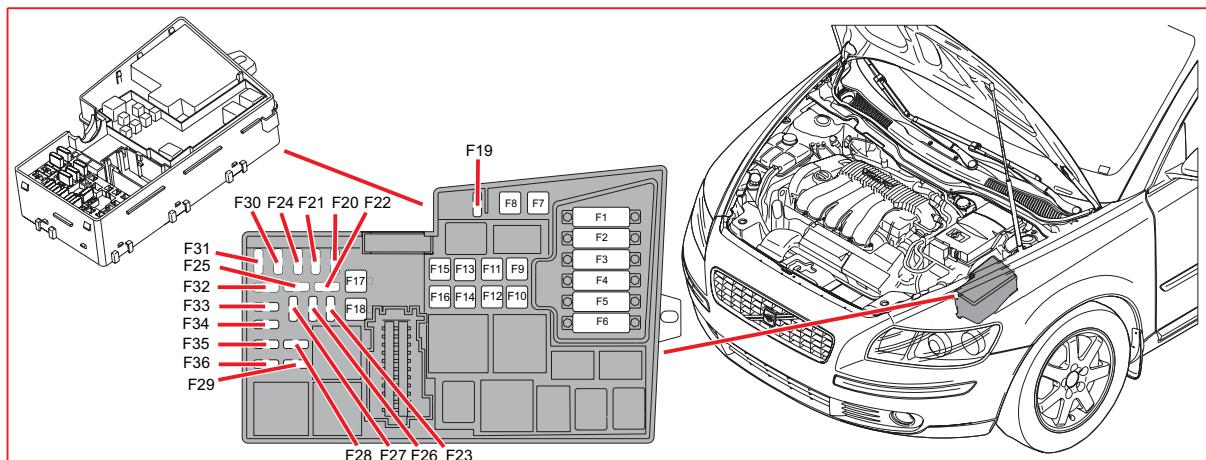


15/31 Engine compartment distribution box

No.	Fuse function	via	A
F35	2/22 Relay, climate control system 4/46 Engine control module (ECM), 5-cyl. Diesel 6/67 Pump, fuel leakage control 6/99 Engine EGR 7/17 Mass airflow sensor (MAF) 7/192 Water detection sensor 8/6-8/9 Injection valves 8/18 EVAP valve 8/19 Solenoid, variable valve timing, intake 8/28 Turbocharger control valve 8/45 Solenoid, variable valve timing, intake 8/65 Power steering pressure monitor 8/81 Solenoid, variable valve timing outlet 8/82 Solenoid, variable turbo geometry, 4-cyl. Diesel 8/114 Valve mixing air/fuel 8/132 Control valve inlet 9/32 PTC-resistor air preheating	- 2/22 -	15
F36	4/46 Engine Control Module (ECM) 7/15 Heated oxygen sensor, front 7/51 Accelerator pedal sensor	- -	10
FH1	10/65 Auxiliary light, front right 10/69 Auxiliary light, front left	2/64 2/64	20

Fuses

Central Electronic Module (CEM) F43-F49

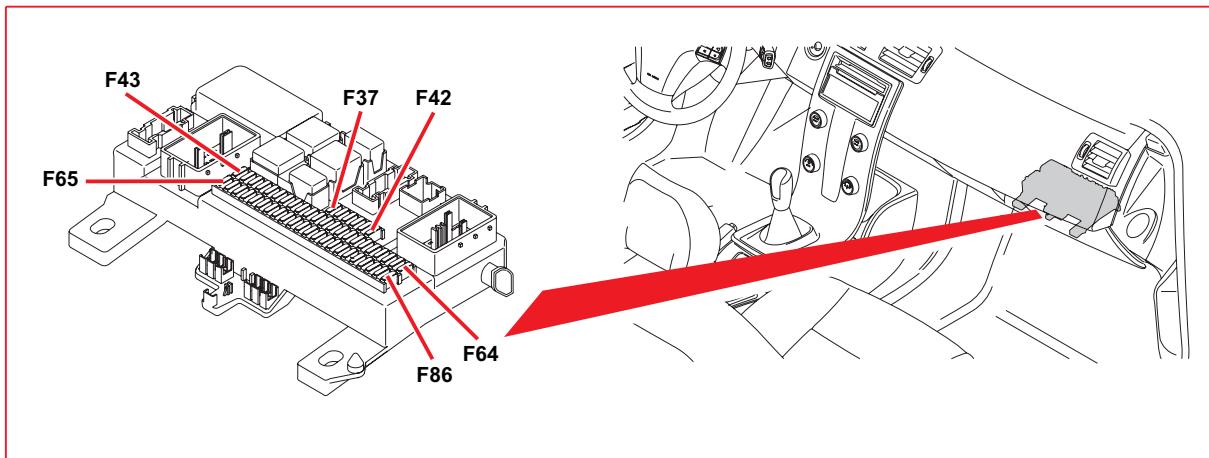


4/56 Central Electronic Module (CEM)

No.	Fuse function	via	A
F43	16/1 Integrated Audio Module (IAM) 16/46 RTI Display 16/60 Phone Module (PHM) 16/108 Multimedia Module (MMM)	- - - -	15
F44	4/9 Supplemental Restraint System Module (SRS)	-	10
F45	9/1 Front 12V outlet 9/25 Rear 12V outlet	- -	15
F46	3/111 Light Switch Module (LSM) 5/1 Driver Information Module (DIM) 10/1 Lamp housing, front left 10/2 Lamp housing, front right 10/29 Glove compartment lighting 10/97 Courtesy lighting, left 10/102 Courtesy lighting, right	- - - - - - -	5
F47	10/22 Ceiling light 10/150 Rear reading light 10/114 Vanity mirror lighting, left 10/115 Vanity mirror lighting, right	- - - -	5
F48	2/16 Relay, rear window wiper 2/92 Relay, windshield washer motor 2/93 Relay, rear window washer motor 6/2 Washer pump 6/2 Washer pump 6/32 Rear window wiper motor	- - - 2/92 2/93 2/16	15
F49	4/9 Supplemental Restraint System Module (SRS) 7/93 Occupant Weight Sensor (OWS), USA/CDN	- -	10

continues

Fuses

Central Electronic Module (CEM) F51-F63

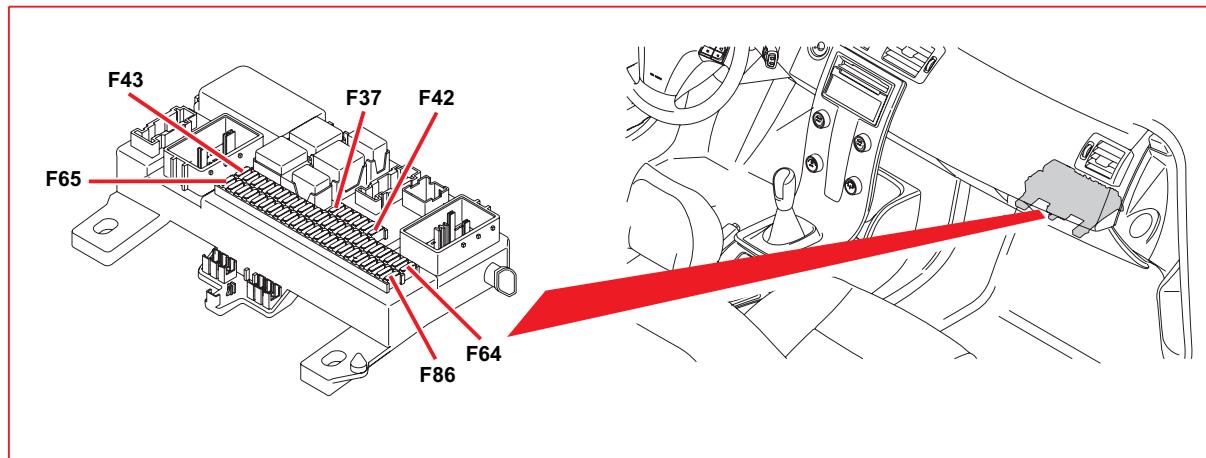


4/56 Central Electronic Module (CEM)

No.	Fuse function	via	A
F51	2/142 Fuel filter preheater relay 4/82 Differential Electronic Module (DEM) 4/86 Parking Assistance Module (PAM) 4/112 Gas Discharge Lamp Module (GDL), master, left 4/113 Gas Discharge Lamp Module (GDL), slave, right 10/1 Front left lamp housing, beam length adjustment 10/2 Front right lamp housing, beam length adjustment	- - - - - 4/112 4/113	10
F52	4/16 Brake Control Module (BCM) 4/28 Transmission Control Module (TCM)	- -	5
F53	6/71 Electrical Power Steering Module (EPS)	-	10
F54	4/46 Engine Control Module (ECM), 5-cyl. T	-	10
F55	4/93 Keyless Vehicle Module (KVM)	-	20
F56	16/35 Siren Control Module (SCM)	-	10
F57	3/9 Contact brake light 17/13 Data link connector	- -	15
F58	4/113 Gas Discharge Lamp Module (GDL), slave, right 10/2 Lamp housing, front right	- -	7.5
F59	4/112 Gas Discharge Lamp Module (GDL), master, left 10/1 Lamp housing, front left	- -	7.5
F60	9/12 Seat Heating Module (SHM), driver's side	-	15
F61	9/13 Seat Heating Module (SHM), passenger side	-	15
F62	4/33 Sunroof control module	-	20
F63	3/129 Rear Right Door Module (RDM)	-	20

continues

Fuses

Central Electronic Module (CEM) F64-F74

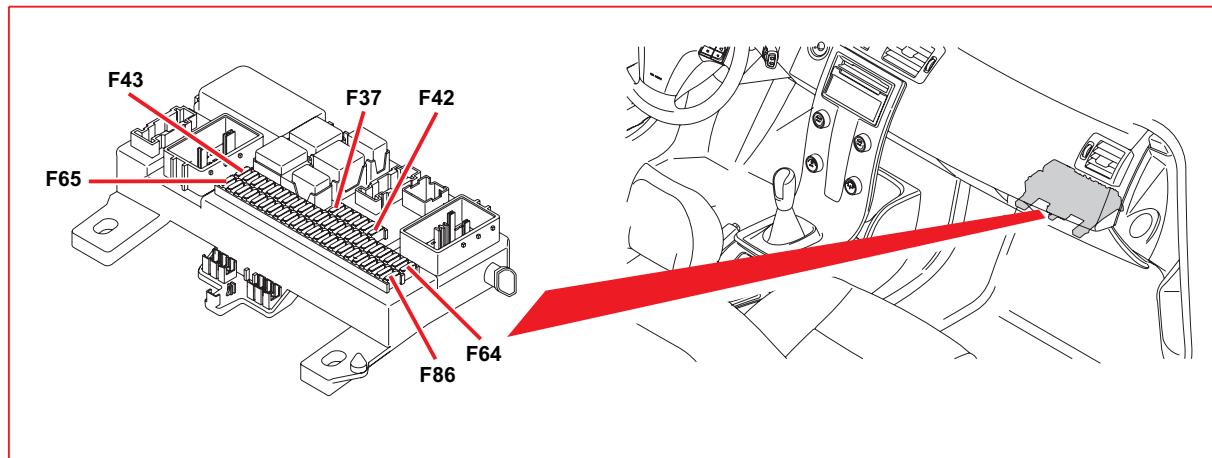


4/56 Central Electronic Module (CEM)

No.	Fuse function	via	A
F64	10/245 Lock indicator, left door, C70 10/246 Lock indicator, right door, C70 16/49 Traffic Message Channel Module (TMC) 16/139 Global Positioning System Module (GPS) 16/145 Remote Digital Audio Receiver (RDAR)	- - - - -	5
F65	2/157 Relay, subwoofer control module 7/182 Remote control IR sensor, RTI 16/46 RTI Display 16/105 Audio Module (AUD) 16/150 AM/FM antenna and amplifier, rear right fender	- - - - -	5
F66	3/112 Climate Control Module (CCM) 16/1 Integrated Audio Module (IAM) 16/1.2 Infotainment Control Module (ICM)	- - -	10
F68	3/254 Steering Wheel Module (SWM)	-	5
F69	6/48 Damper Motor Module (DMM), recirculation 6/95 Damper Motor Module (DMM), left-hand side 6/96 Damper Motor Module (DMM), right-hand side 6/102 Damper Motor Module (DMM), defroster 6/103 Damper Motor Module (DMM), floor/ventilation 7/149 Rain Sensor Module (RSM) 7/159 Air quality sensor	- - - - - -	5
F73	3/117 Switch unit, ceiling light 3/217 Belt buckle contact, rear left 3/218 Belt buckle contact, center rear 3/219 Belt buckle contact, rear right 4/33 Sunroof control module 8/48 Auto-dimming rearview mirror 10/22 Ceiling light	- - - - - -	5
F74	4/83 Fuel pump control module, Gasoline 6/33 Fuel pump	2/23 2/23, 26/5	15

continues

Fuses


Central Electronic Module (CEM) F77-F86

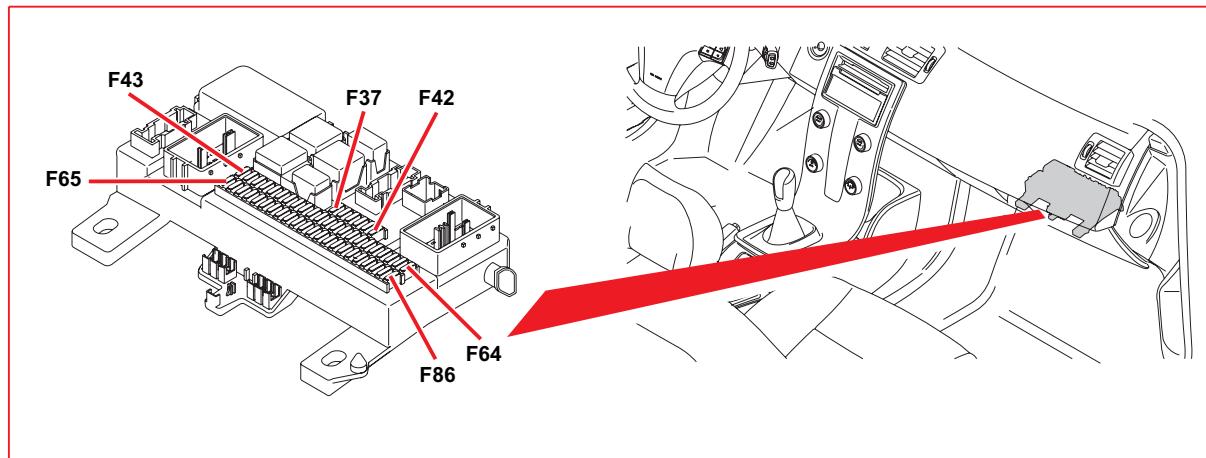

4/56 Central Electronic Module (CEM)

No.	Fuse function	via	A
F77	4/78 Accessory Electronic Module (AEM) 17/19 12V outlet, cargo compartment 17/39 13-pin outlet, tow hitch cable harness	- - -	15
F79	8/48 Auto-dimming rearview mirror 10/48 Reversing light, right 10/55 Reversing light, left	2/80 - -	5
F81	3/128 Rear Left Door Module (LDM)	-	20
F82	3/127 Passenger Door Module (PDM)	-	25
F83	3/126 Driver Door Module (DDM)	-	25
F84	3/27 Switch unit, power passenger seat 4/54 Power Seat Module (PSM)	- -	25
F85	3/26 Switch unit, power driver's seat 4/52 Power Seat Module (PSM)	-	25
F86	3/26 Switch unit, power driver's seat 3/27 Switch unit, power passenger seat 3/268 Load assistance switch 4/52 Power Seat Module (PSM) 4/54 Power Seat Module (PSM) 10/24 Cargo compartment lighting 10/25 Ceiling light, cargo compartment 10/26 Reading light, rear left 10/27 Reading light, rear right 10/114 Vanity mirror lighting, left 26/5 DC/AC converter, fuel tank	- - - - - - - - - - - 2/23	5

Fuses Battery PF1-PF2

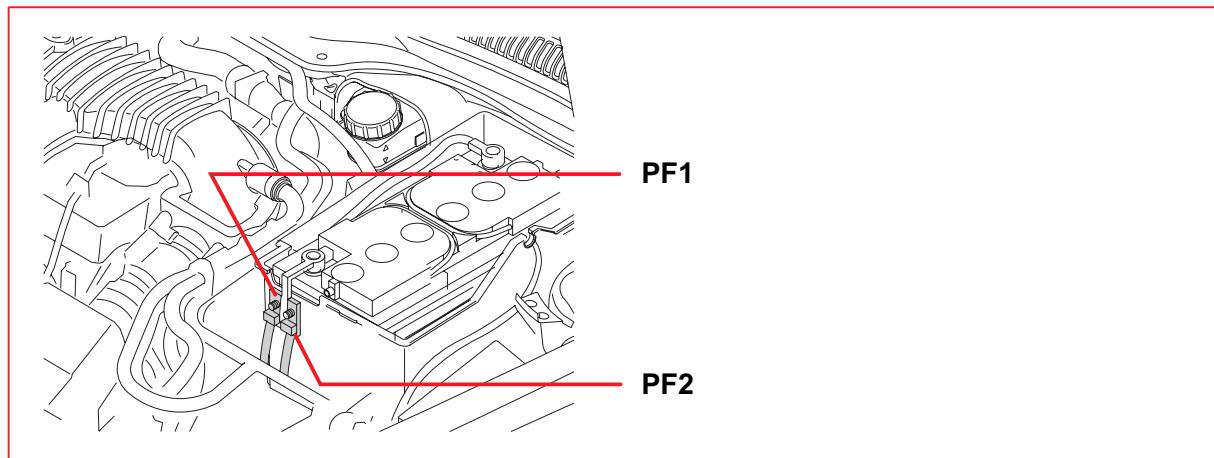


1/1 Battery

No.	Fuse function	via	A
PF1	6/25 Starter motor 6/26 Alternator	- -	150
PF2	F1-F14 Fuses in the engine compartment distribution box F16-F18 Fuses in the engine compartment distribution box F20-F21 Fuses in the engine compartment distribution box F23-F24 Fuses in the engine compartment distribution box F26-F27 Fuses in the engine compartment distribution box F29-F31 Fuses in the engine compartment distribution box	- - - - - -	150


Relays

Ignition switch and relays

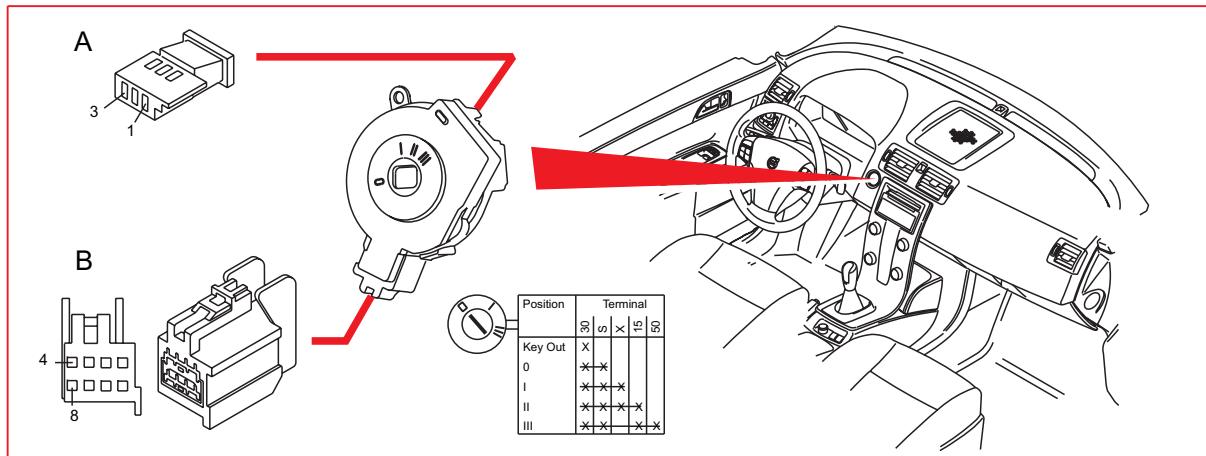

Relays, general


The diagram indicates two or three different designations for the relay's position. This is described below.

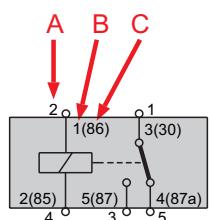

- A = Corresponds to the position on the back of the relay box (wiring side)
- B = Corresponds to the position on the relay.
- C = An old designation that may be found on the relay

Relays

Distribution box in engine compartment R2-R14

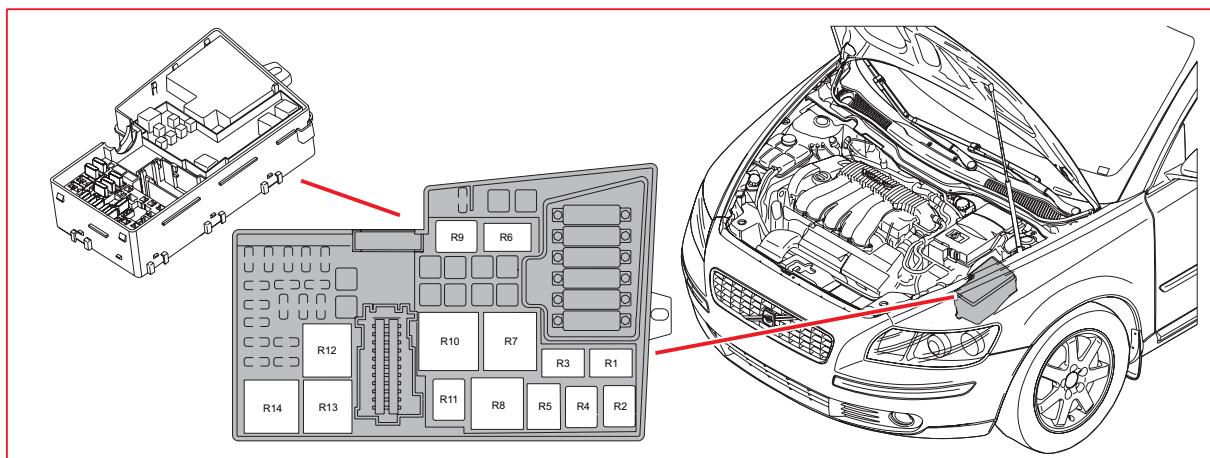


15/31 Engine compartment distribution box

Pos	Relay function
R2	2/17 Relay, horn
R4	2/34 Relay, front fog lights
R5	2/142 Fuel filter preheater relay
R9	2/182 Relay, headlight washer motor
R10	2/82 Relay, heated rear window
R11	2/22 Relay, climate control system
R13	2/35 Relay, starter motor
R14	2/32 Main relay, engine management system

Relays


Central Electronic Module (CEM) R15-R18

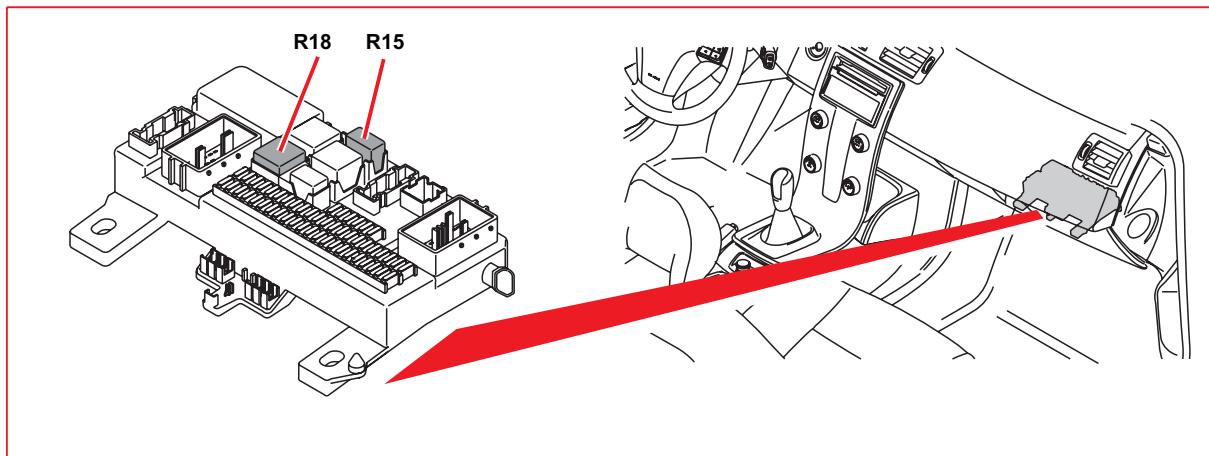

4/56 Central Electronic Module (CEM)

Pos	Relay function	
R15	2/23	Fuel pump relay, Gasoline
R18	2/193	Relay, comfort functions

Relays - soldered Central Electronic Module (CEM) R1-R11B

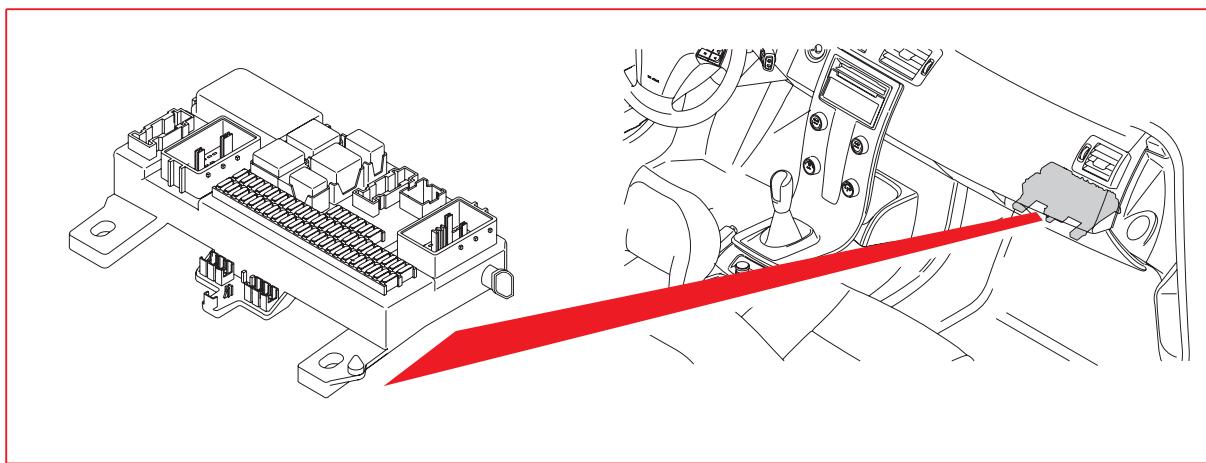

4/56 Central Electronic Module (CEM)

Pos	Relay function
R1	2/89 Relay, interior lighting
R2	2/80 Relay, reversing light
R7A	2/92 Relay, windshield washer motor
R7B	2/93 Relay, rear window washer motor
R8	2/63 Relay, high beam
R11A	2/16 Relay, rear window wiper
R11B	2/159 Relay, infotainment

Relays


Other relays

Relays accessories

Pos	Relay function
Dashboard	2/64 Relay auxiliary lights
Cargo compartment	2/157 Relay, subwoofer control module
Front member	2/192 Relay, electric engine heater
Beneath glove compartment	2/238 Relay, audio disconnection

Ground connections

Overview

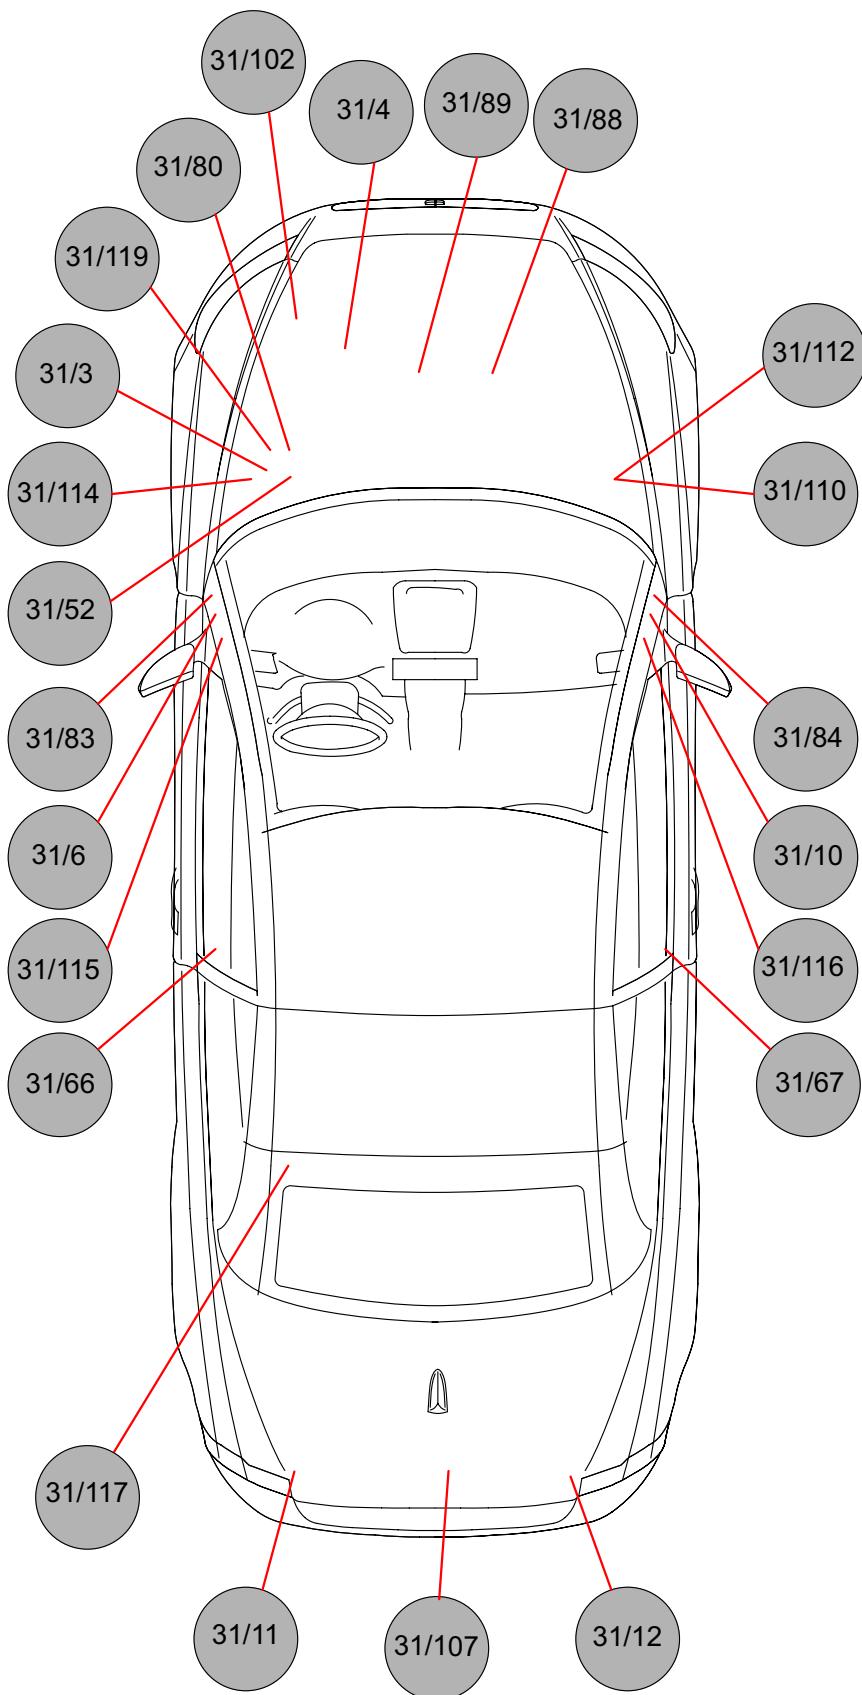

Ground connections

31/3 - 31/10

31/3	Left MacPherson strut tower
1/1	Battery
31/4	Engine
1/1	Battery
31/6	A-post, driver's side
3/111	Switch unit, lights
4/102	Steering Column Lock Module (SCL)
10/1	Lamp housing, front left
10/2	Lamp housing, front right
17/13	Data link connector
31/10	A-post, passenger side
2/16	Relay, rear window wiper
2/23	Relay, fuel pump
2/63	Relay, high beam
2/89	Relay, interior lighting
2/92	Relay, windshield washer motor
2/93	Relay, rear window washer motor
2/159	Relay, infotainment
2/193	Relay, comfort functions
3/25	Switch, power roof/sunroof
3/112	Climate Control Module (CCM)
3/117	Switch unit, ceiling light
3/156	Gear Selector Module (GSM)
3/173	Switch, trunk lid/tailgate private lock
3/286	BLIS switch
4/33	Sunroof control module
4/56	Central Electronic Module (CEM)
6/2	Washer pump
6/48	Damper motor, recirculation
6/95	Damper Motor Module (DMM), left-hand side
6/96	Damper Motor Module (DMM), right-hand side
6/102	Damper Motor Module (DMM), defroster
6/103	Damper Motor Module (DMM), floor/ventilation
6/117	Interior temperature sensor
7/122	Mass Movement Sensor Module (MMS), front
7/149	Rain Sensor Module (RSM)
7/159	Air quality sensor
8/48	Auto-dimming rearview mirror
8/134	Solenoid, reverse interlock, manual
9/1	Front 12V outlet
9/25	Rear 12V outlet
10/22	Ceiling light
10/29	Glove compartment lighting
10/114	Vanity mirror lighting, left, S40/V50
10/115	Vanity mirror lighting, right
10/150	Rear reading light
16/1	Integrated Audio Module (IAM)
16/93	Control module, cellular phone handsfree

Ground connections

31/11 - 31/52

31/11 Rear left side	
3/78	Lock unit, trunk lid/tailgate
4/78	Accessory Electronic Module (AEM)
10/18	Lamp housing, rear left
16/79	Subwoofer Module (SUB)
16/105	Audio Module (AUD)
16/145	Remote Digital Audio Receiver (RDAR)
17/19	12V outlet, cargo compartment, C70

31/12 Rear right side	
4/59	Convertible Roof Module (CRM)
4/78	Accessory Electronic Module (AEM)
4/86	Parking Assistance Module (PAM)
4/110	Trailer Module (TRM)
6/37	Lock motor, fuel filler flap
10/17	Lamp housing, rear right
16/139	Global Positioning System Module (GPS)
16/145	Remote Digital Audio Receiver (RDAR)
17/19	12V outlet, cargo compartment, S40/V50
17/37	4-pin outlet, tow hitch cable harness
17/38	7-pin outlet, tow hitch cable harness
17/39	13-pin outlet, tow hitch cable harness

31/52 Left MacPherson strut tower	
3/10	Reversing light contact
4/28	Transmission Control Module (TCM)
4/46	Engine Control Module (ECM)
7/24	Front knock sensor, Gasoline
7/192	Water detection sensor, Diesel
8/3	Electromagnetic clutch, climate control system, Diesel
9/32	PTC resistor, crankcase ventilation
9/38	Heated fuel filter, Diesel
10/65	Auxiliary light, front right
10/69	Auxiliary light, front left

Ground connections

31/66 - 31/67

31/66 Left B-post	
3/26	Switch unit, power driver's seat, LHD
3/27	Switch unit, power passenger seat, RHD
3/35	Switch, handle, trunk lid/tailgate
3/76	Lock unit, rear left door
3/78	Lock unit, trunk lid/tailgate
3/85	Power window switch, rear left door
3/128	Rear Left Door Module (LDM)
3/260	Contact, locking, rear left
3/264	Contact, unlocking, rear left
3/287	Rear seat entry switch, left
4/52	Power Seat Module (PSM), LHD
4/54	Power Seat Module (PSM)
4/93	Keyless Vehicle Module (KVM), RHD
6/32	Rear window wiper motor, V50
6/35	Fuel pump, auxiliary heater
8/51	Igniter, side airbag, driver's side, LHD
8/52	Igniter, side airbag, front right, RHD
8/92	Lap belt tensioner, driver, LHD
9/2	Heated rear window
9/12	Seat Heating Module (SHM), driver's side, LHD
9/13	Seat Heating Module (SHM), passenger side, RHD
10/3	License plate lighting, S40
10/19	Auxiliary brake light, V50
10/26	Reading light, rear left
10/114	Vanity mirror lighting, left, C70, LHD

31/67 Right B-post	
3/26	Switch unit, power driver's seat, RHD
3/27	Switch unit, power passenger seat, LHD
3/77	Lock unit, rear right door
3/86	Power window switch, rear right door
3/129	Rear Right Door Module (RDM)
3/261	Locking switch, rear right
3/265	Unlocking switch, rear right
3/288	Rear seat entry switch, right
4/52	Power Seat Module (PSM), RHD
4/54	Power Seat Module (PSM)
4/82	Differential Electronic Module (DEM)
4/93	Keyless Vehicle Module (KVM), LHD
7/93	Occupant Weight Sensor (OWS), USA/CDN
7/158	Mass movement sensor rear
8/51	Igniter, side airbag, driver's side, RHD
8/52	Igniter, side airbag, passenger side, LHD
8/92	Driver's lap belt tensioner, RHD
9/12	Seat Heating Module (SHM), driver's side, RHD
9/13	Seat Heating Module (SHM), passenger side, LHD
10/27	Reading light, rear right
10/114	Vanity mirror lighting, left, C70, RHD

Ground connections

31/80 - 31/107

31/80	Left MacPherson strut tower
4/16	Brake Control Module (BCM), valves

31/83	A-post, driver's side
3/1	Ignition switch
3/6	Switch, hazard warning flashers
3/254	Steering Wheel Module (SWM)
4/103	Remote Receiver Module (RRX)
5/1	Driver Information Module (DIM)
17/13	Data link connector

31/84	A-post, passenger side
4/56	Central Electronic Module (CEM)
7/51	Accelerator pedal sensor
7/149	Rain Sensor Module (RSM)
8/31	Airbag igniter, passenger side
8/32	Igniter, airbag stage 2, passenger side
16/1	Integrated Audio Module (IAM)
16/1.2	Infotainment Control Module (ICM)
16/46	RTI Display
16/60	Phone Module (PHM)
16/108	Multimedia Module (MMM)

31/88	Engine
9/32	PTC resistor, crankcase ventilation
20/3	Spark plug and ignition coil
20/4	Spark plug and ignition coil

31/89	Engine
20/5	Spark plug and ignition coil
20/6	Spark plug and ignition coil
20/7	Spark plug and ignition coil

31/102	Front member
2/192	Relay, electric engine heater

31/107	Tailgate (V50)
16/16	Window antenna amplifier
31/117	Ground connection, roof, V50

Ground connections

31/110 - 31/116

31/110 Right MacPherson strut tower	
3/271	Contact, immobilizer, clutch pedal
4/7	Combustion Preheater Module (CPM)
4/113	Control module, gas discharge lamp slave, right
6/1	Wiper Motor Module (WMM)
6/28	Motor, passenger compartment fan
6/104	Pump, high pressure headlight washer
7/4	Brake fluid level sensor
7/5	Washer fluid level sensor
8/119	Pressure monitor, climate control system
8/127	Pressure switch, climate control system, Diesel
10/2	Lamp housing, front right
10/6	Fog light, front right

31/112 Right MacPherson strut tower	
9/41	PTC element, Diesel

31/114 Left MacPherson strut tower	
3/62	Hood alarm contact
4/71	Cooling fan control module
4/109	Glow plug control module, Diesel
4/112	Gas Discharge Lamp Module (GDL), master
6/71	Electrical Power Steering Module (EPS)
6/114	Vacuum pump, Gasoline
10/1	Lamp housing, front left
10/5	Fog light, front left
16/10	Horn 1
16/11	Horn 2
16/35	Siren Control Module (SCM)

31/115 Left A-post	
3/126	Driver Door Module (DDM), LHD
4/83	Fuel pump control module, RHD
4/111	Additive Dosing Module (ADM), RHD
6/33	Fuel pump, RHD

31/116 Right A-post	
3/127	Passenger Door Module (PDM), LHD
4/83	Fuel pump control module, LHD, Gasoline
4/111	Additive Dosing Module (ADM), LHD
6/33	Fuel pump

Ground connections

31/117 - Ground connections in chassis

31/117 Roof

31/107 Ground connection, tailgate (V50)

31/119 Left MacPherson strut tower

4/16 Brake Control Module (BCM)

Grounded directly to chassis

3/4 Switch unit, cruise control (SWS)

3/37 Contact horn

3/47 Parking brake contact

4/9 Supplemental Restraint System Module (SRS)

4/56 Central Electronic Module (CEM)

6/25 Starter motor

7/6 Sensor, coolant temperature

8/3 Electromagnetic clutch, climate control system, Gasoline

8/33 Igniter, belt tensioner, driver's side

8/34 Igniter, belt tensioner, passenger side

8/55 Igniter, rear left belt tensioner

8/56 Igniter, rear right belt tensioner

8/66 Igniter, left inflatable curtain

8/67 Igniter, right inflatable curtain

8/128 Driver's belt force limiter

8/129 Passenger belt force limiter

16/16 Window antenna amplifier

16/49 Traffic Message Channel Module (TMC)

16/141 Interference filter, rear window, left

16/142 Interference filter, rear window, right


16/150 AM/FM antenna and amplifier, rear right fender

18/4 Contact reel

20/22-25 Glow plug

Control modules

Overview of locations

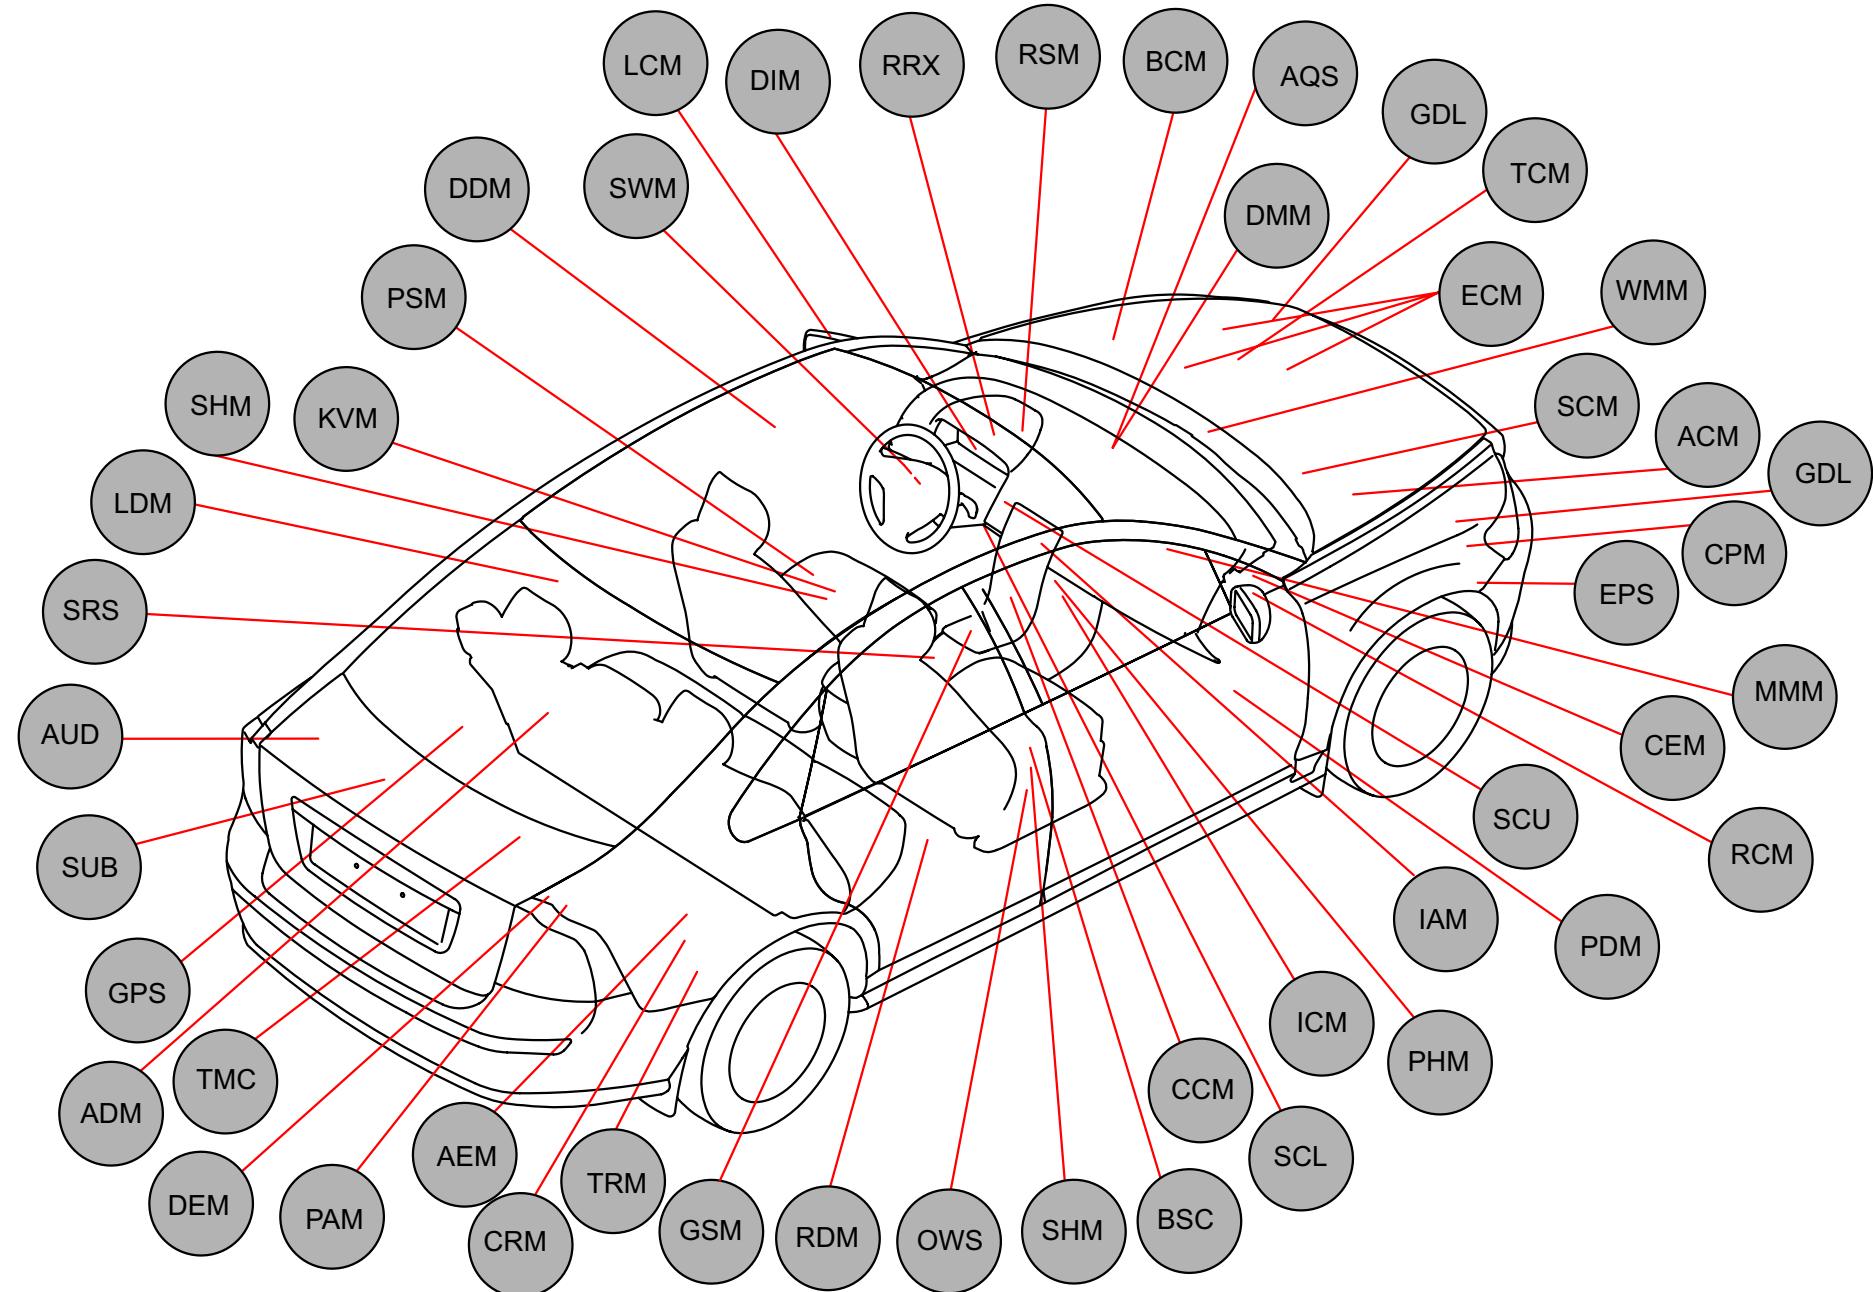


Control modules

Overview of designations

Unit	Designation
ACM	6/26 Alternator Control Module (ACM)
ADM	4/111 Additive Dosing Module (ADM)
AEM	4/78 Accessory Electronic Module (AEM)
AQS	7/159 Air Quality Sensor (AQS)
AUD	16/105 Audio Module (AUD)
BCM	4/16 Brake Control Module (BCM)
BSC	7/164 Body Sensor Cluster Stability Sensor (BSC)
CCM	3/112 Climate Control Module (CCM)
CEM	4/56 Central Electronic Module (CEM)
CPM	4/7 Combustion Preheater Module (CPM)
DDM	3/126 Driver Door Module (DDM)
DEM	4/82 Differential Electronic Module (DEM)
DIM	5/1 Driver Information Module (DIM)
DMM	Damper Motor Module (DMM) -6/48 Damper Motor Module (DMM), recirculation -6/95 Damper Motor Module (DMM), left-hand side -6/96 Damper Motor Module (DMM), right-hand side -6/102 Damper Motor Module (DMM), defroster -6/103 Damper Motor Module (DMM), floor/ventilation
ECM	4/46 Engine Control Module (ECM)
EPS	6/71 Electrical Power Steering Module (EPS)
GDL	Gas Discharge Lamp Module (GDL) -4/112 Gas Discharge Lamp Module (GDL), master, left -4/113 Gas Discharge Lamp Module (GDL), slave, right
GPS	16/139 Global Positioning System Module (GPS)
GSM	3/156 Gear Selector Module (GSM)
IAM	16/1 Integrated Audio Module (IAM)
ICM	16/1.2 Infotainment Control Module (ICM)
KVM	4/93 Keyless Vehicle Module (KVM)
LCM	4/126 Left Camera Module (LCM)
LDM	3/128 Rear Left Door Module (LDM)
MMM	16/108 Multimedia Module (MMM)
OWS	7/93 Occupant Weight Sensor (OWS)
PAM	4/86 Parking Assistance Module (PAM)
PDM	3/127 Passenger Door Module (PDM)
PHM	16/60 Phone Module (PHM)
PSM	4/52 Power Seat Module (PSM) 4/54 Power Seat Module (PSM)
RCM	4/127 Right Camera Module (RCM)
RDM	3/129 Rear Right Door Module (RDM)
RRX	4/103 Remote Receiver Module (RRX)
RSM	7/149 Rain Sensor Module (RSM)
SCL	4/102 Steering Column Lock Module (SCL)
SCM	16/35 Siren Control Module (SCM)
SCU	3/1 Start Control Module (SCU)
SHM	Seat Heating Module (SHM) -9/12 Seat Heating Module (SHM), driver's side -9/13 Seat Heating Module (SHM), passenger side
SRS	4/9 Supplemental Restraint System Module (SRS)
SUB	16/79 Subwoofer Module (SUB)
SWM	3/254 Steering Wheel Module (SWM)
TCM	4/28 Transmission Control Module (TCM)
TMC	16/49 Traffic Message Channel Module (TMC)
TRM	4/110 Trailer Module (TRM)
WMM	6/1 Wiper Motor Module (WMM)


Control modules

Central Electronic Module (CEM) 1:2

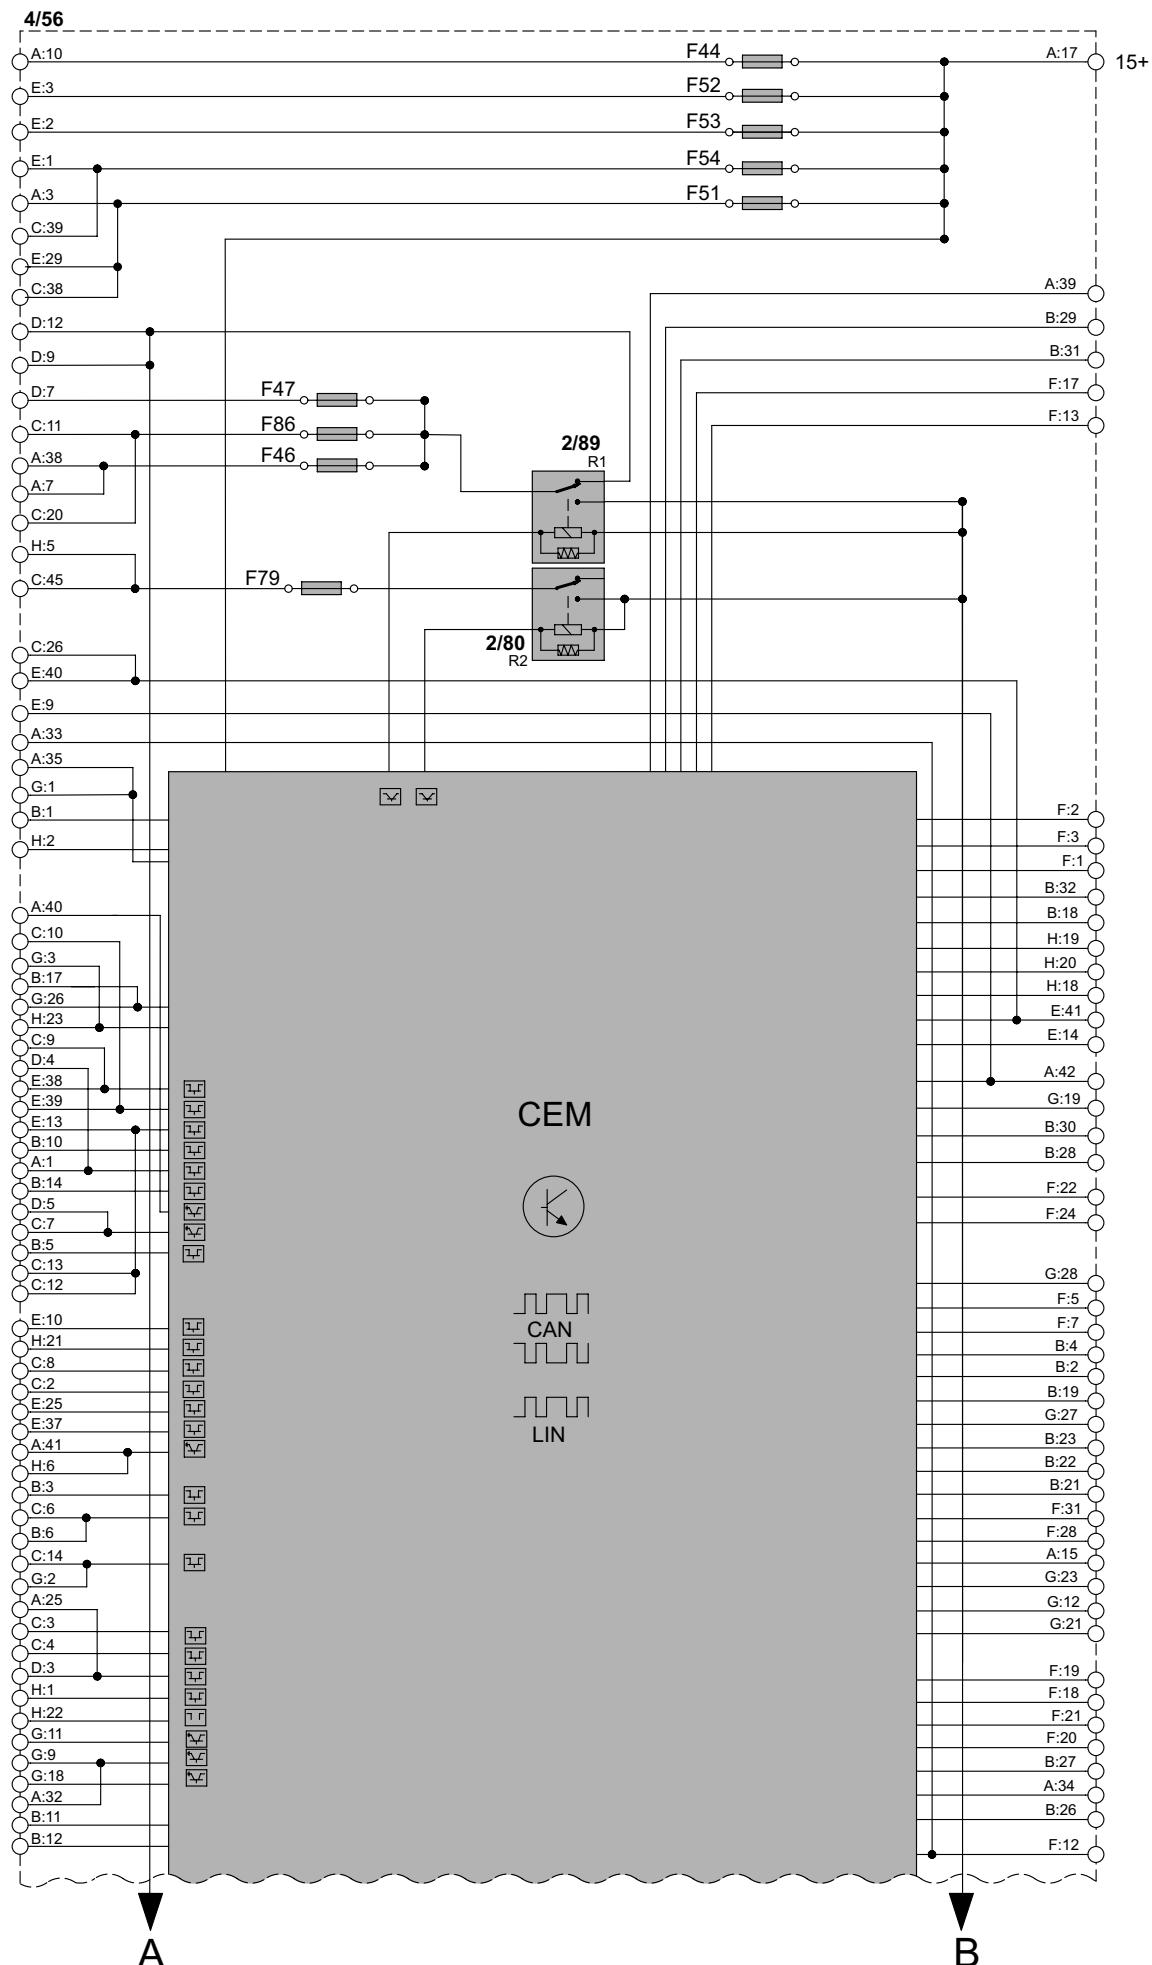


Control modules

Central Electronic Module (CEM) 2:2

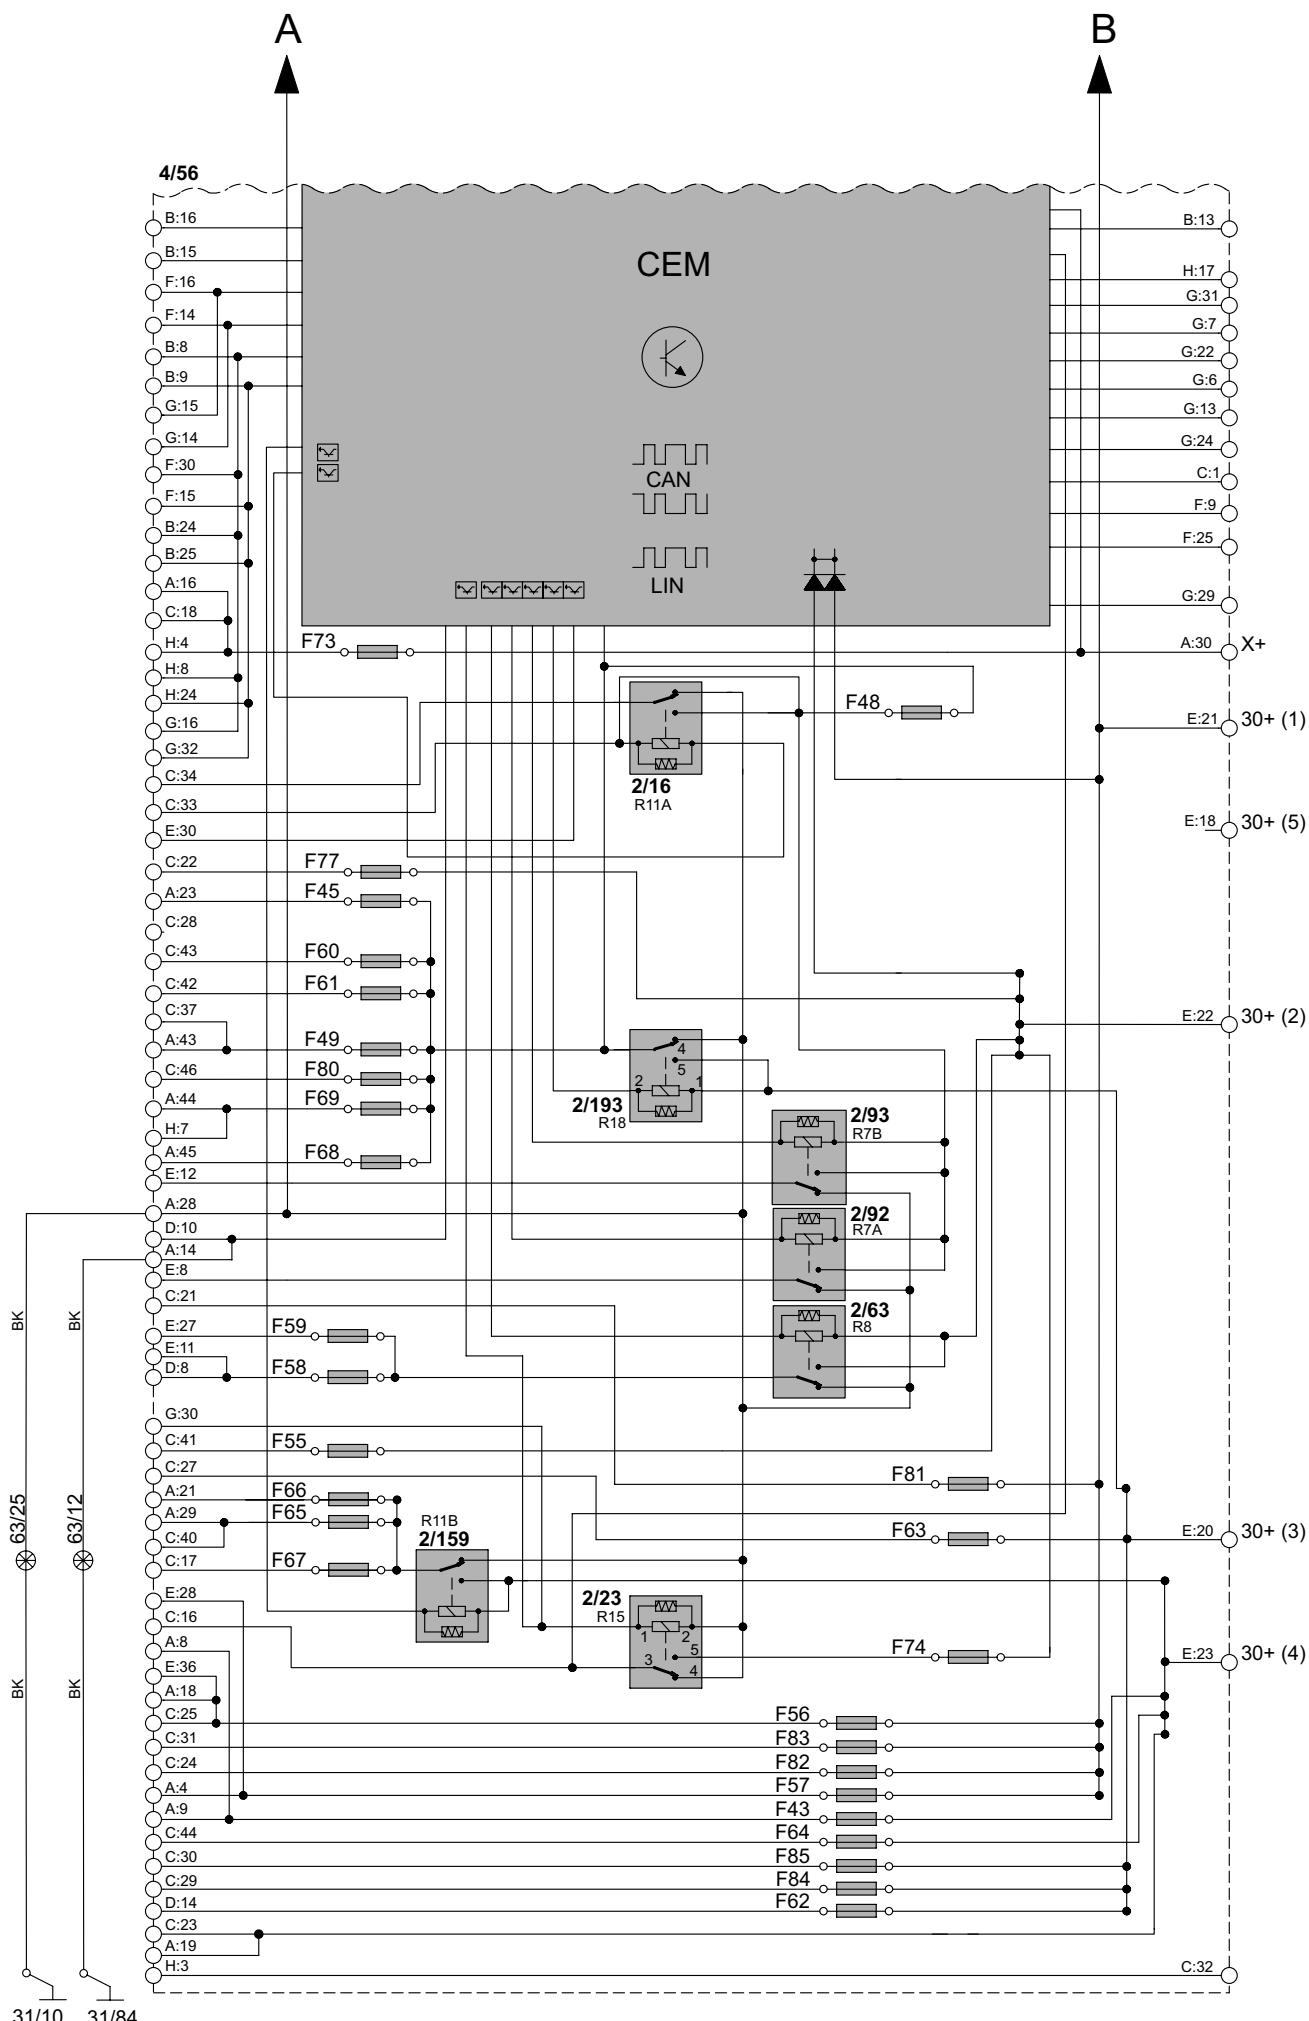


Control modules

Data communication, Low speed CAN 1:2

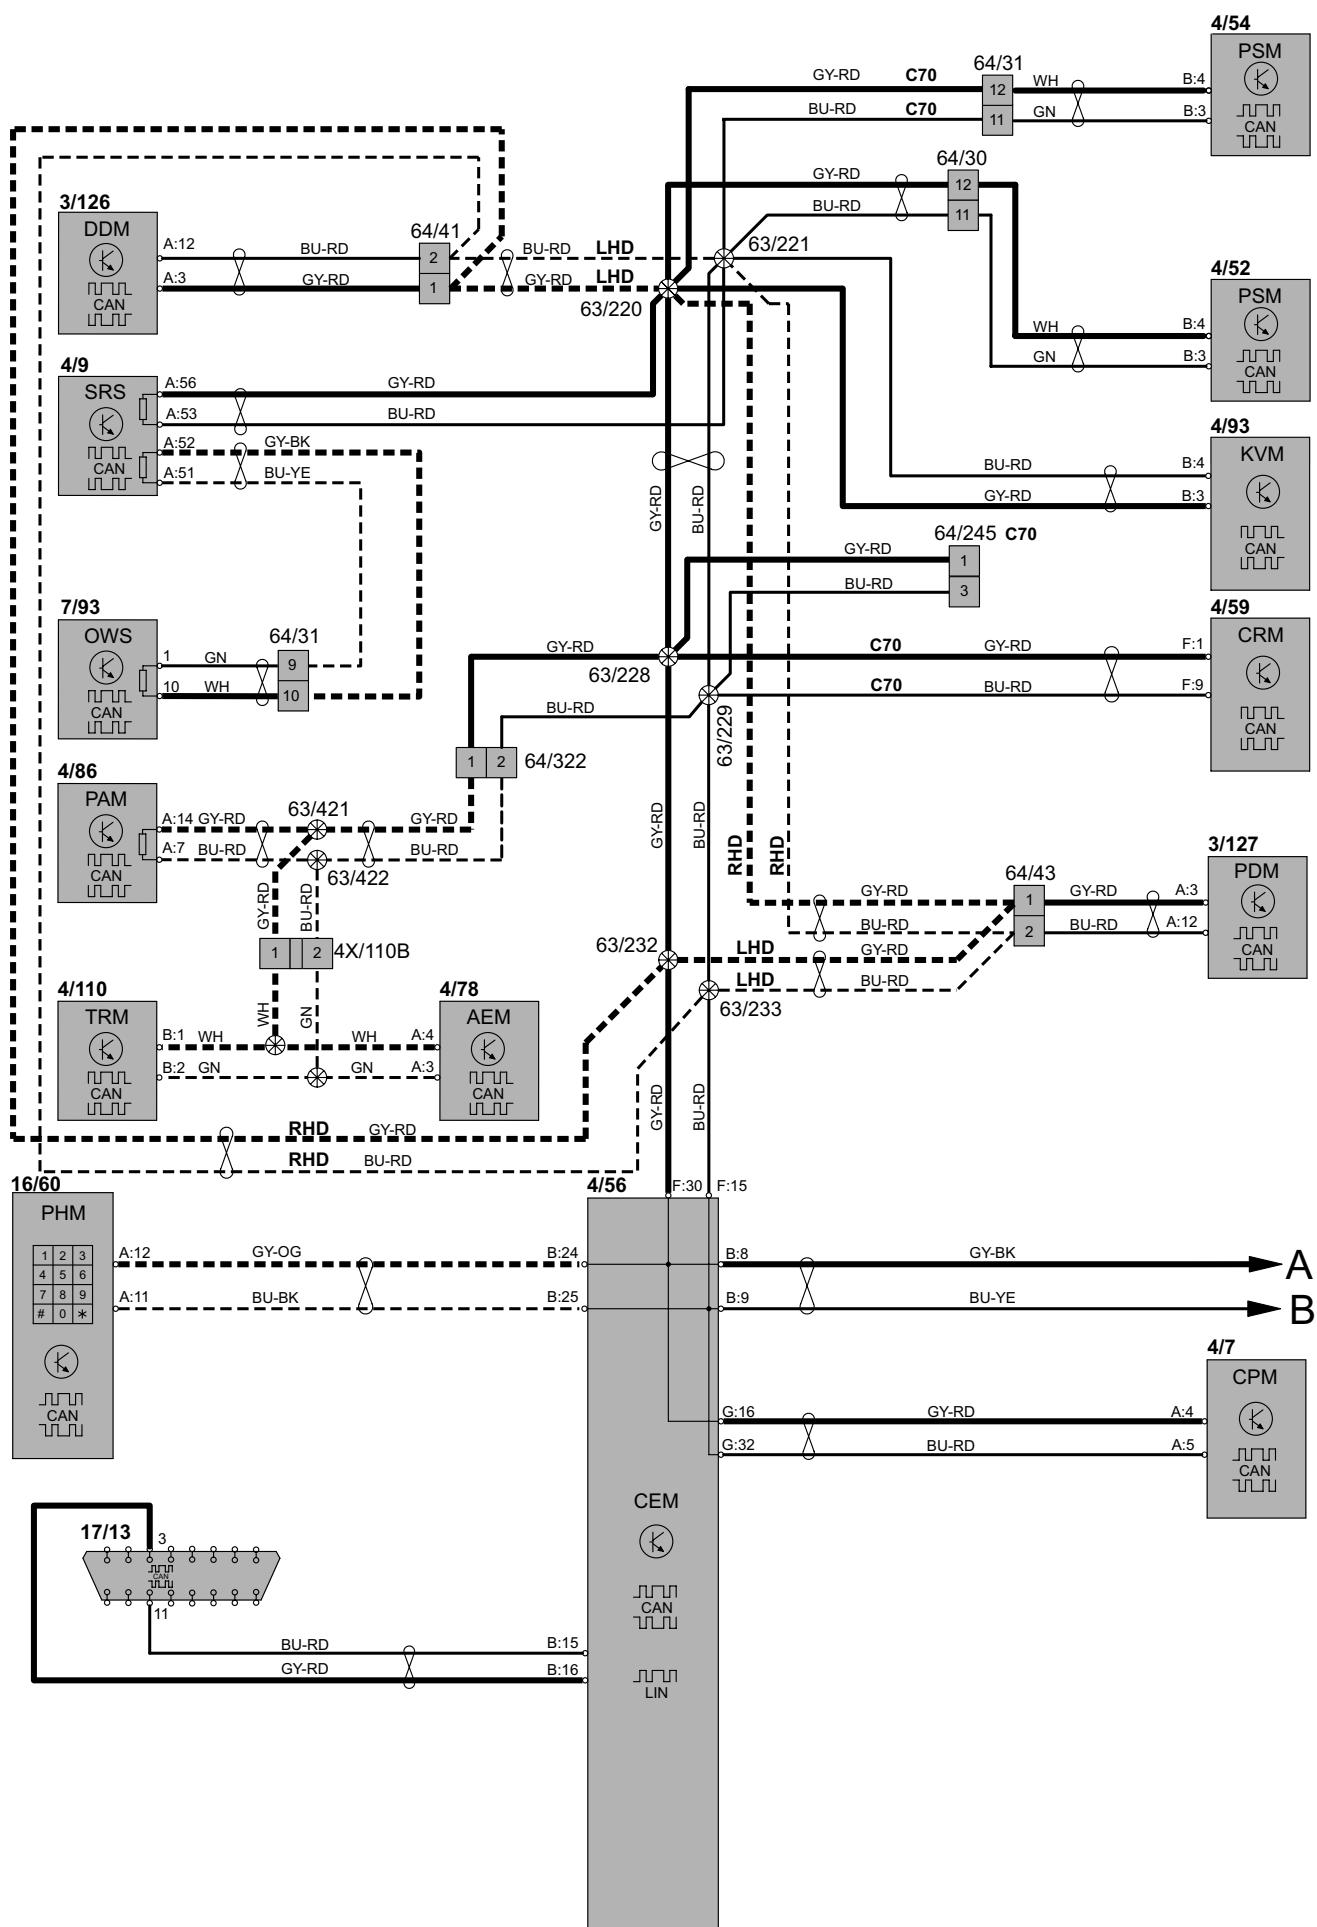


Control modules

Data communication, Low speed CAN 2:2

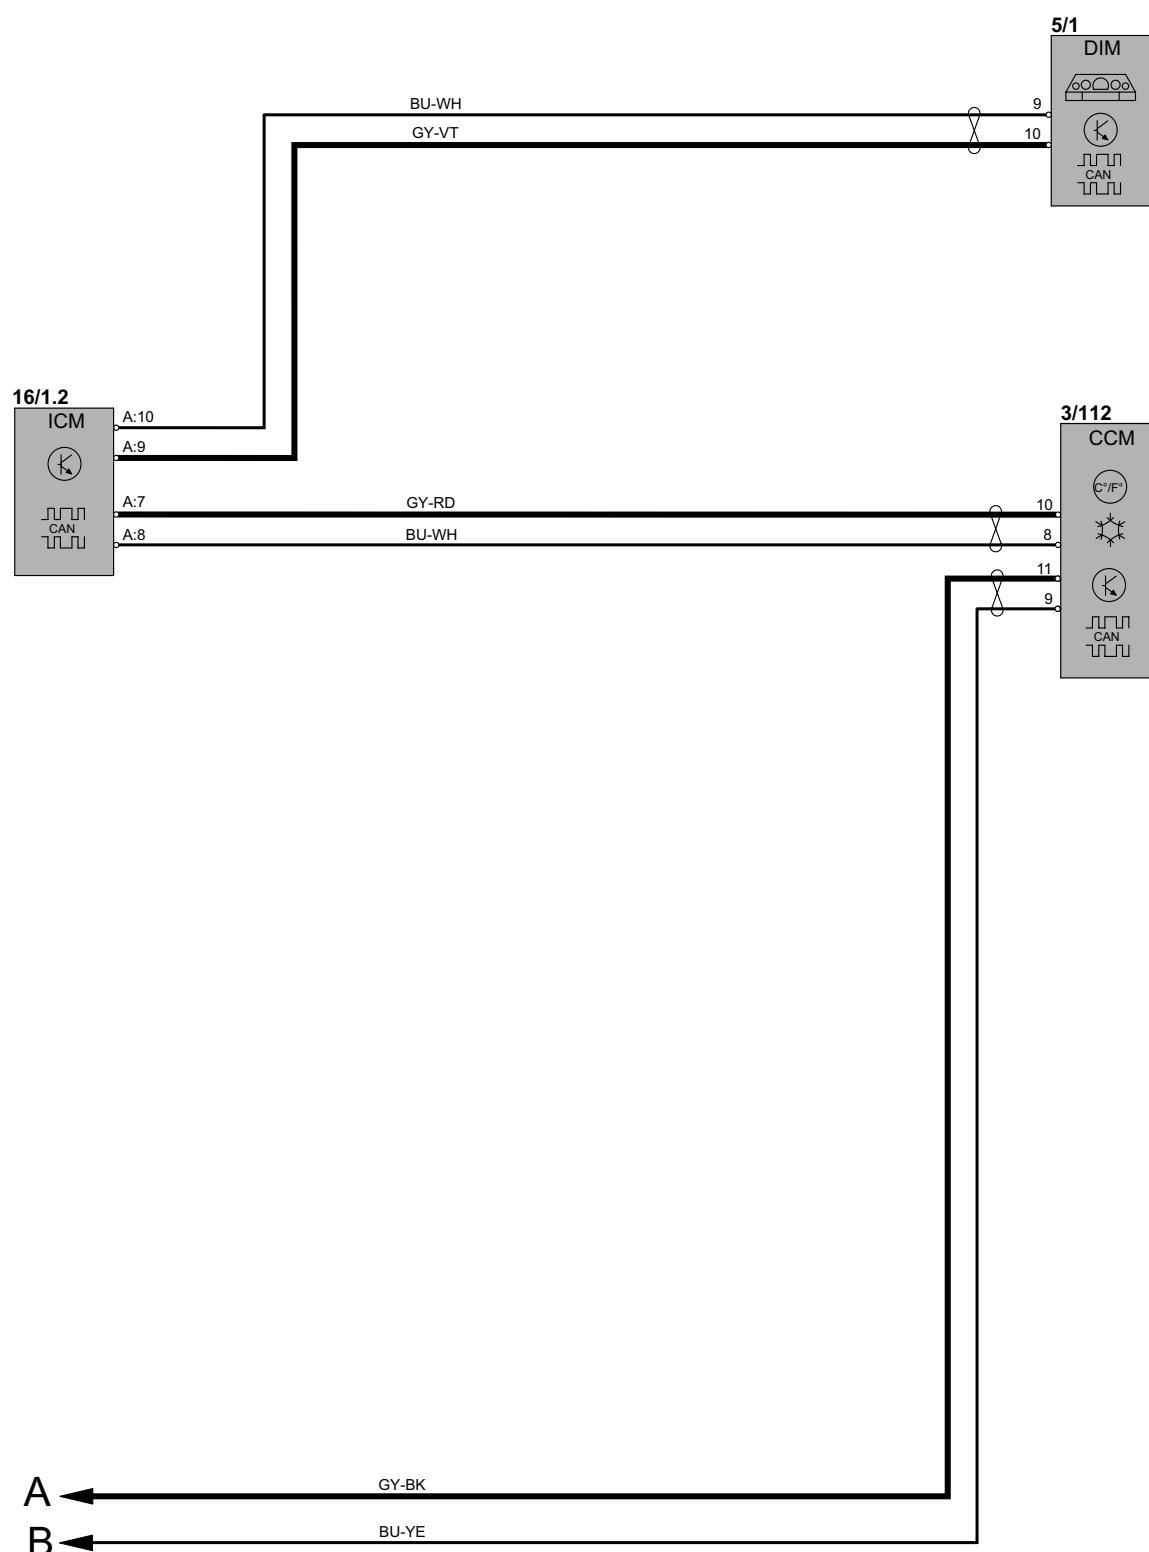


Control modules

Data communication, High speed CAN

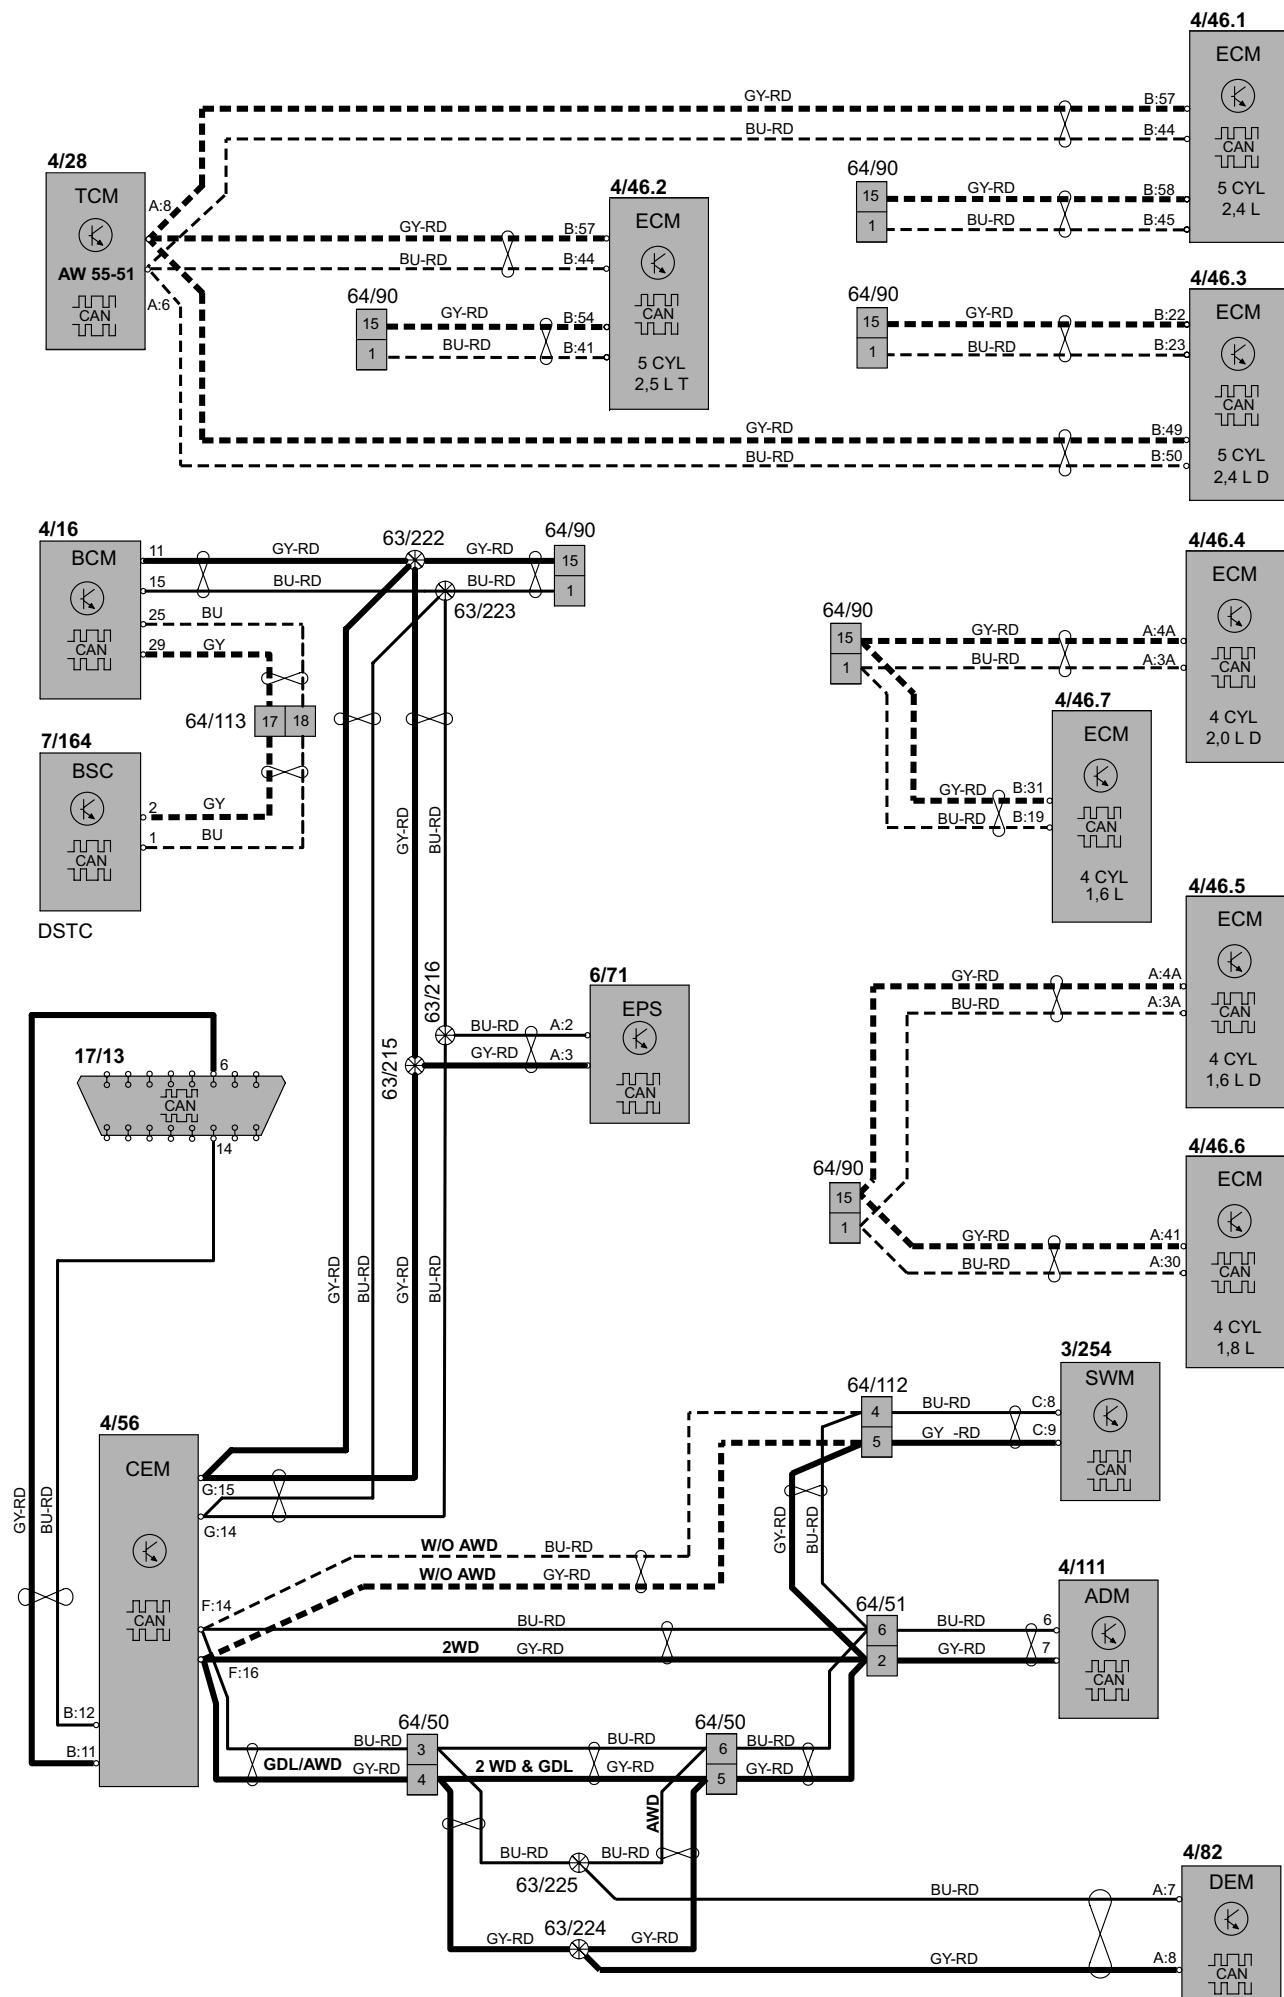


Control module

Data communication, MOST S40/V50

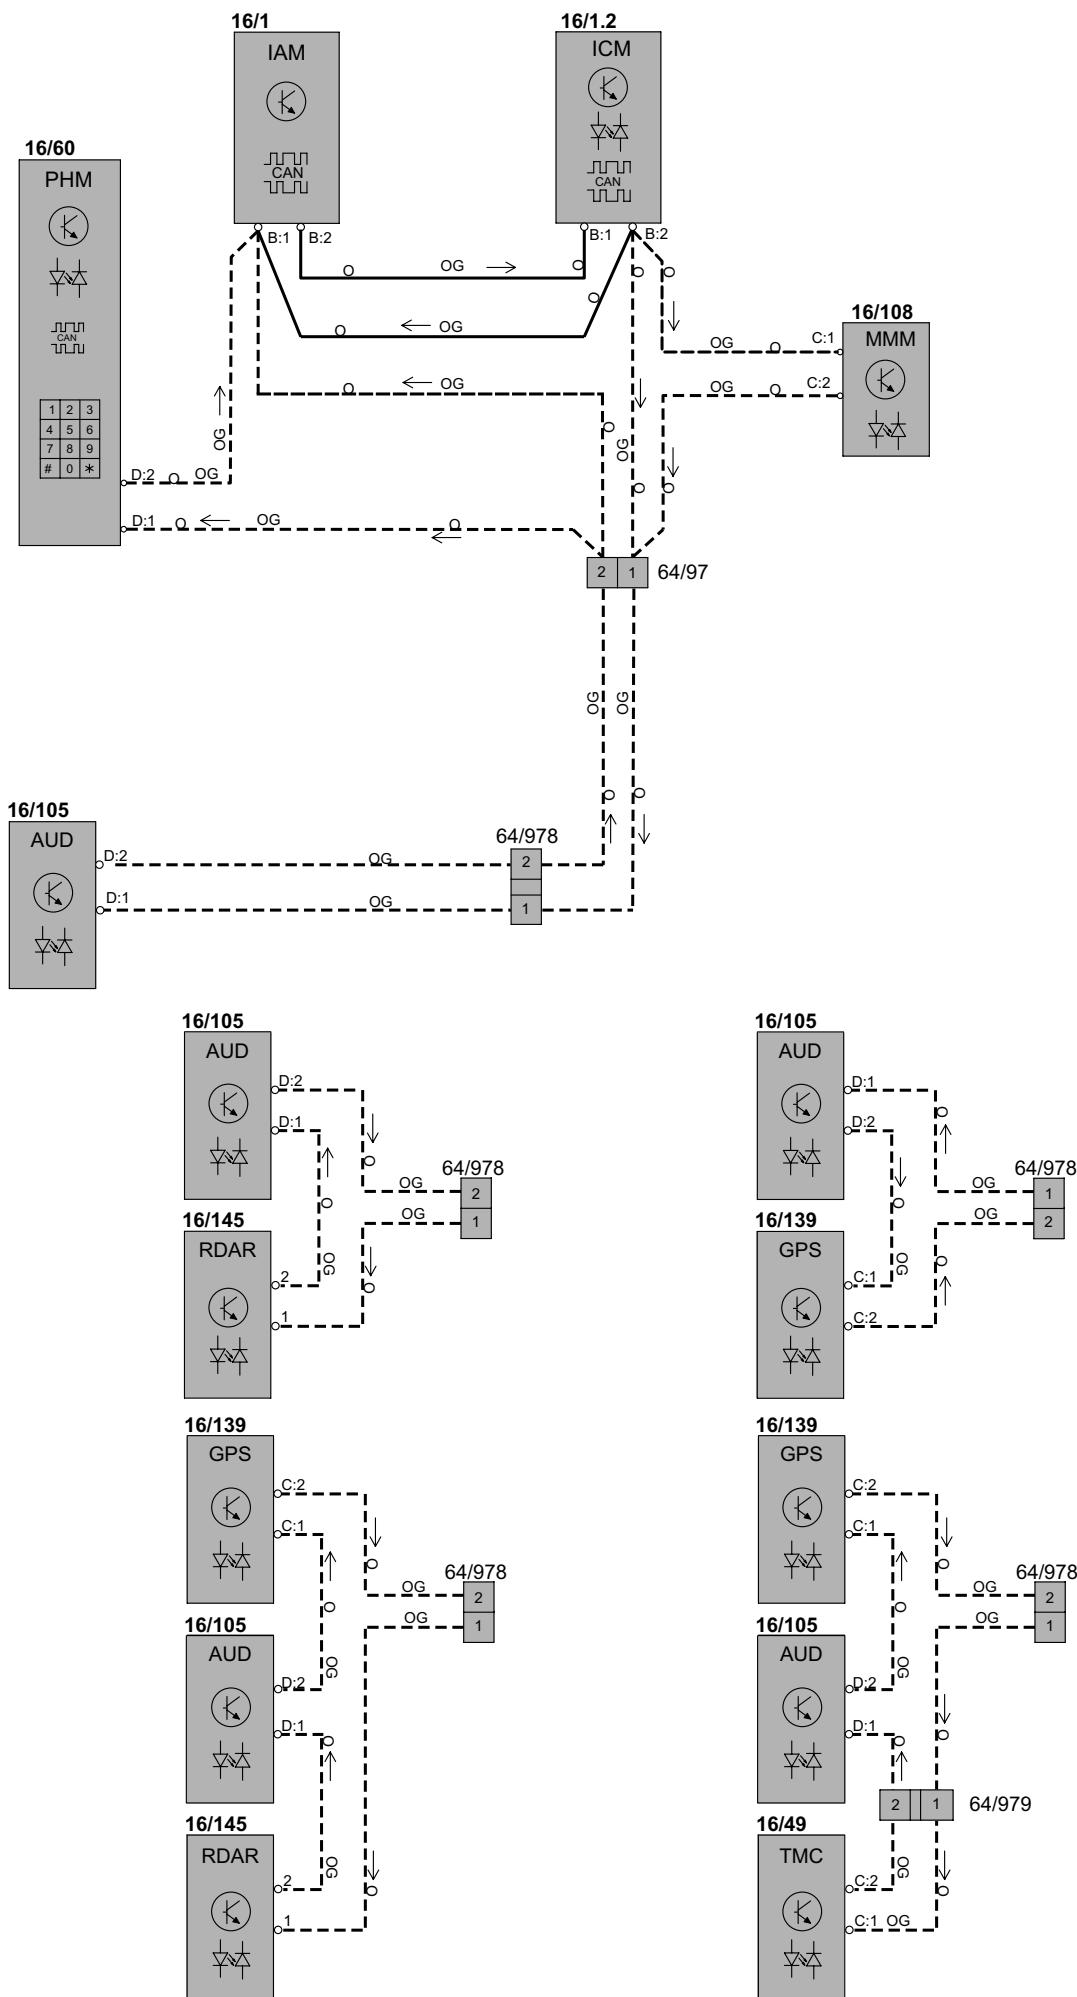


Control module Data communication, MOST C70

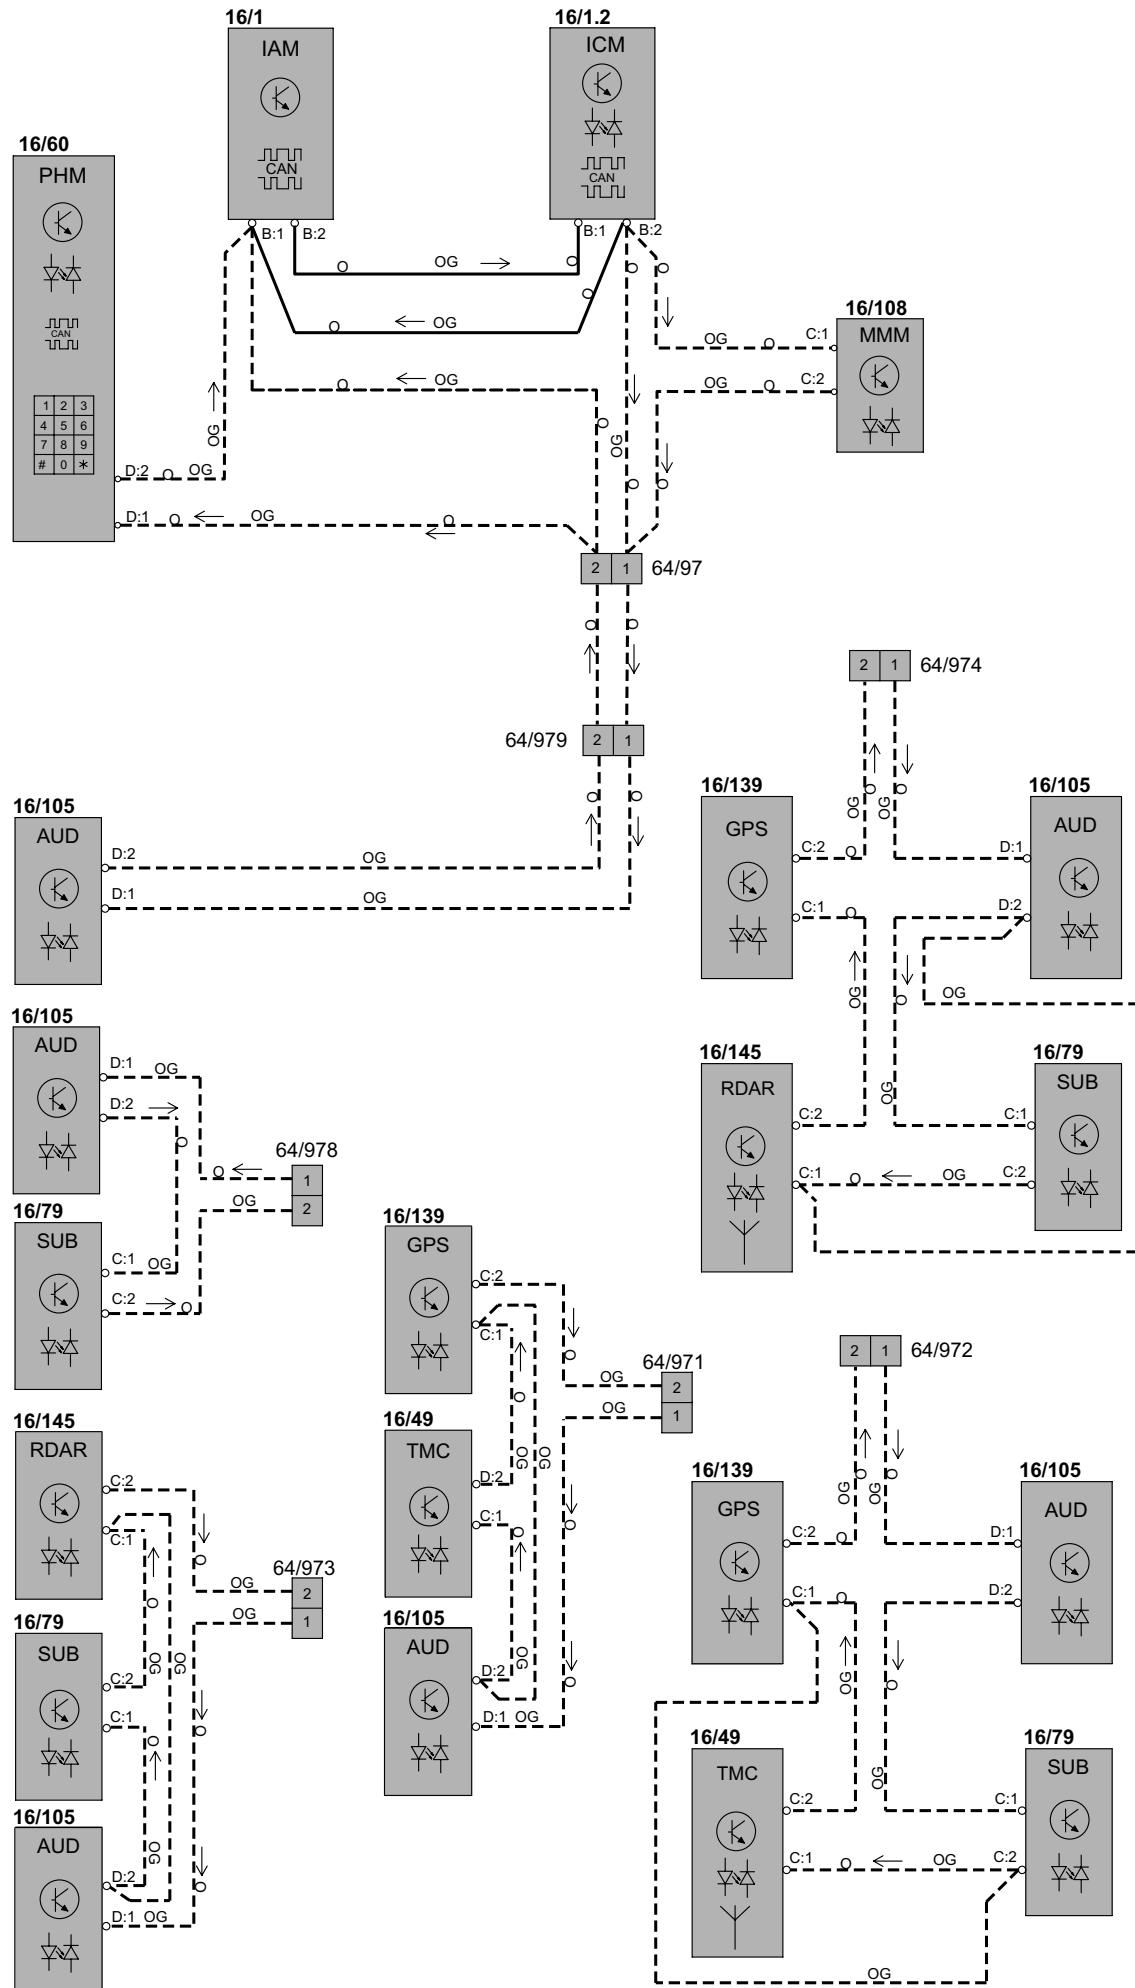


Control modules

Data communication, LIN 1:2

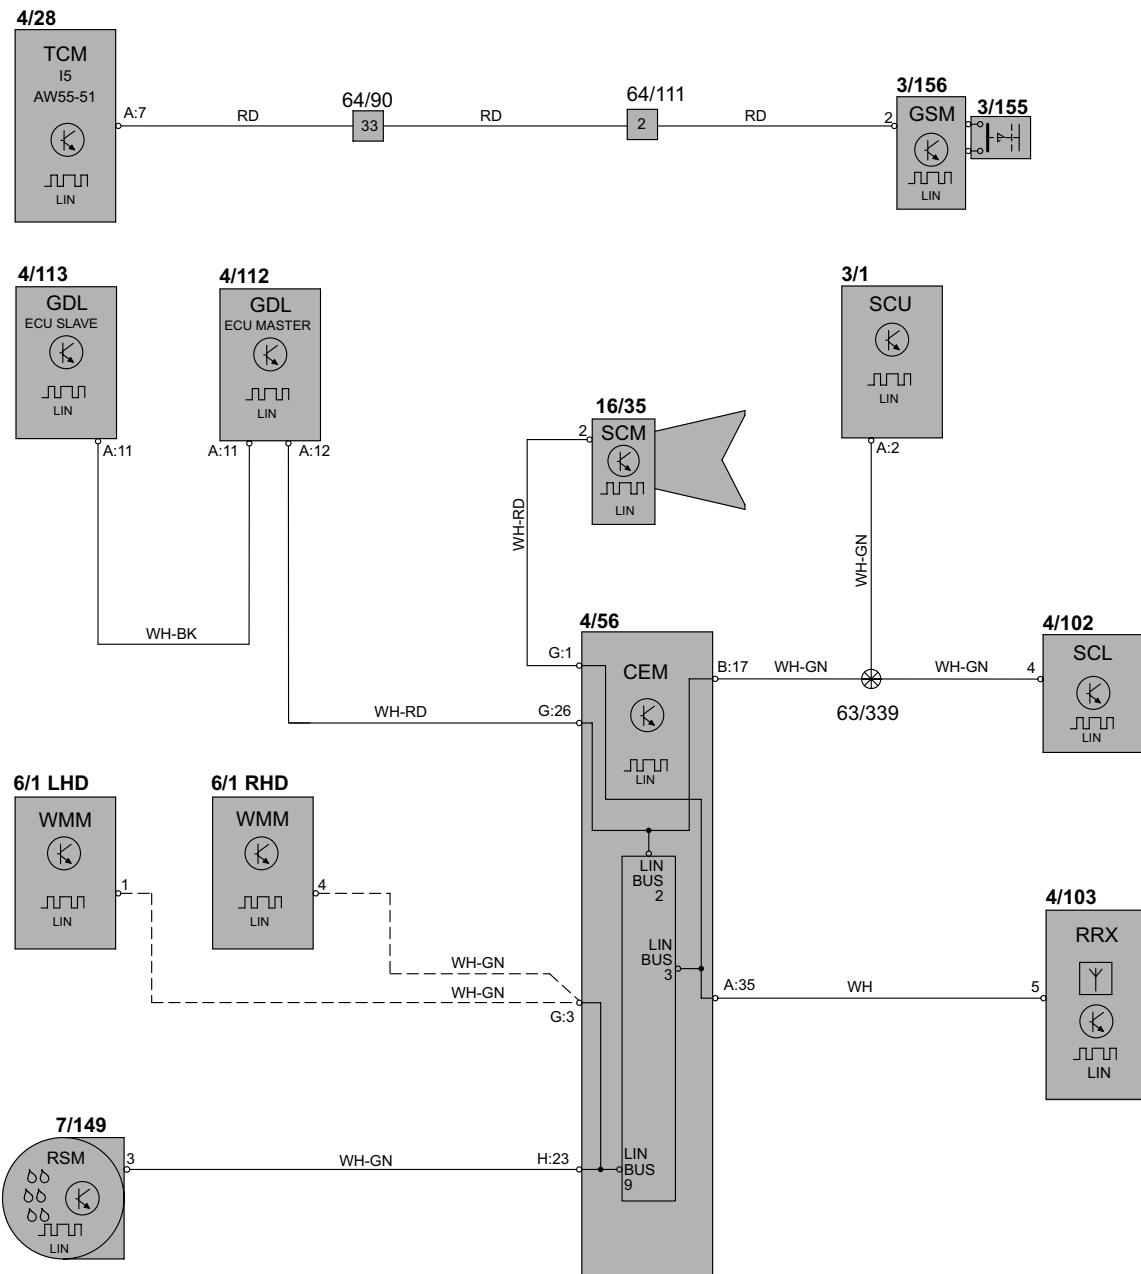


Control modules

Data communication, LIN 2:2

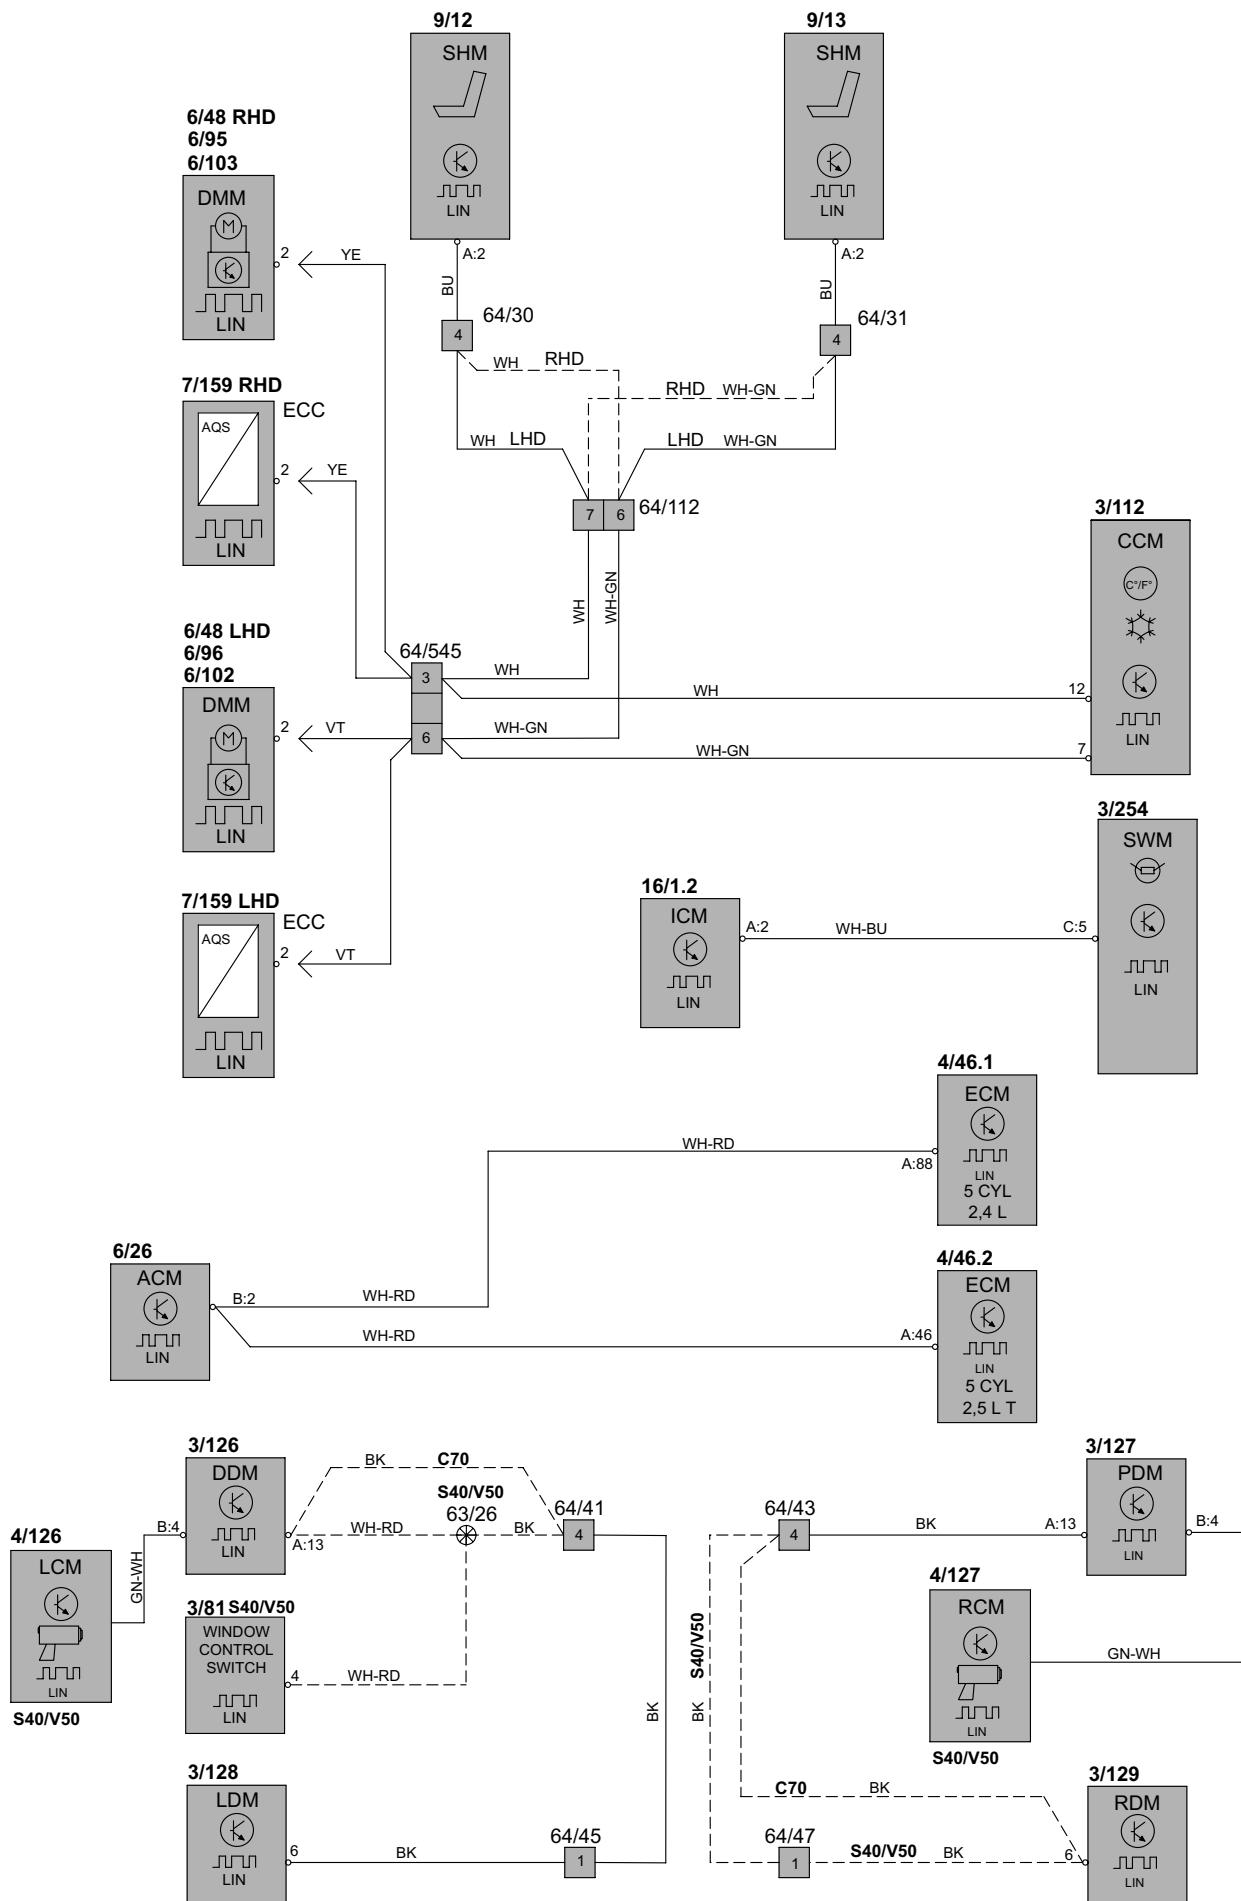


Control modules

Start Control Module (SCU)

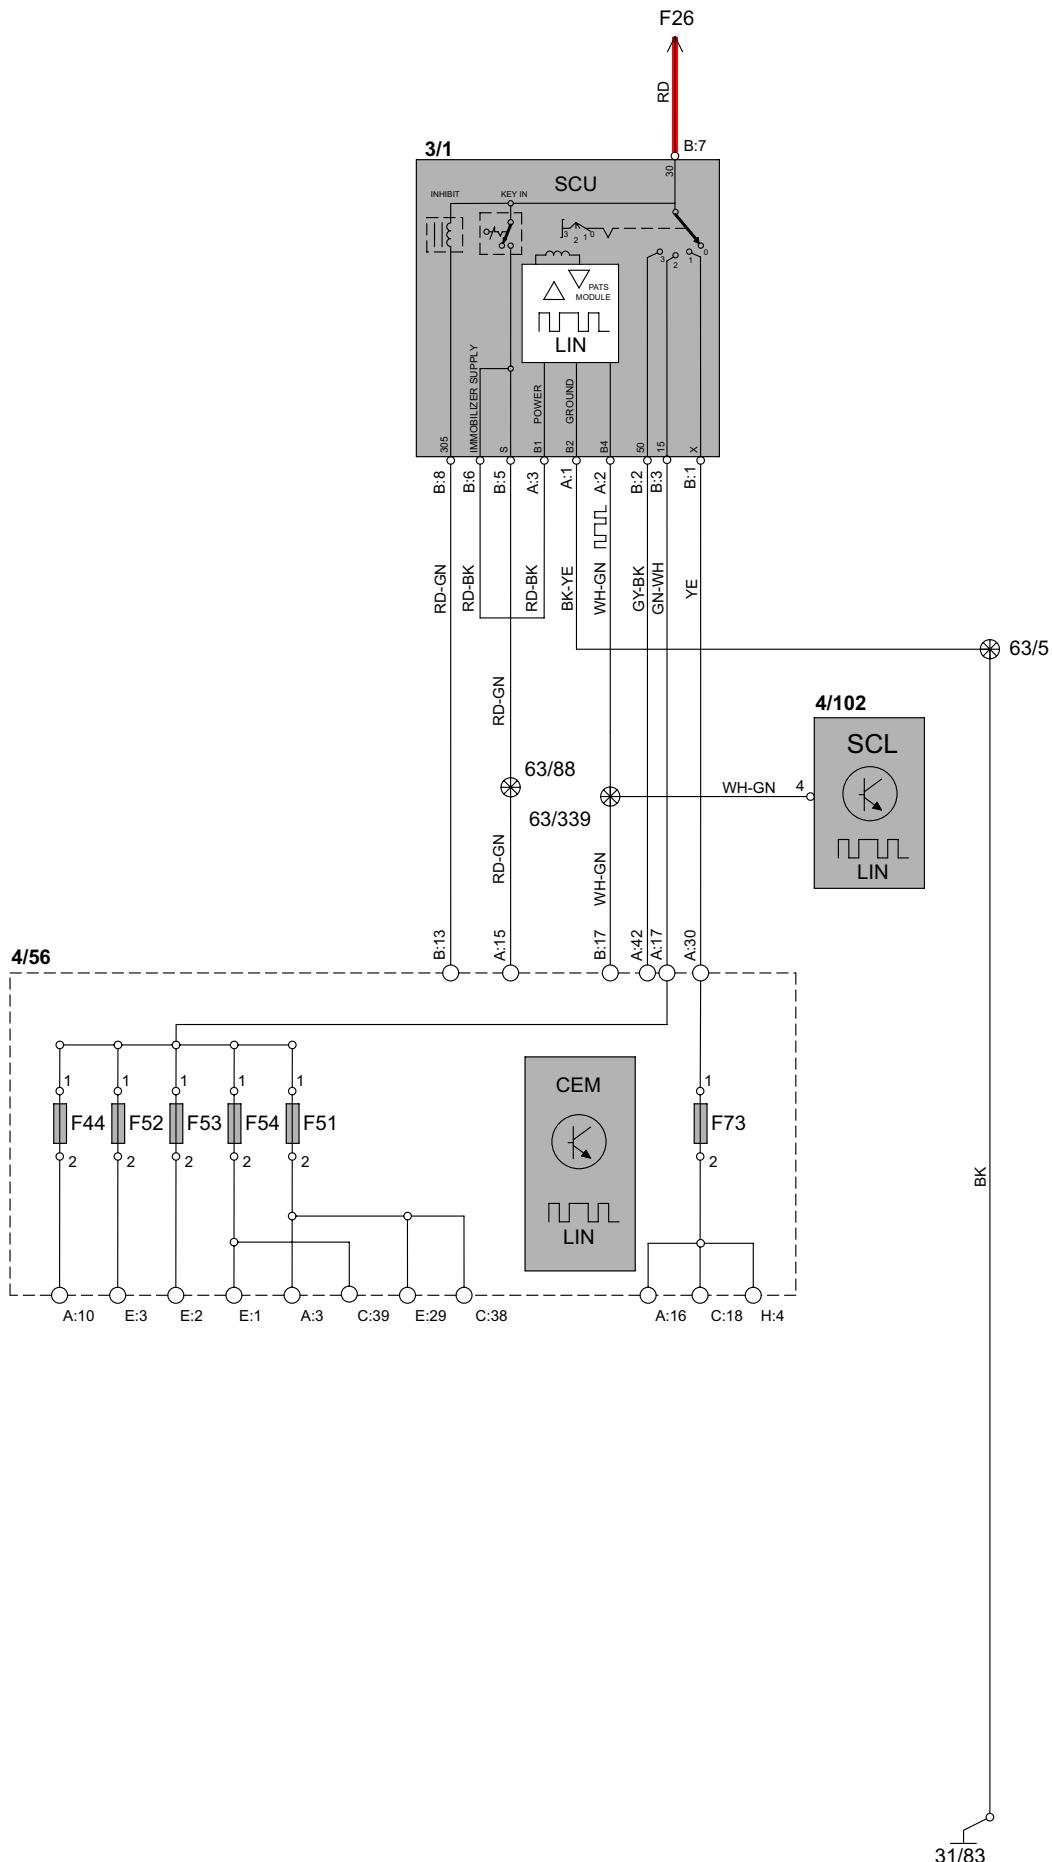

Control modules

Accessory Electronic Module (AEM)

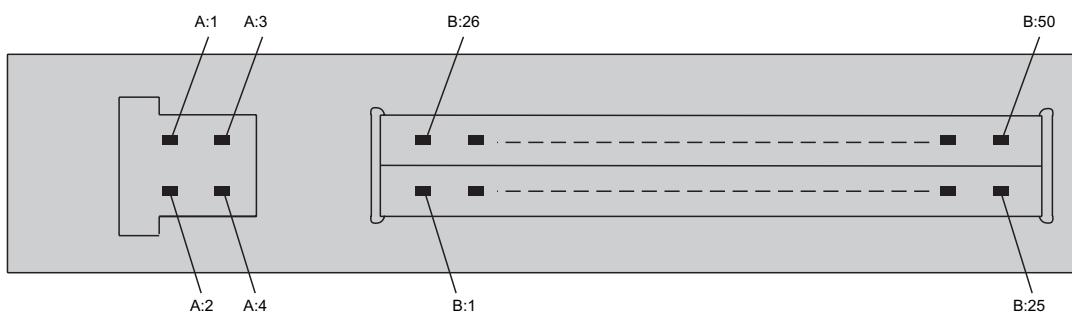


Pos	Function	Type
A:1	Electrical distribution	Ground
A:2	Electrical distribution	Feed
A:3	CAN communication	Input/output signals
A:4	CAN communication	Input/output signals
B:1	Remote start	Feed
B:2	Remote start	Ground
B:3	Remote start	Input signal
B:4	Electric engine heater	Ground
B:5	Electric engine heater	Steering, alternating current feed
B:11	Handsfree, mute of audio	Input signal
B:15	Alarm signal	Output signal
B:16	Alarm signal	Output signal
B:33	Alarm signal	Output signal
B:34	Alarm signal	Output signal

Group 23 Fuel system


Engine management system Diesel, 5-cyl. 2.4l 1:3

4/46.3

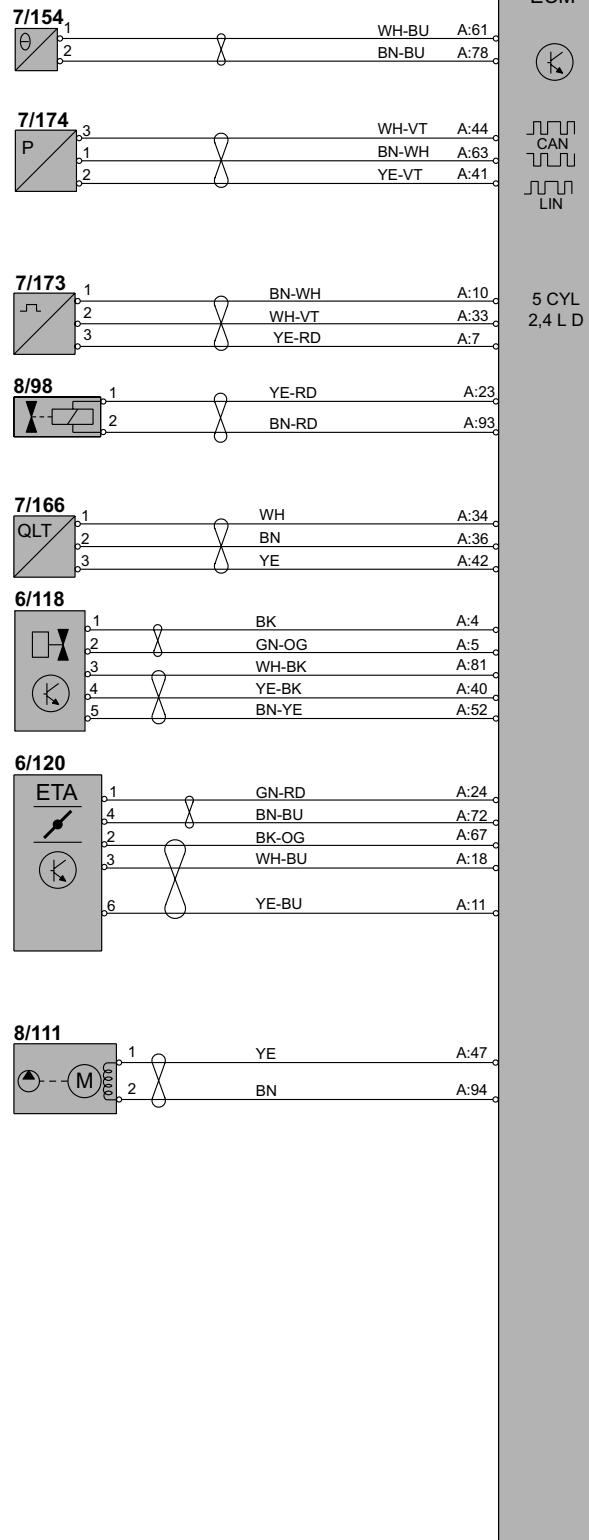


Group 23 Fuel system

Engine management system Diesel, 5-cyl. 2.4l 2:3

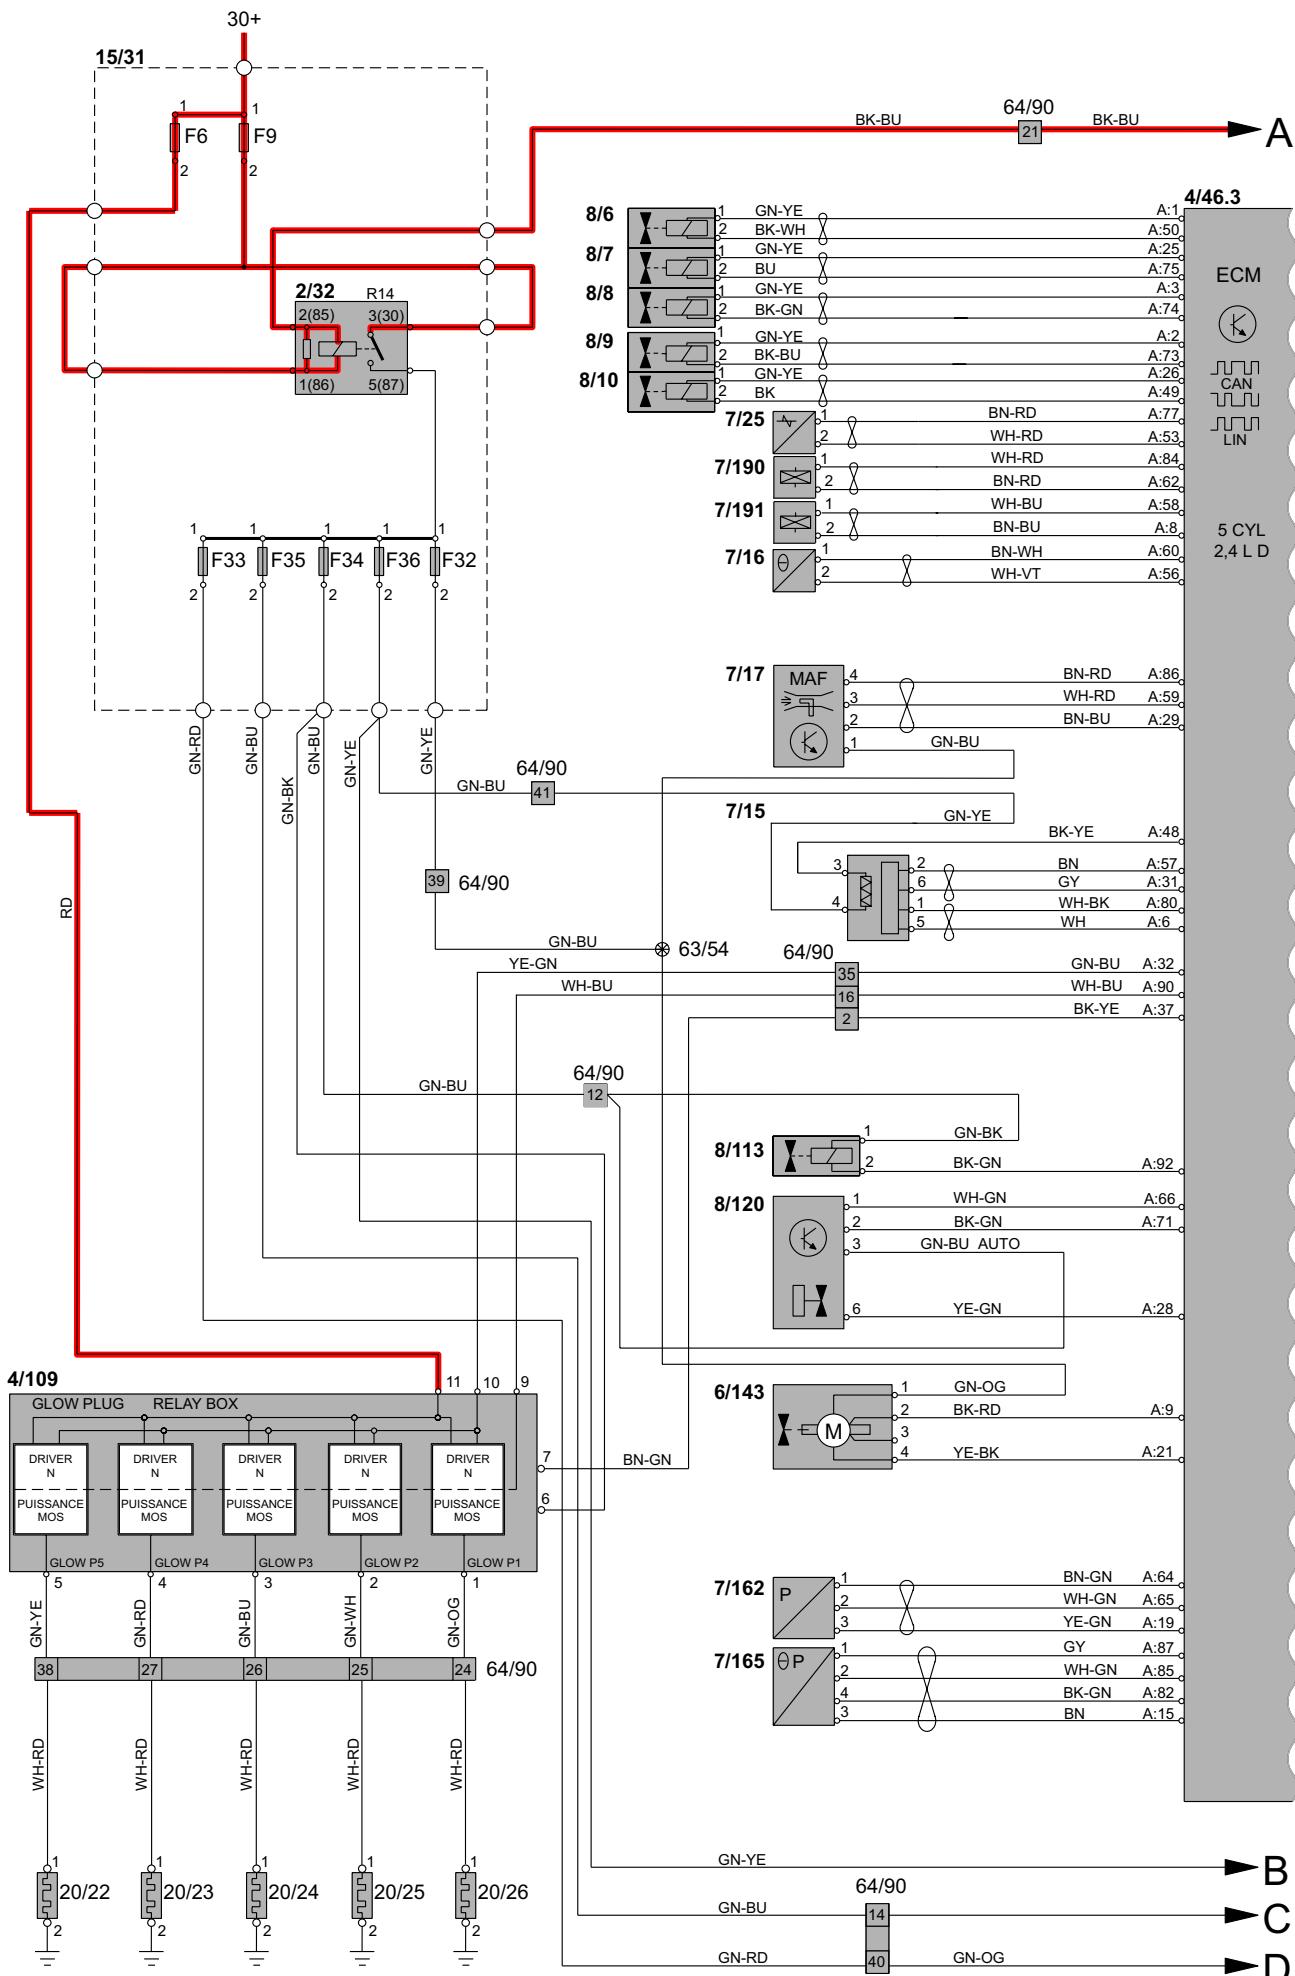


Group 23 Fuel system

Engine management system Diesel, 5-cyl. 2.4I 3:3

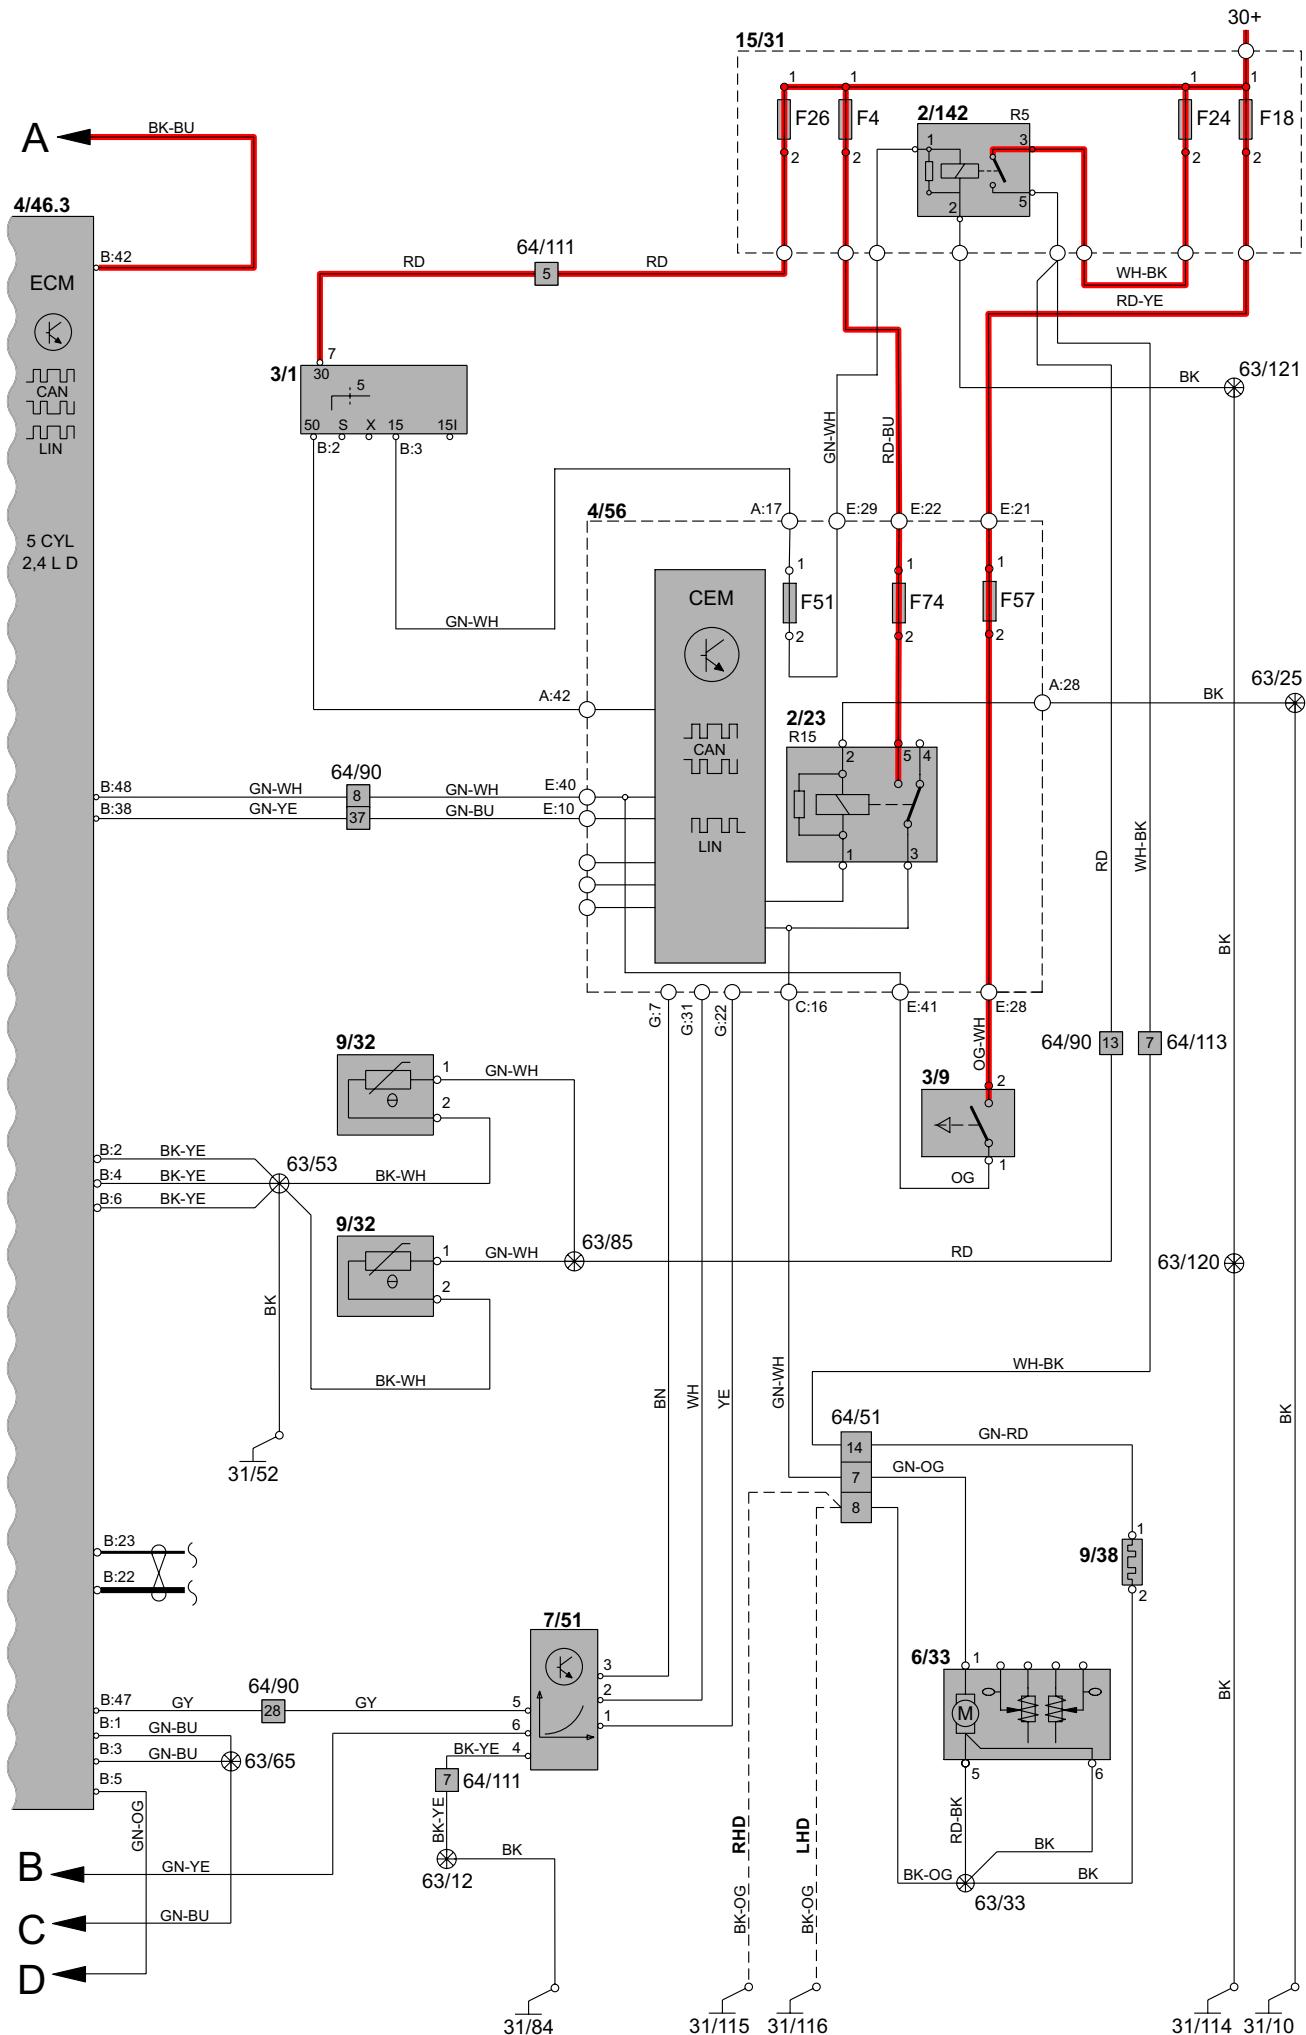


Group 23 Fuel system

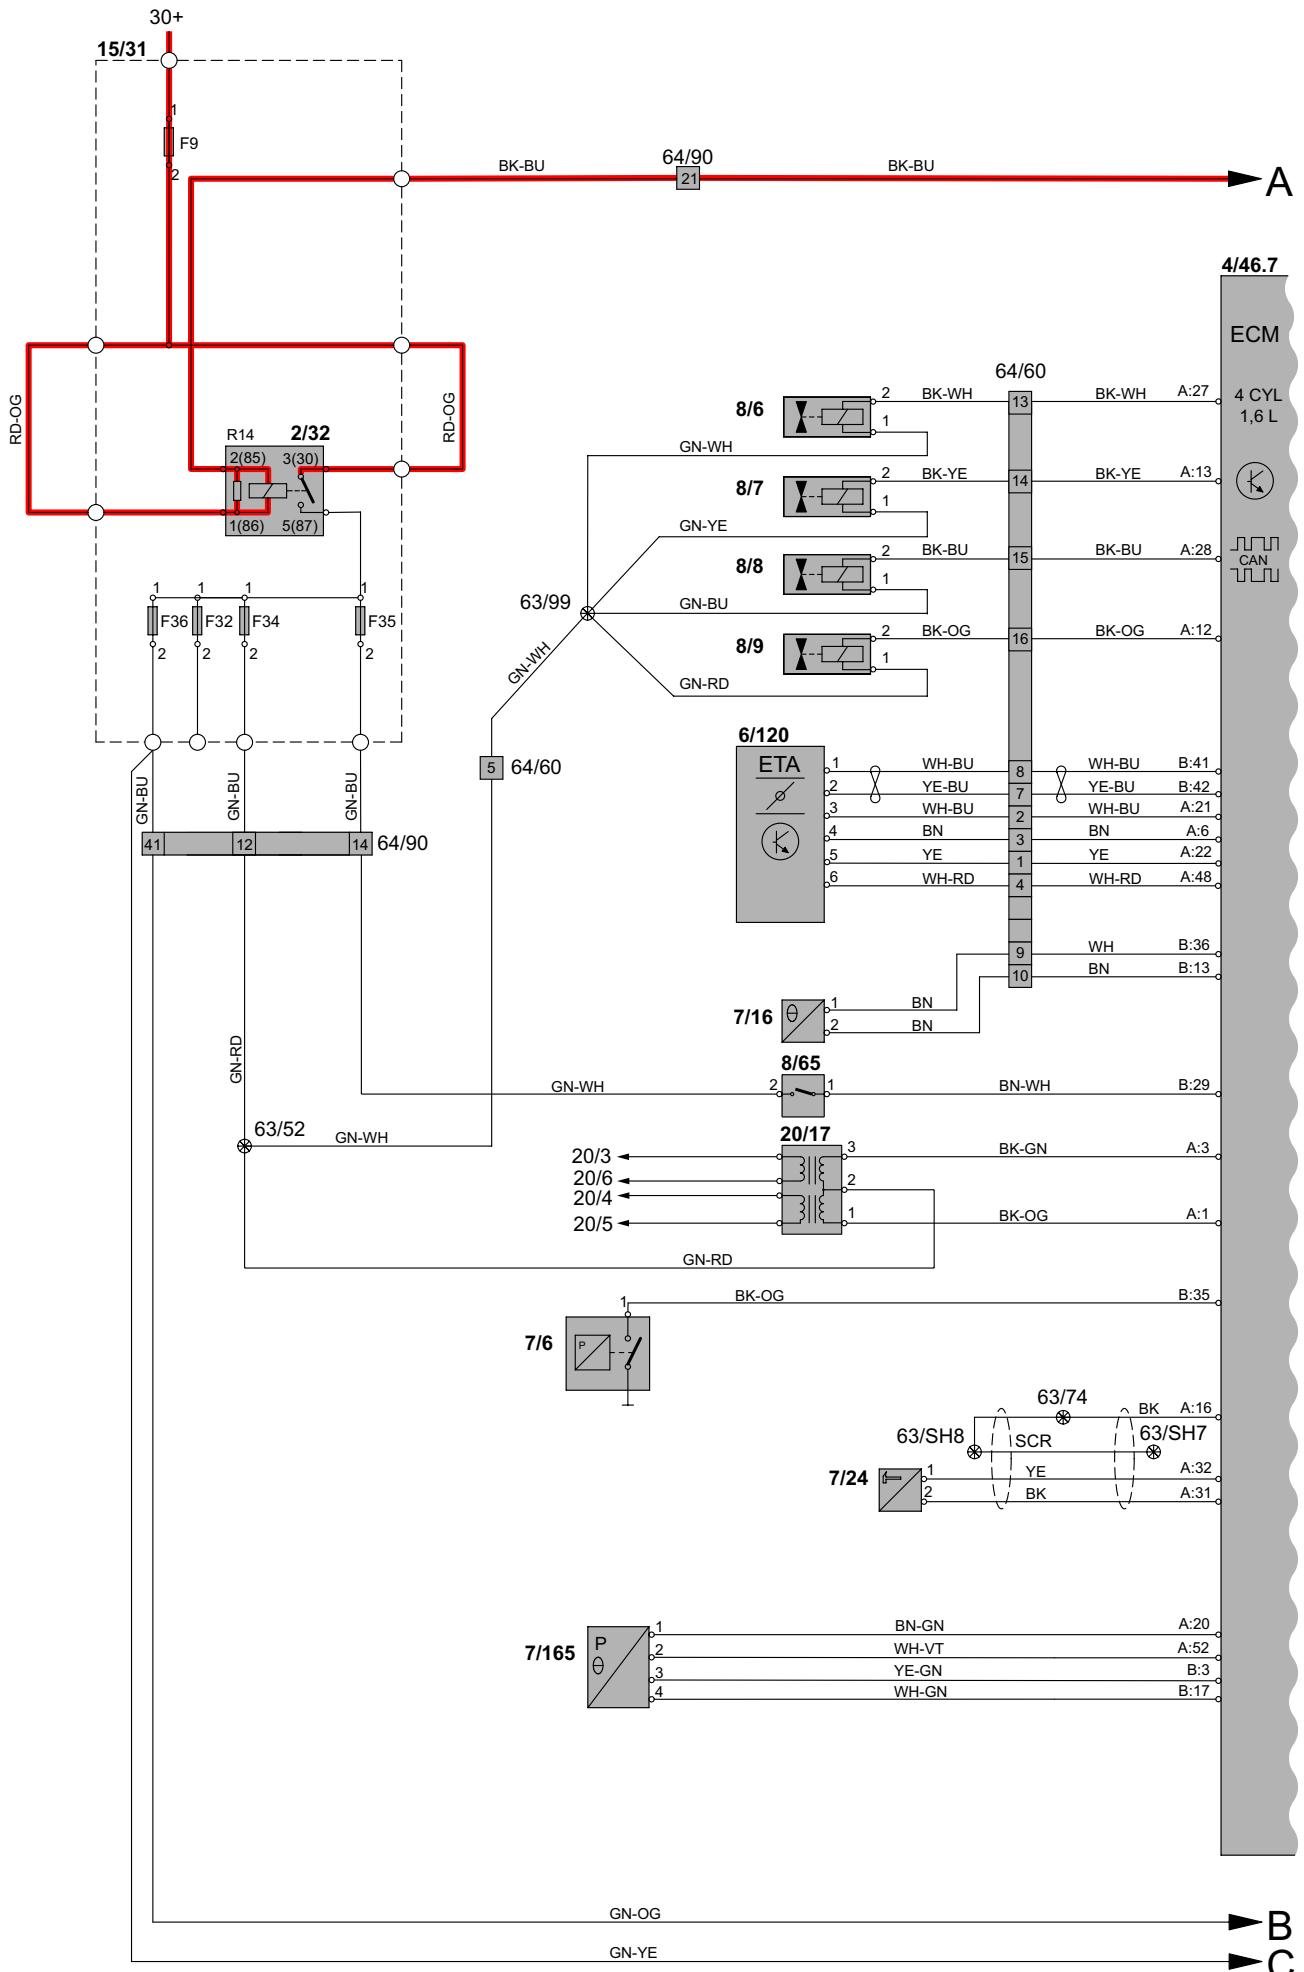


Group 23 Fuel system

Engine management system, 4-cyl. 1.6l 2:2

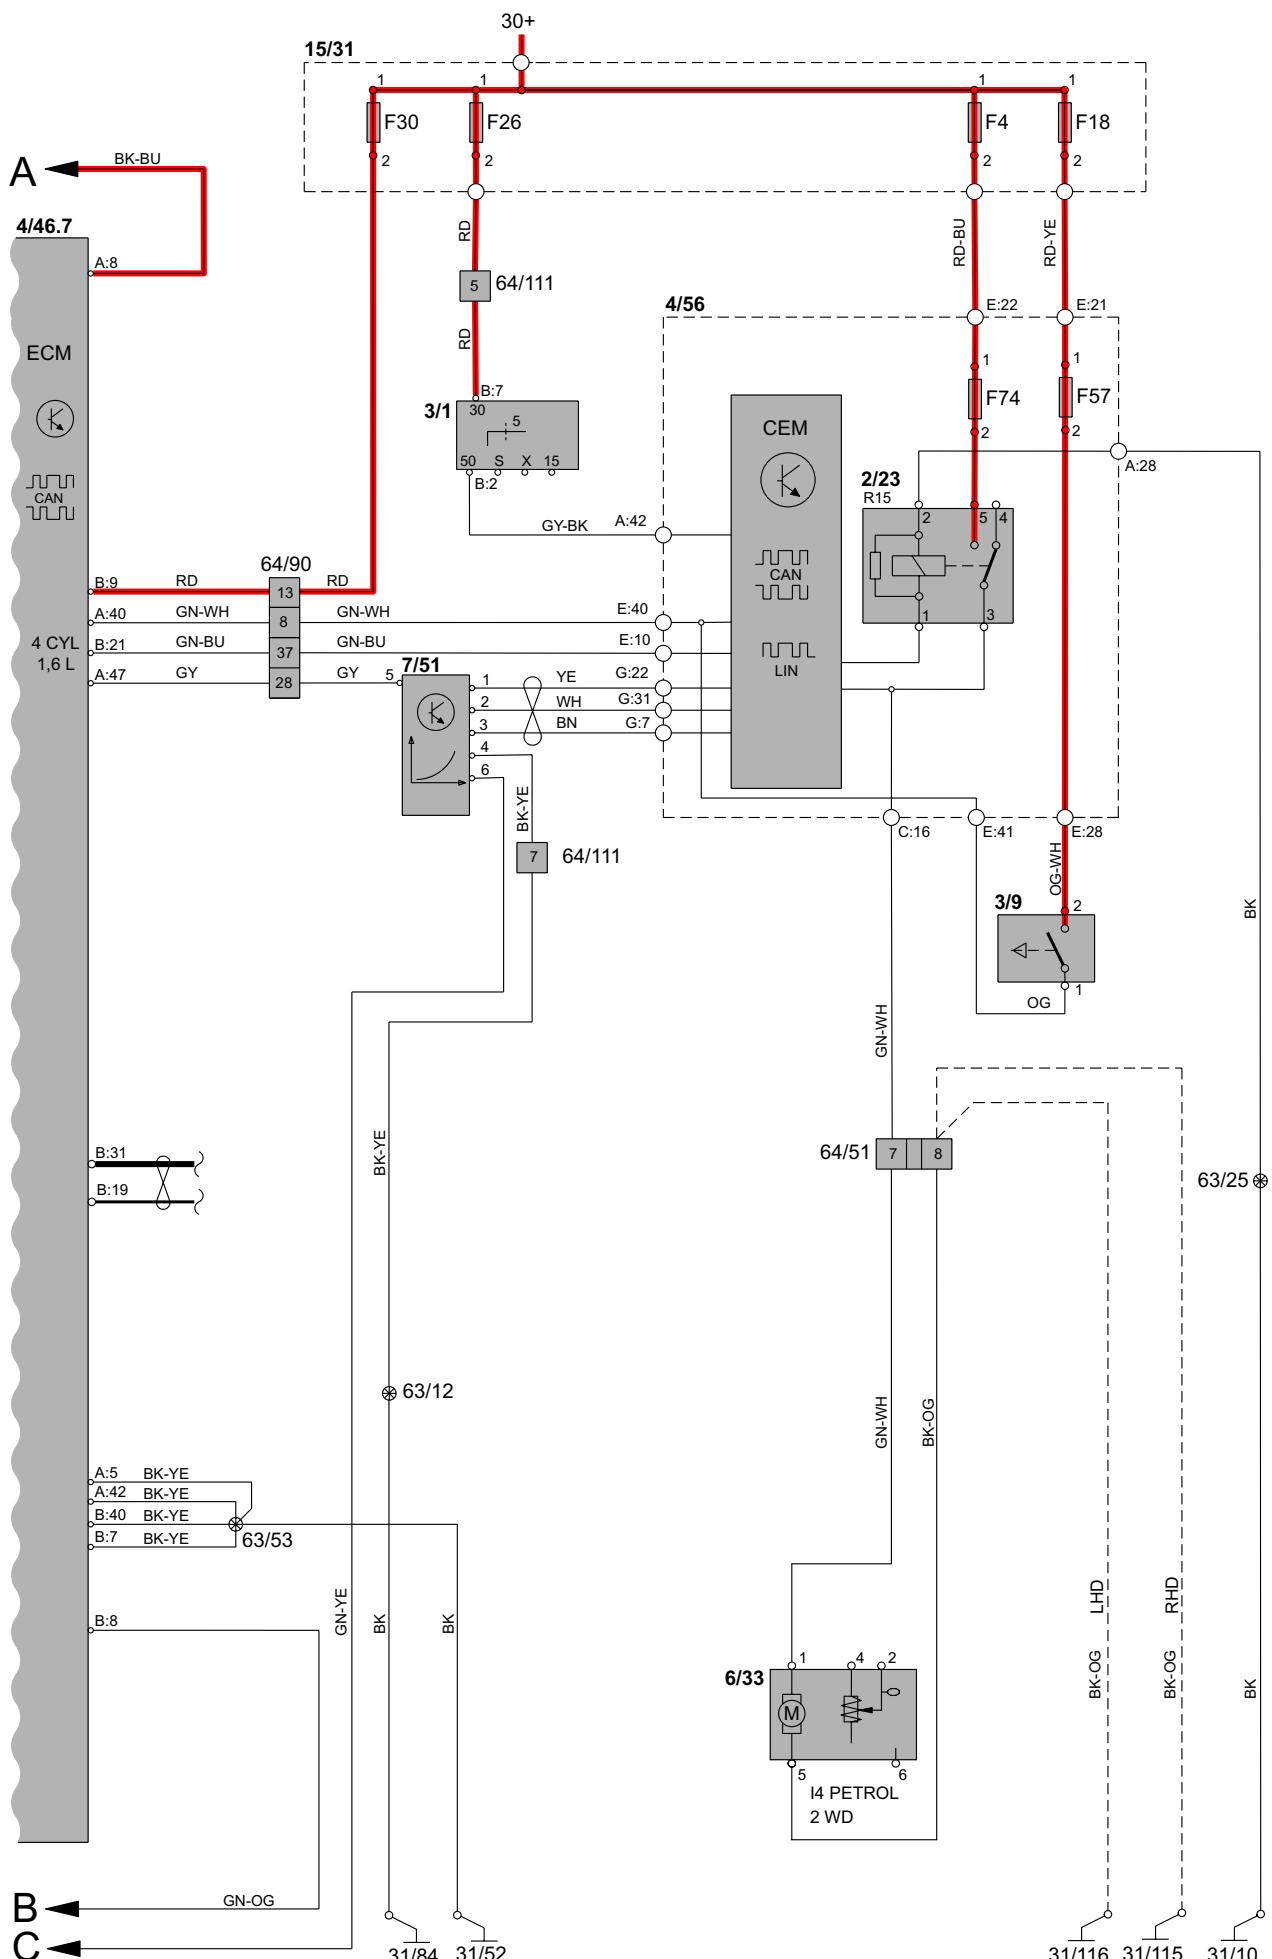


Group 23 Fuel system

Engine management system, 4-cyl. 1.8l & 2.0l 1:2

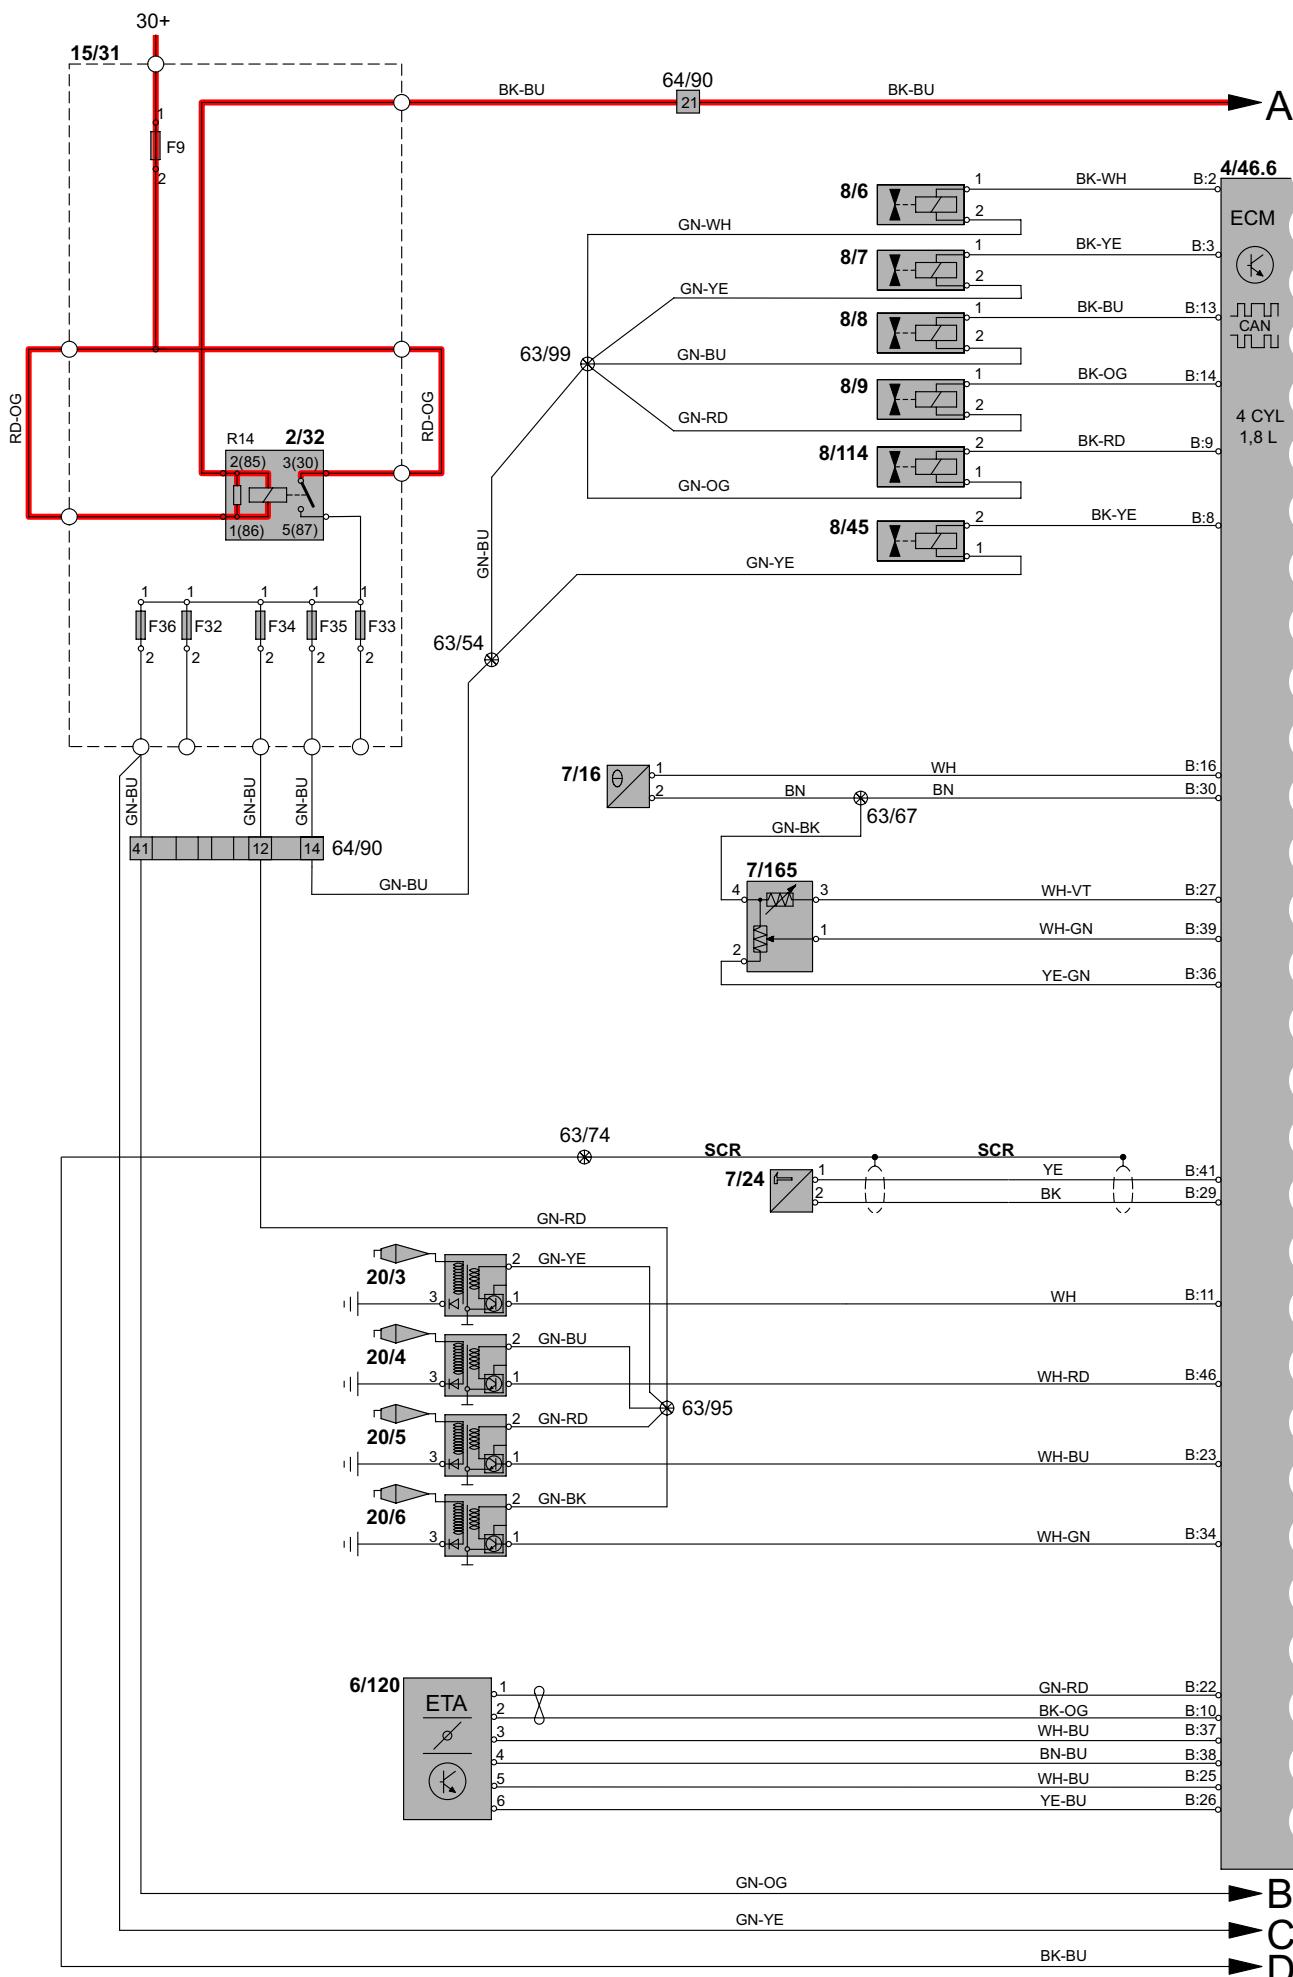


Group 23 Fuel system

Engine management system, 4-cyl. 1.8l & 2.0l 2:2

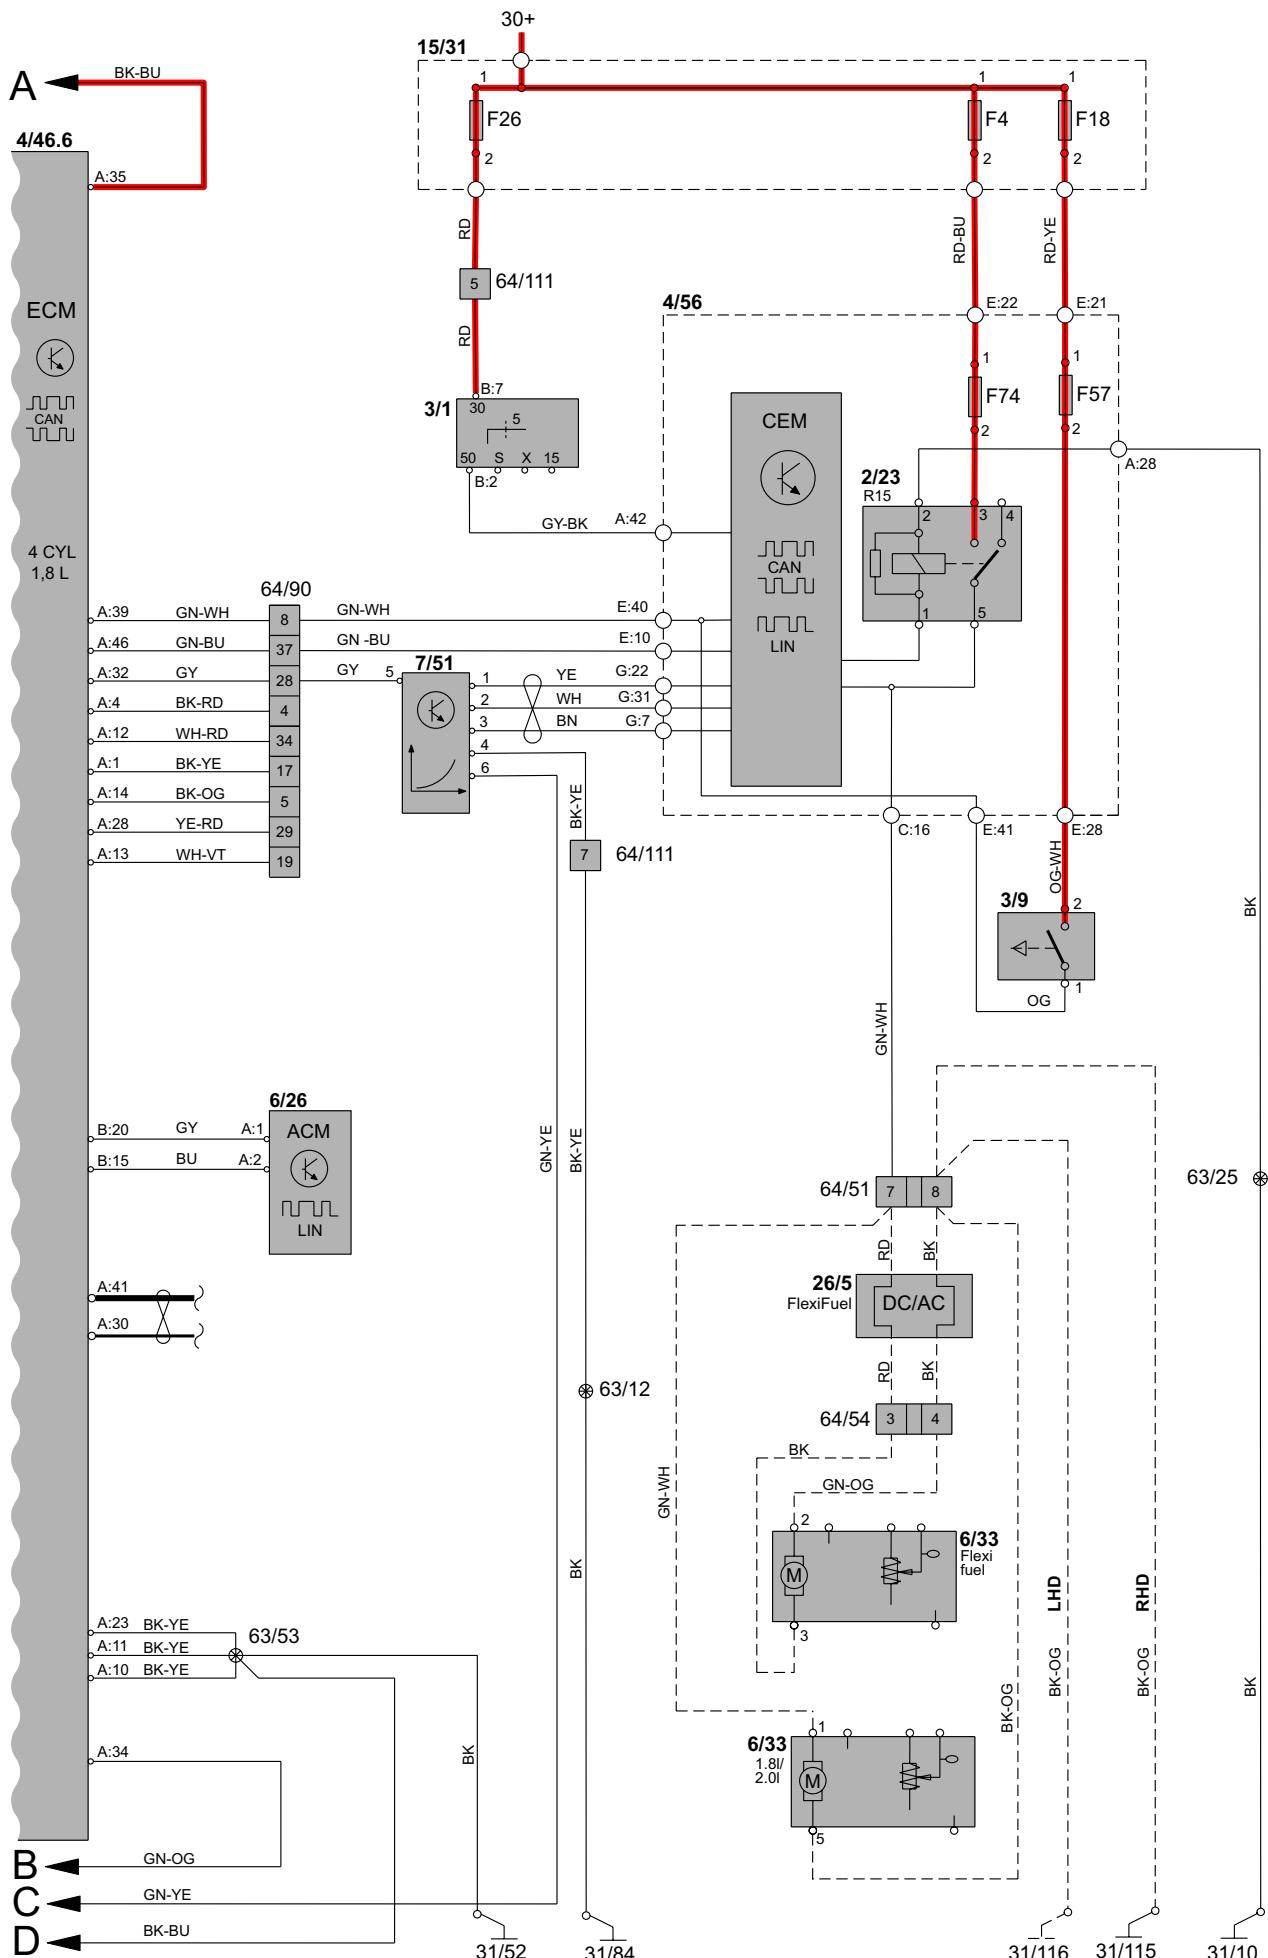


Group 23 Fuel system

Engine management system, 5-cyl. 1:2

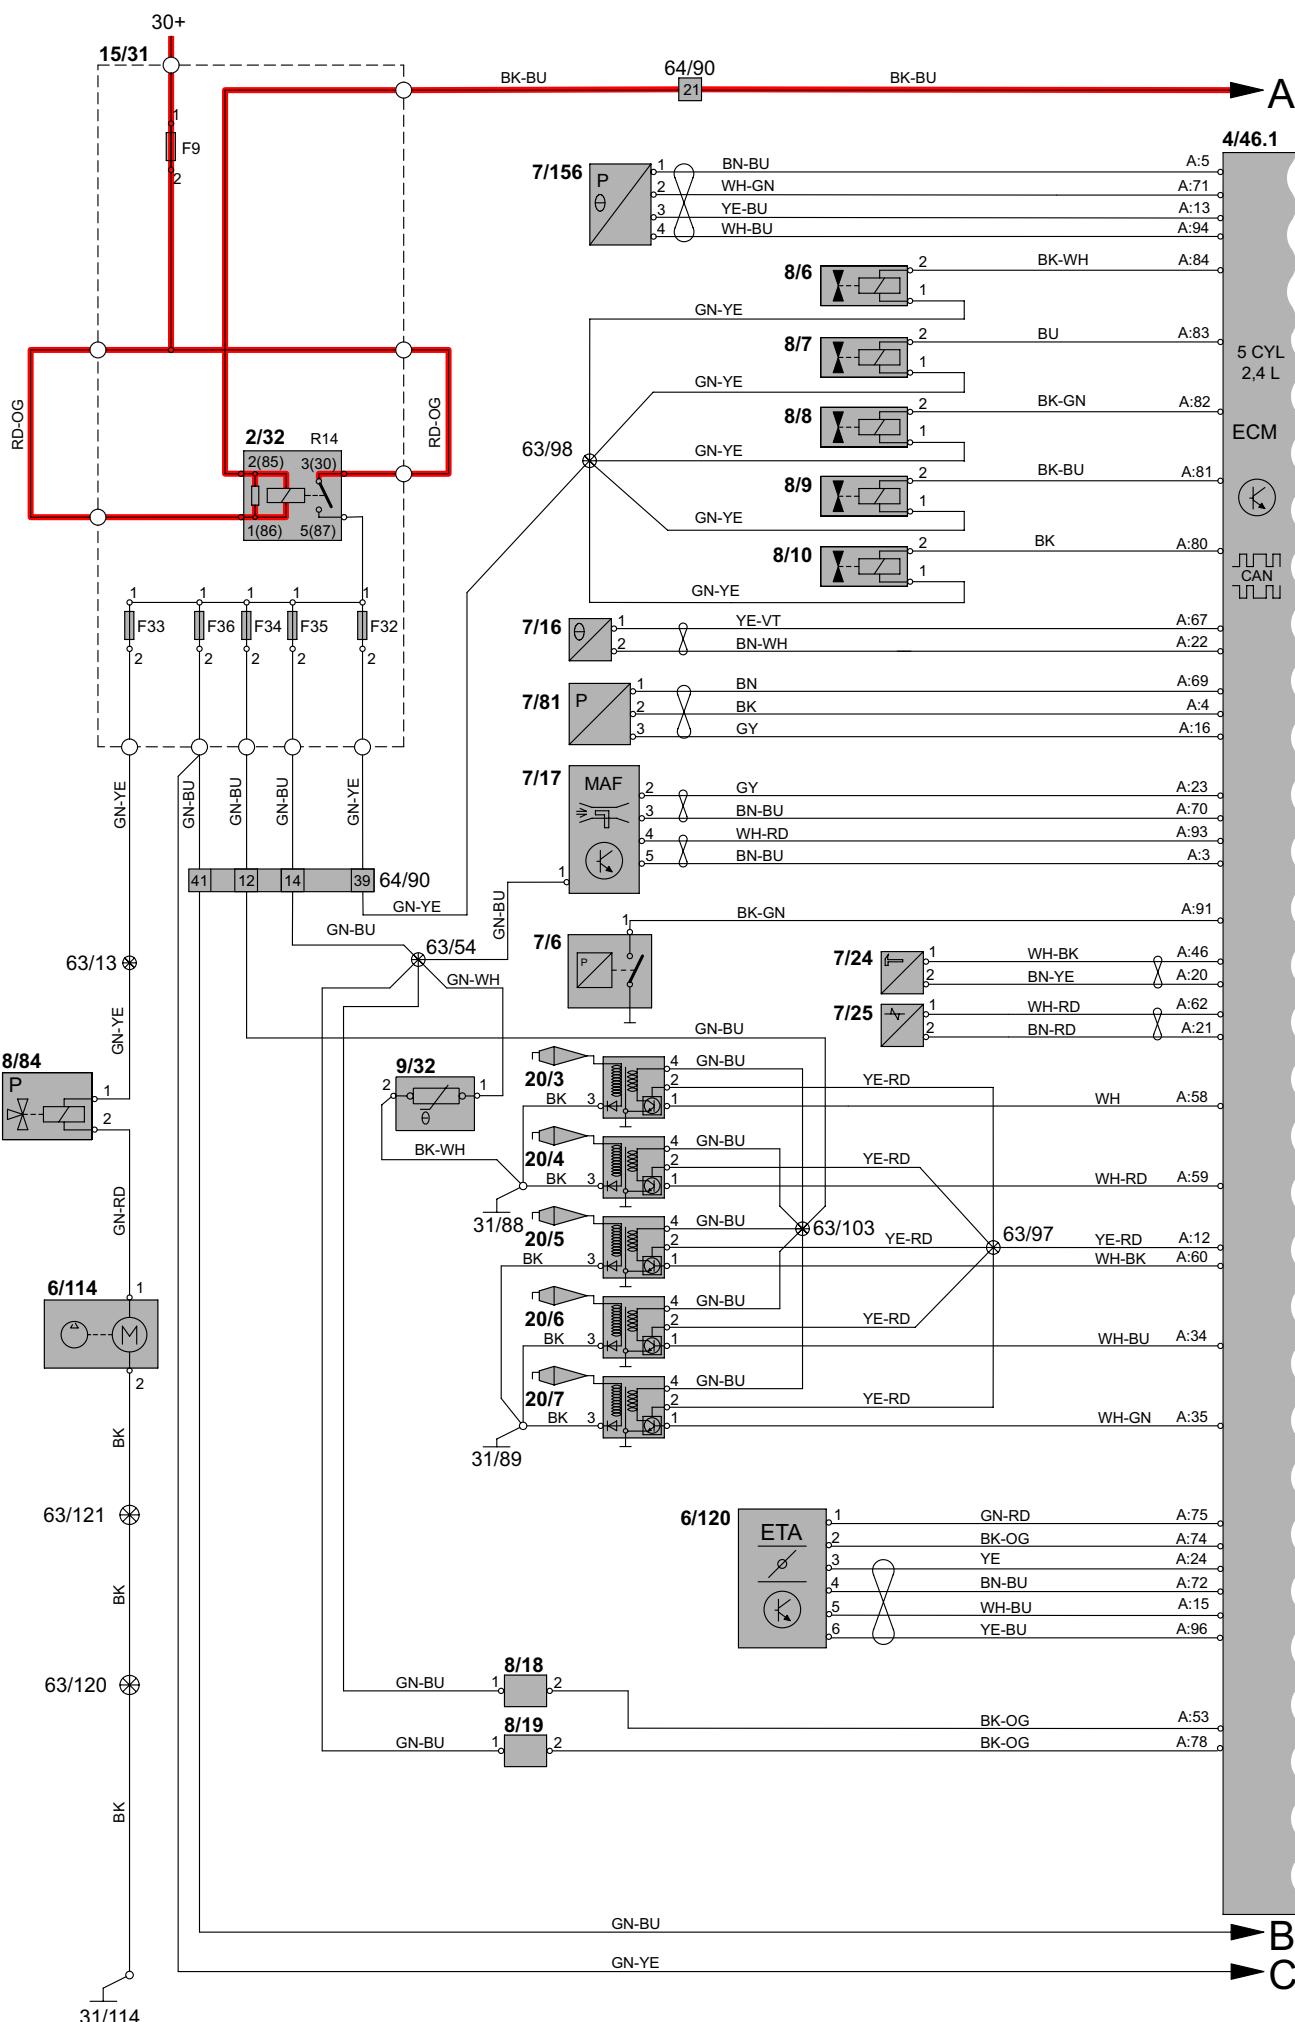


Group 23 Fuel system

Engine management system, 5-cyl. 2:2

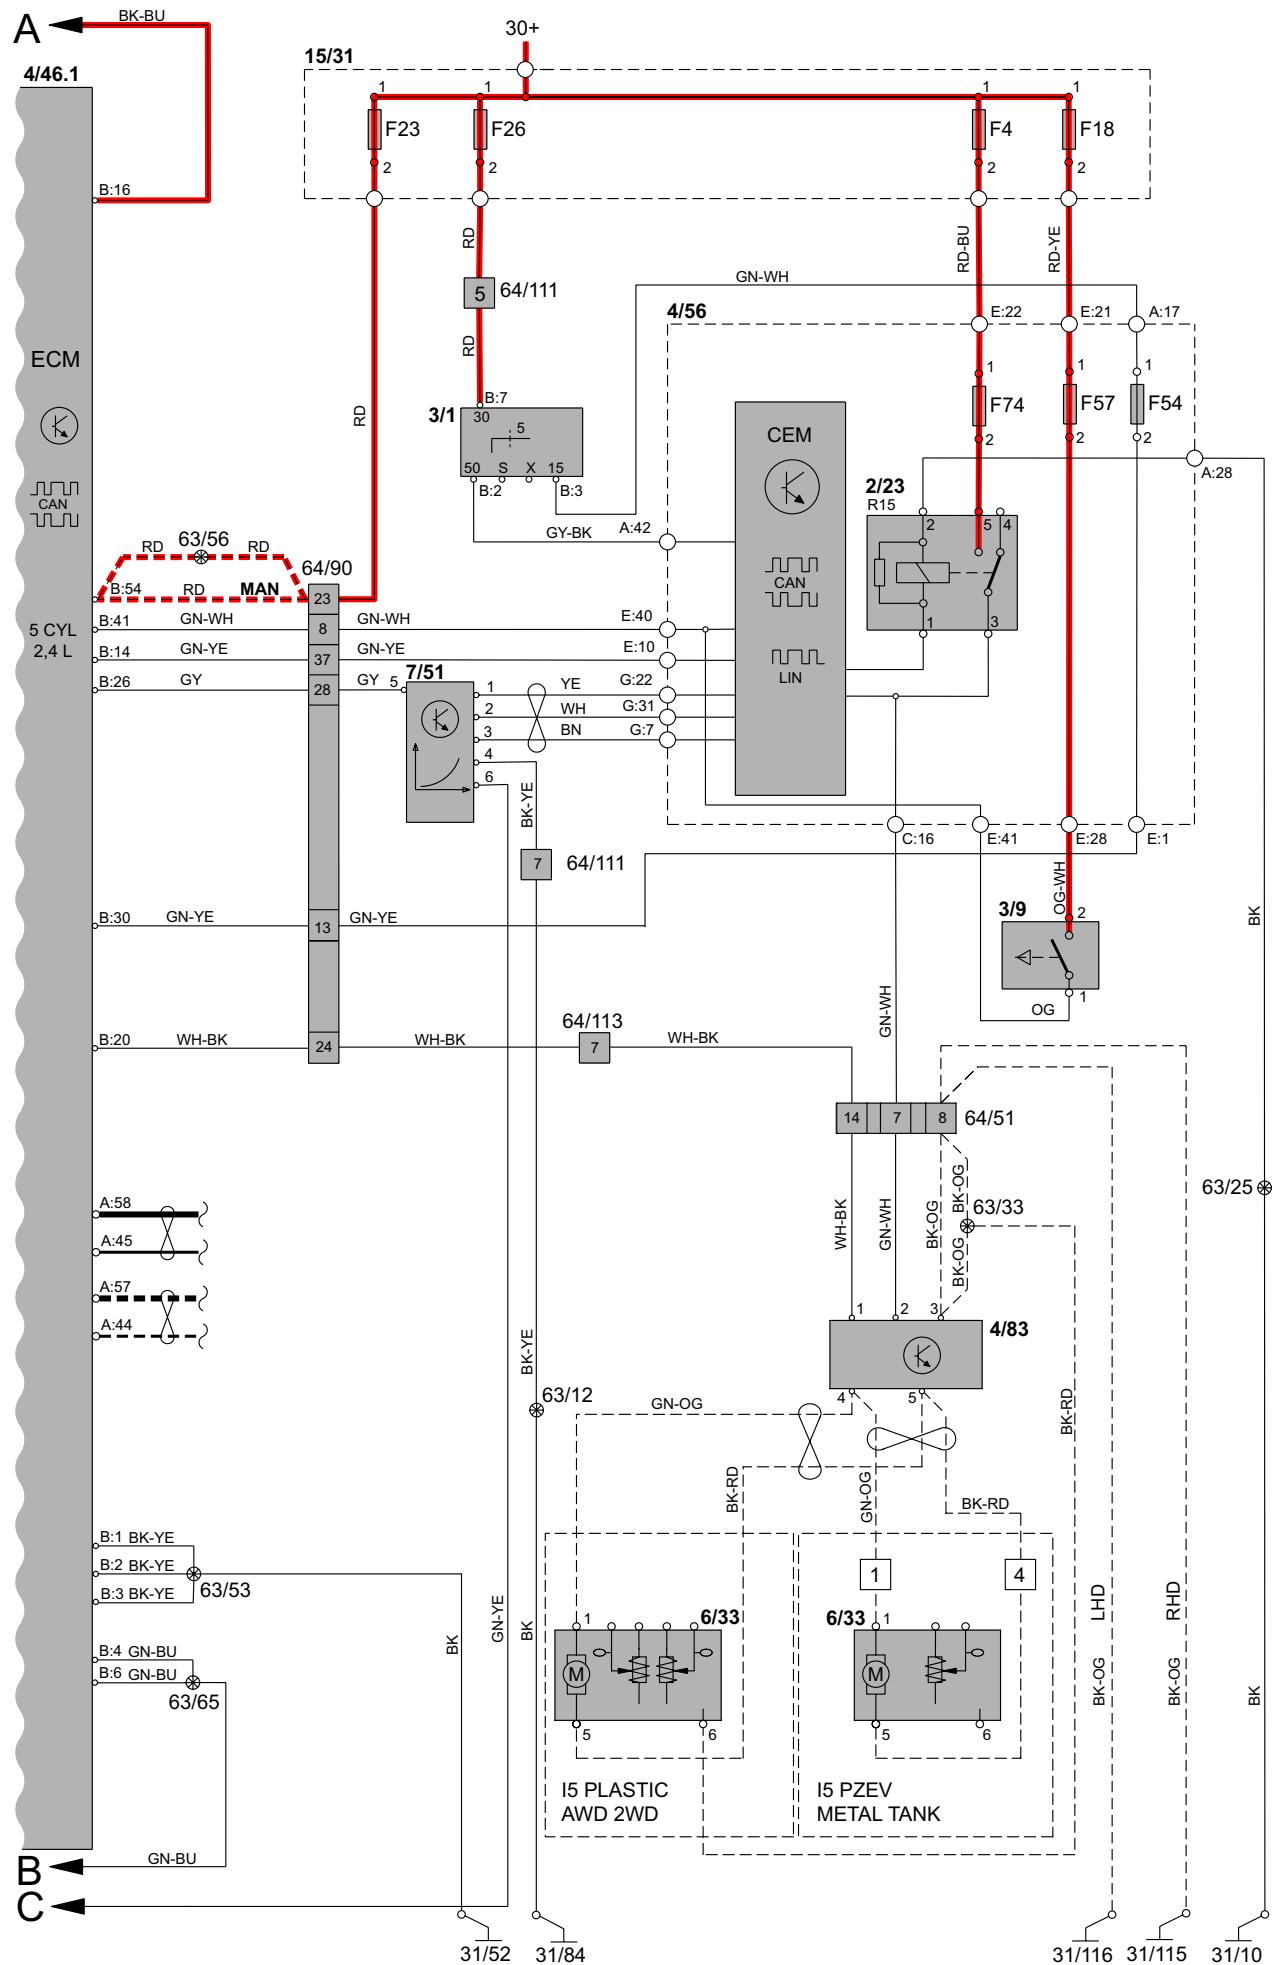


Group 23 Fuel system

Engine management system, 5-cyl. Turbo 1:2

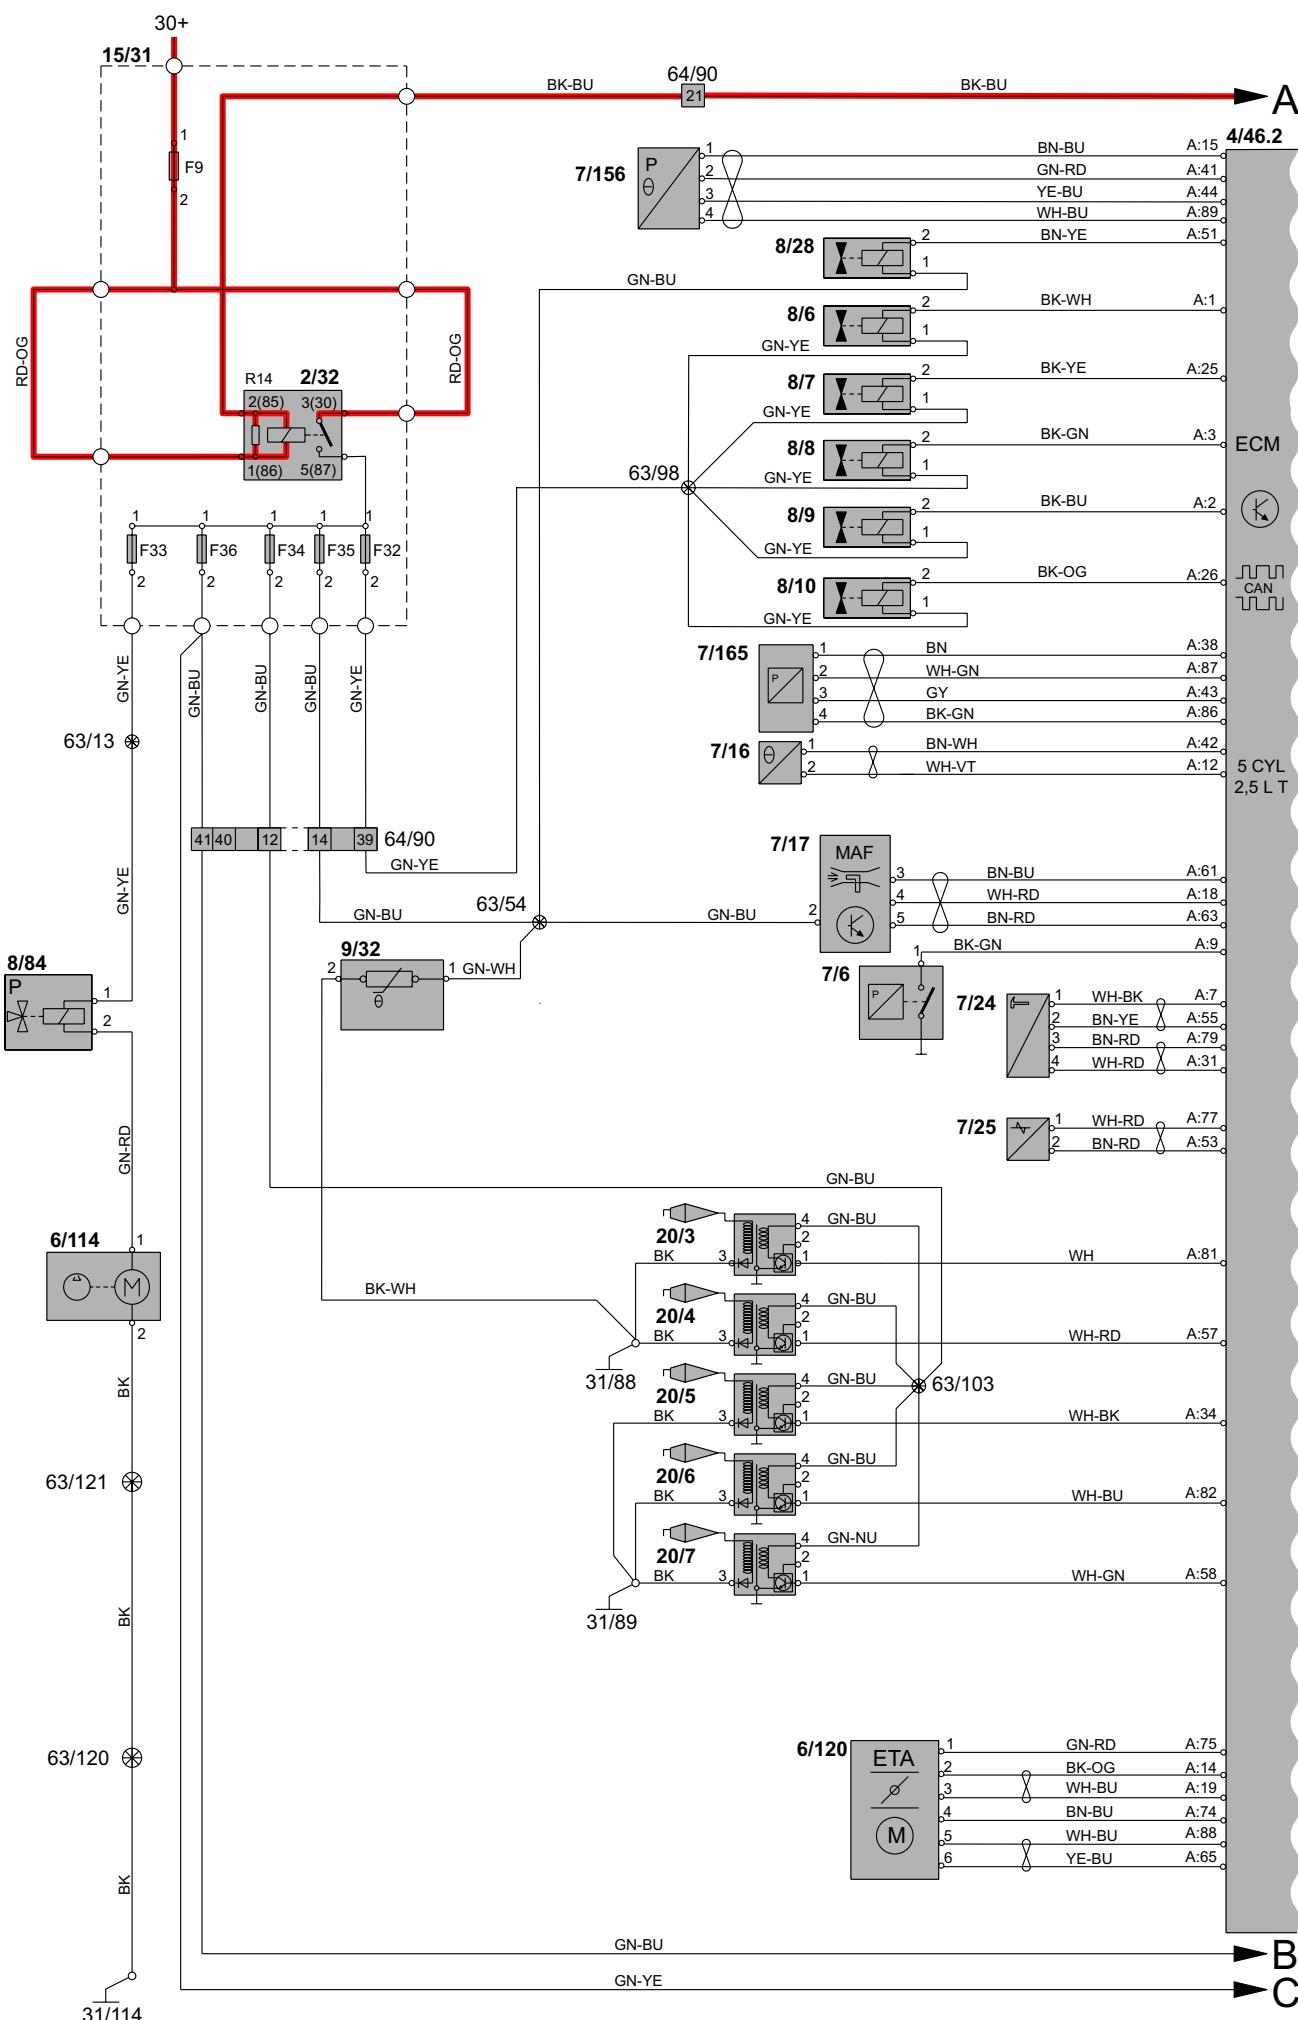


Group 23 Fuel system

Engine management system, 5-cyl. Turbo 2:2

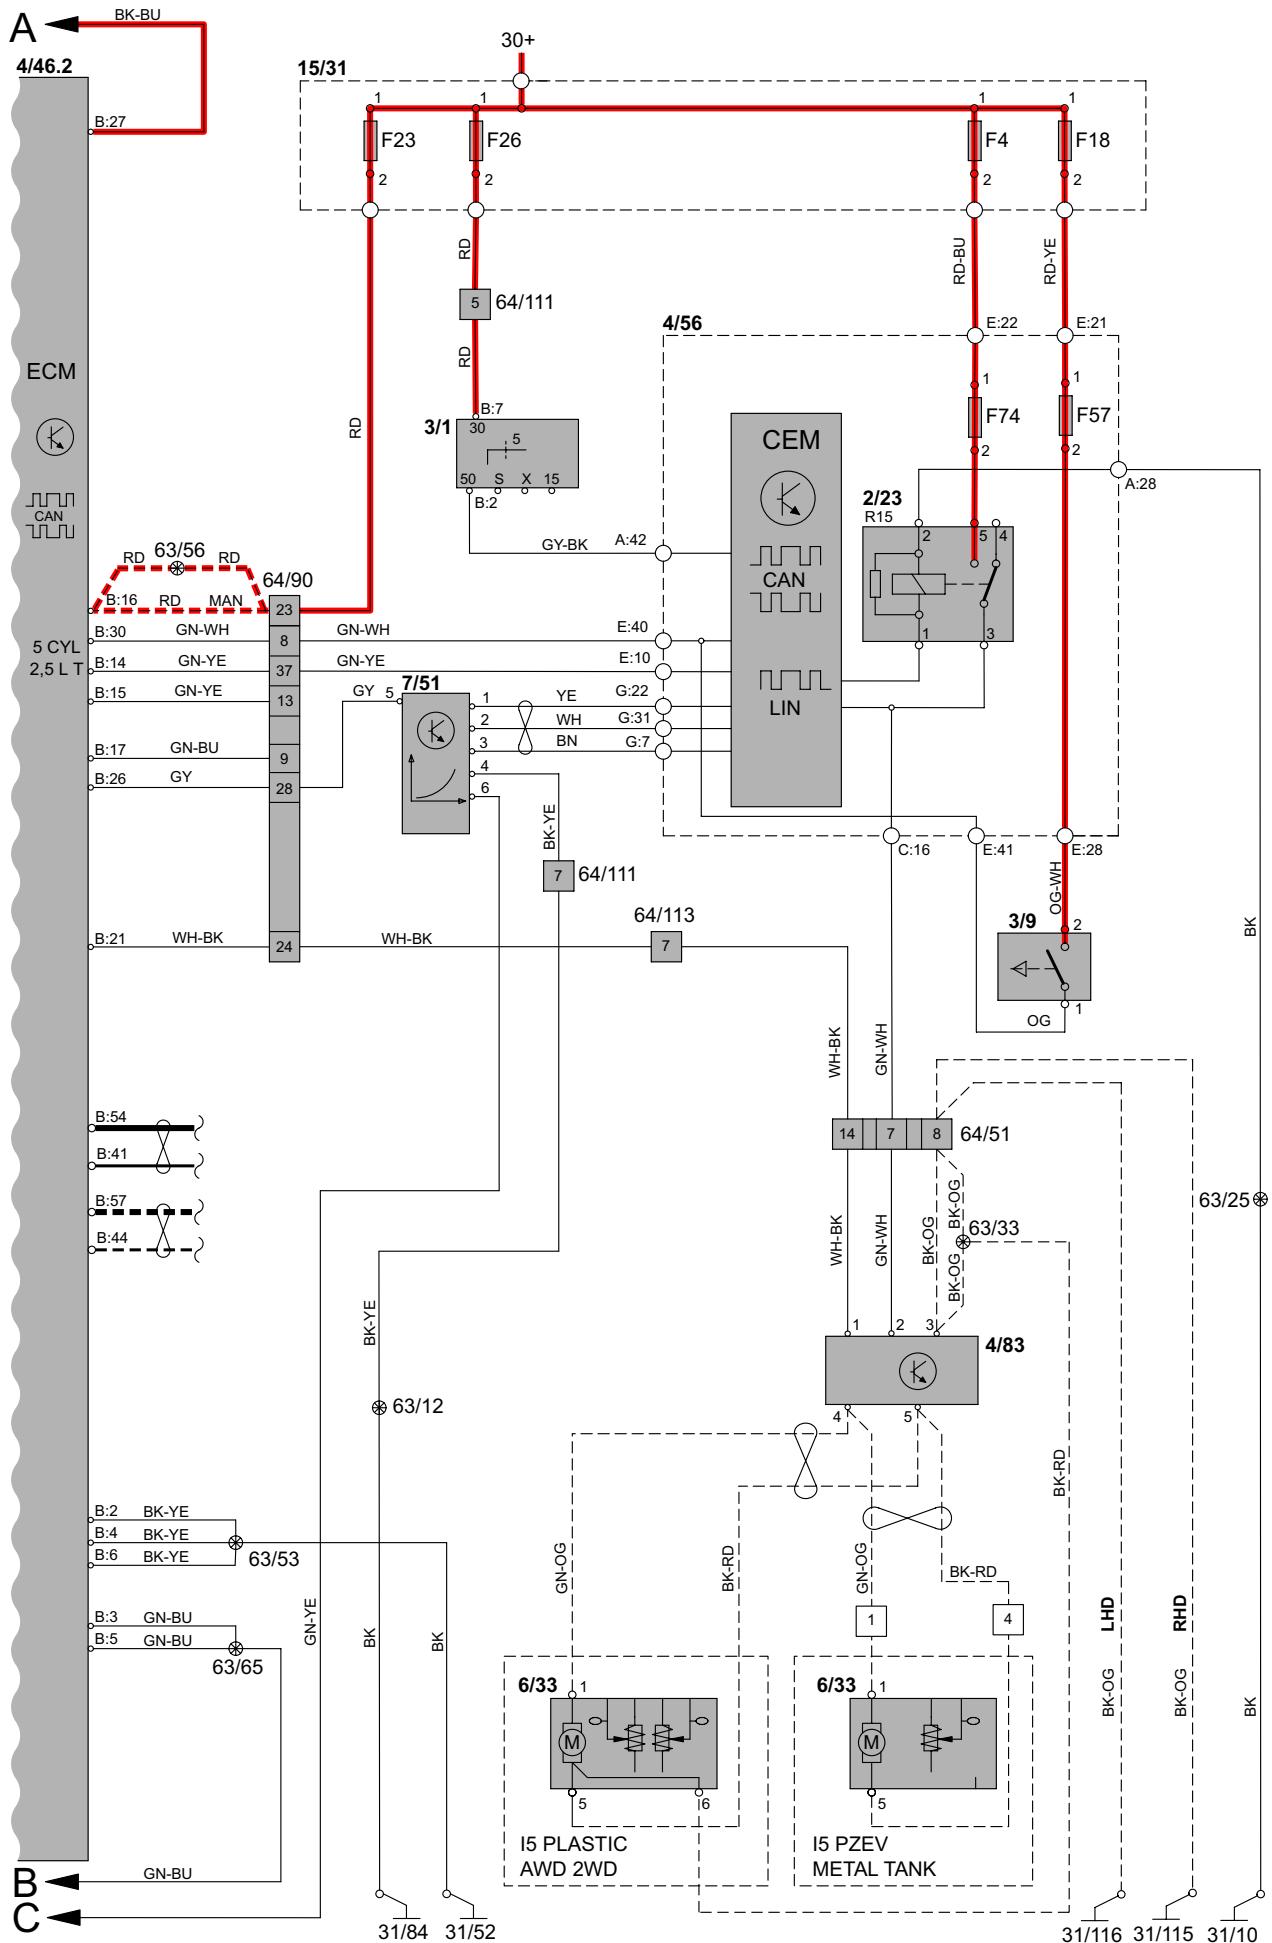


Group 23 Fuel system

Engine management system Diesel, 4-cyl. 1.6l 1:2

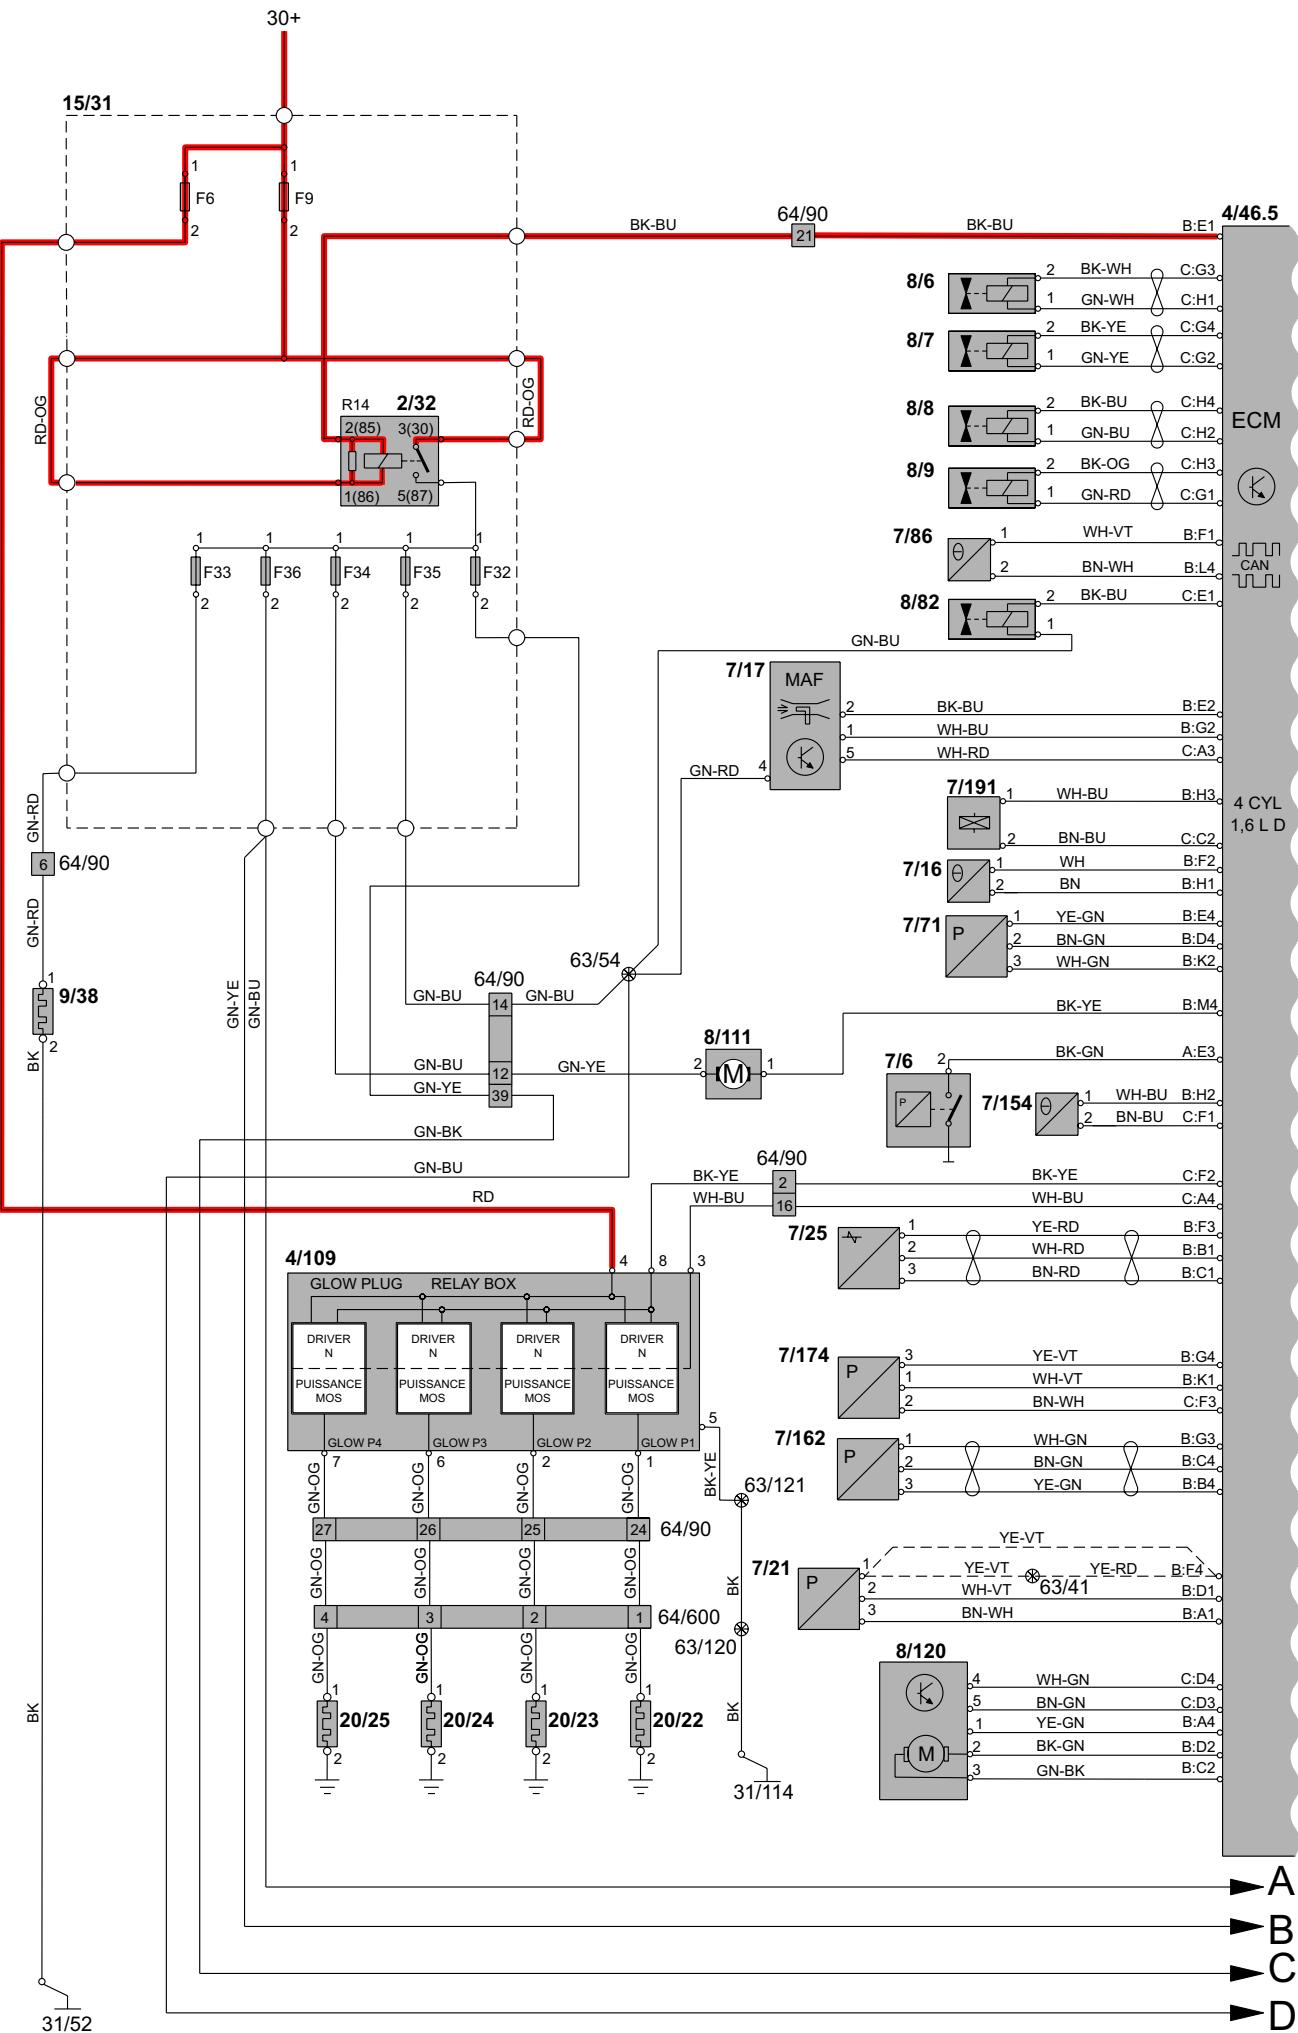


Group 23 Fuel system

Engine management system Diesel, 4-cyl. 1.6l 2:2

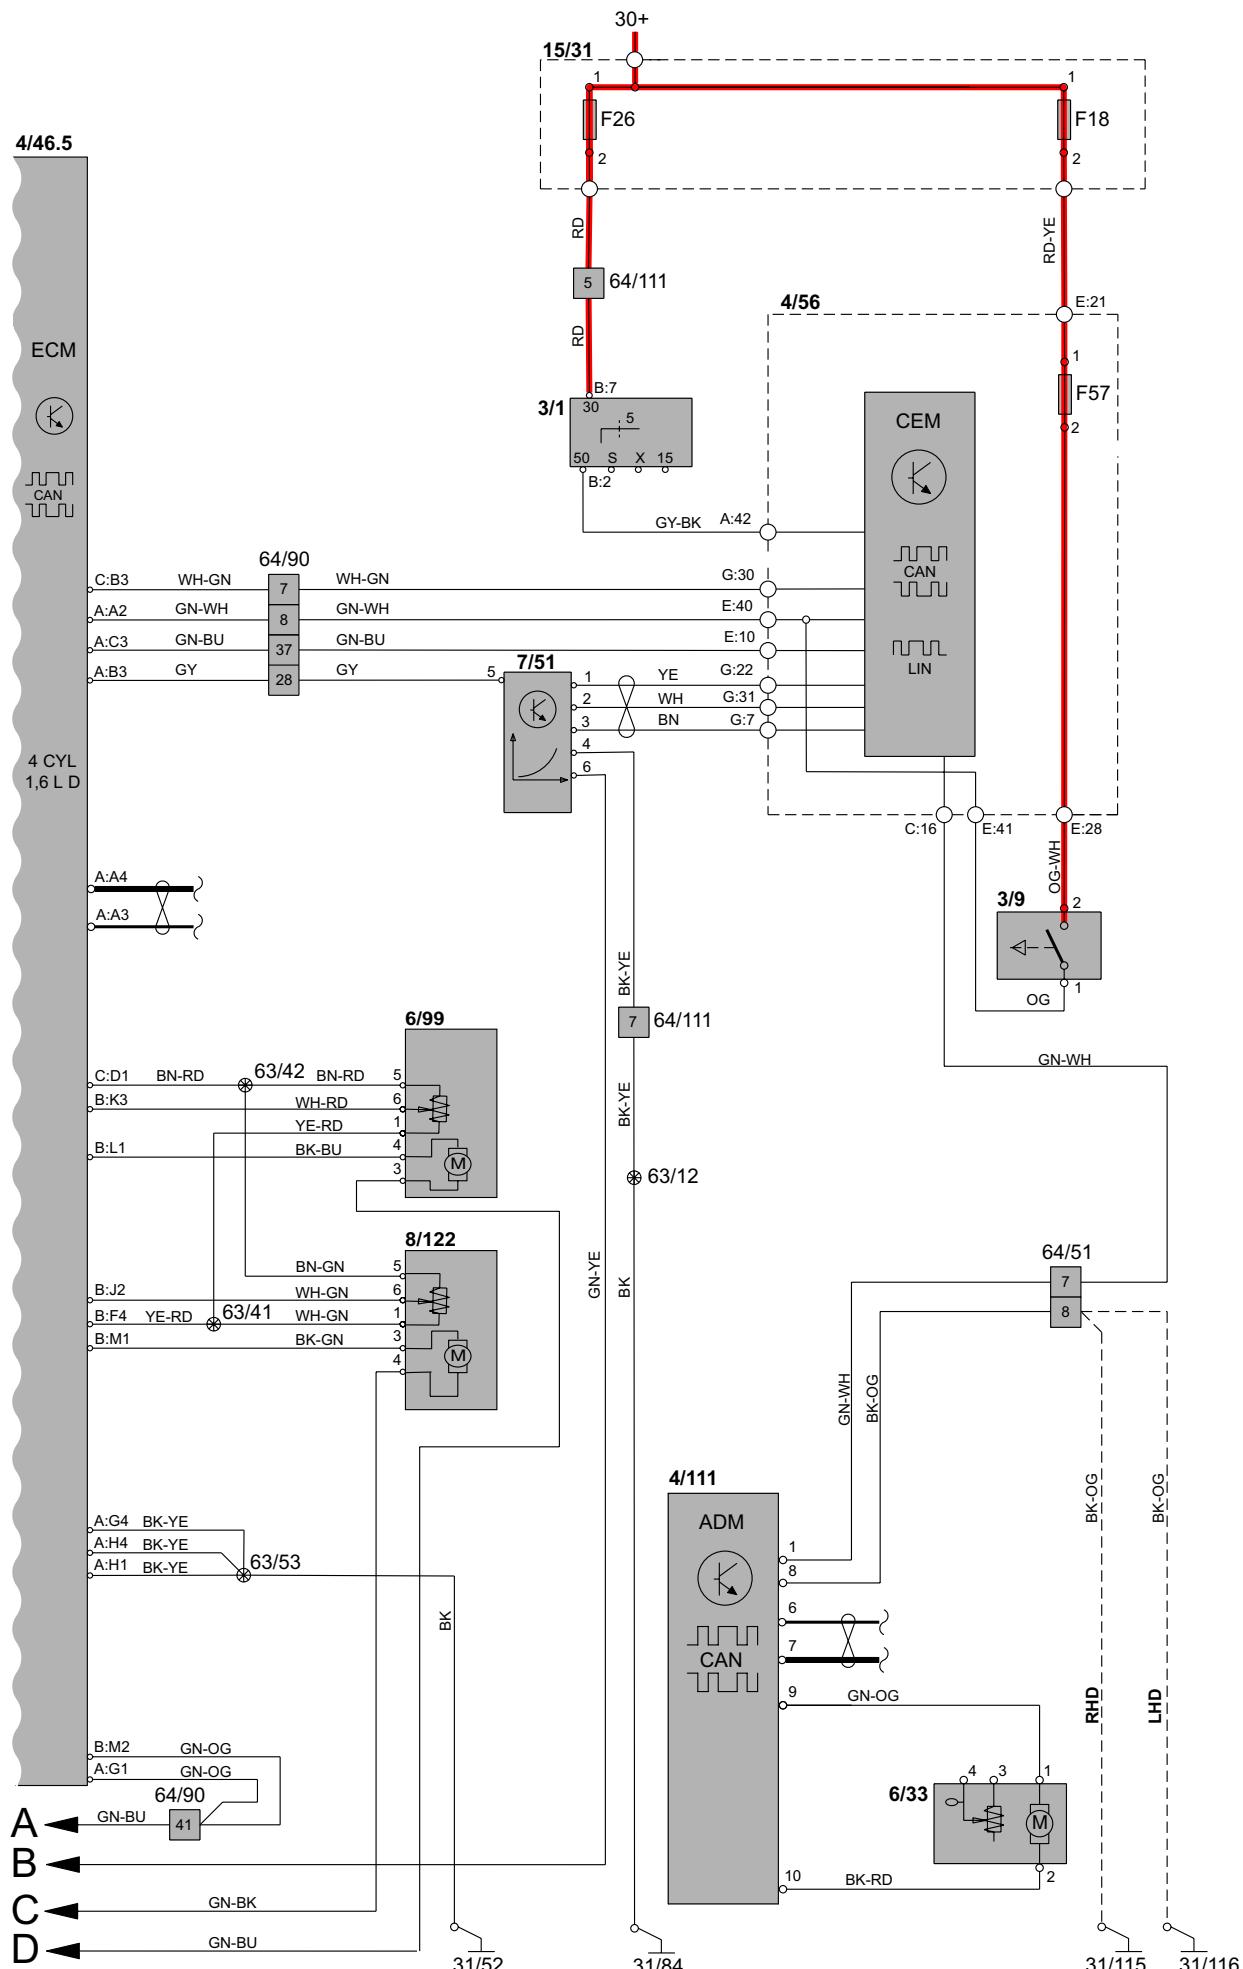


Group 23 Fuel system

Engine management system Diesel, 4-cyl. 2.0l 1:2

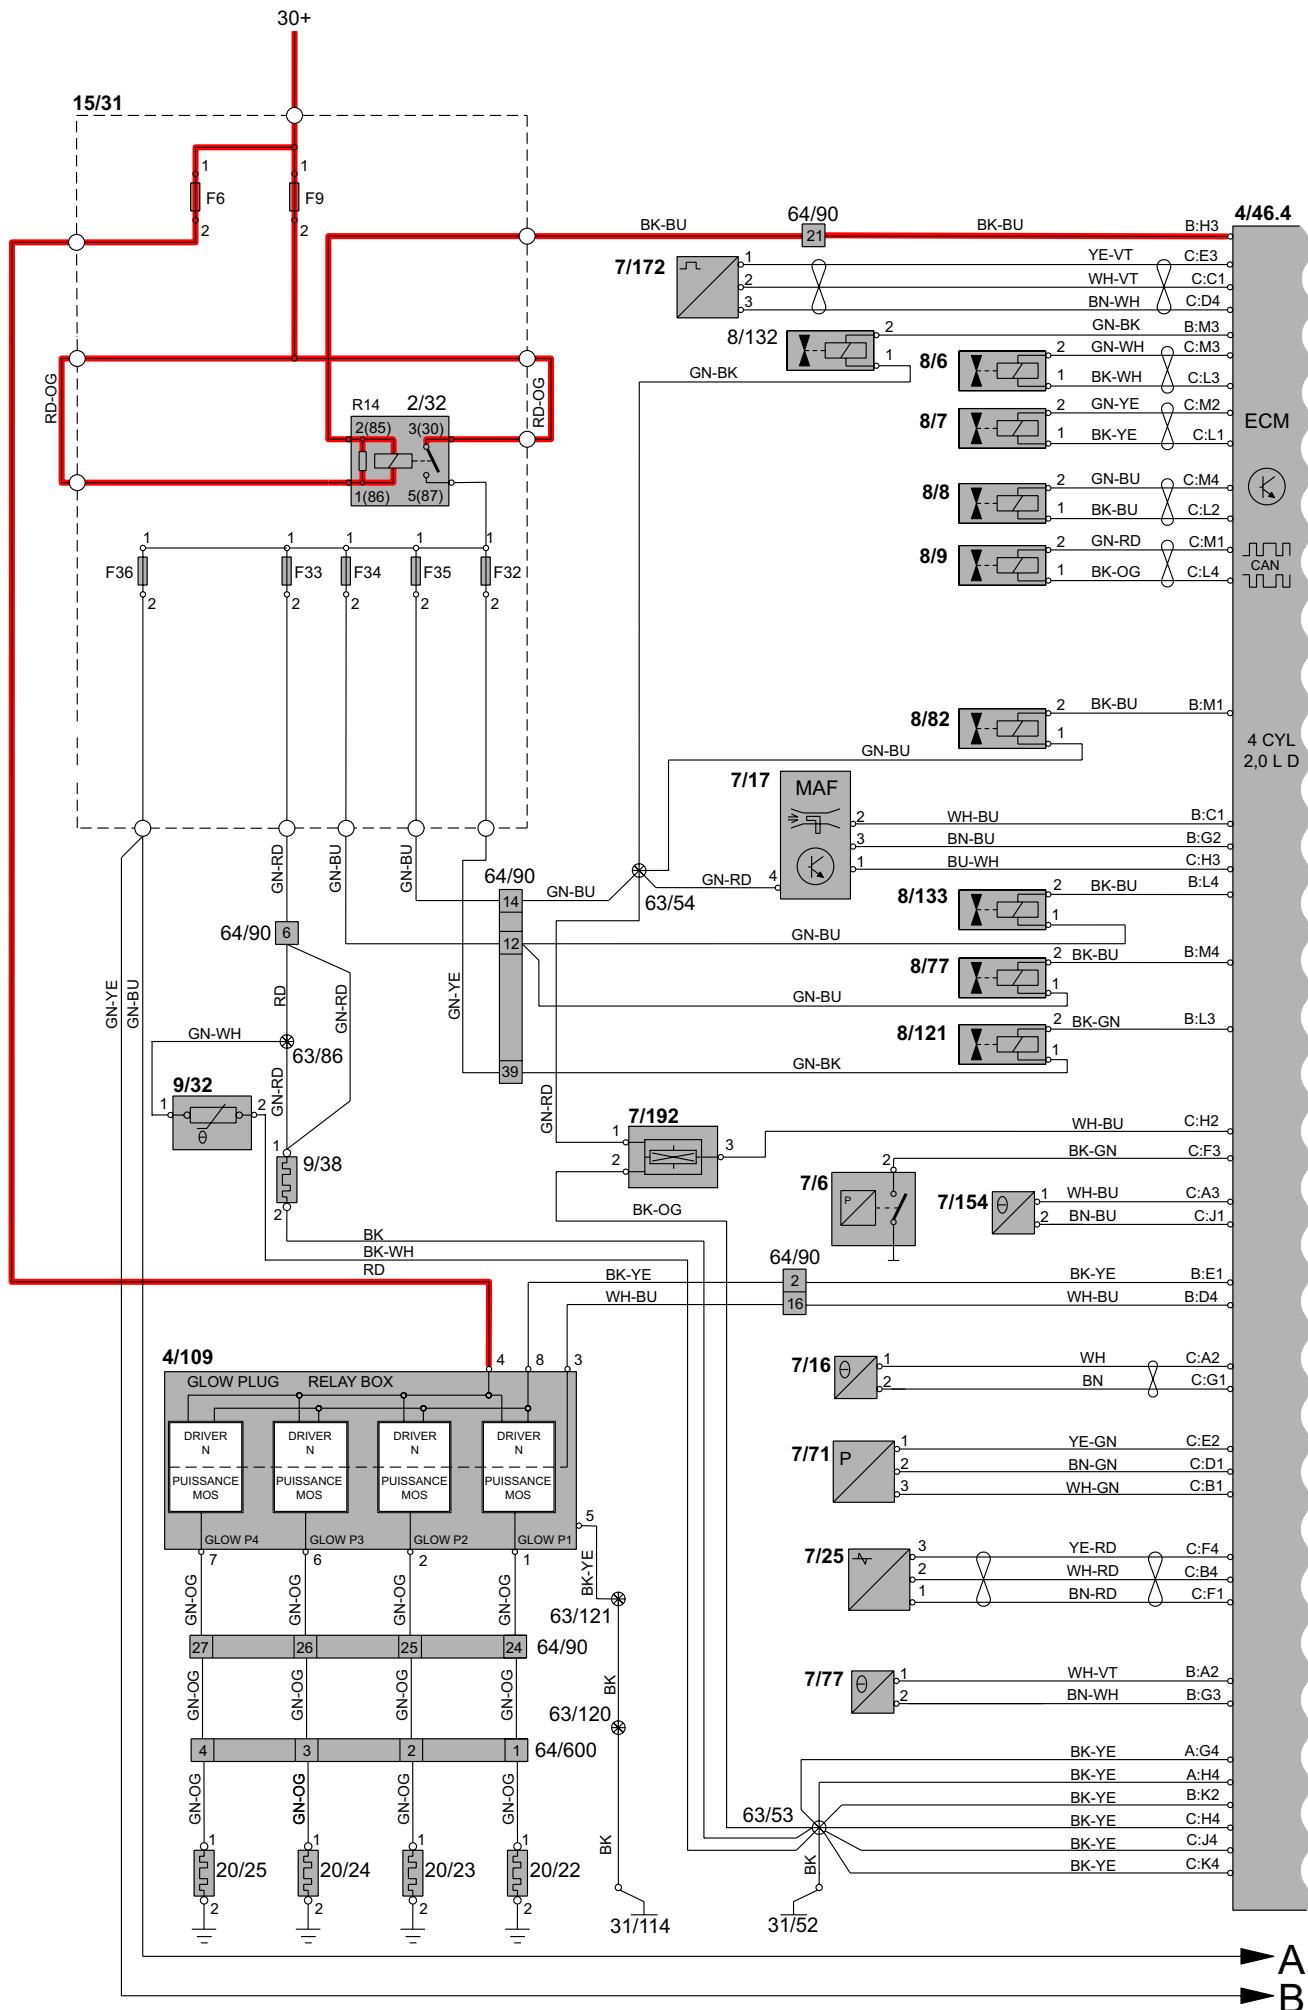


Group 23 Fuel system

Engine management system Diesel, 4-cyl. 2.0l 2:2

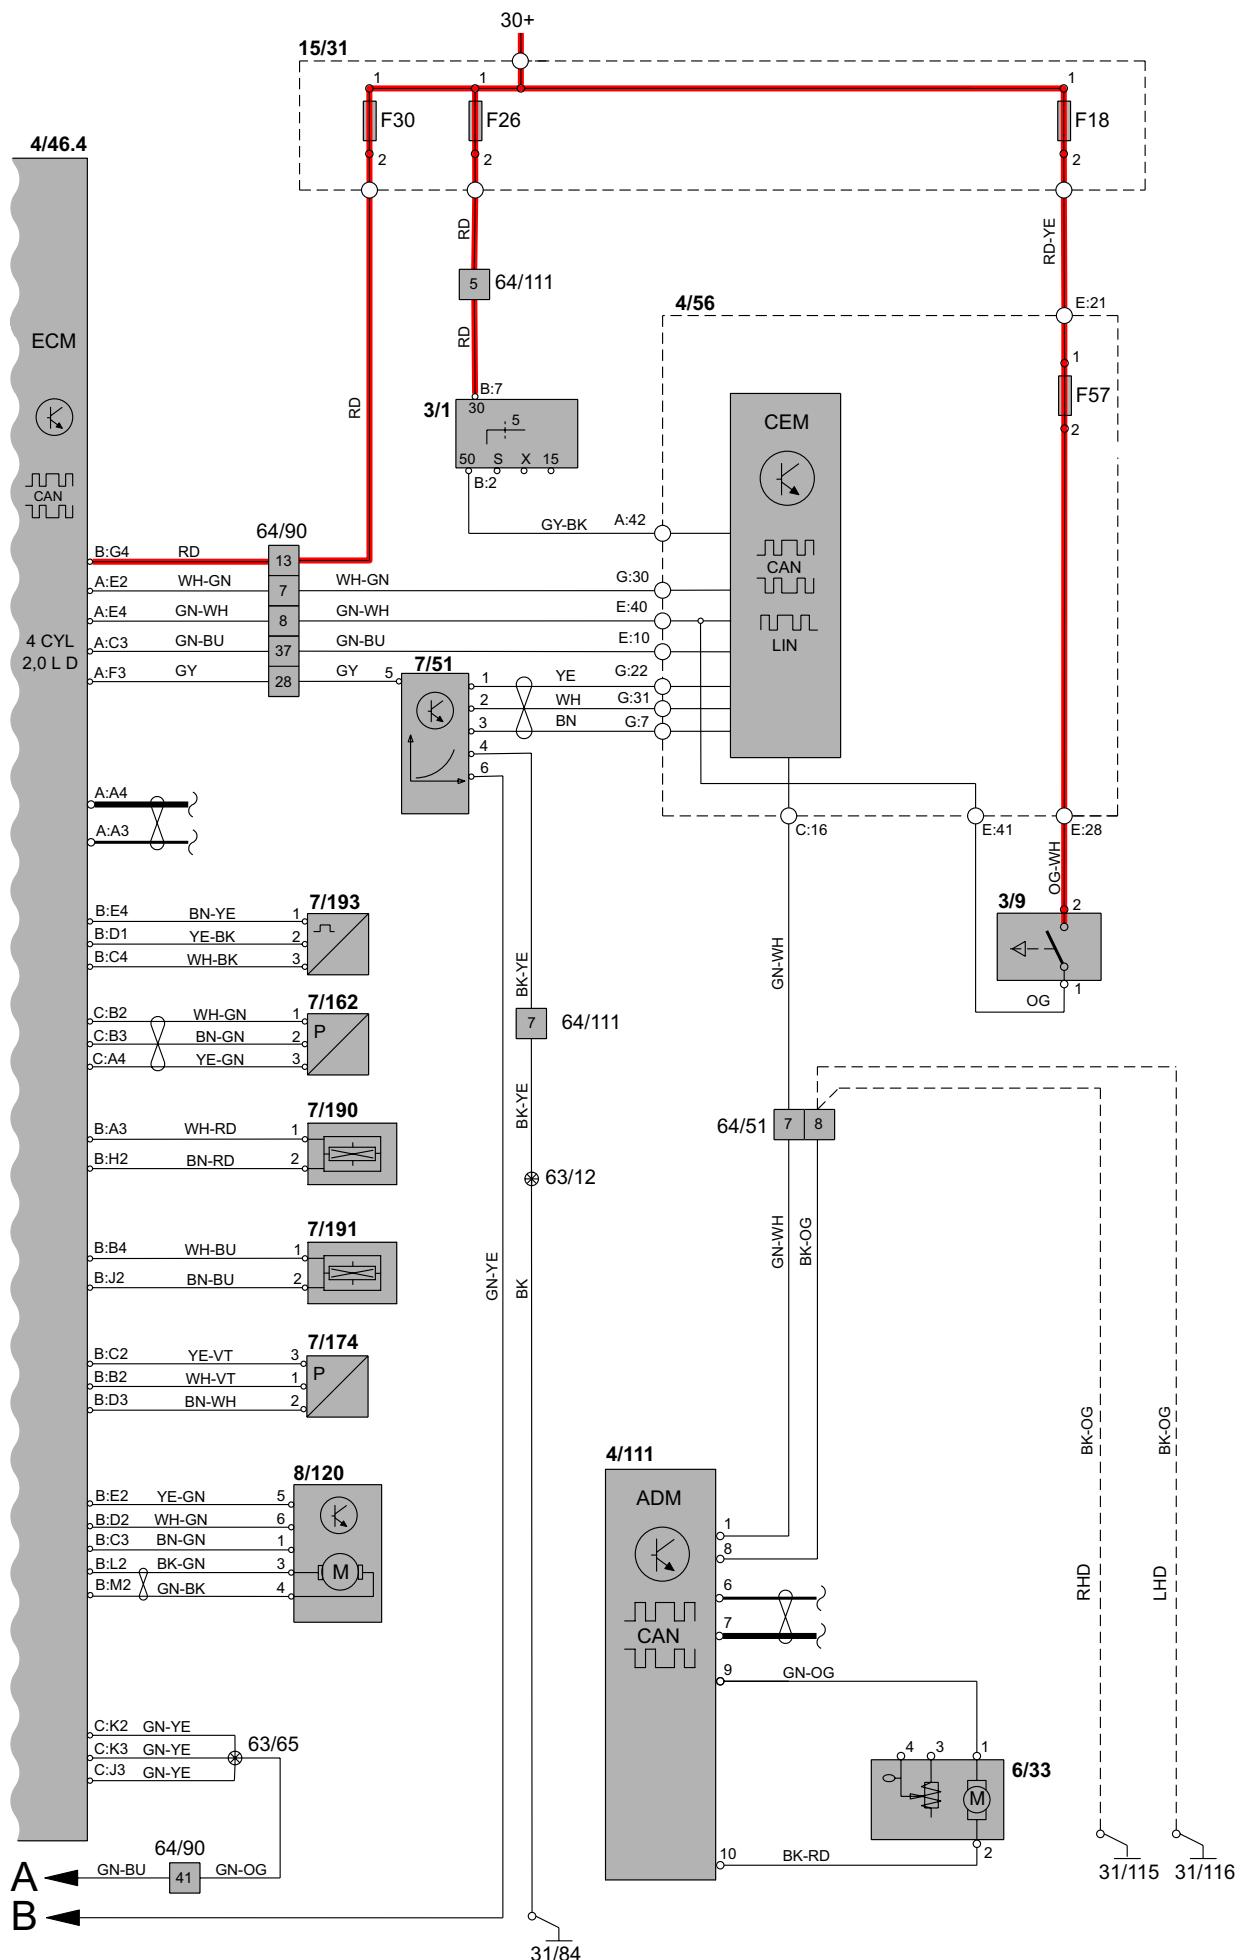


Group 23 Fuel system

Emission control, 4-cyl. 1.6l

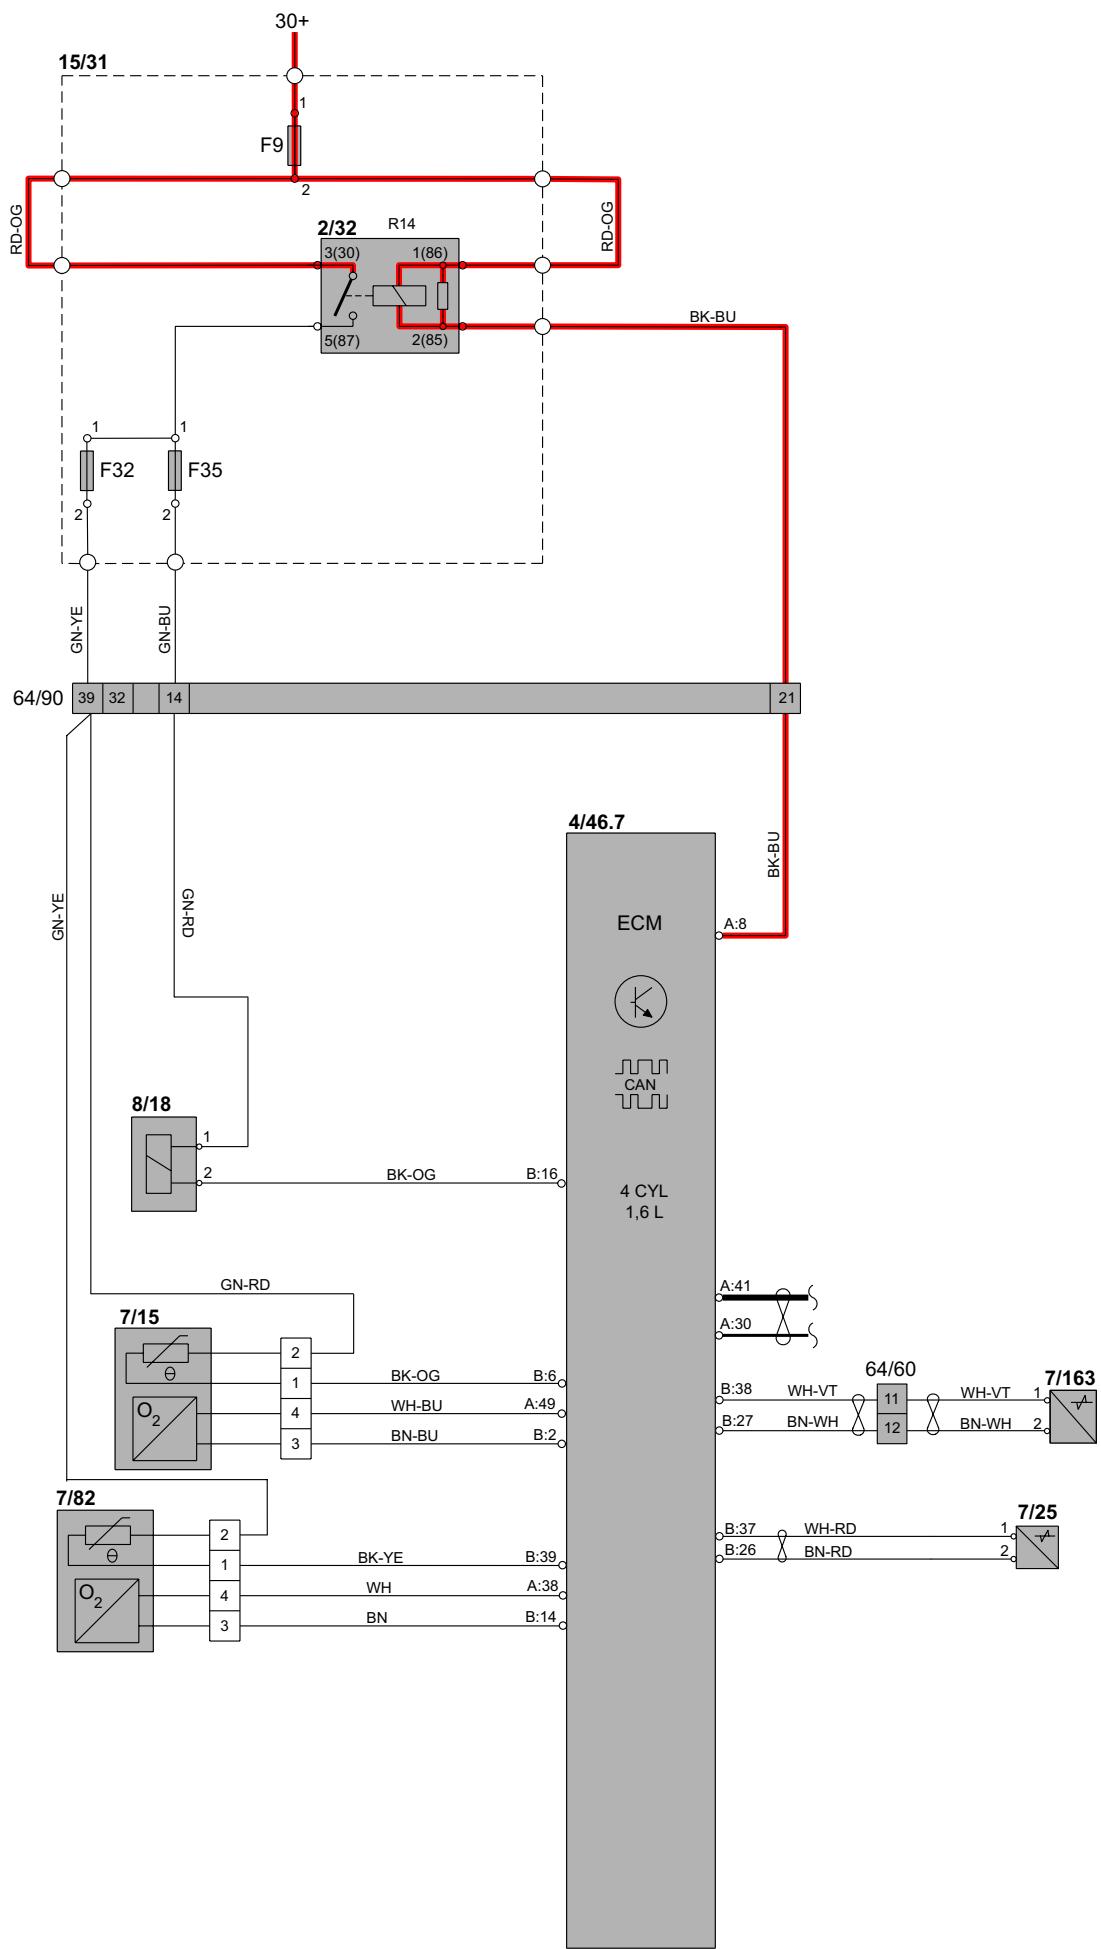


Group 23 Fuel system

Emission control, 4-cyl. 1.8l & 2.0l

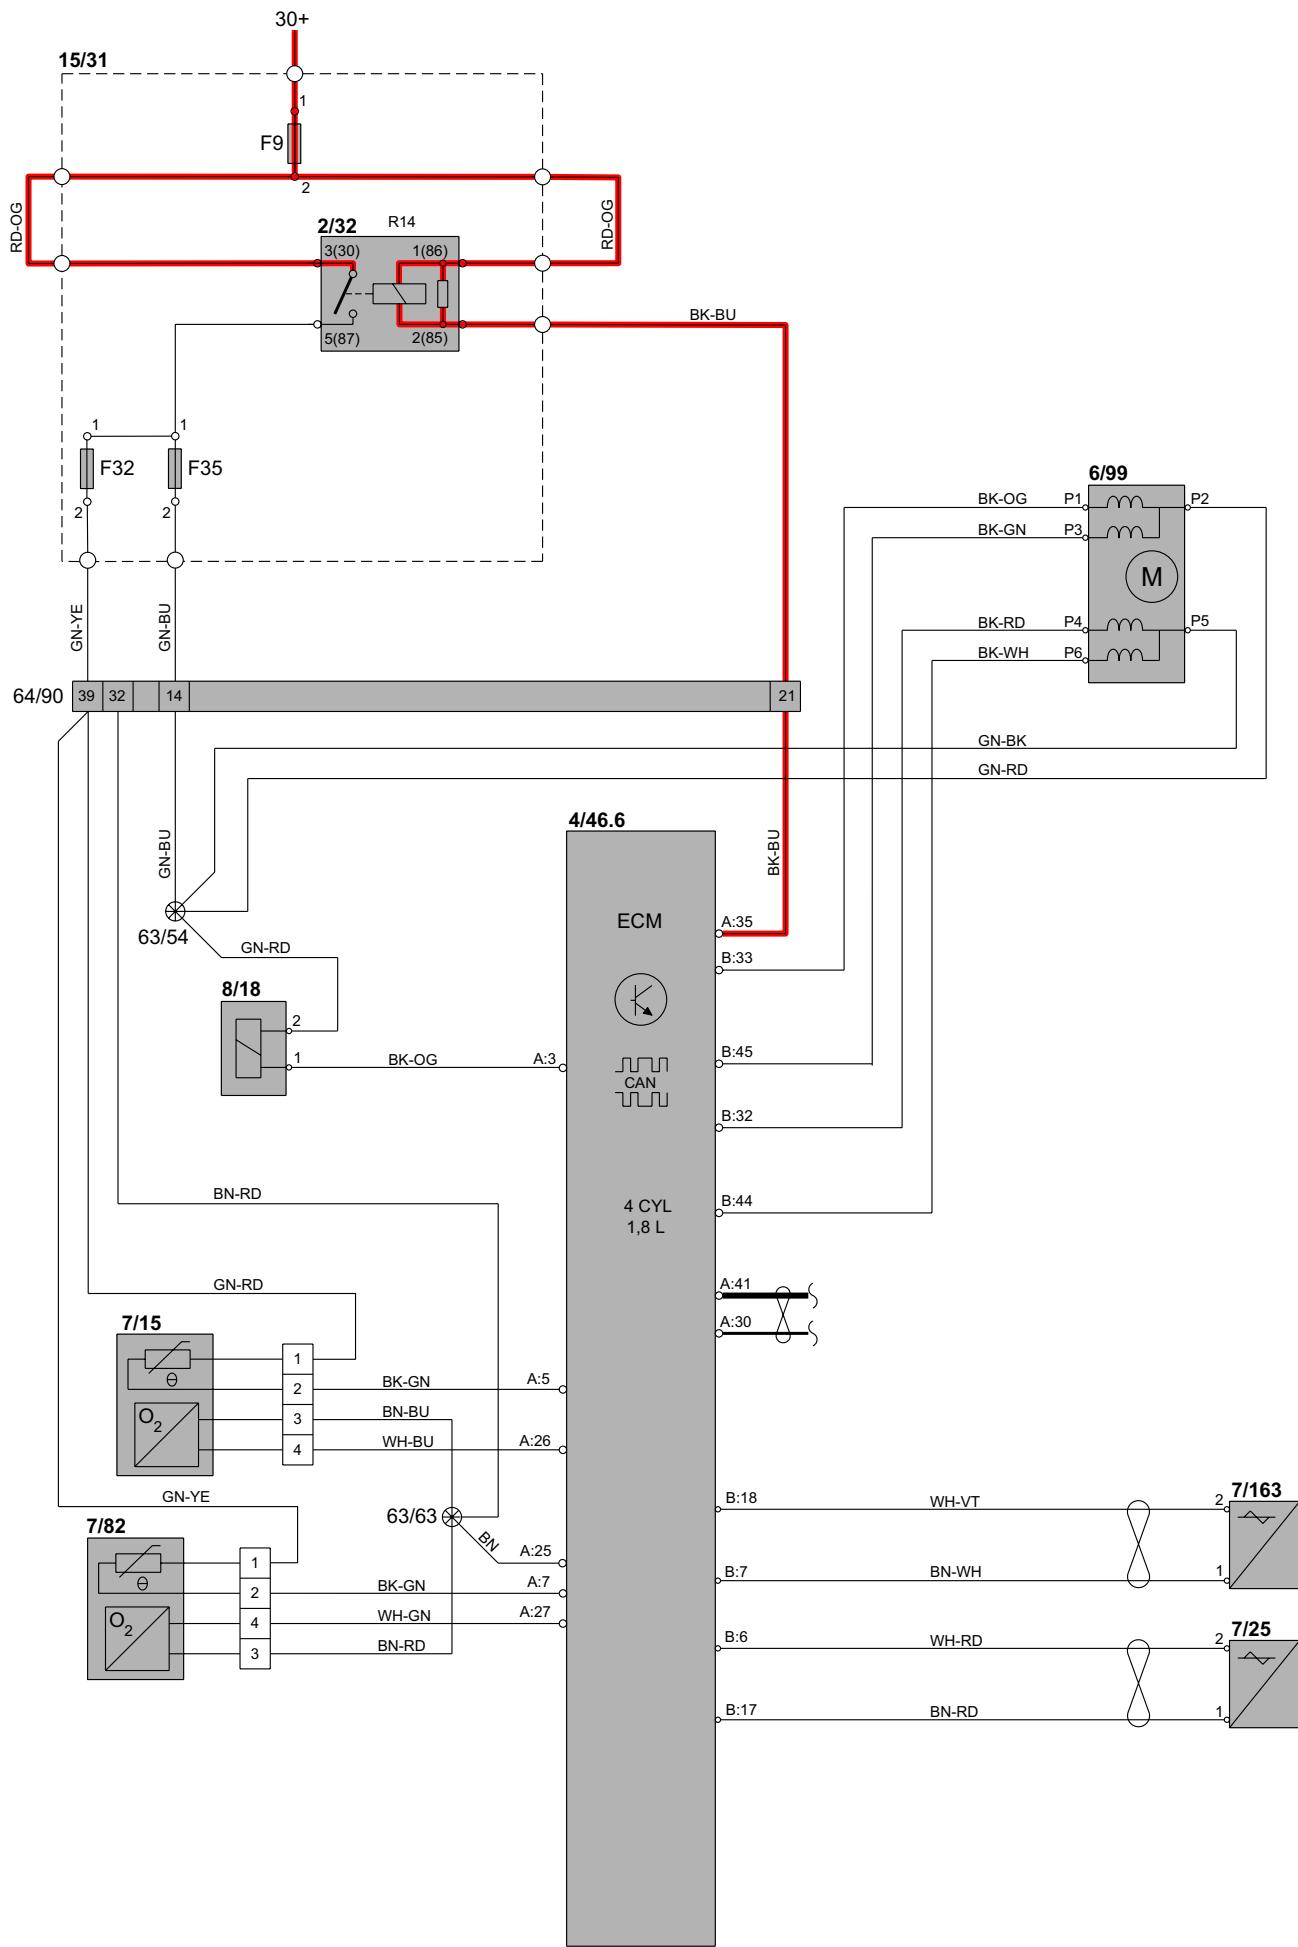


Group 23 Fuel system

Emission control, 5-cyl.

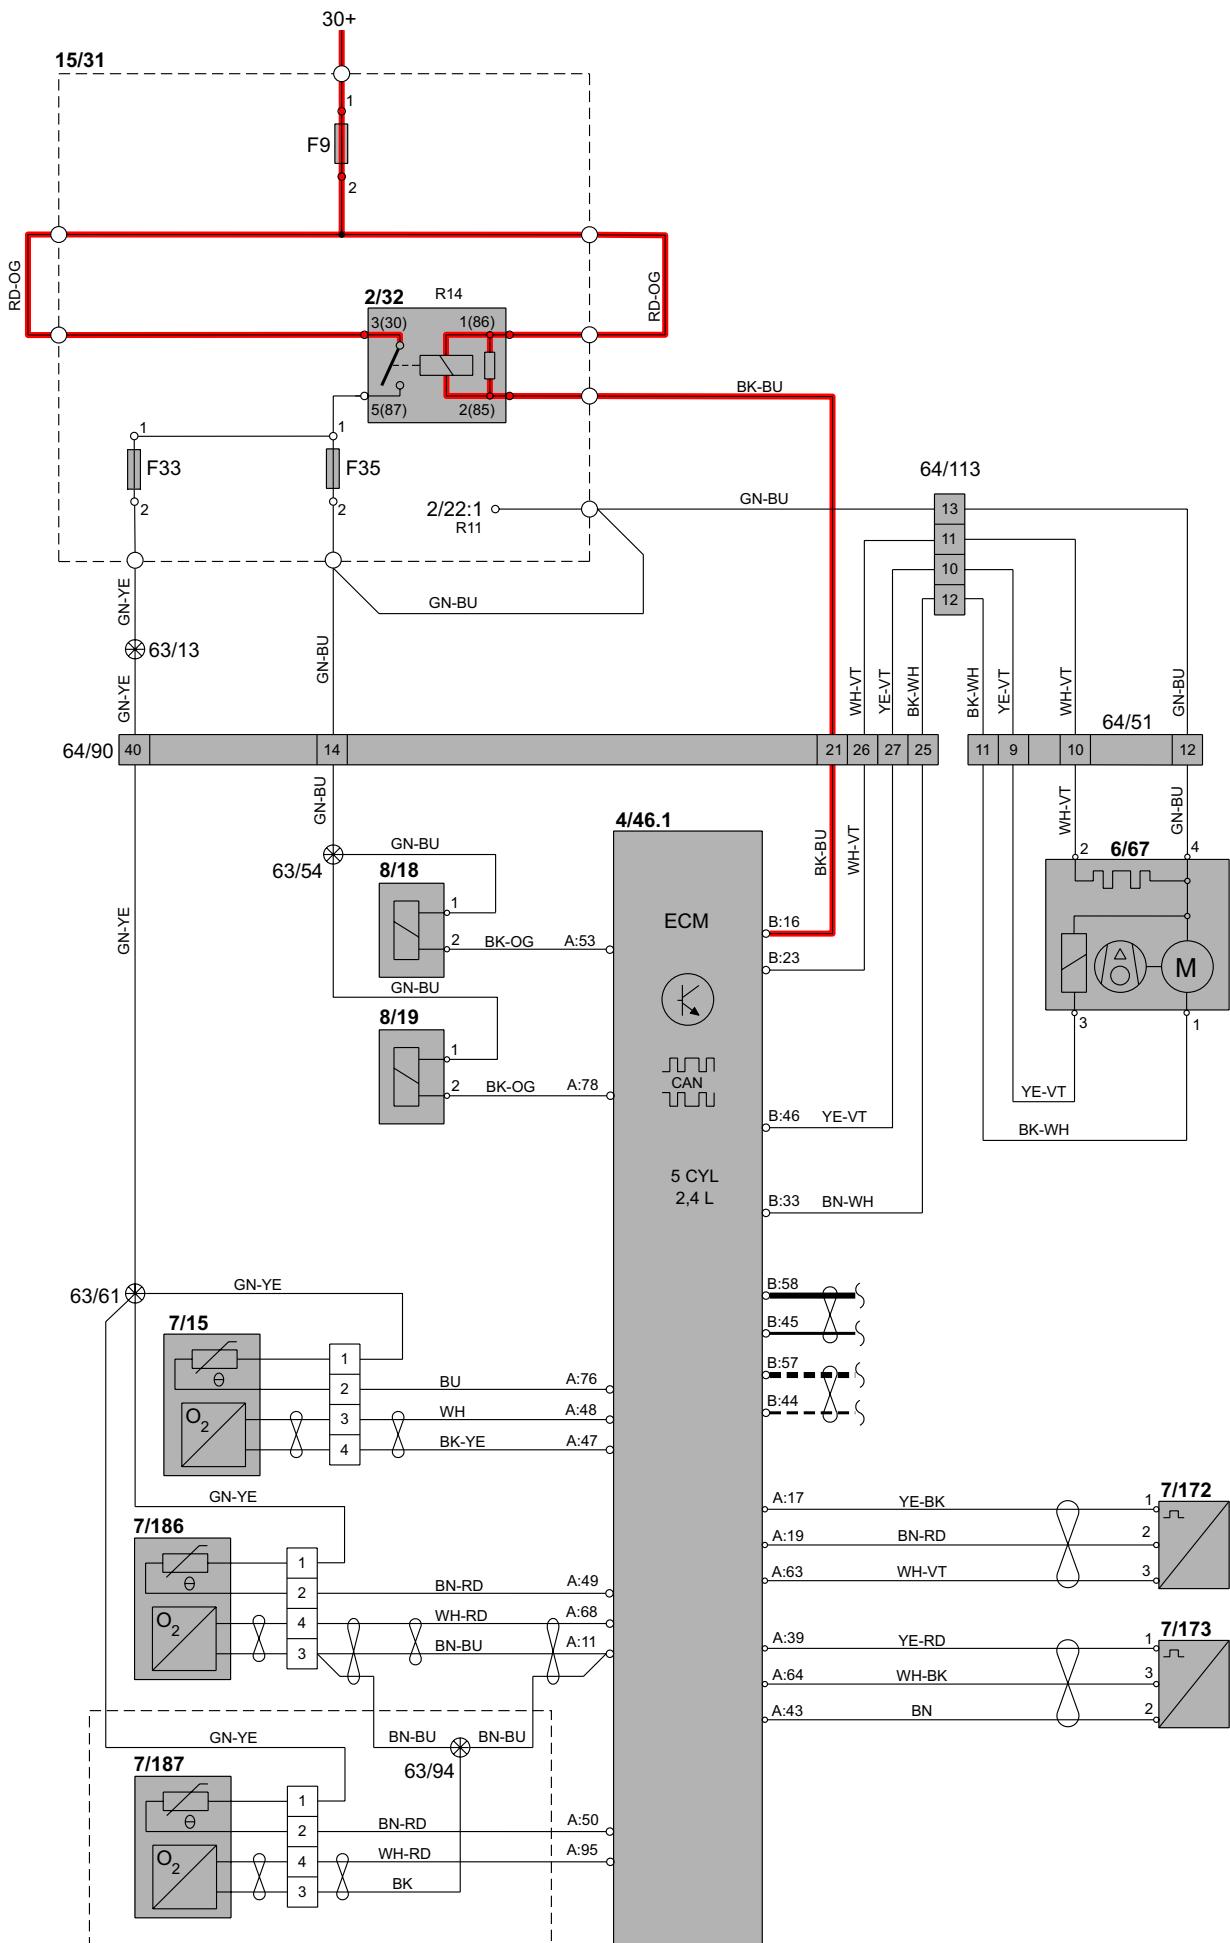


Group 23 Fuel system

Emission control, 5-cyl. Turbo

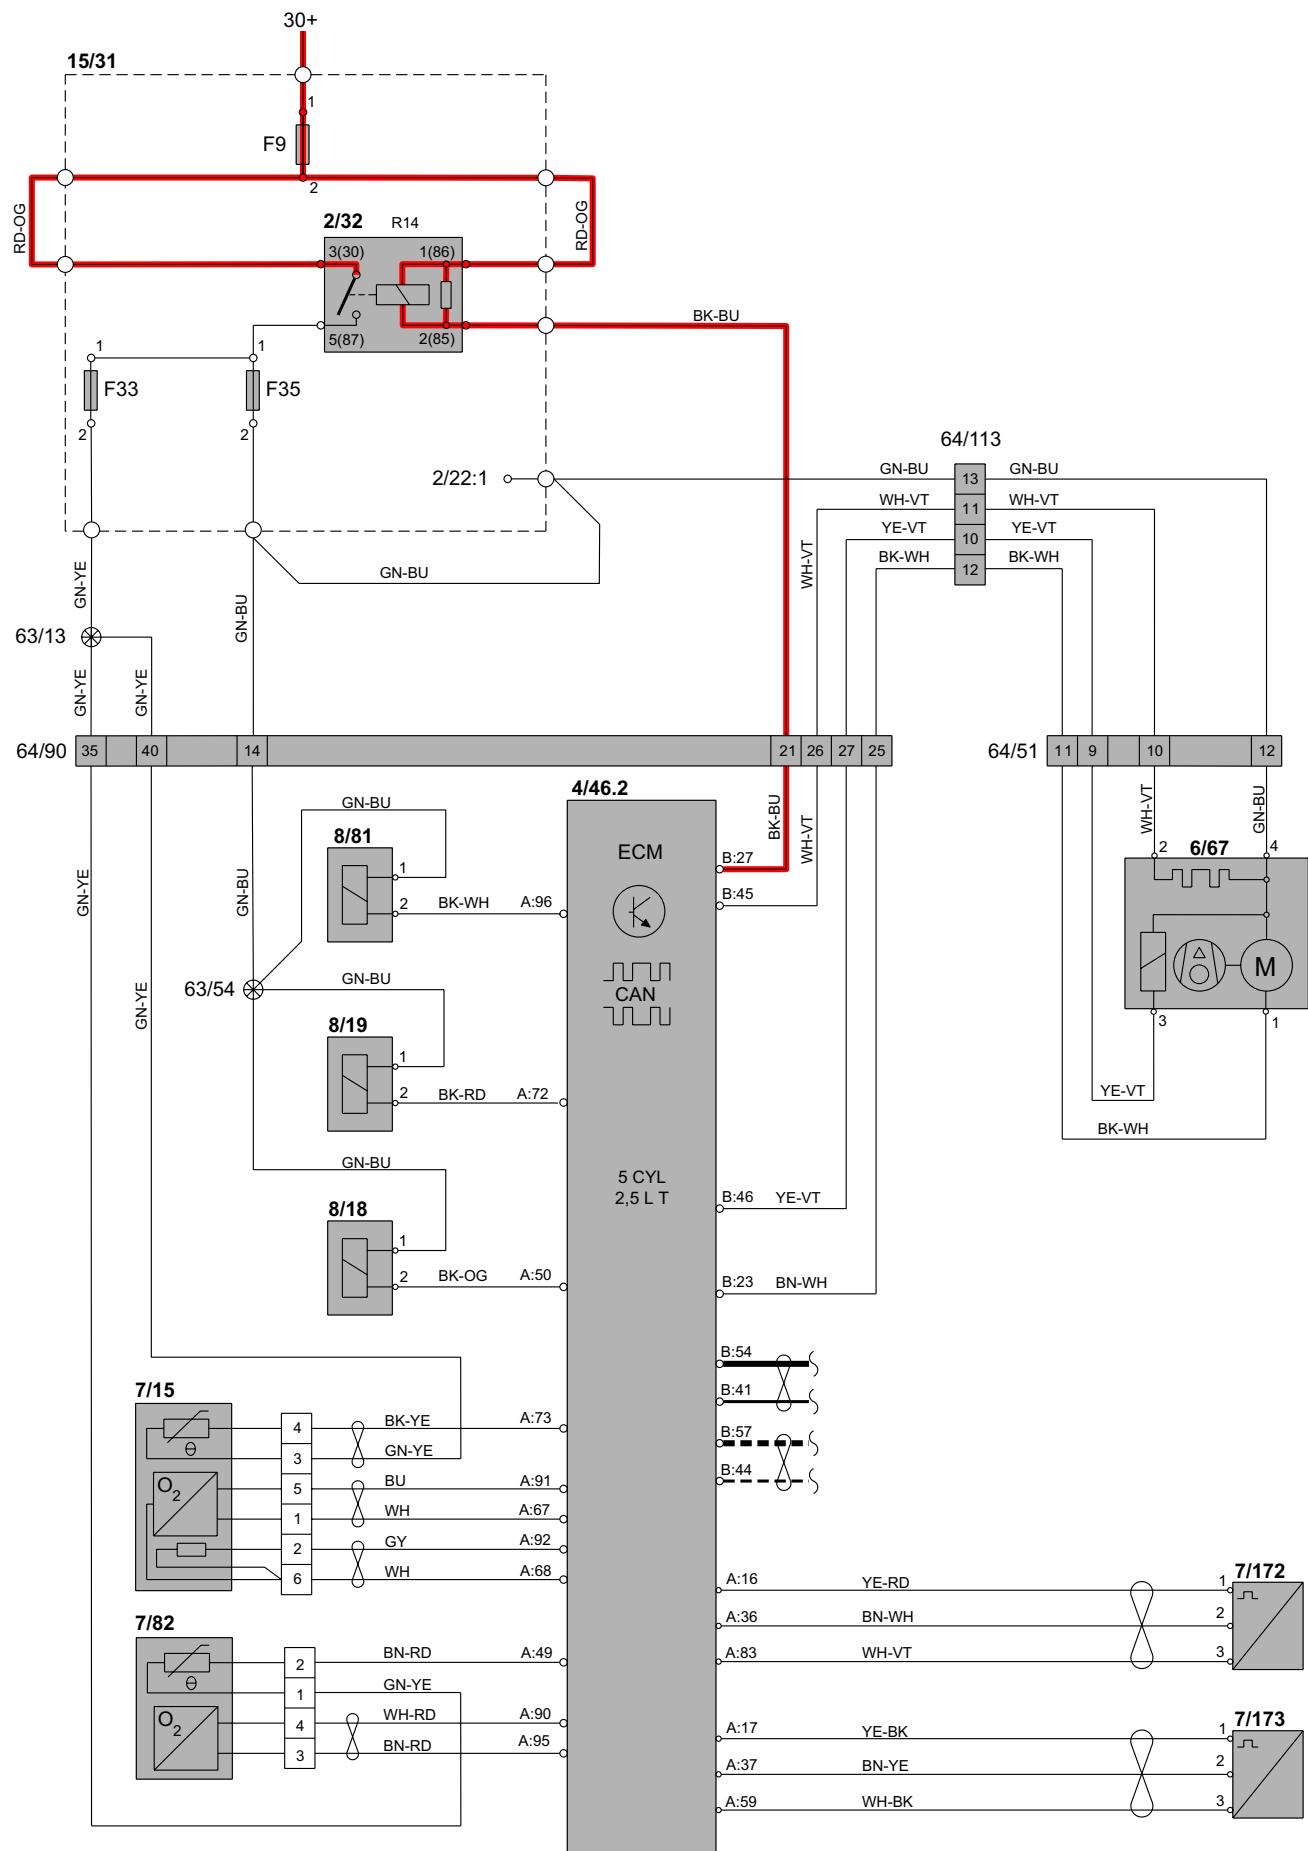


Group 26 Cooling system

Cooling fan

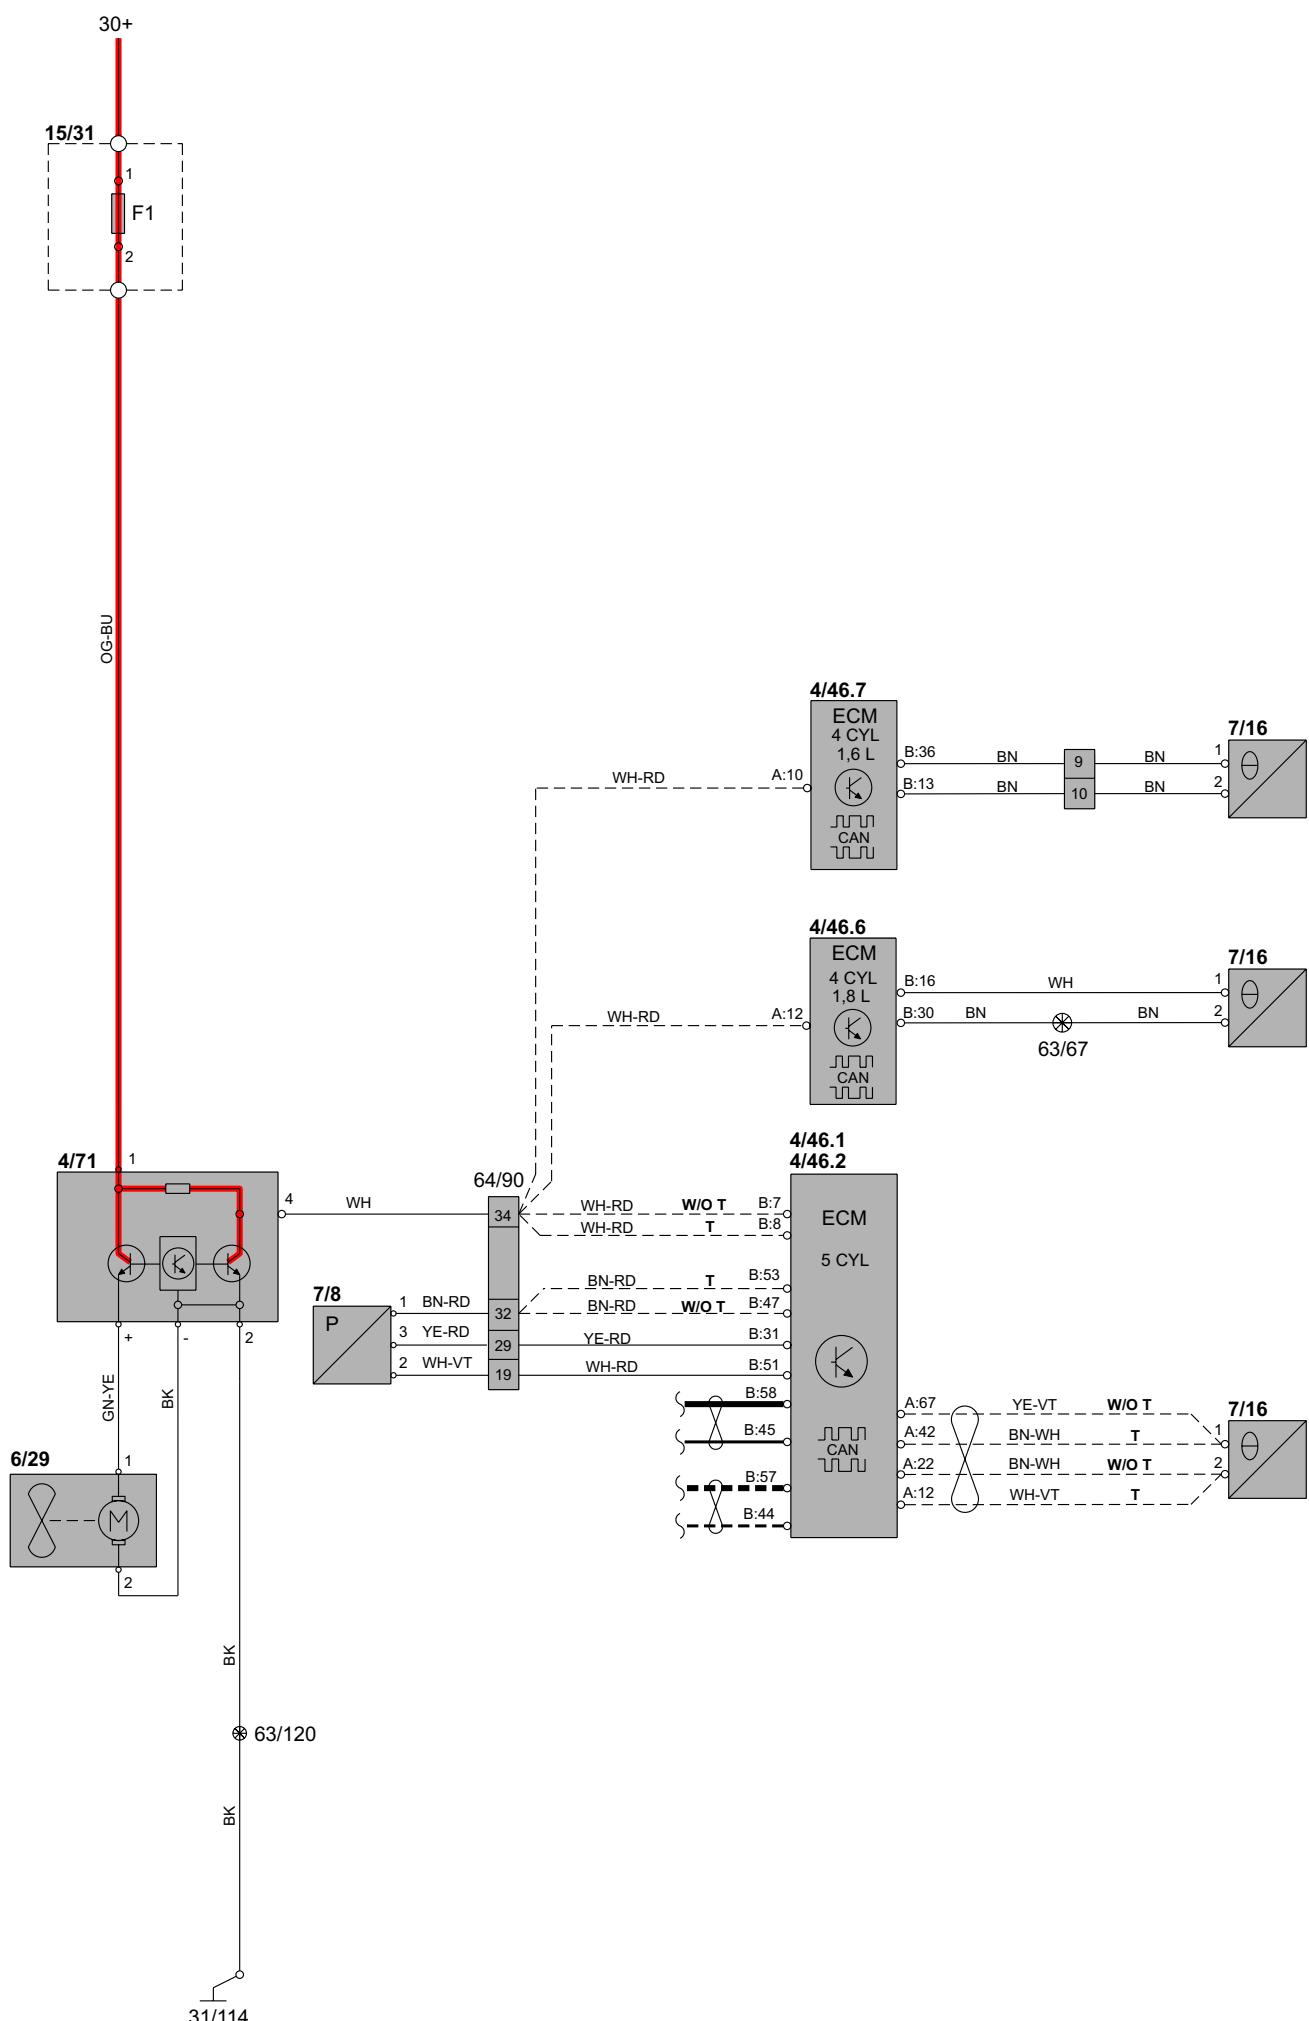


Group 26 Cooling system

Cooling fan Diesel

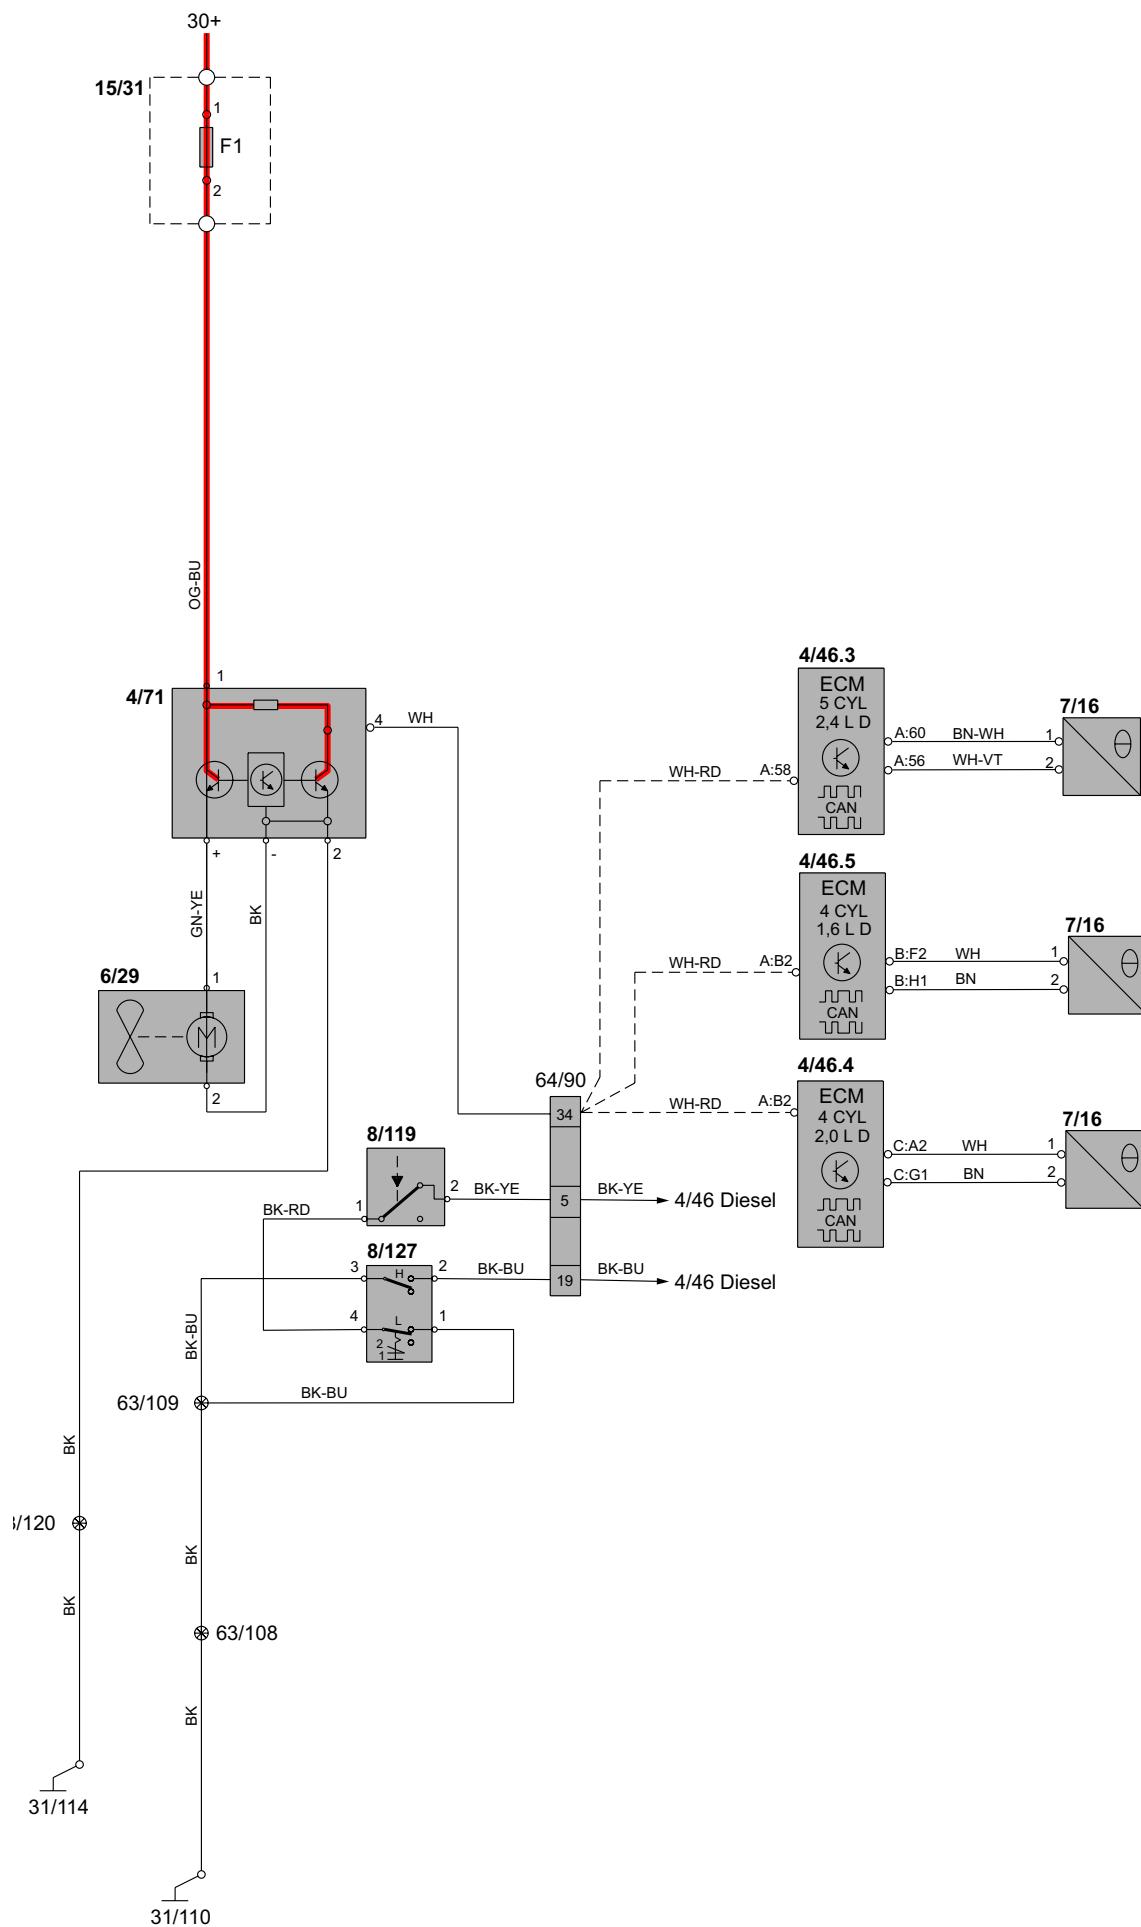


Group 27 Engine control

Cruise control, 4-cyl.

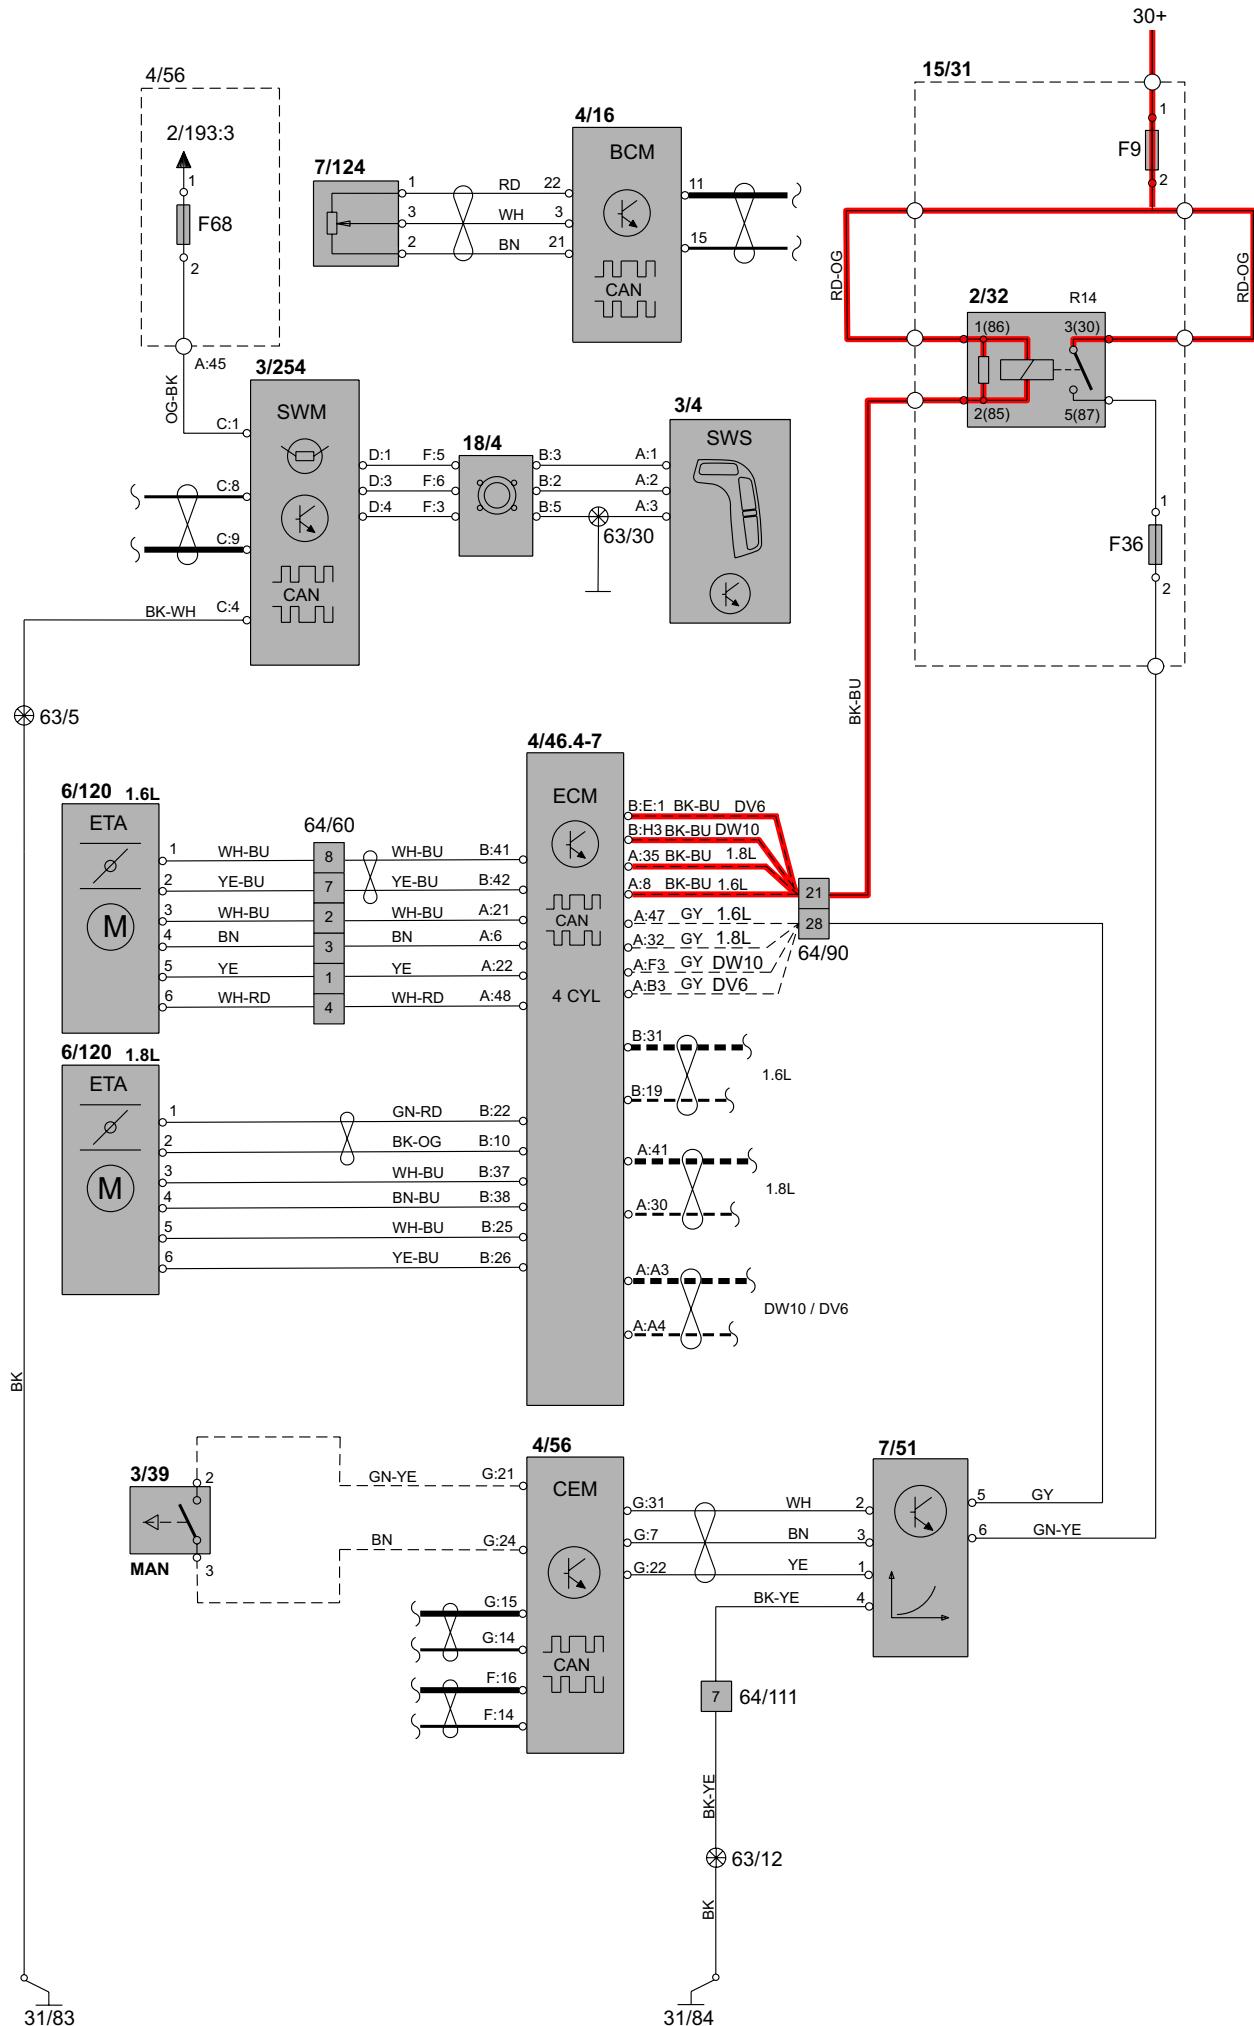


Group 27 Engine control

Cruise control, 5-cyl.

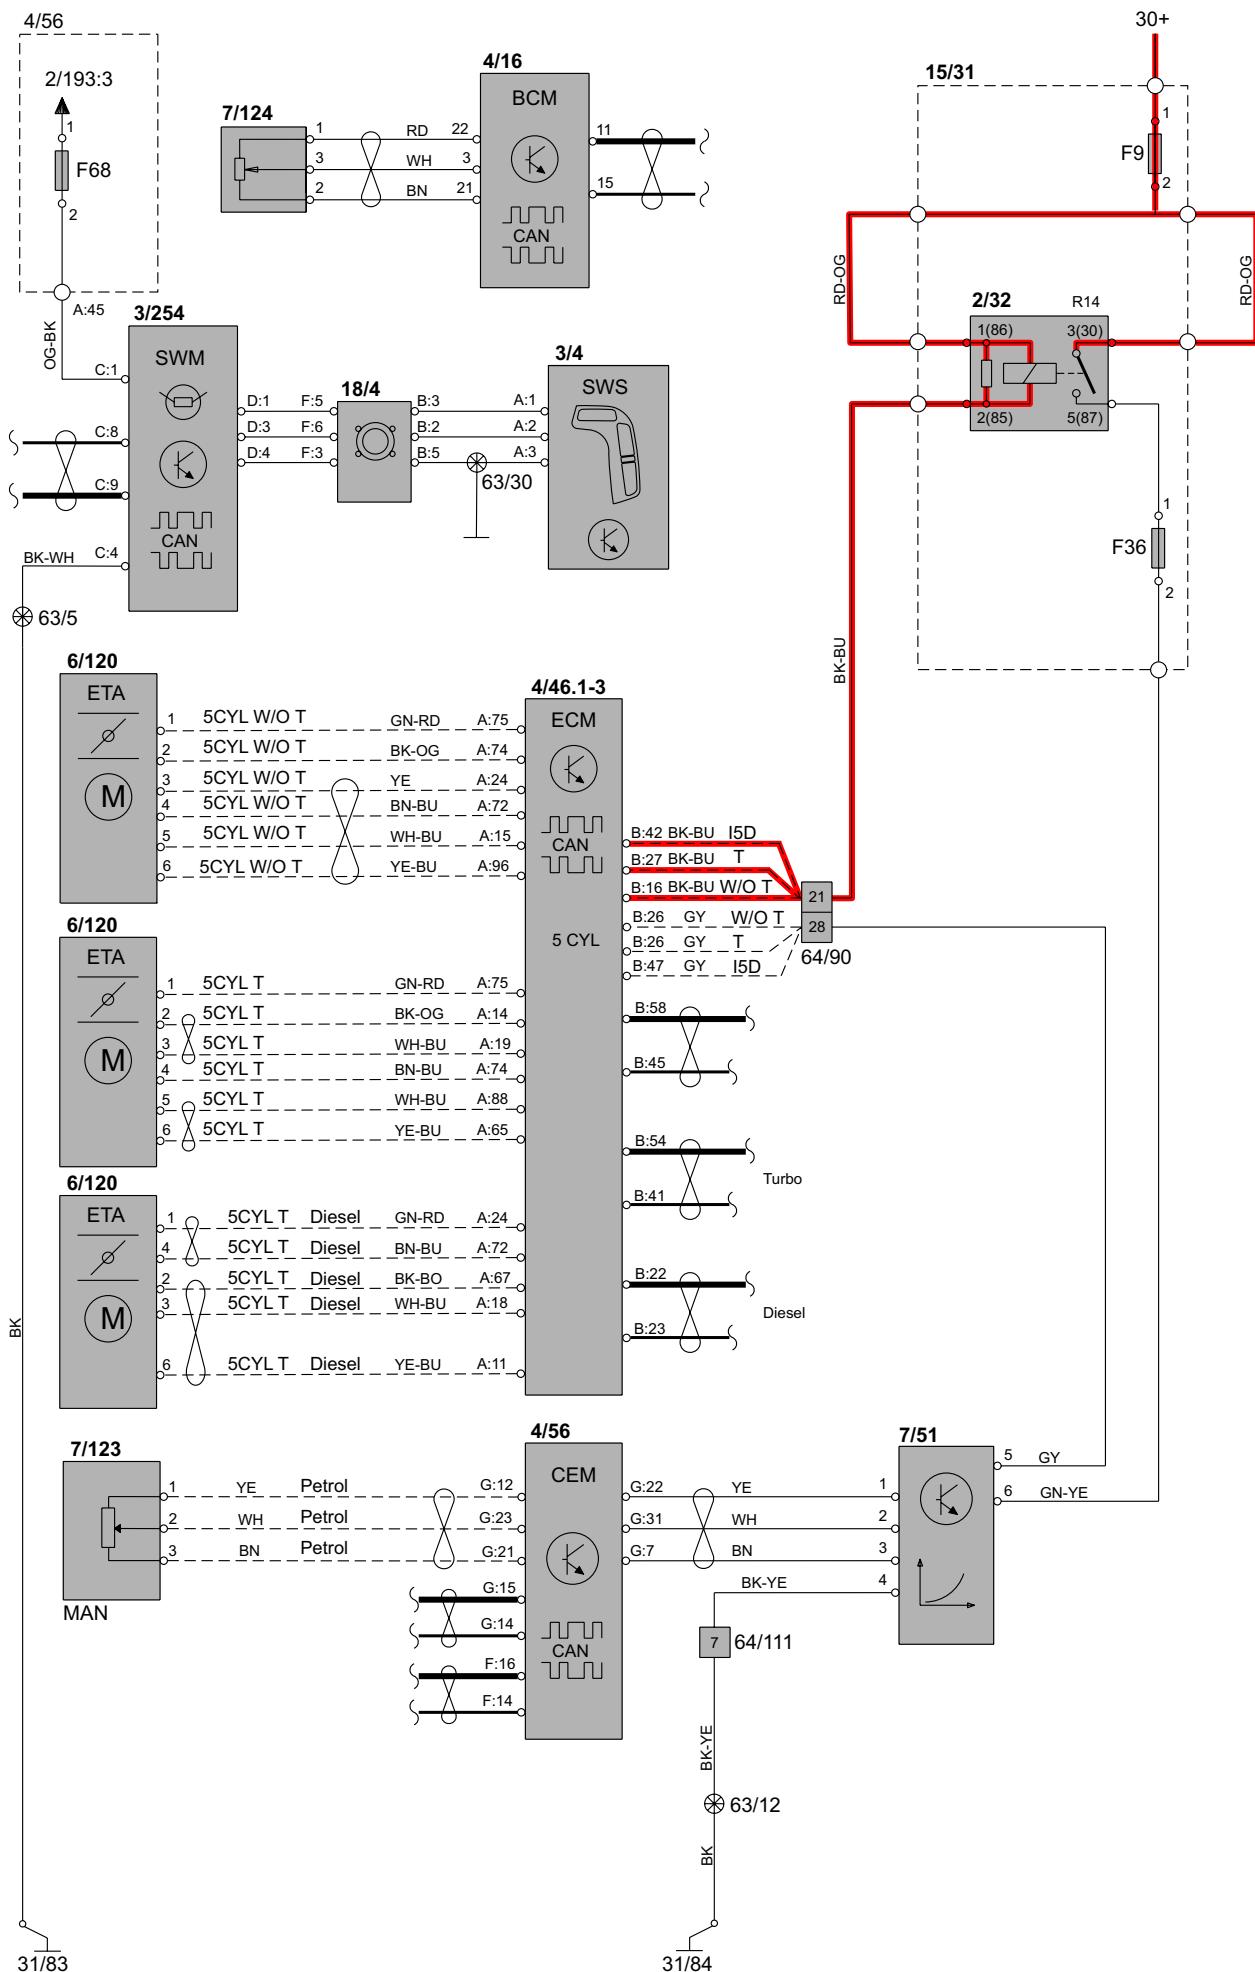


Group 32 Alternator and voltage regulator Power supply, 4-cyl.

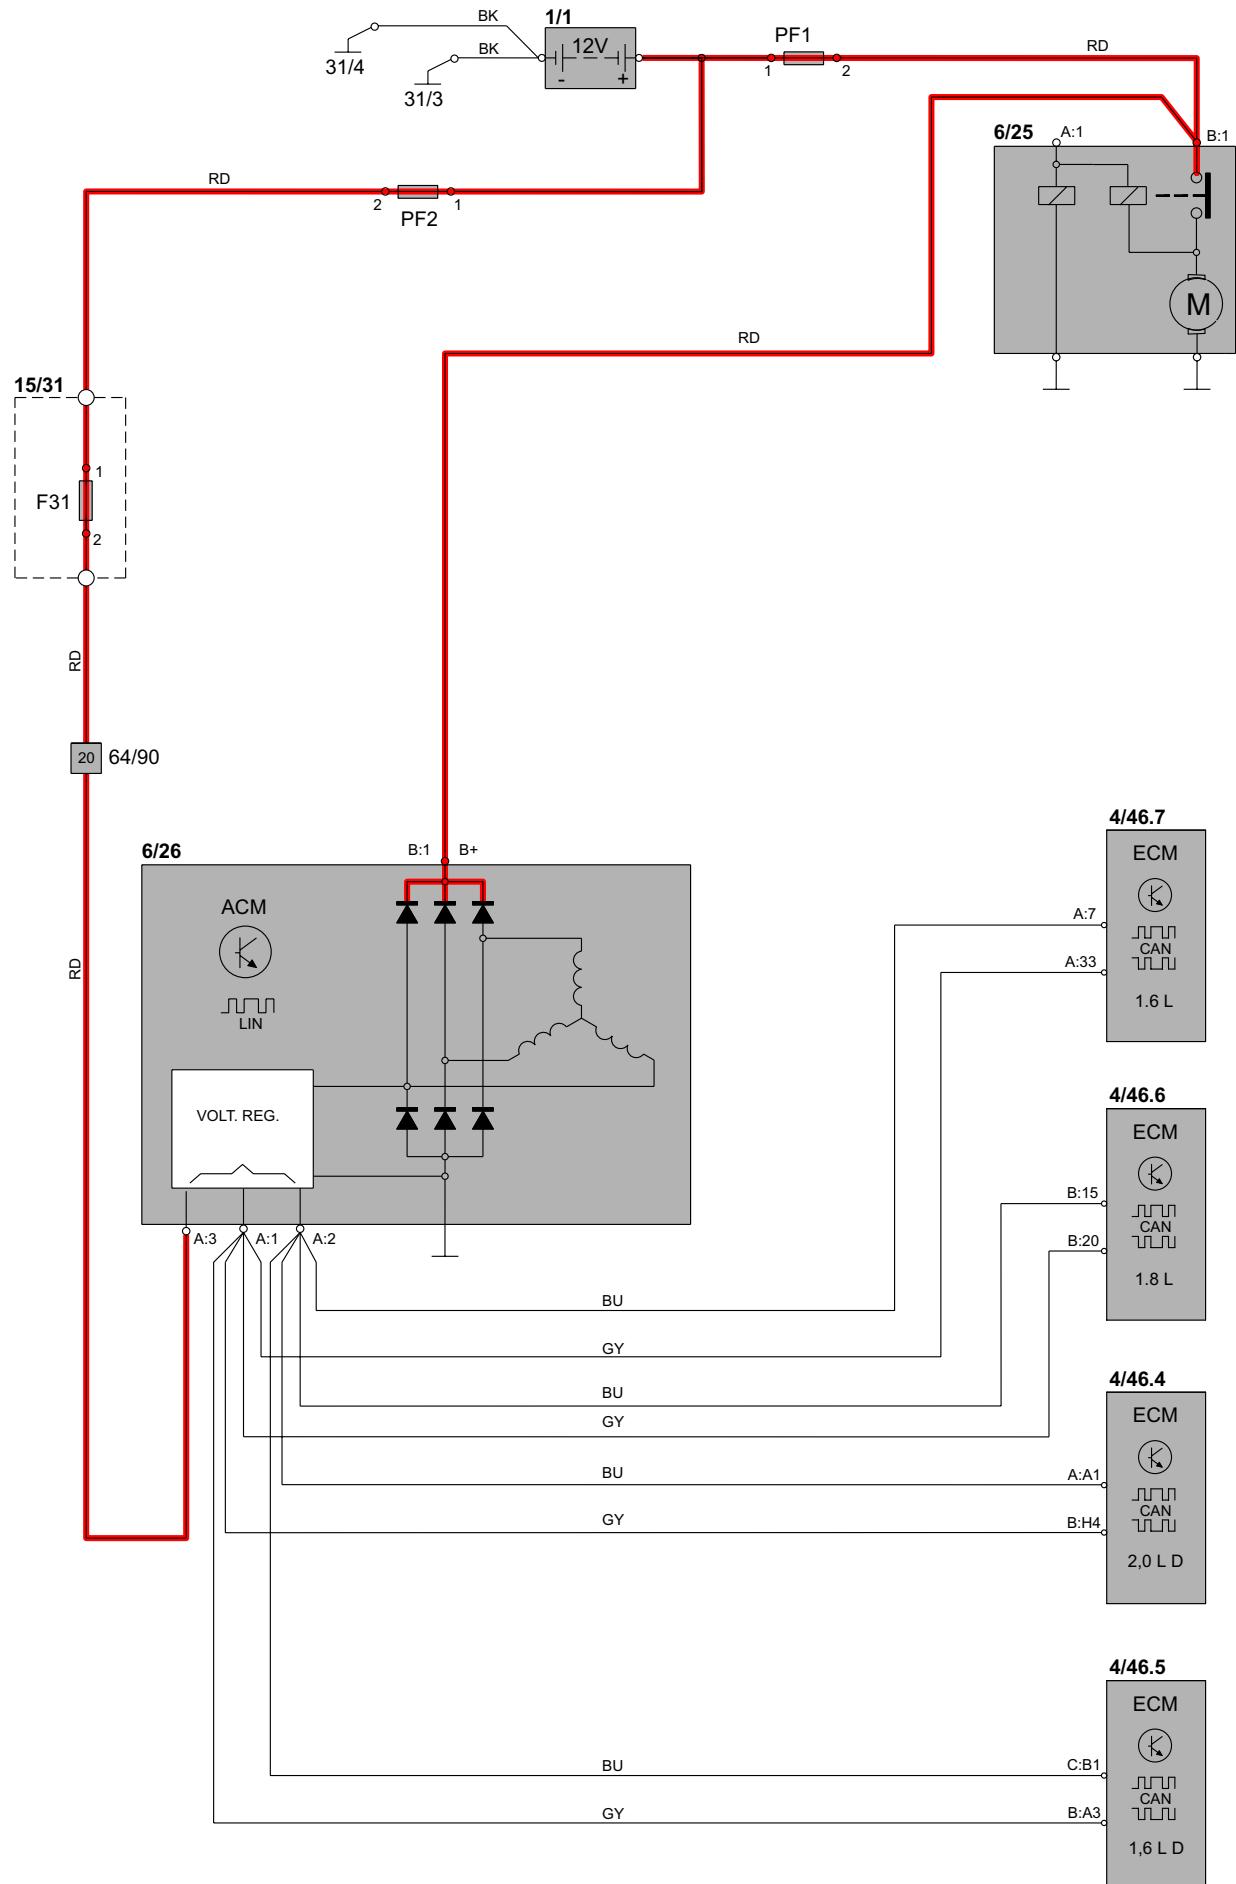


Group 32 Alternator and voltage regulator

Power supply, 5-cyl.

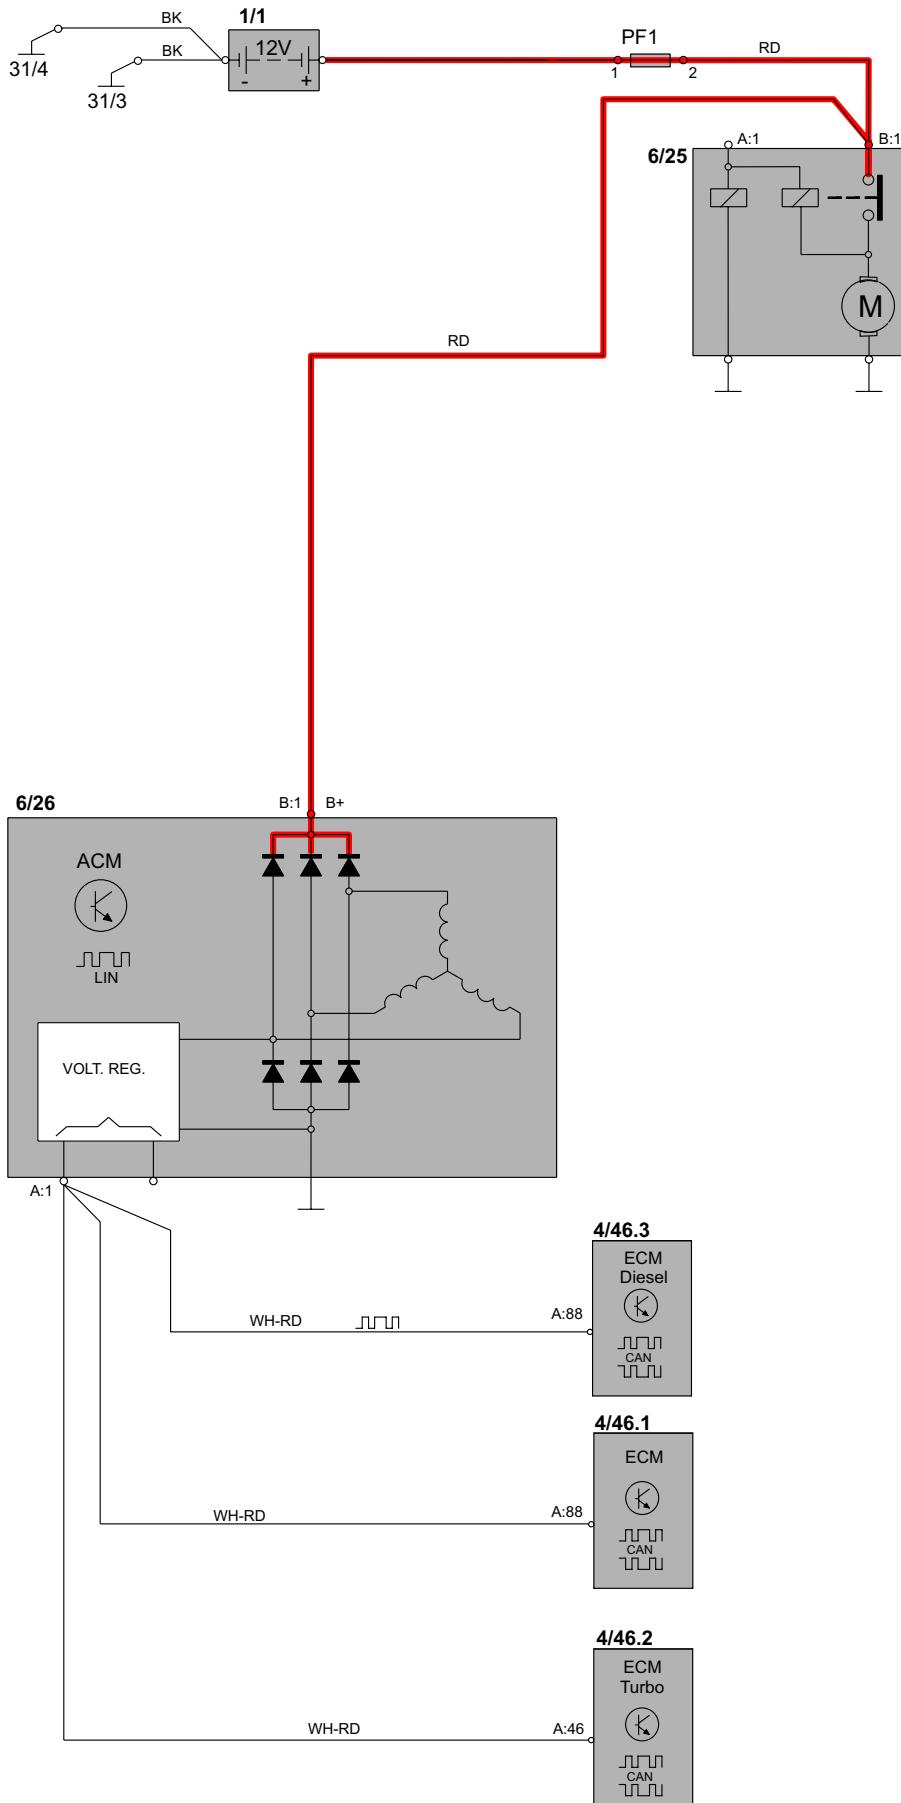


Group 33 Starting system

Starting system, 4-cyl.

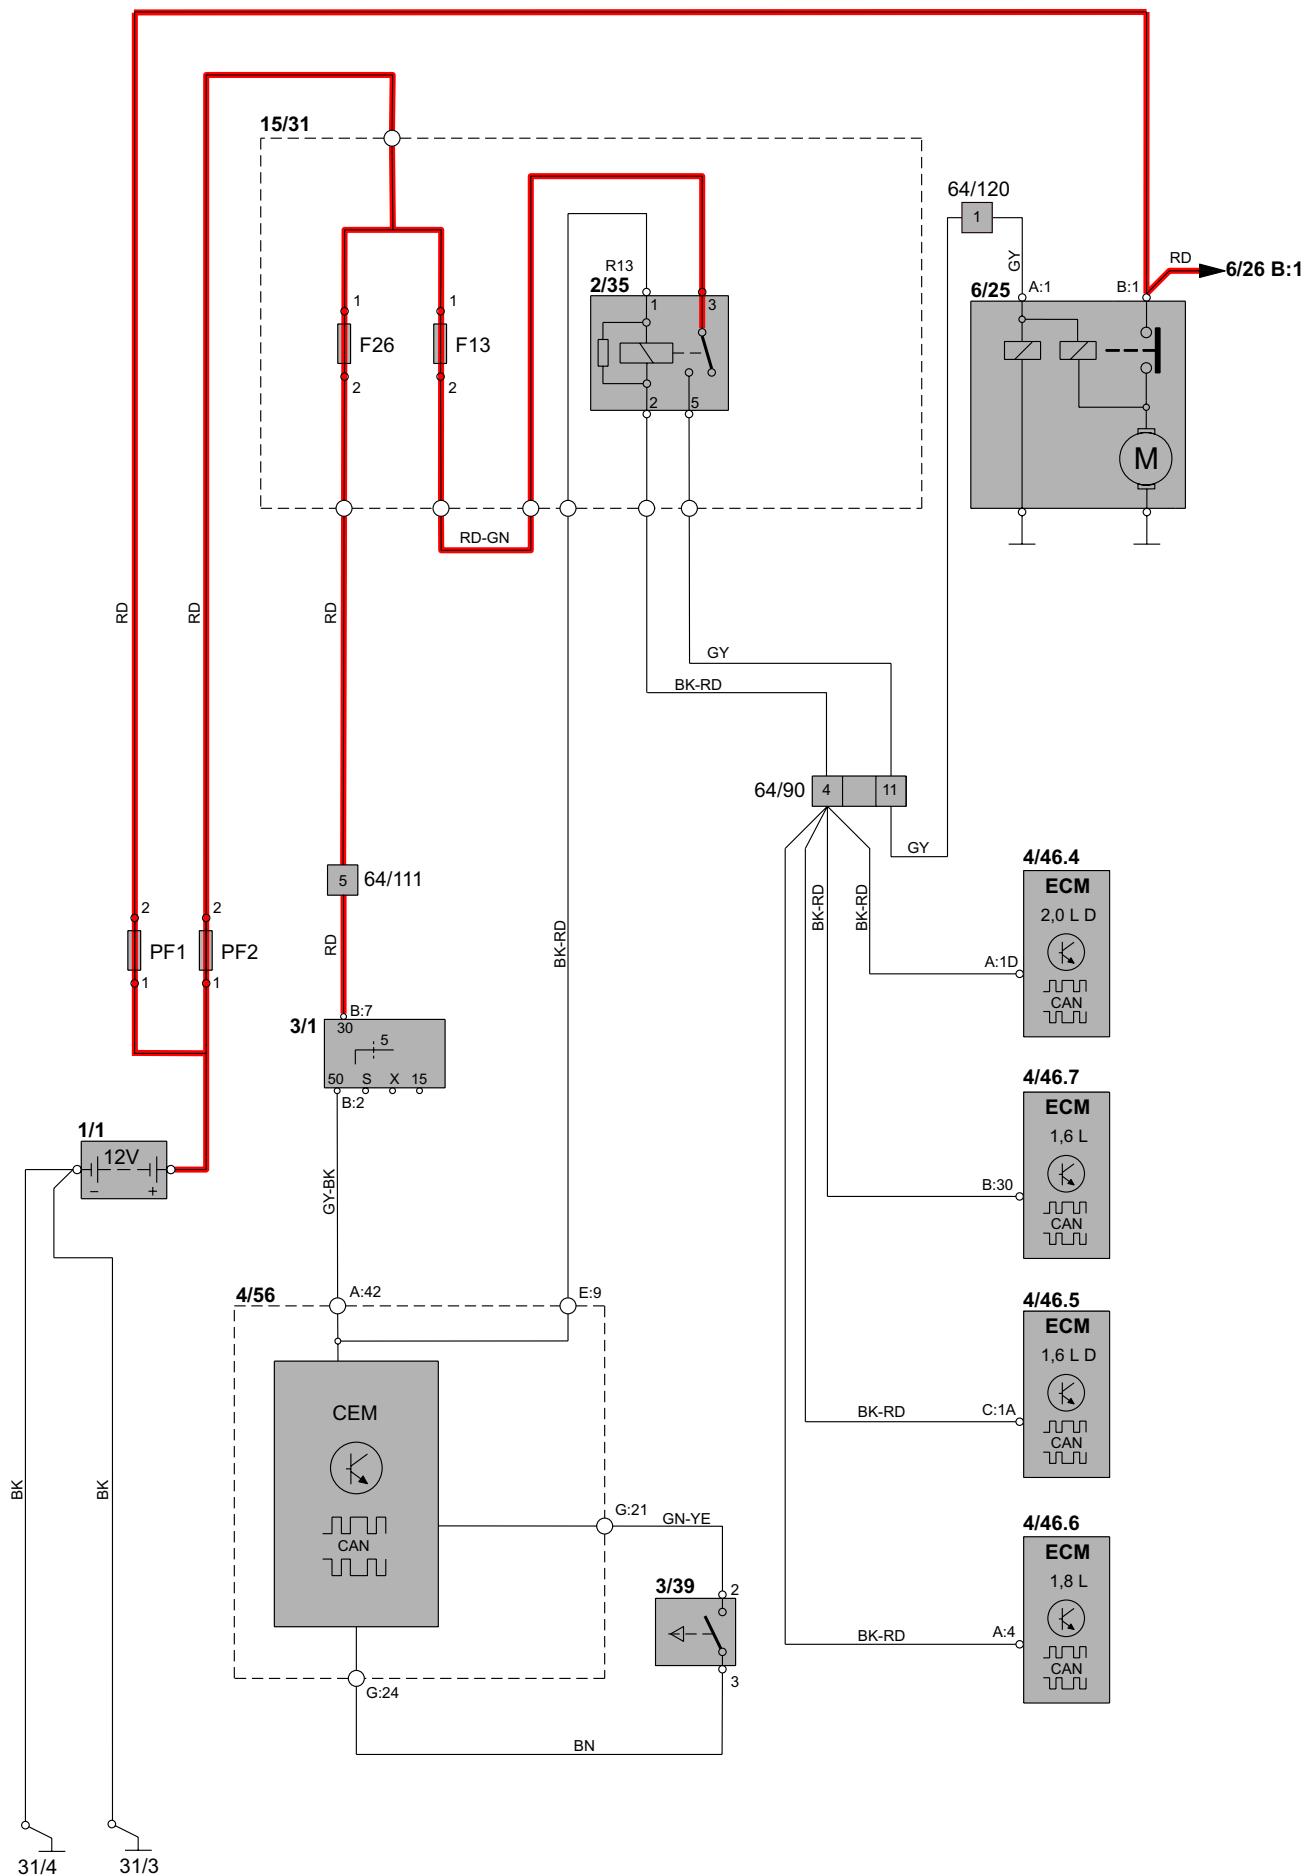


Group 33 Starting system

Starting system, 5-cyl.

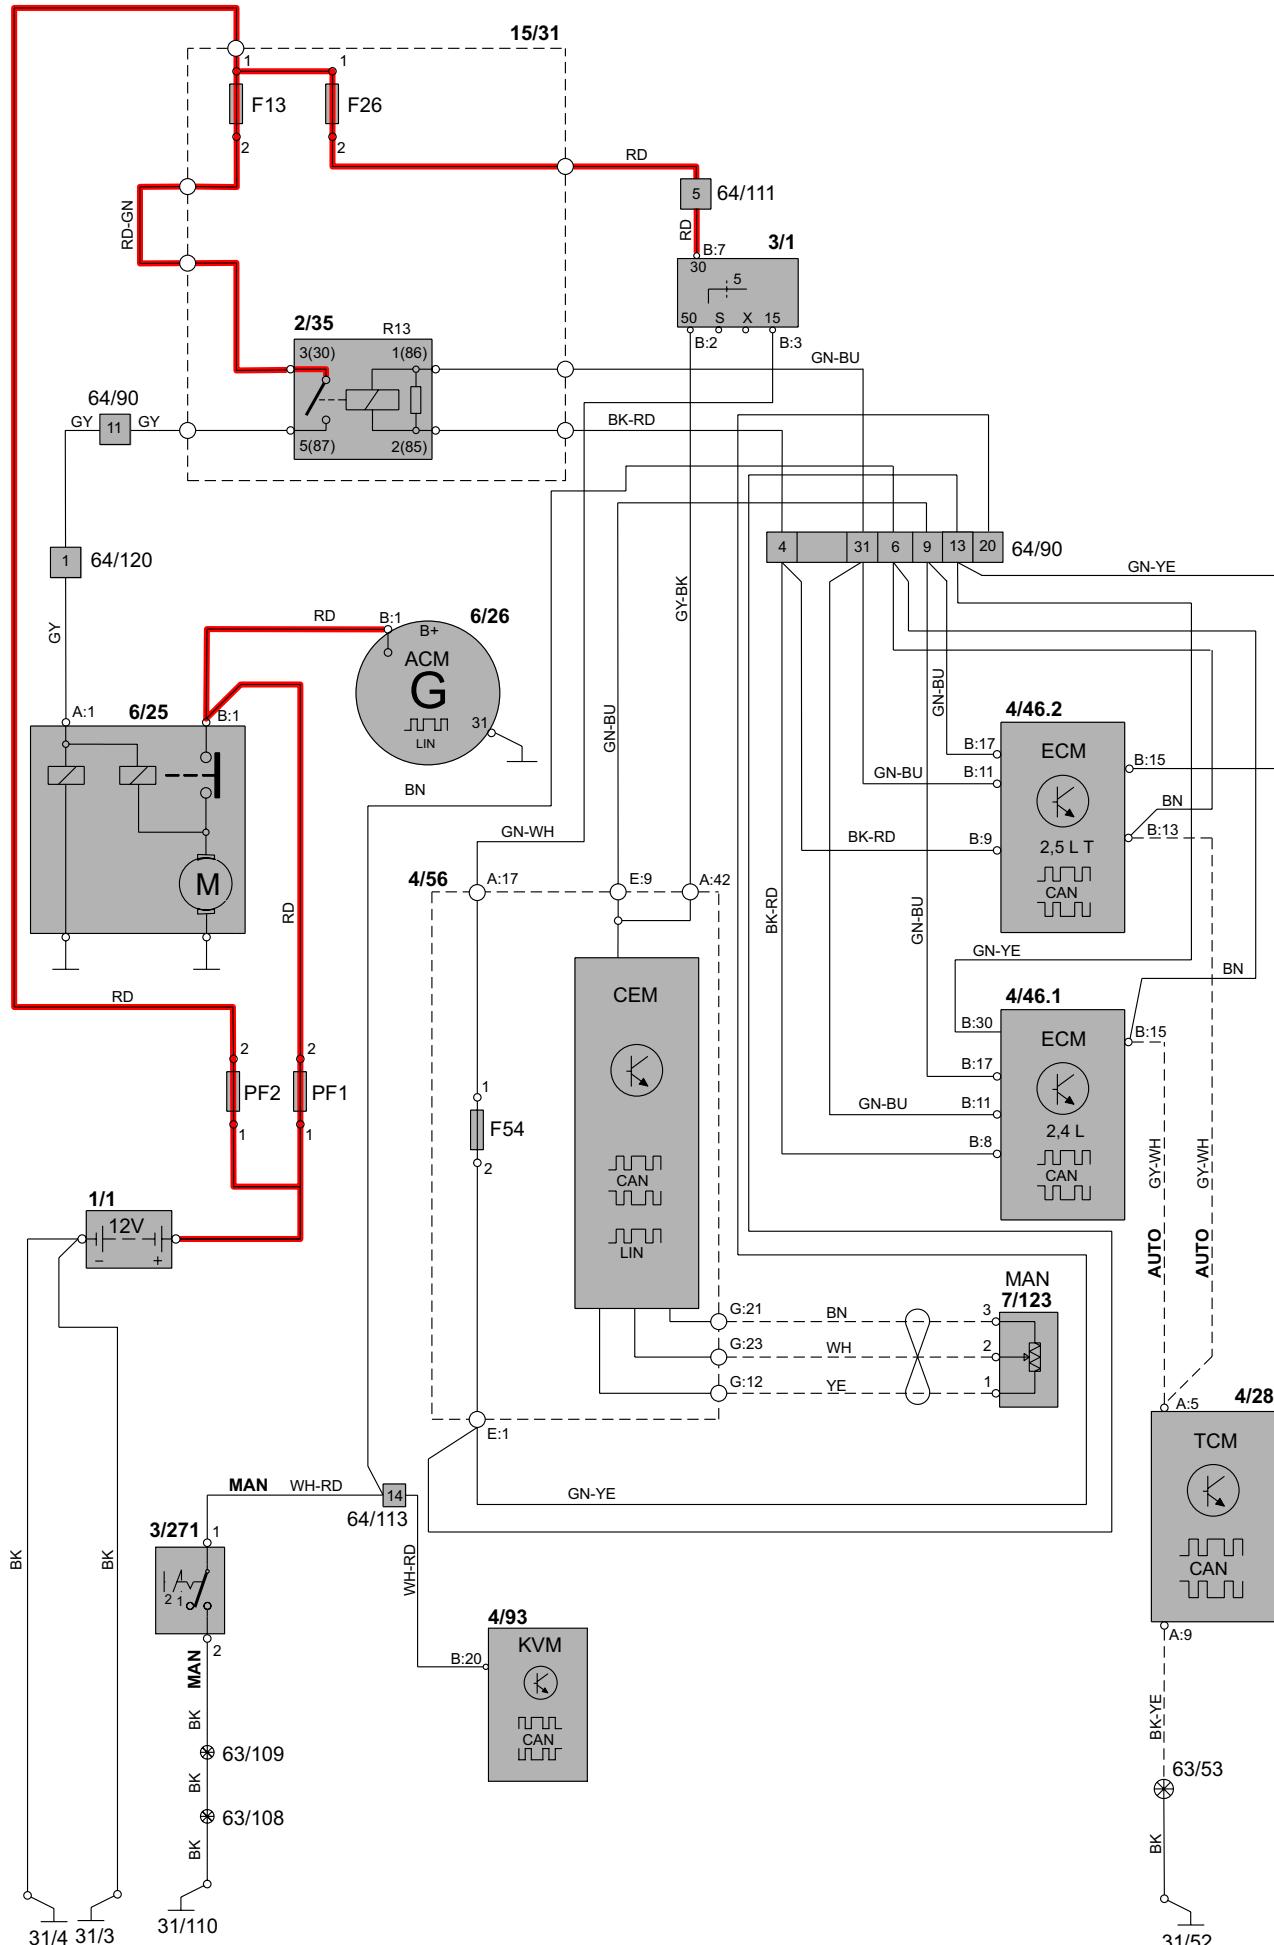


Group 33 Starting system Starting system, 5-cyl. Diesel

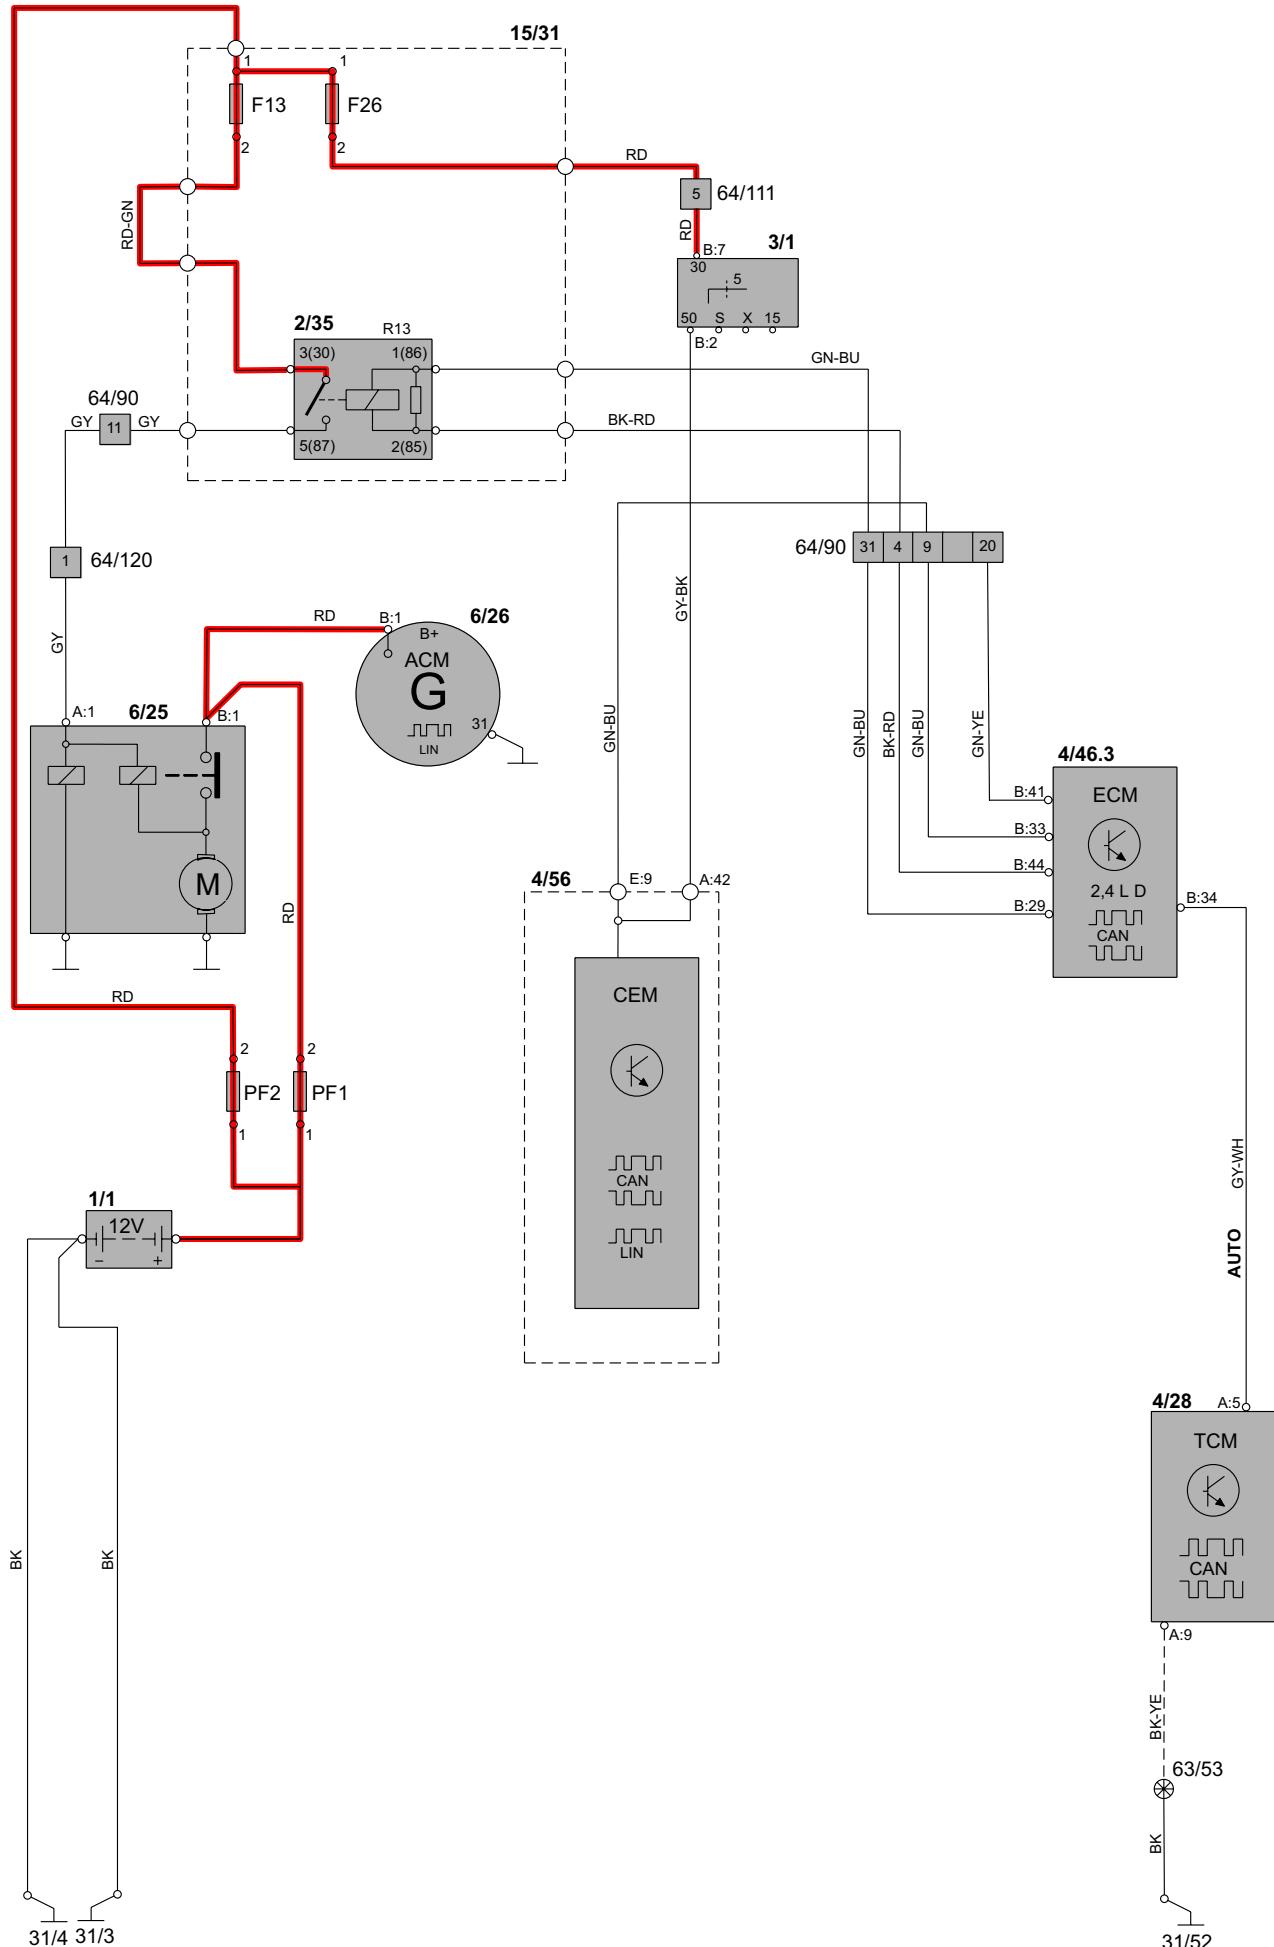


Group 35 Lighting

Follow-me-home lighting

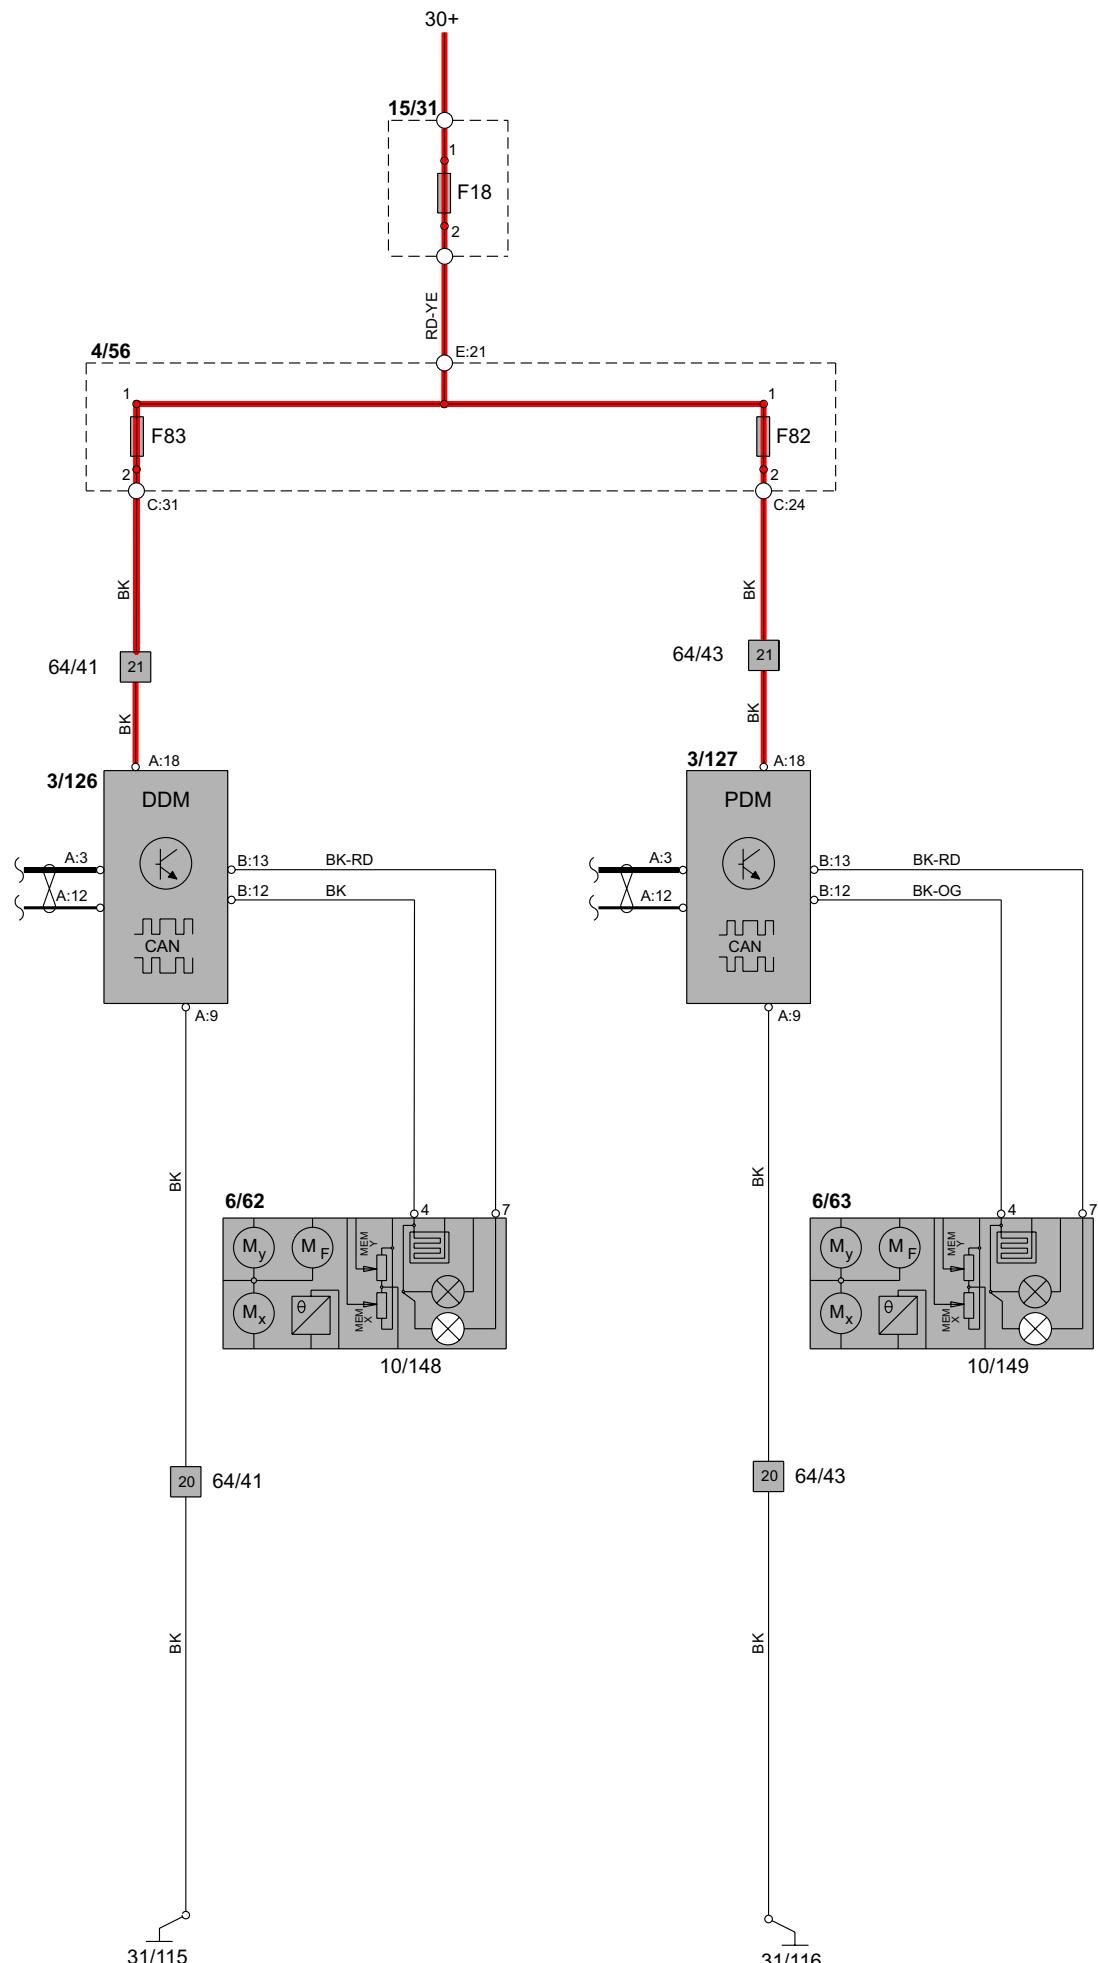


Group 35 Lighting

High and low beam

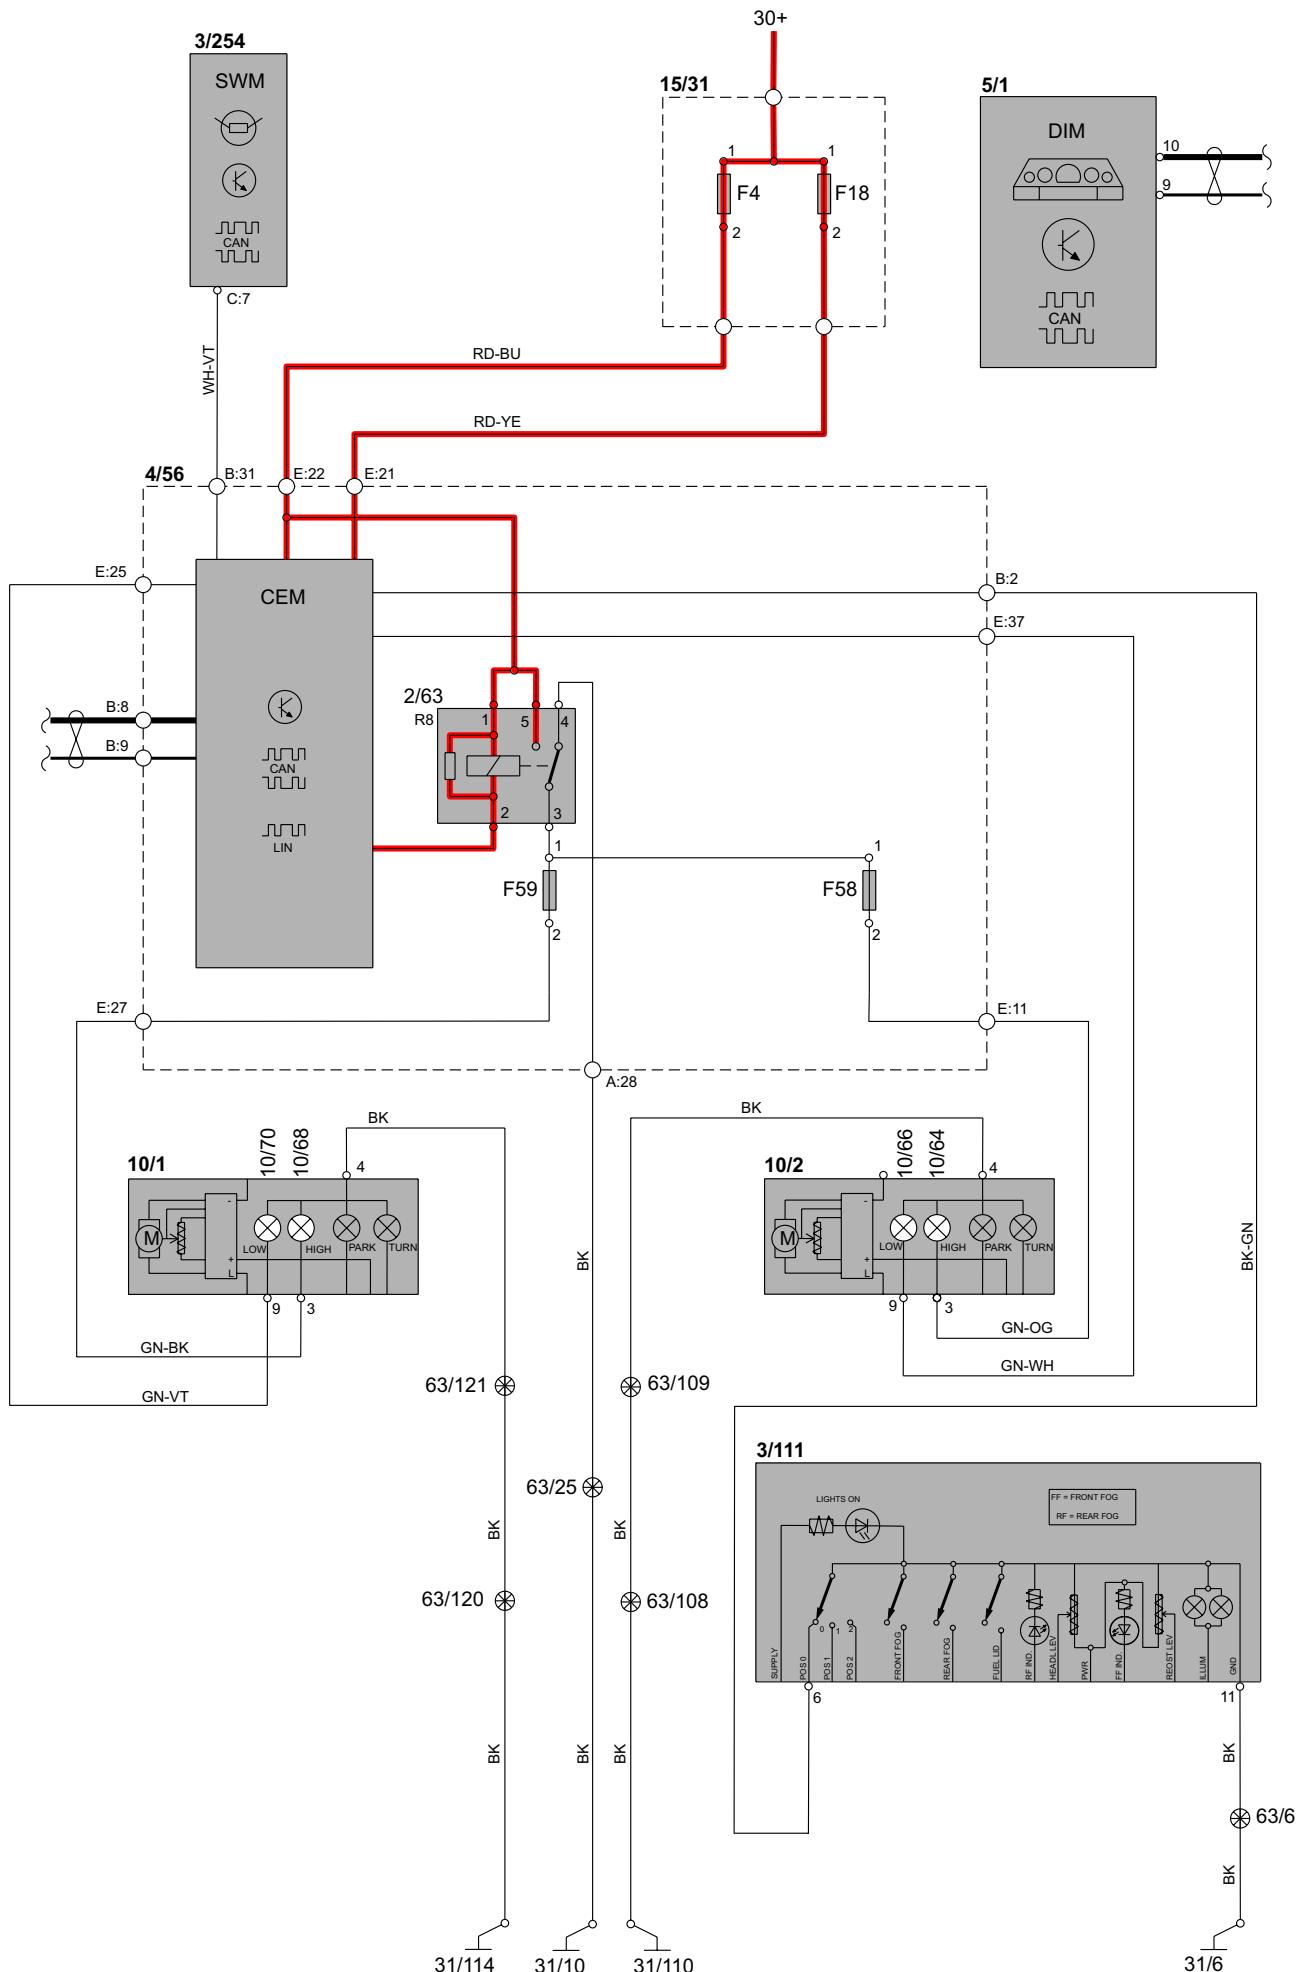


Group 35 Lighting

High and low beam (Bi-Xenon)

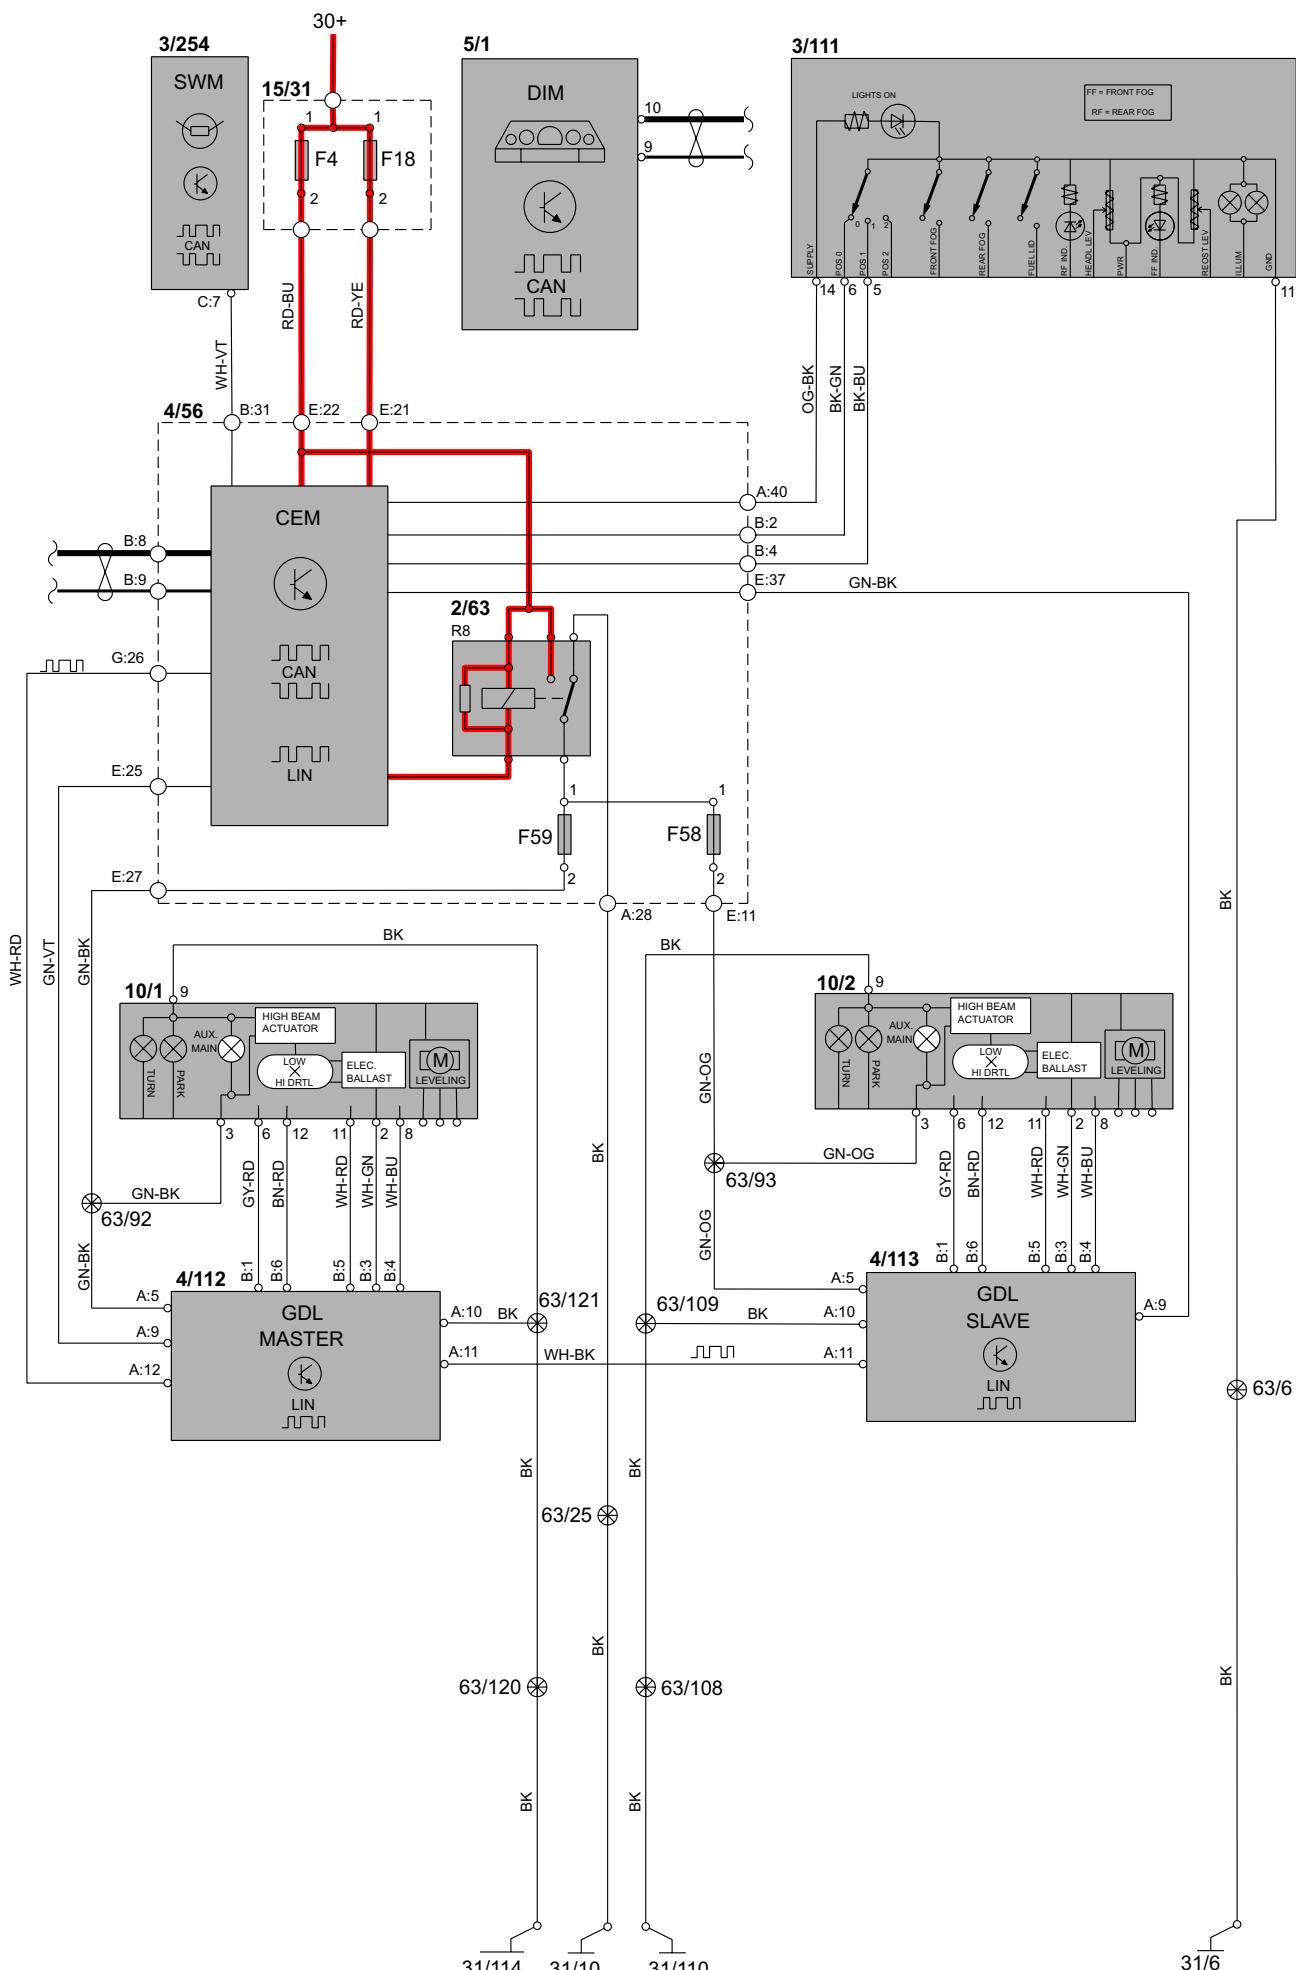


Group 35 Lighting

Manual beam length adjustment

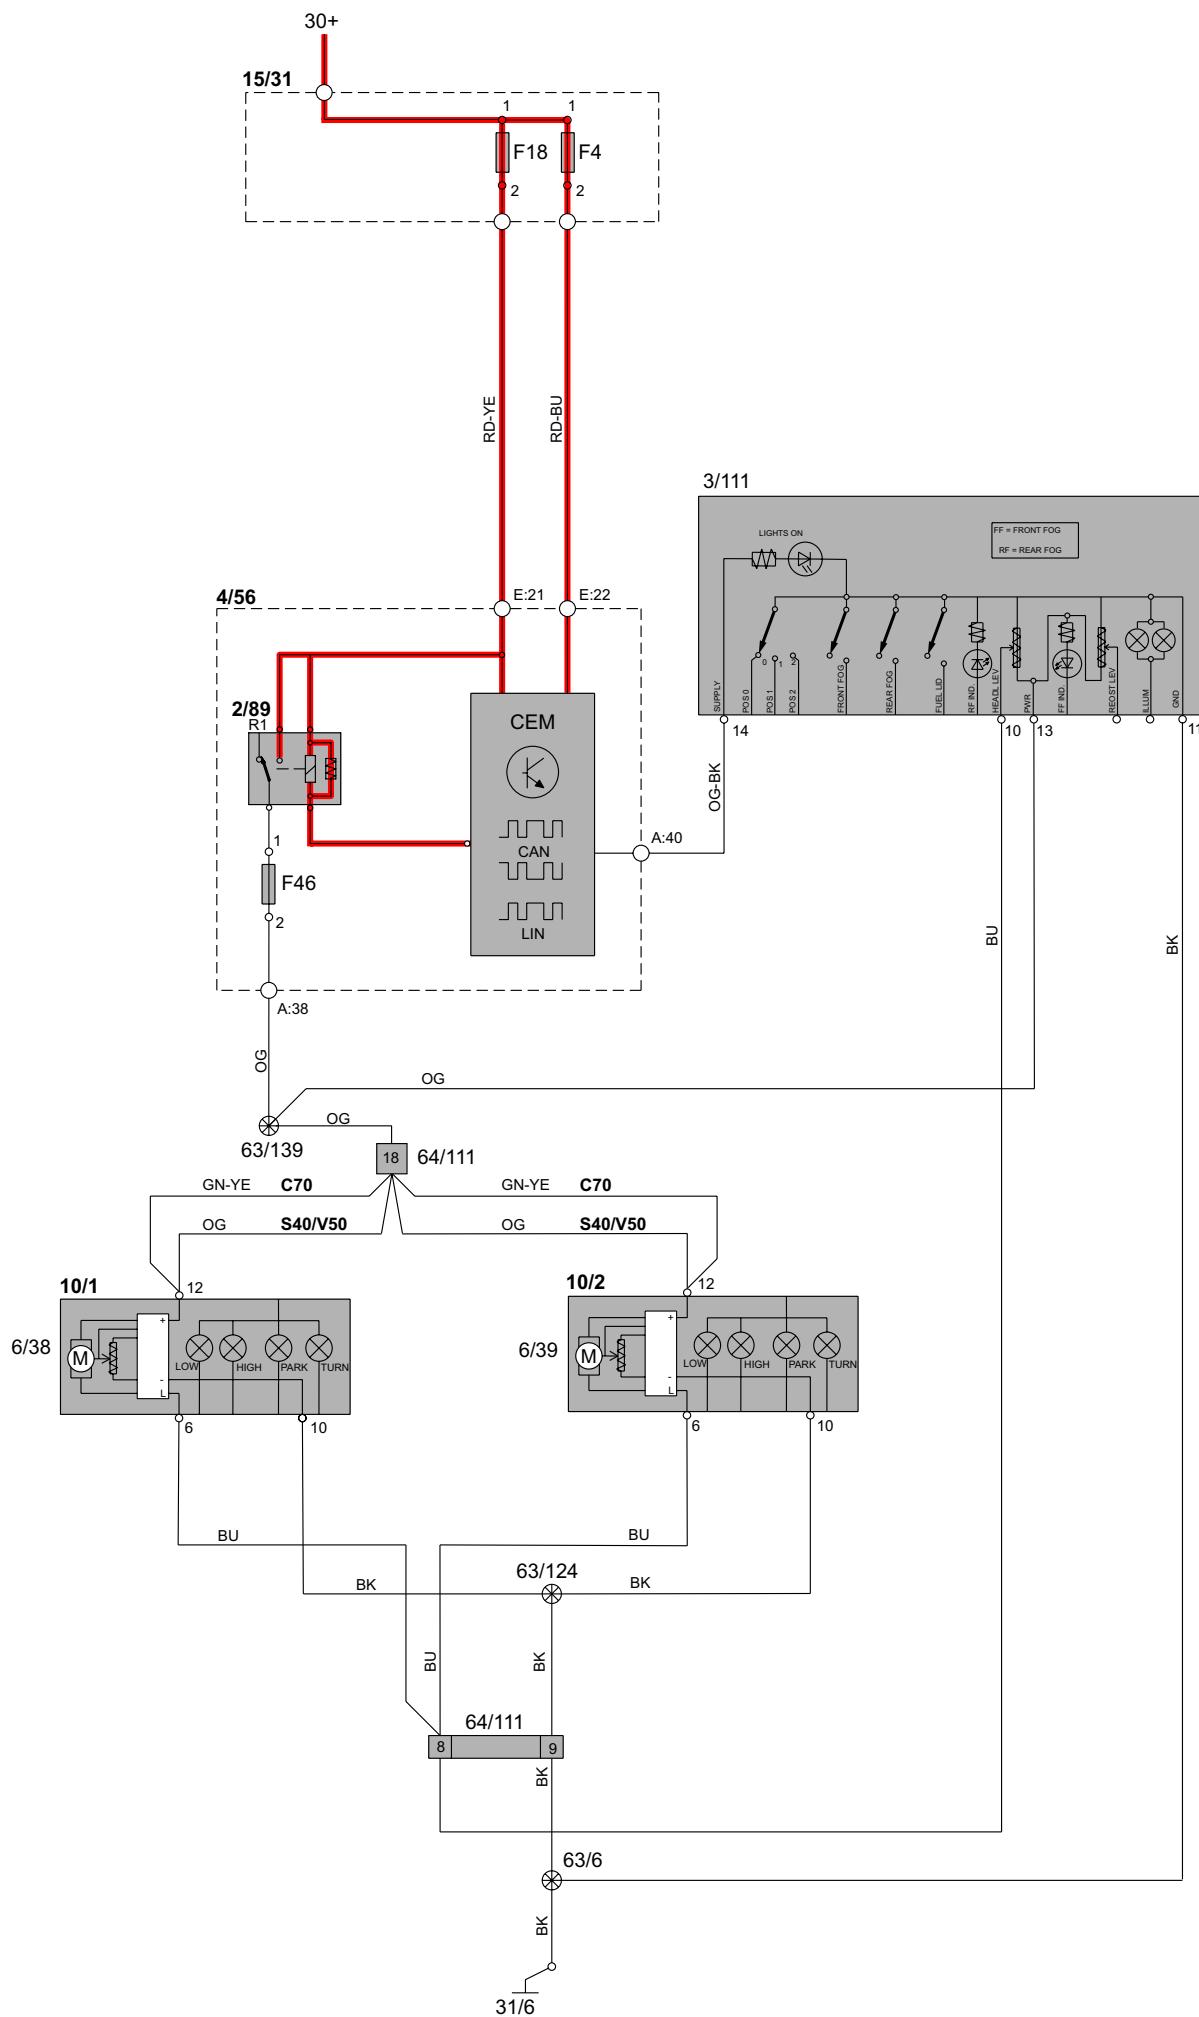


Group 35 Lighting

Automatic beam length adjustment (Bi-Xenon)

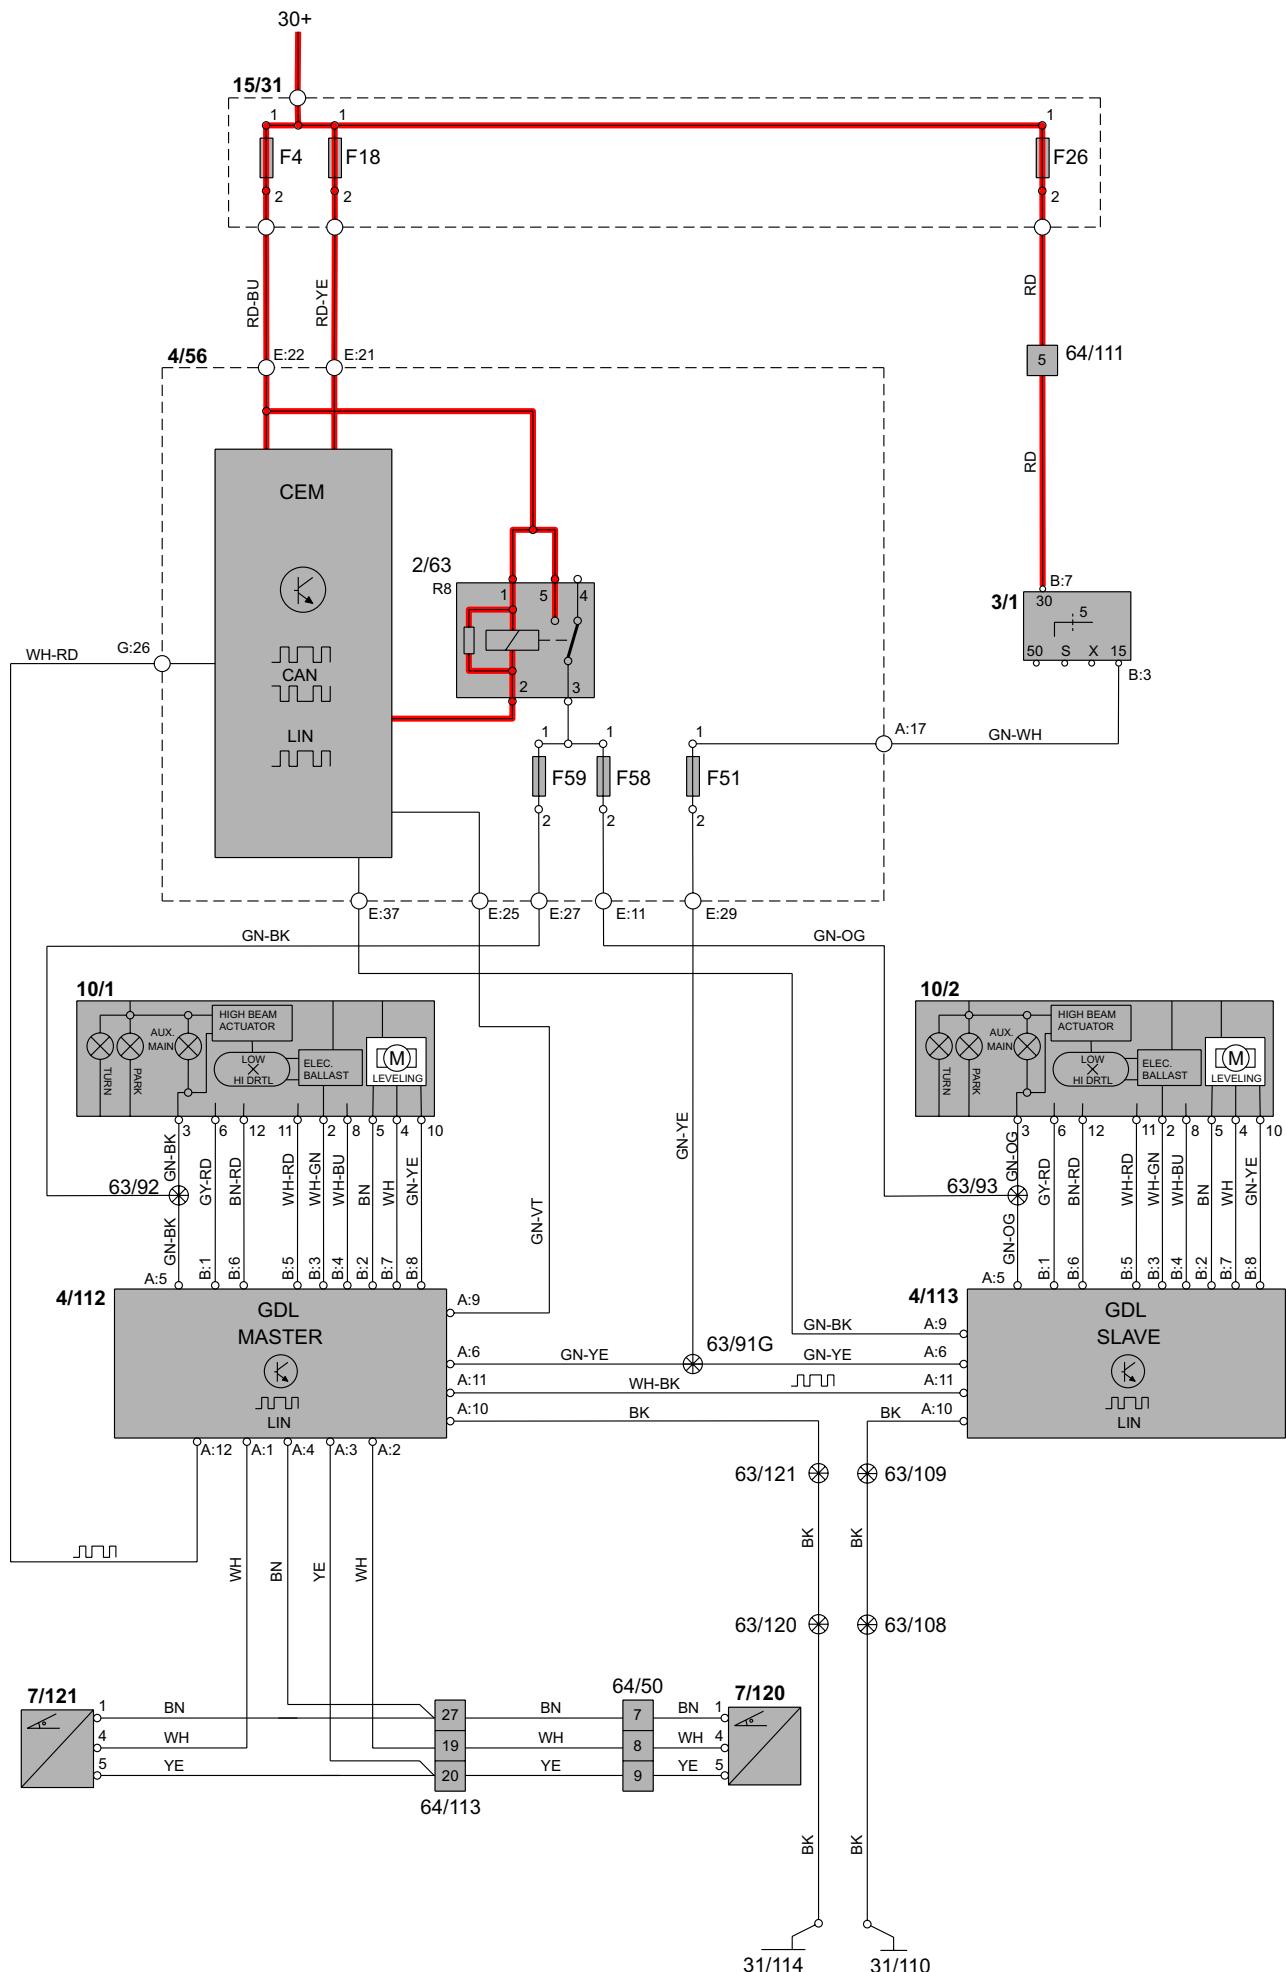


Group 35 Lighting Position/Parking lights, Tail lights S40/V50

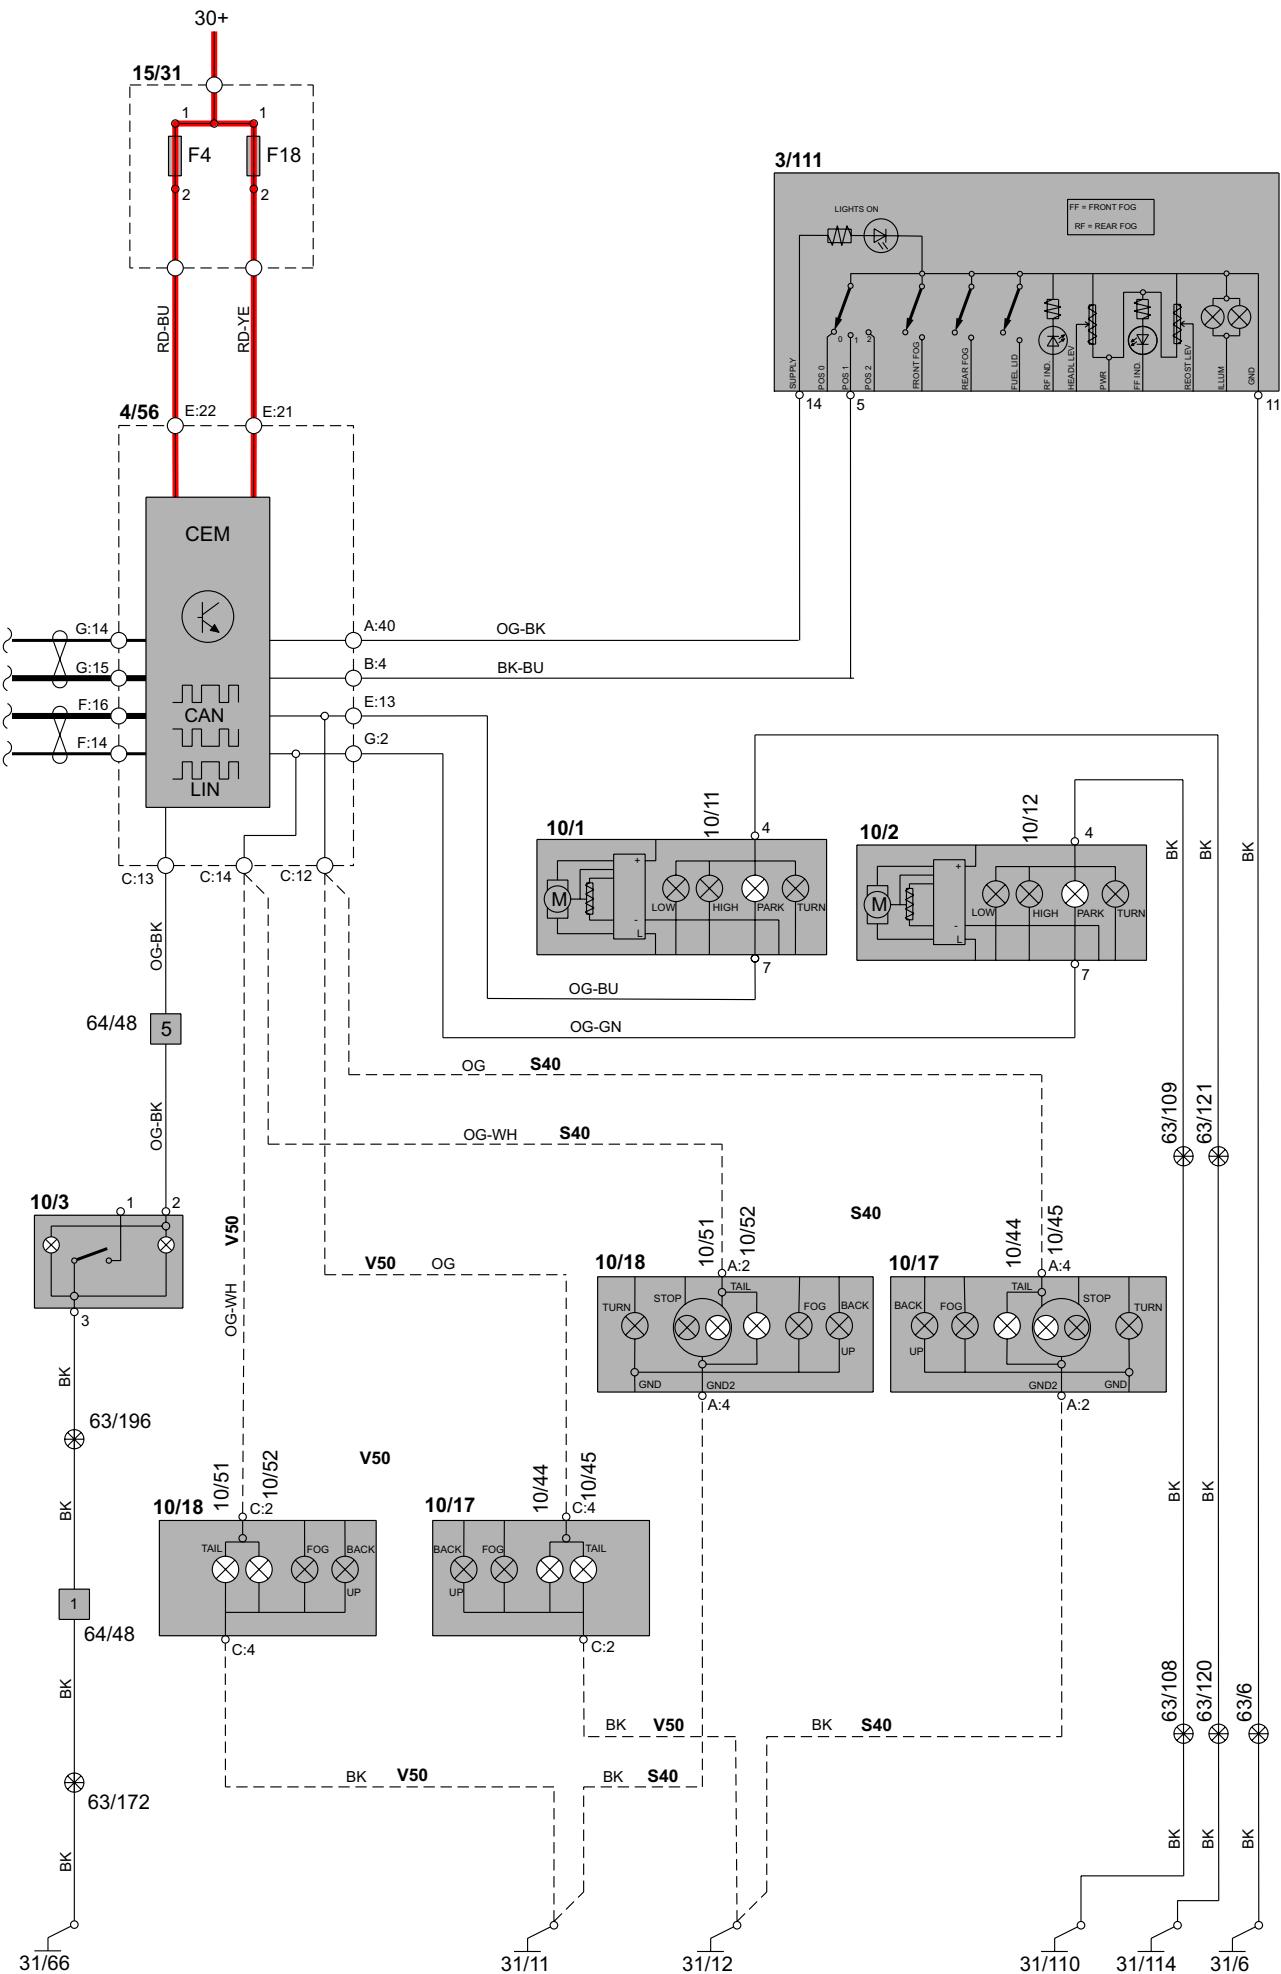


Group 35 Lighting

Position/Parking lights, Tail lights (Bi-Xenon) S40/V50

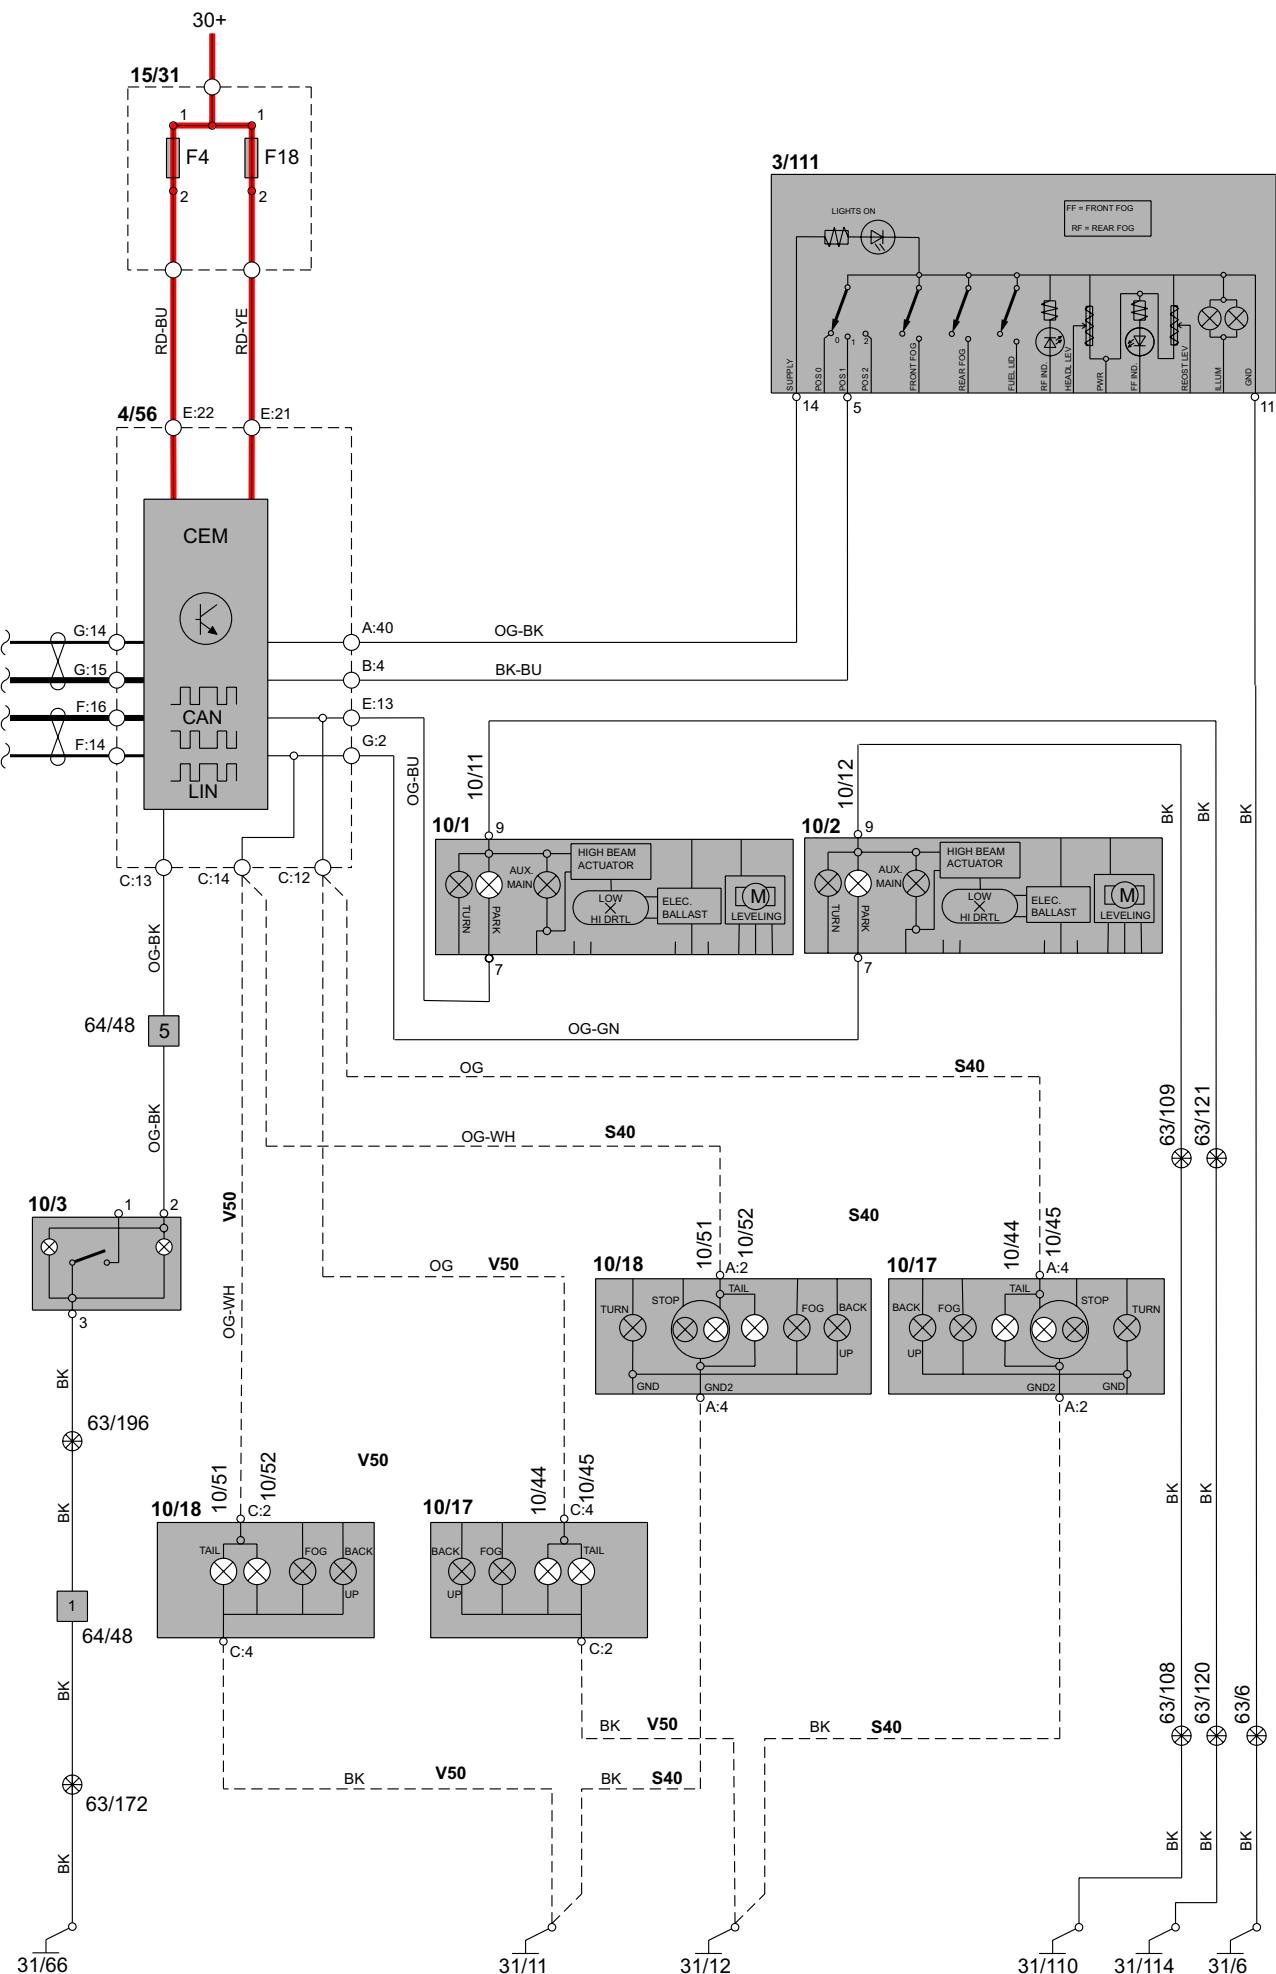


Group 35 Lighting

Position/Parking lights, Tail lights C70

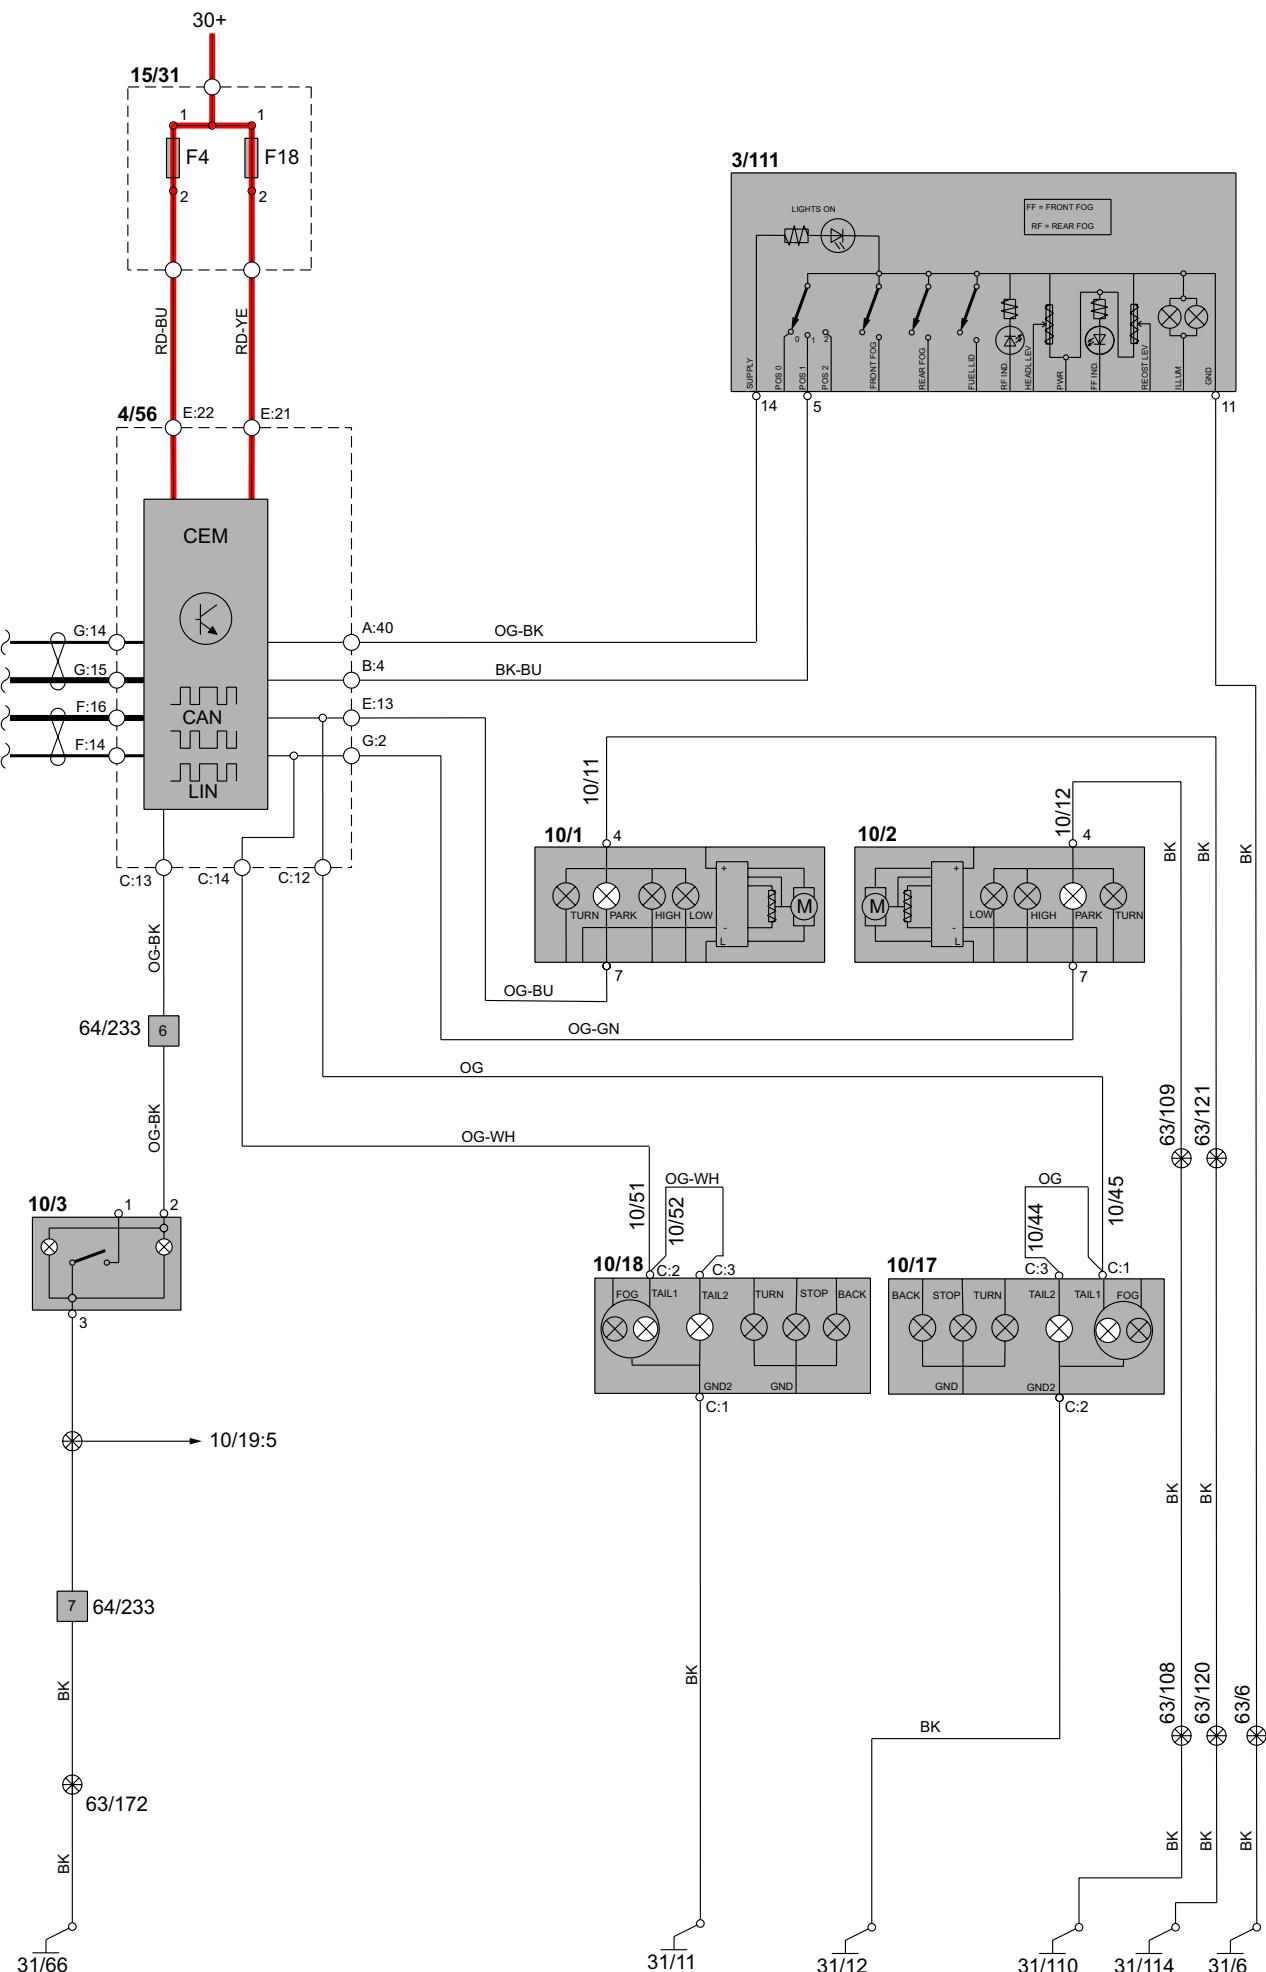


Group 35 Lighting

Position/Parking lights, Tail lights (Bi-Xenon) C70

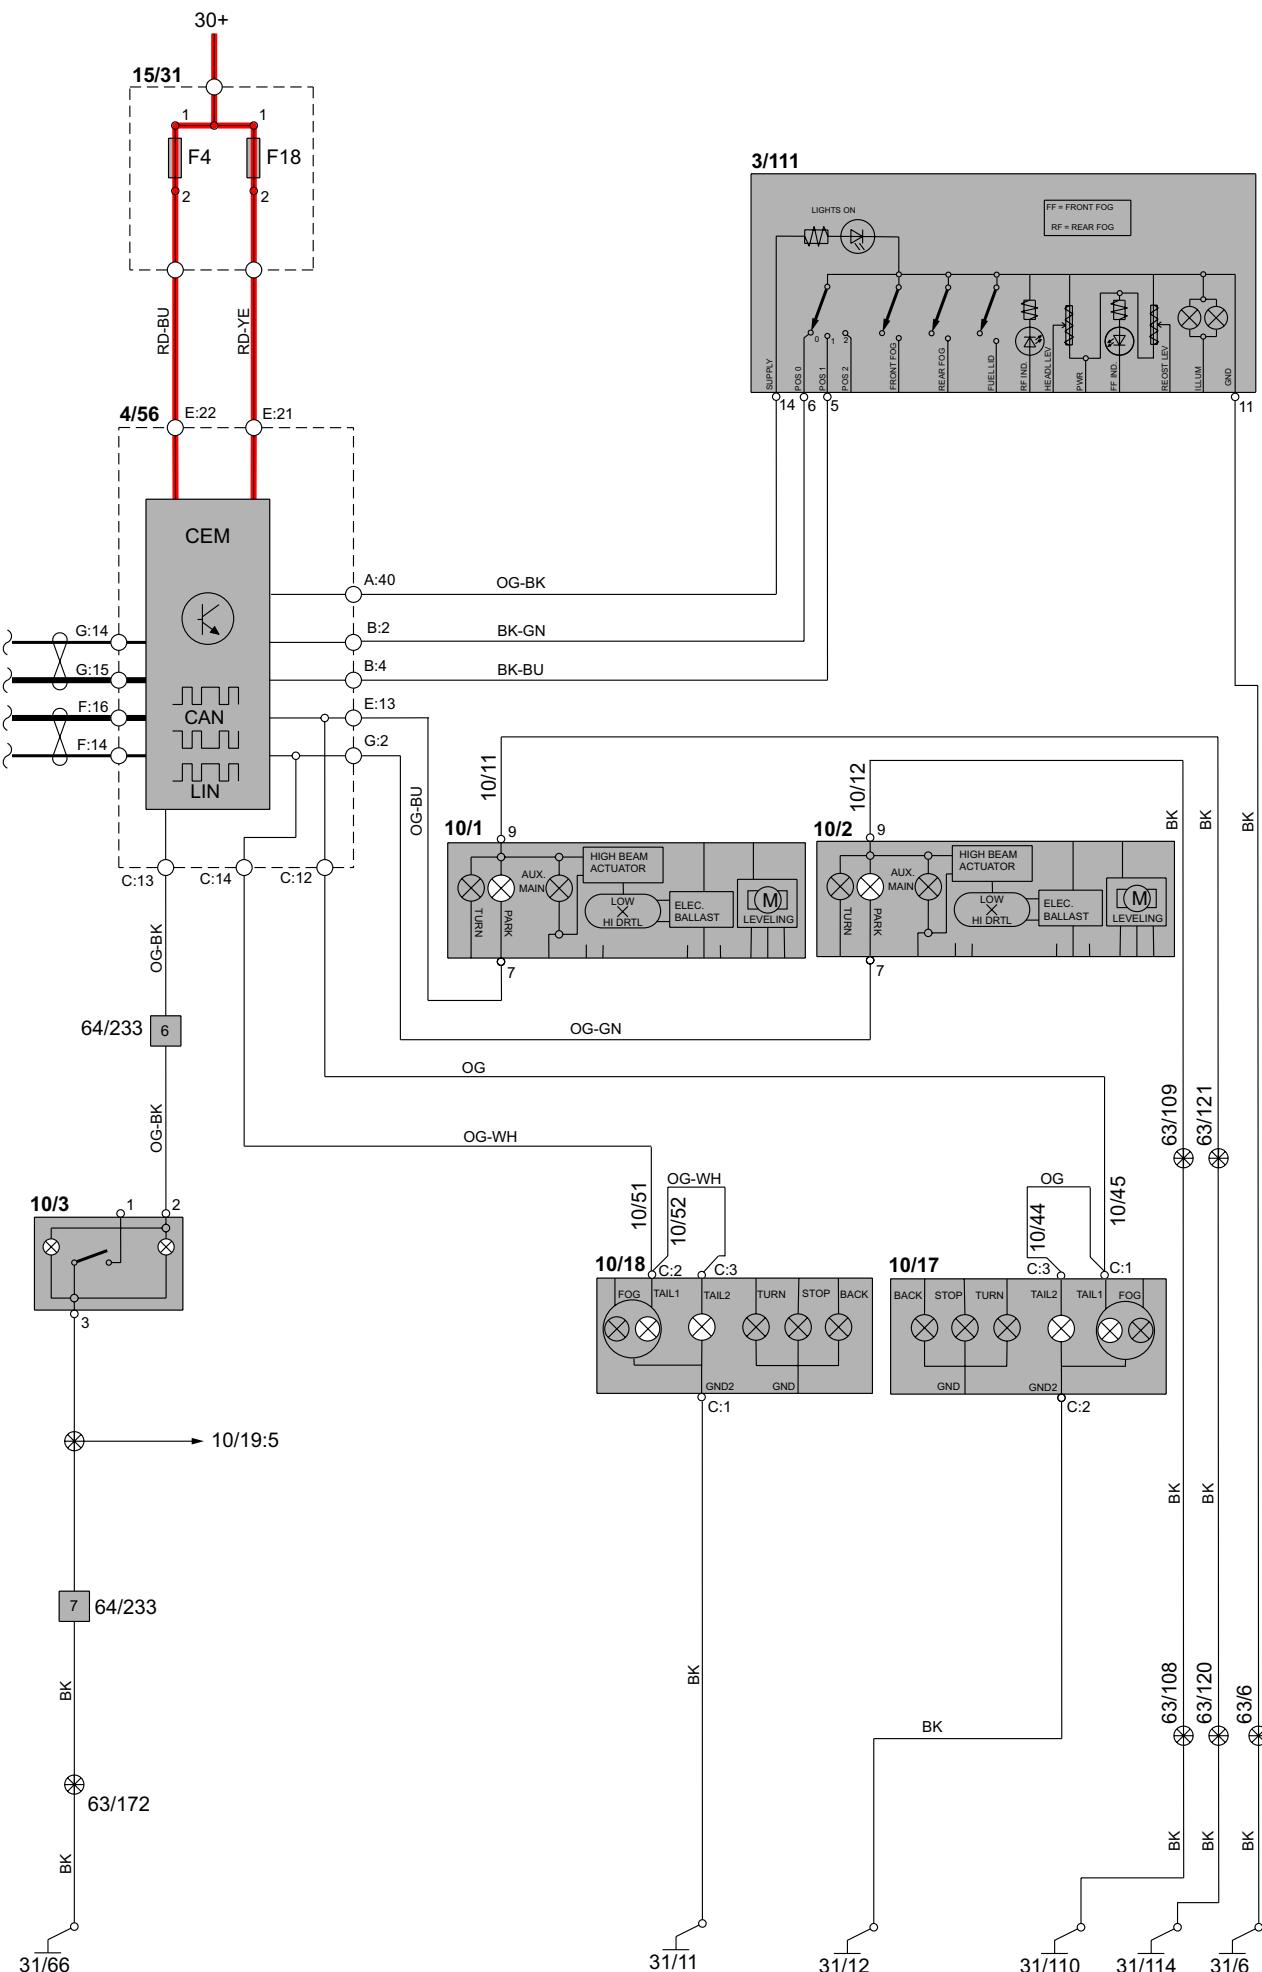


Group 35 Lighting Fog lights S40/V50

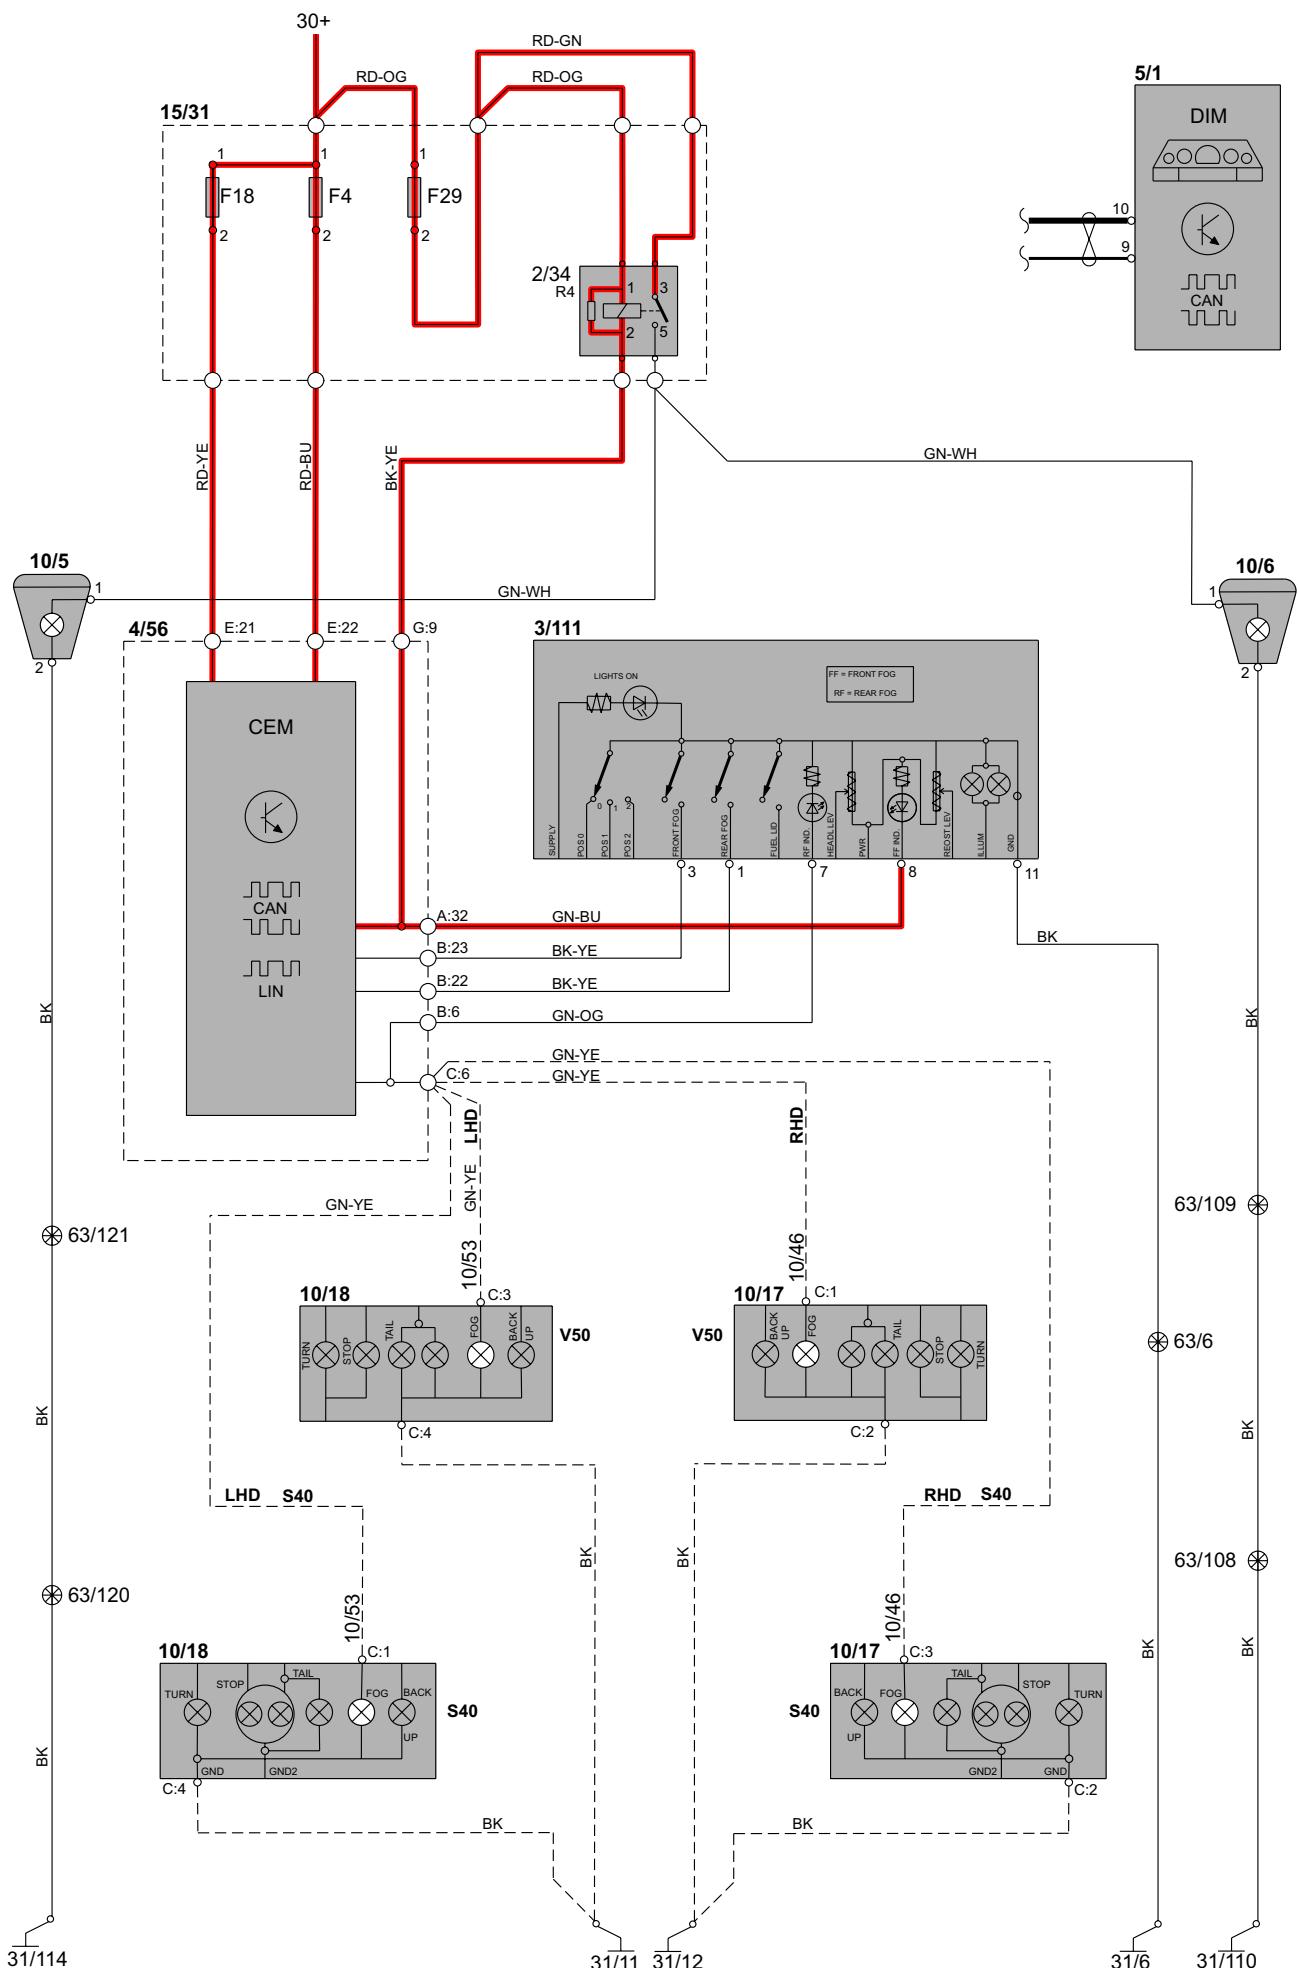


Group 35 Lighting

Fog lights C70

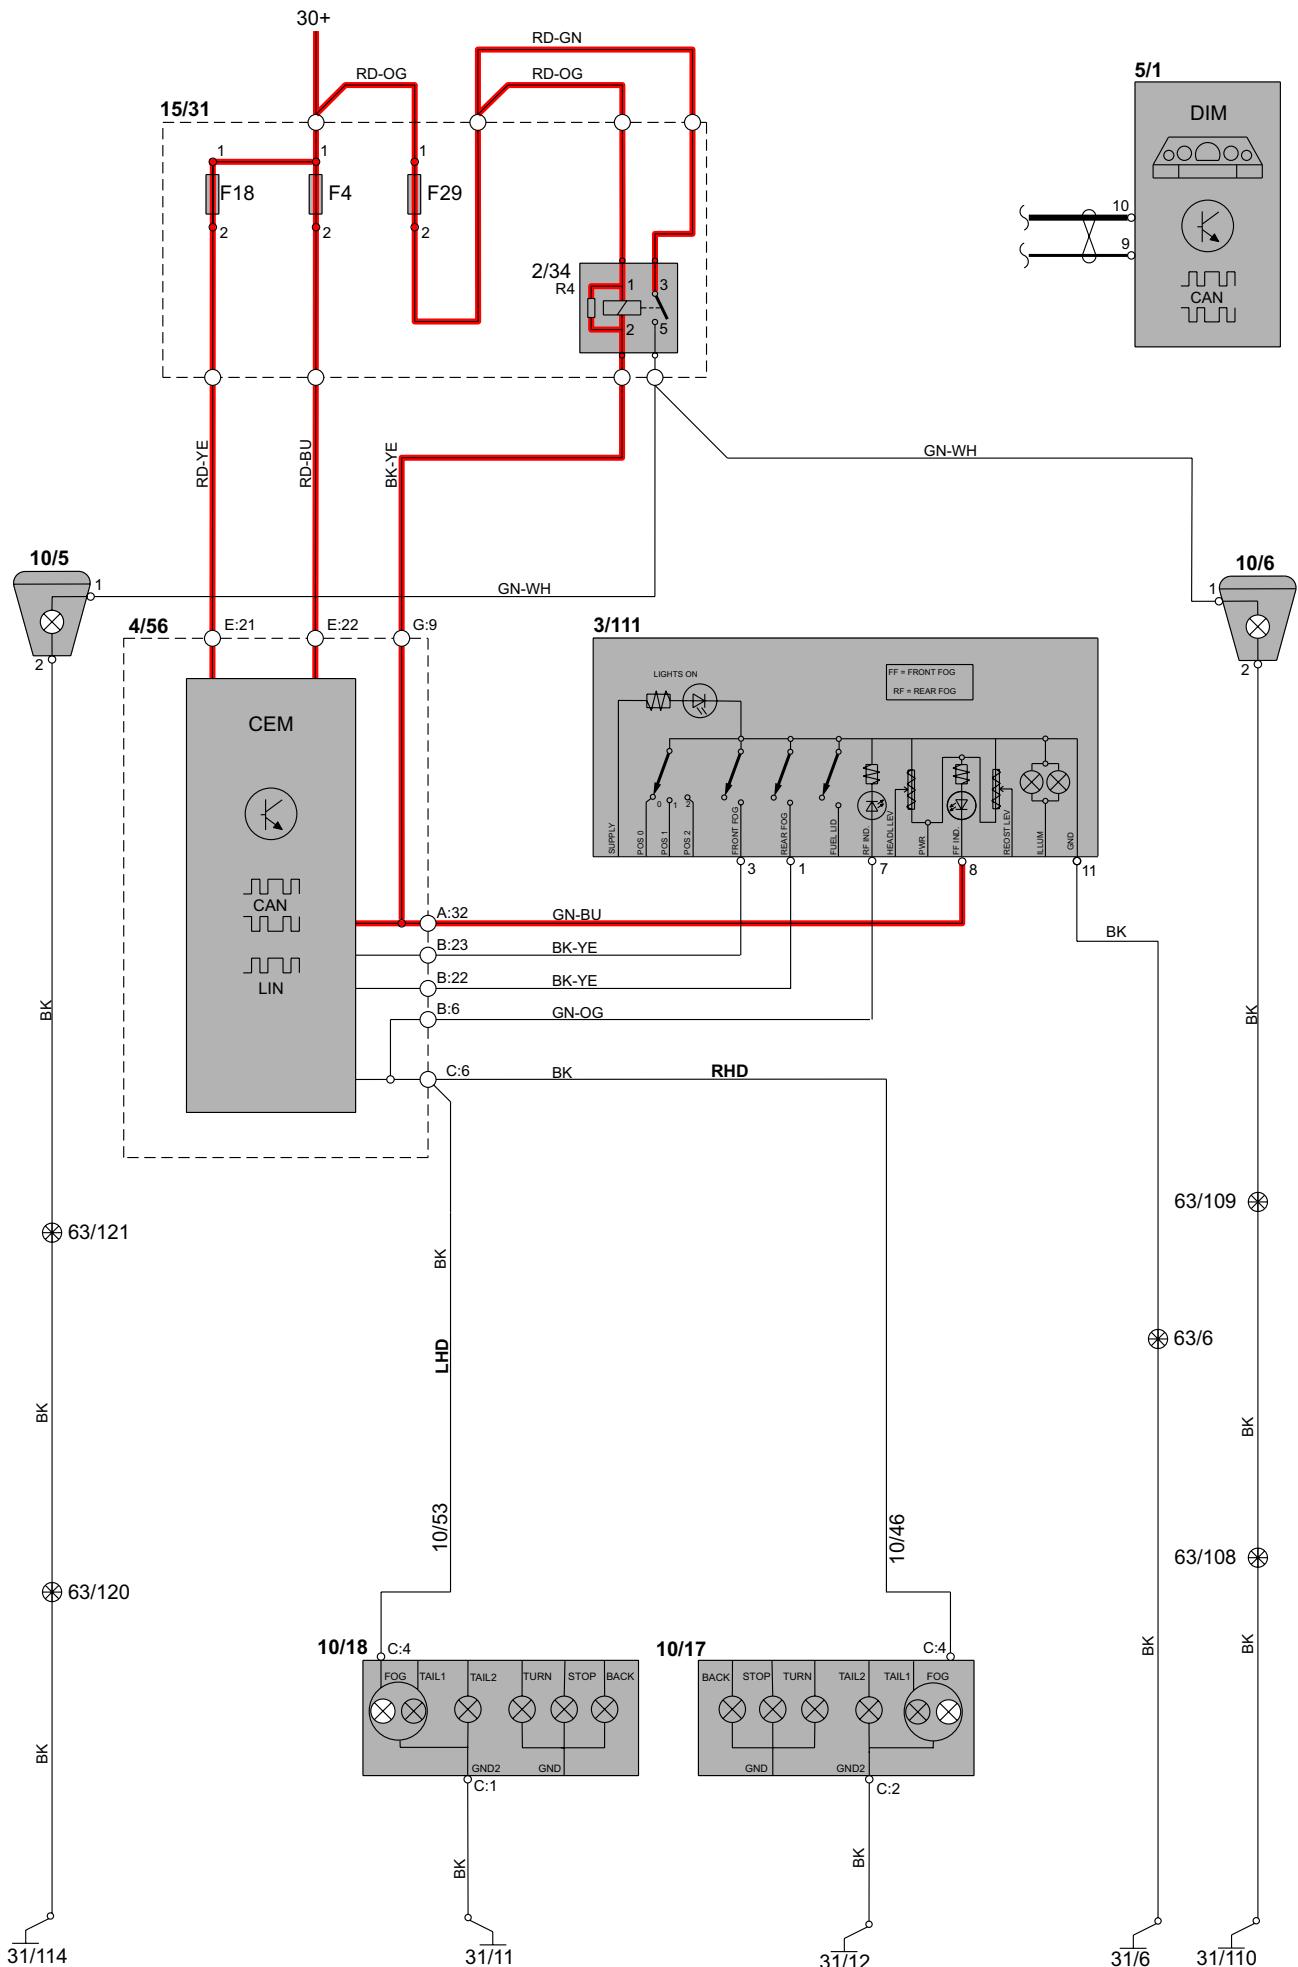


Group 35 Lighting Fog lights LHD, Japan S40/V50

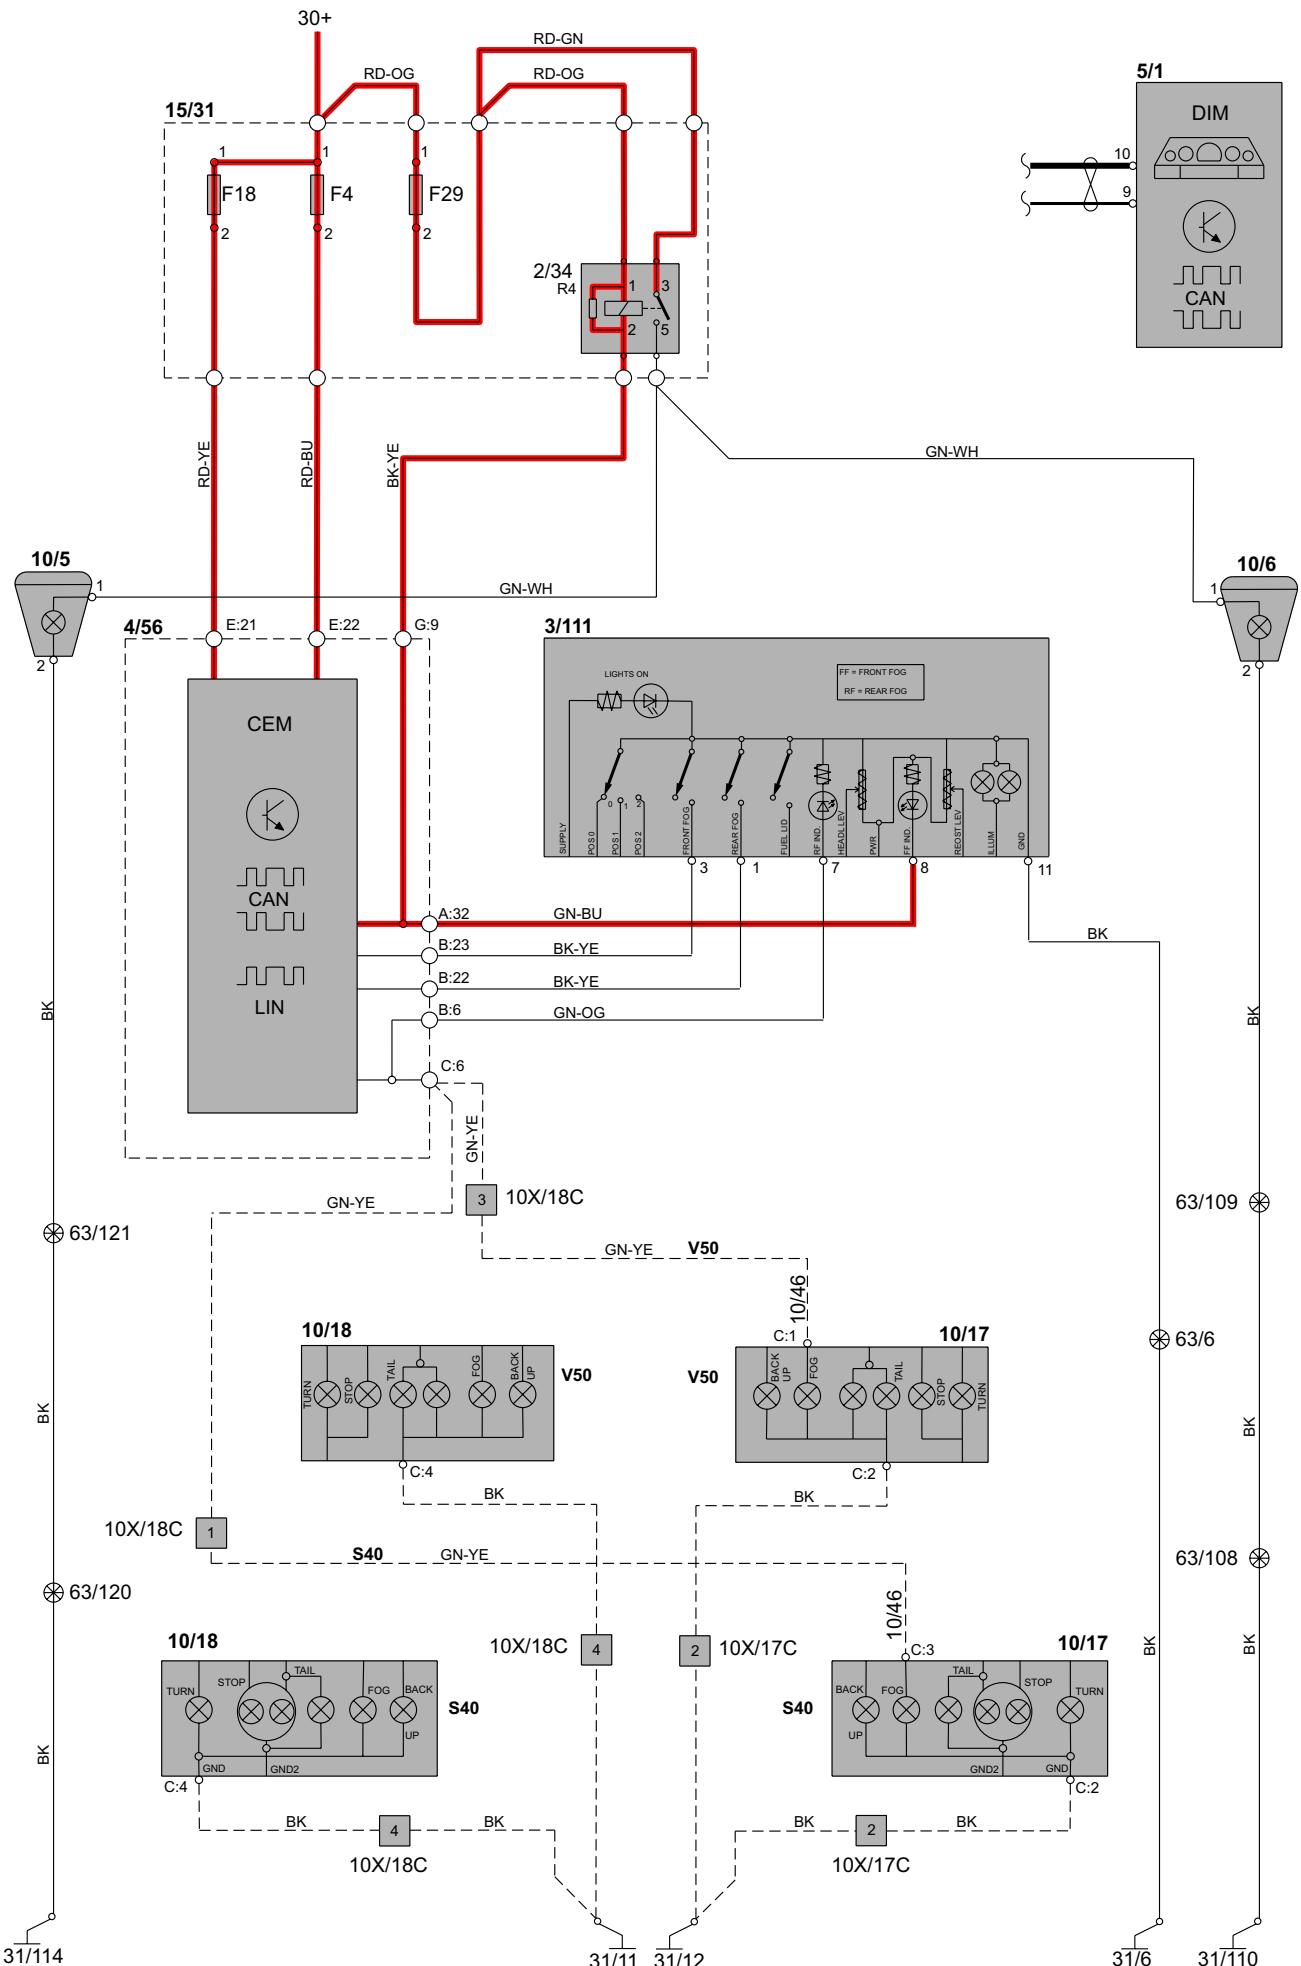


Group 35 Lighting

Fog lights LHD, Japan C70

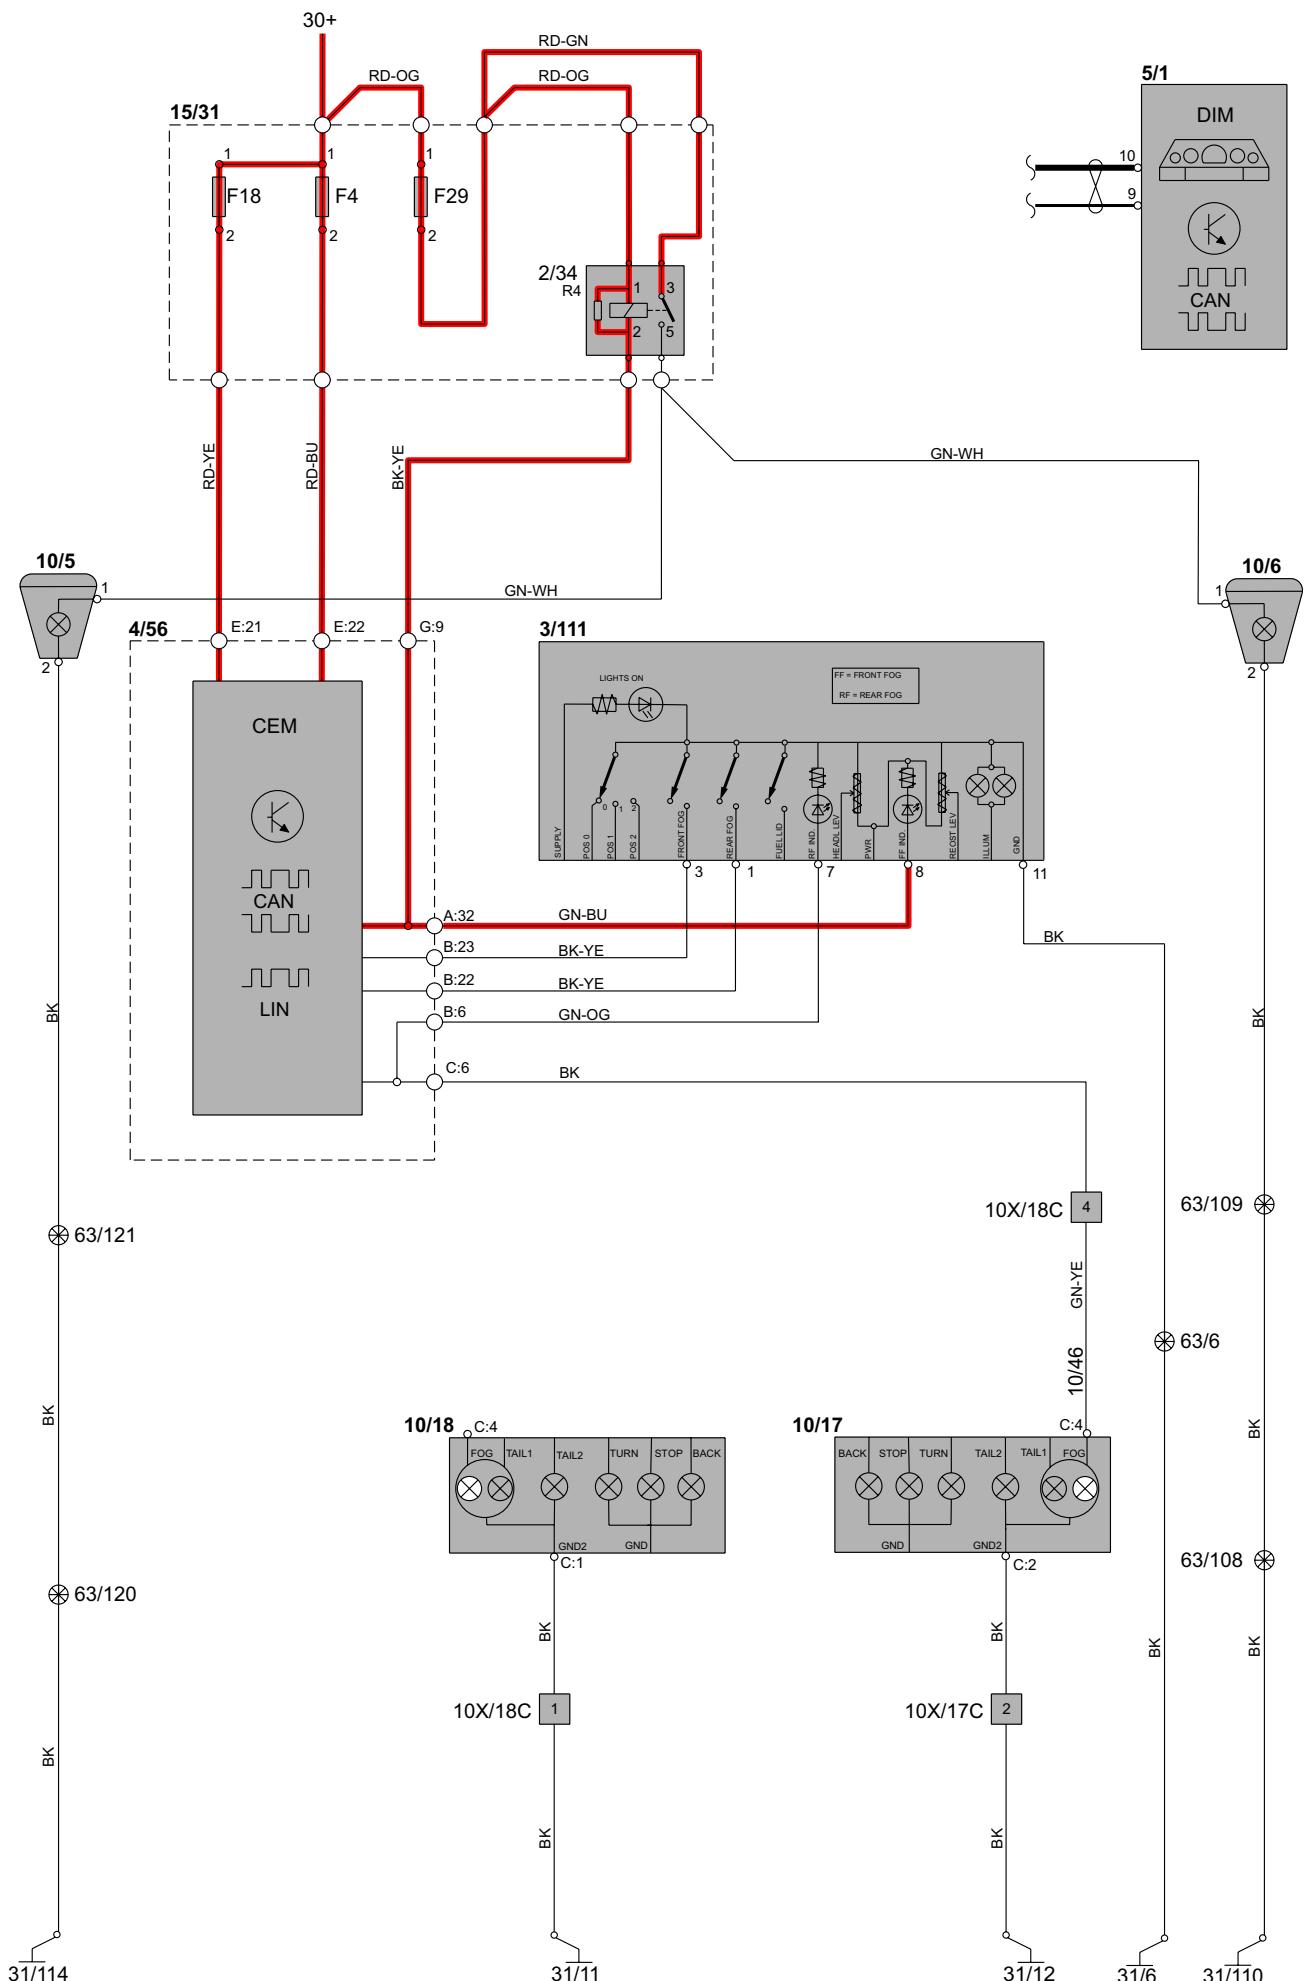


Group 35 Lighting

Brake lights S40/V50

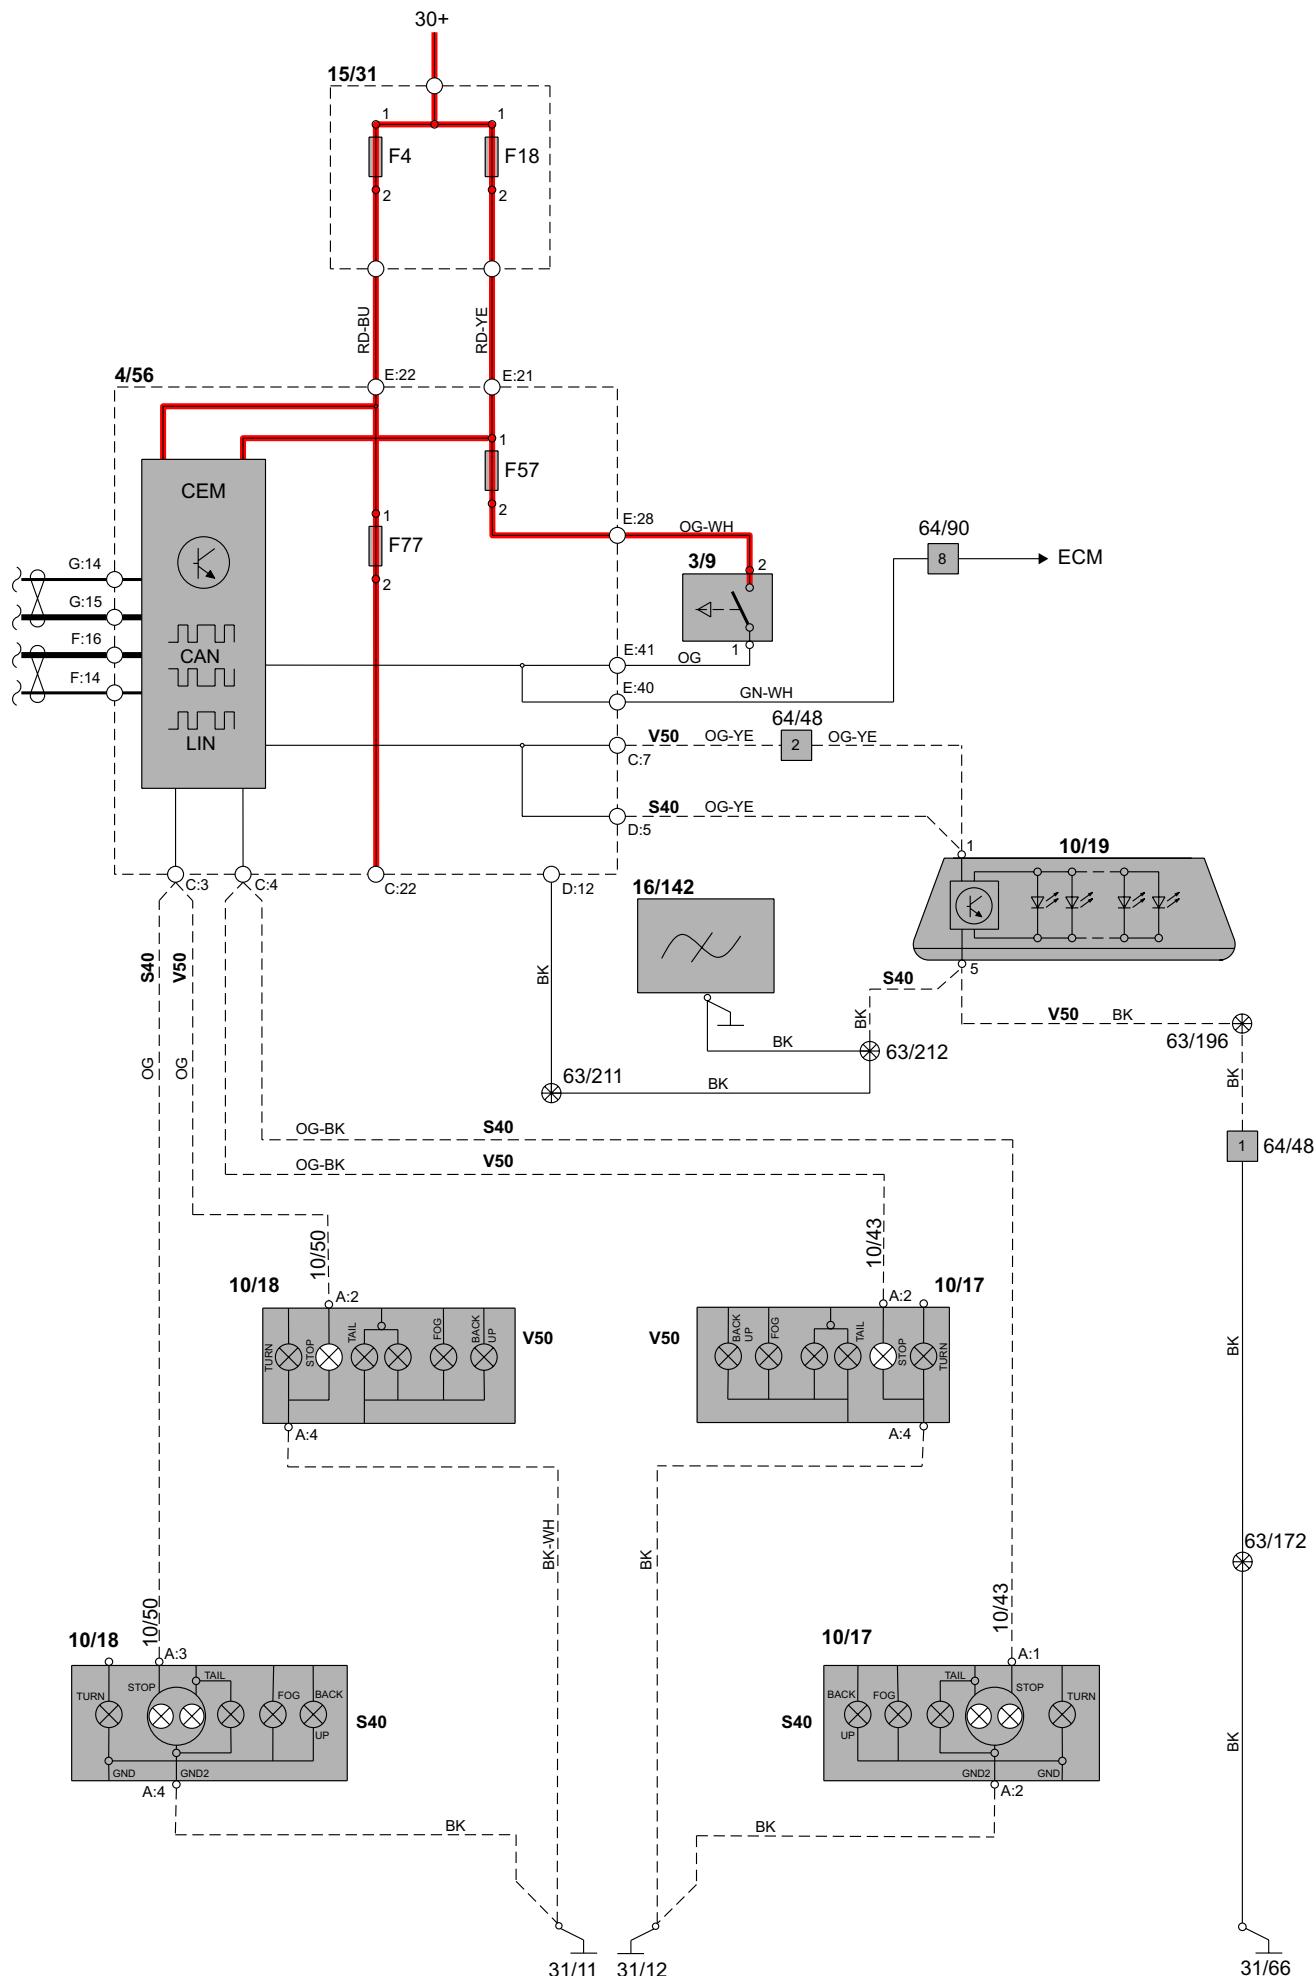


Group 35 Lighting

Brake lights C70

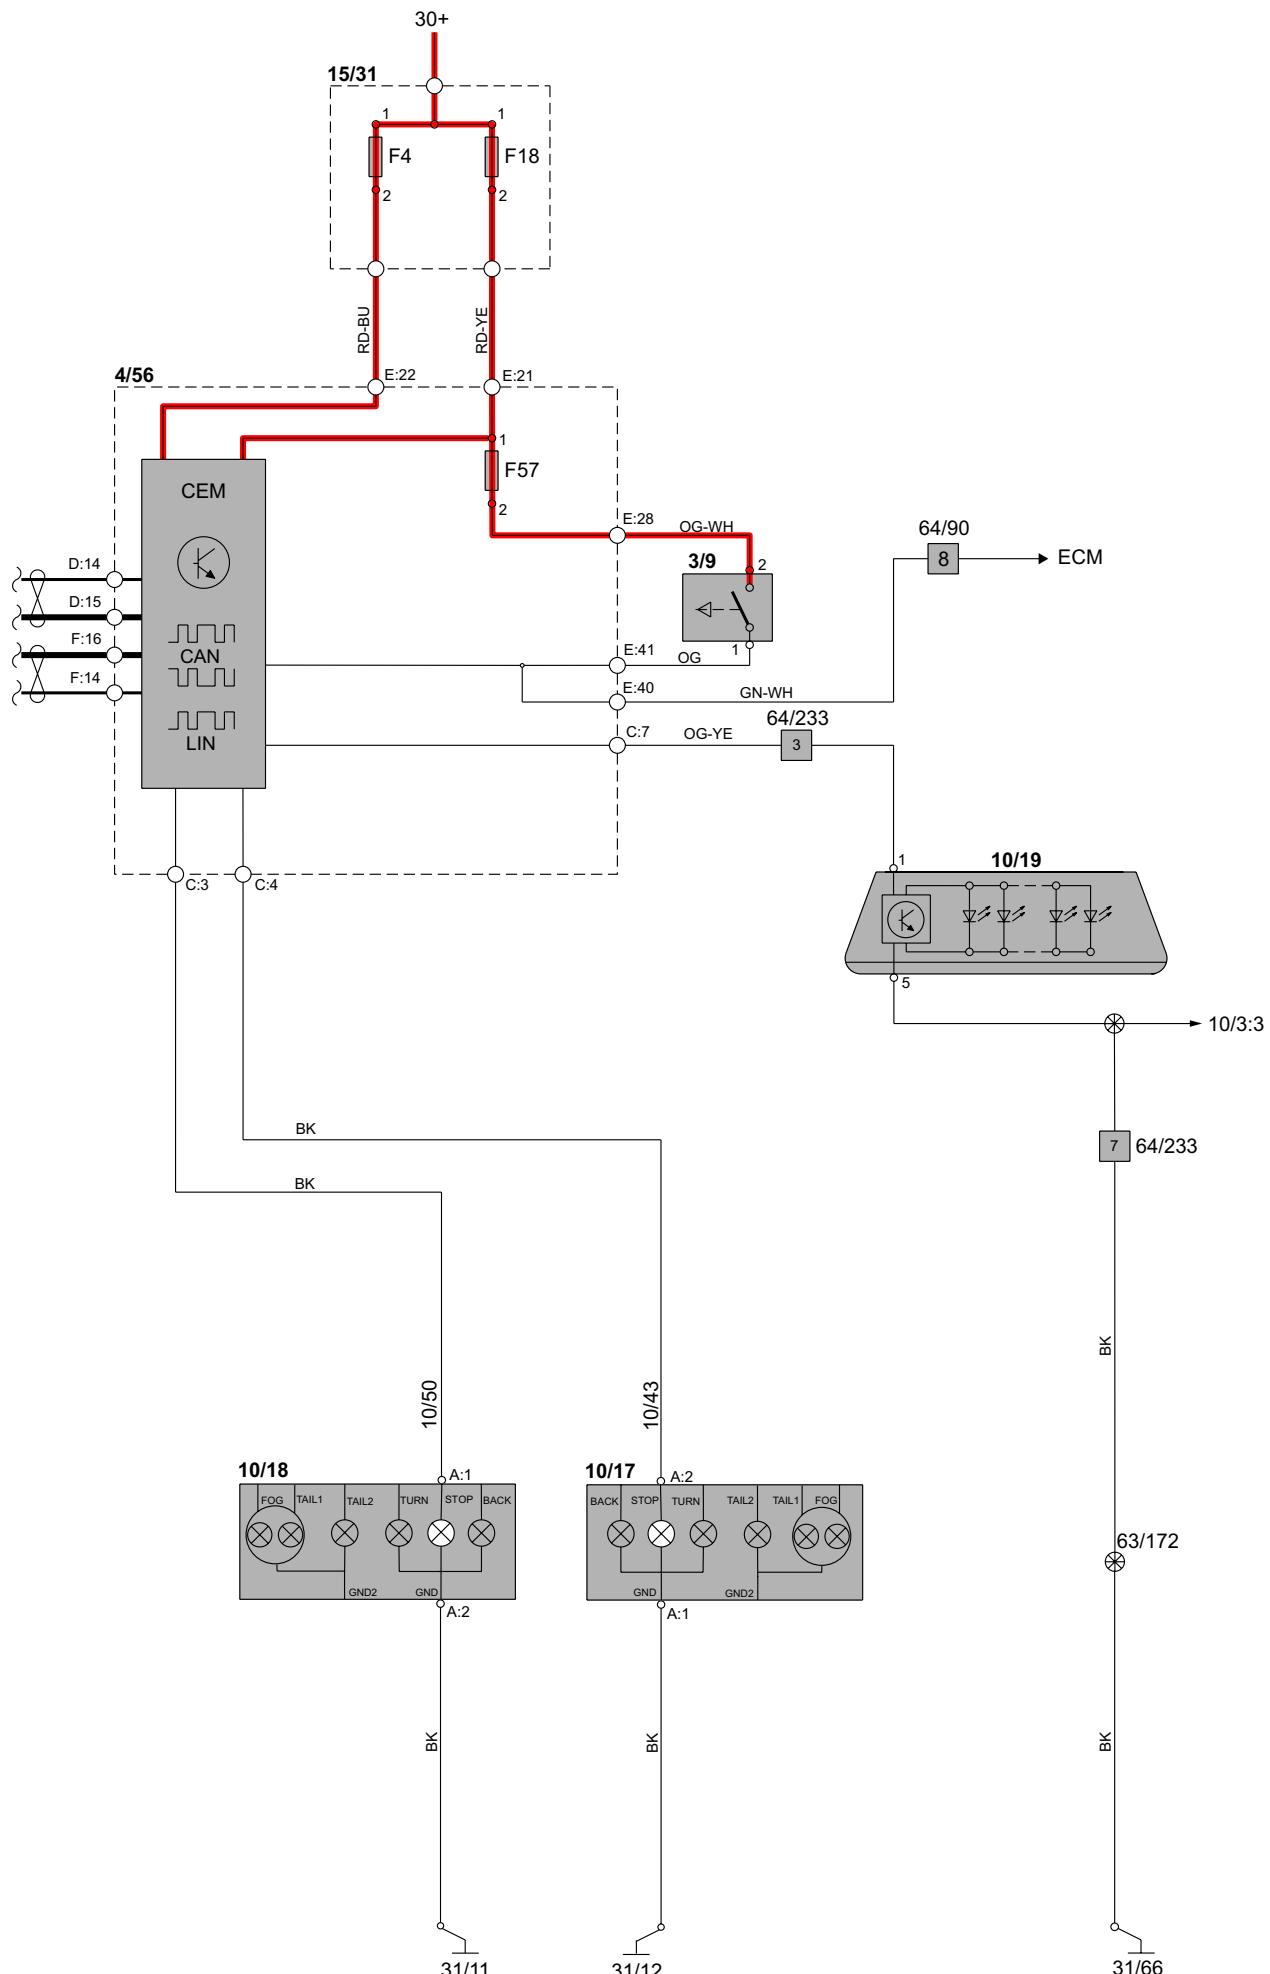


Group 35 Lighting

Reversing lights S40/V50

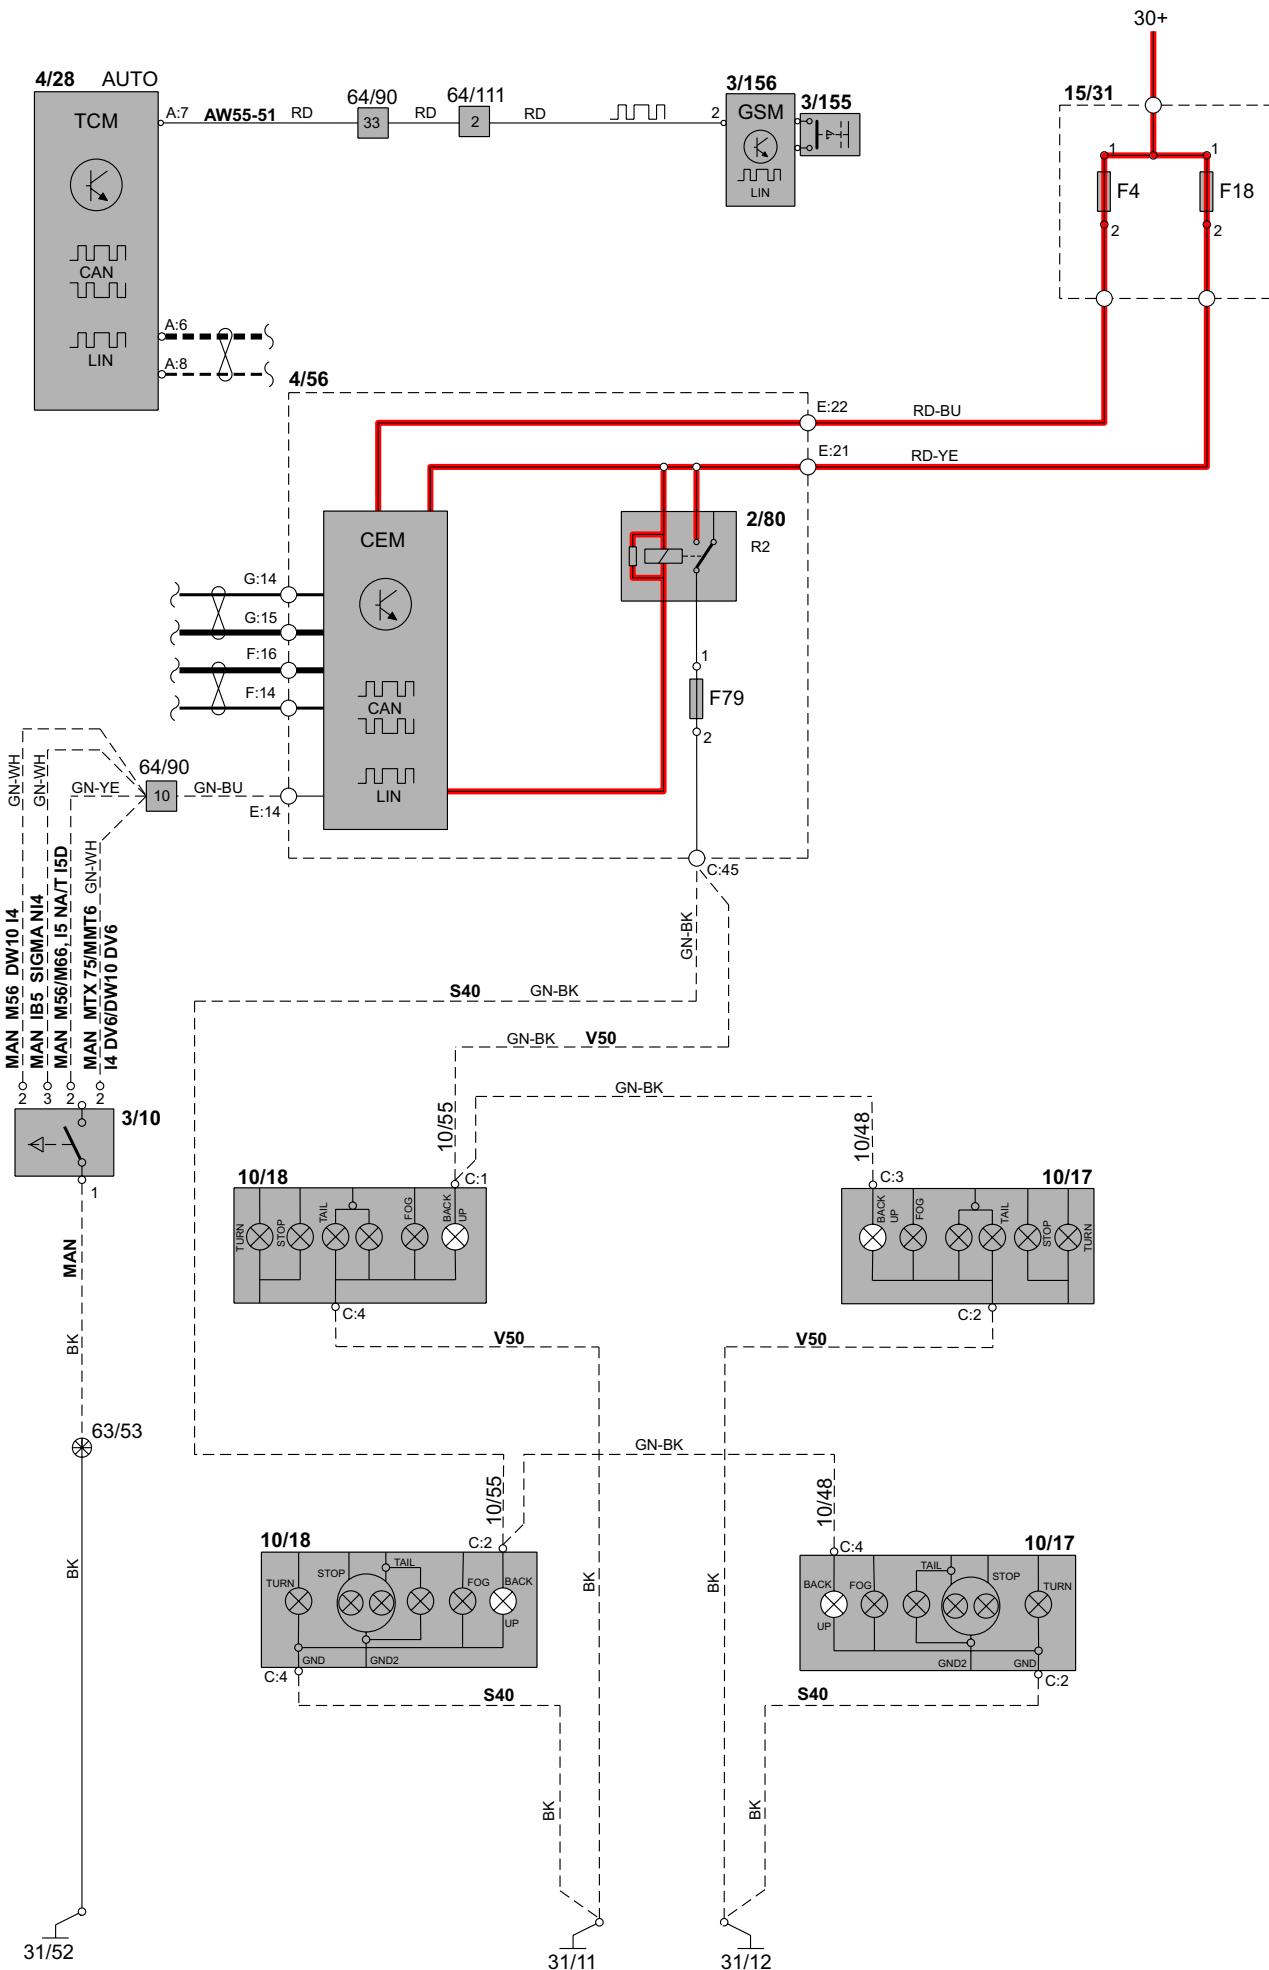


Group 35 Lighting Reversing lights C70

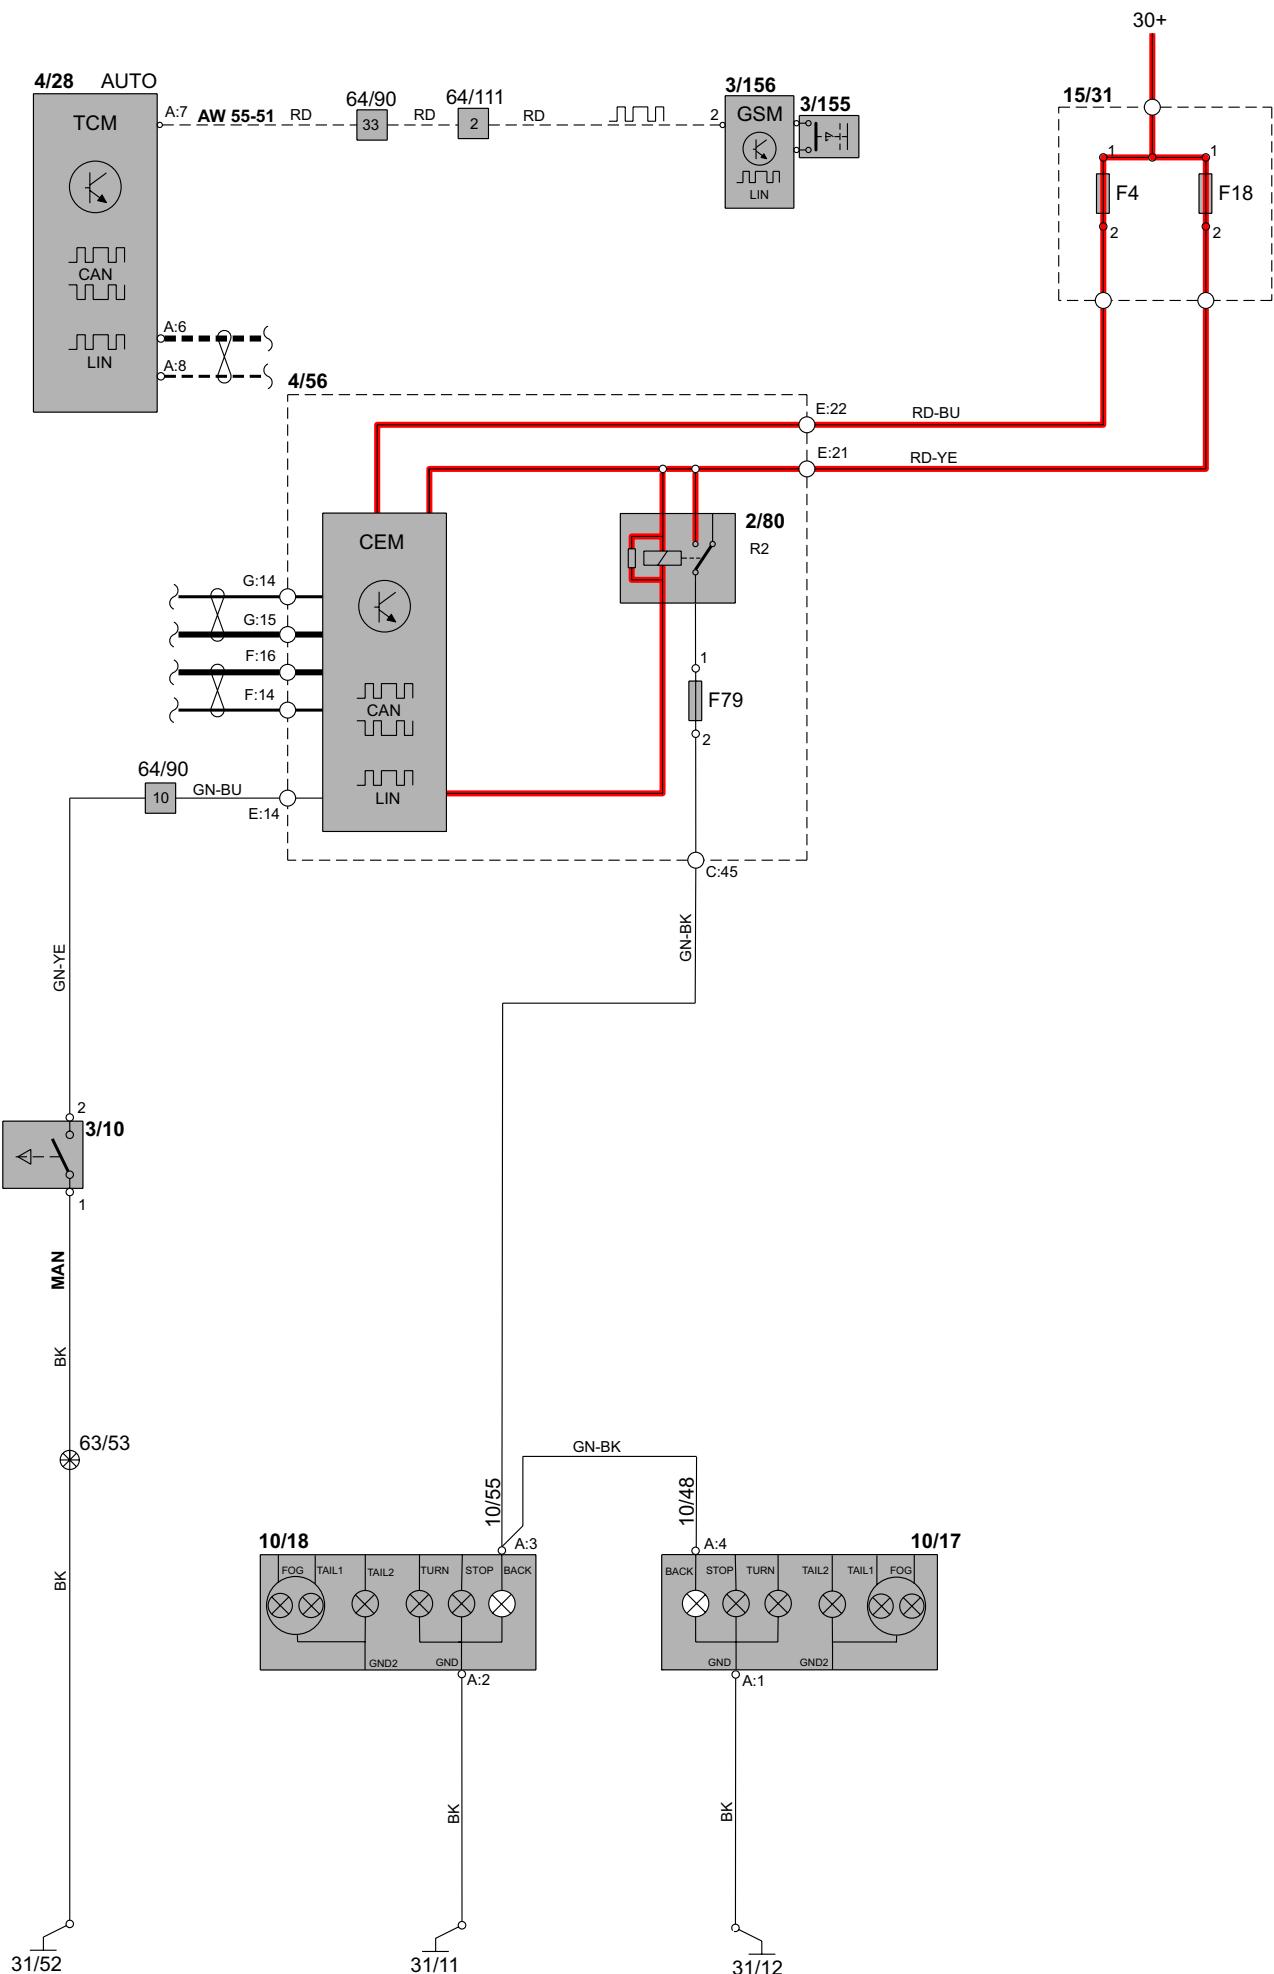


Group 35 Lighting

Interior lighting S40/V50 1:2

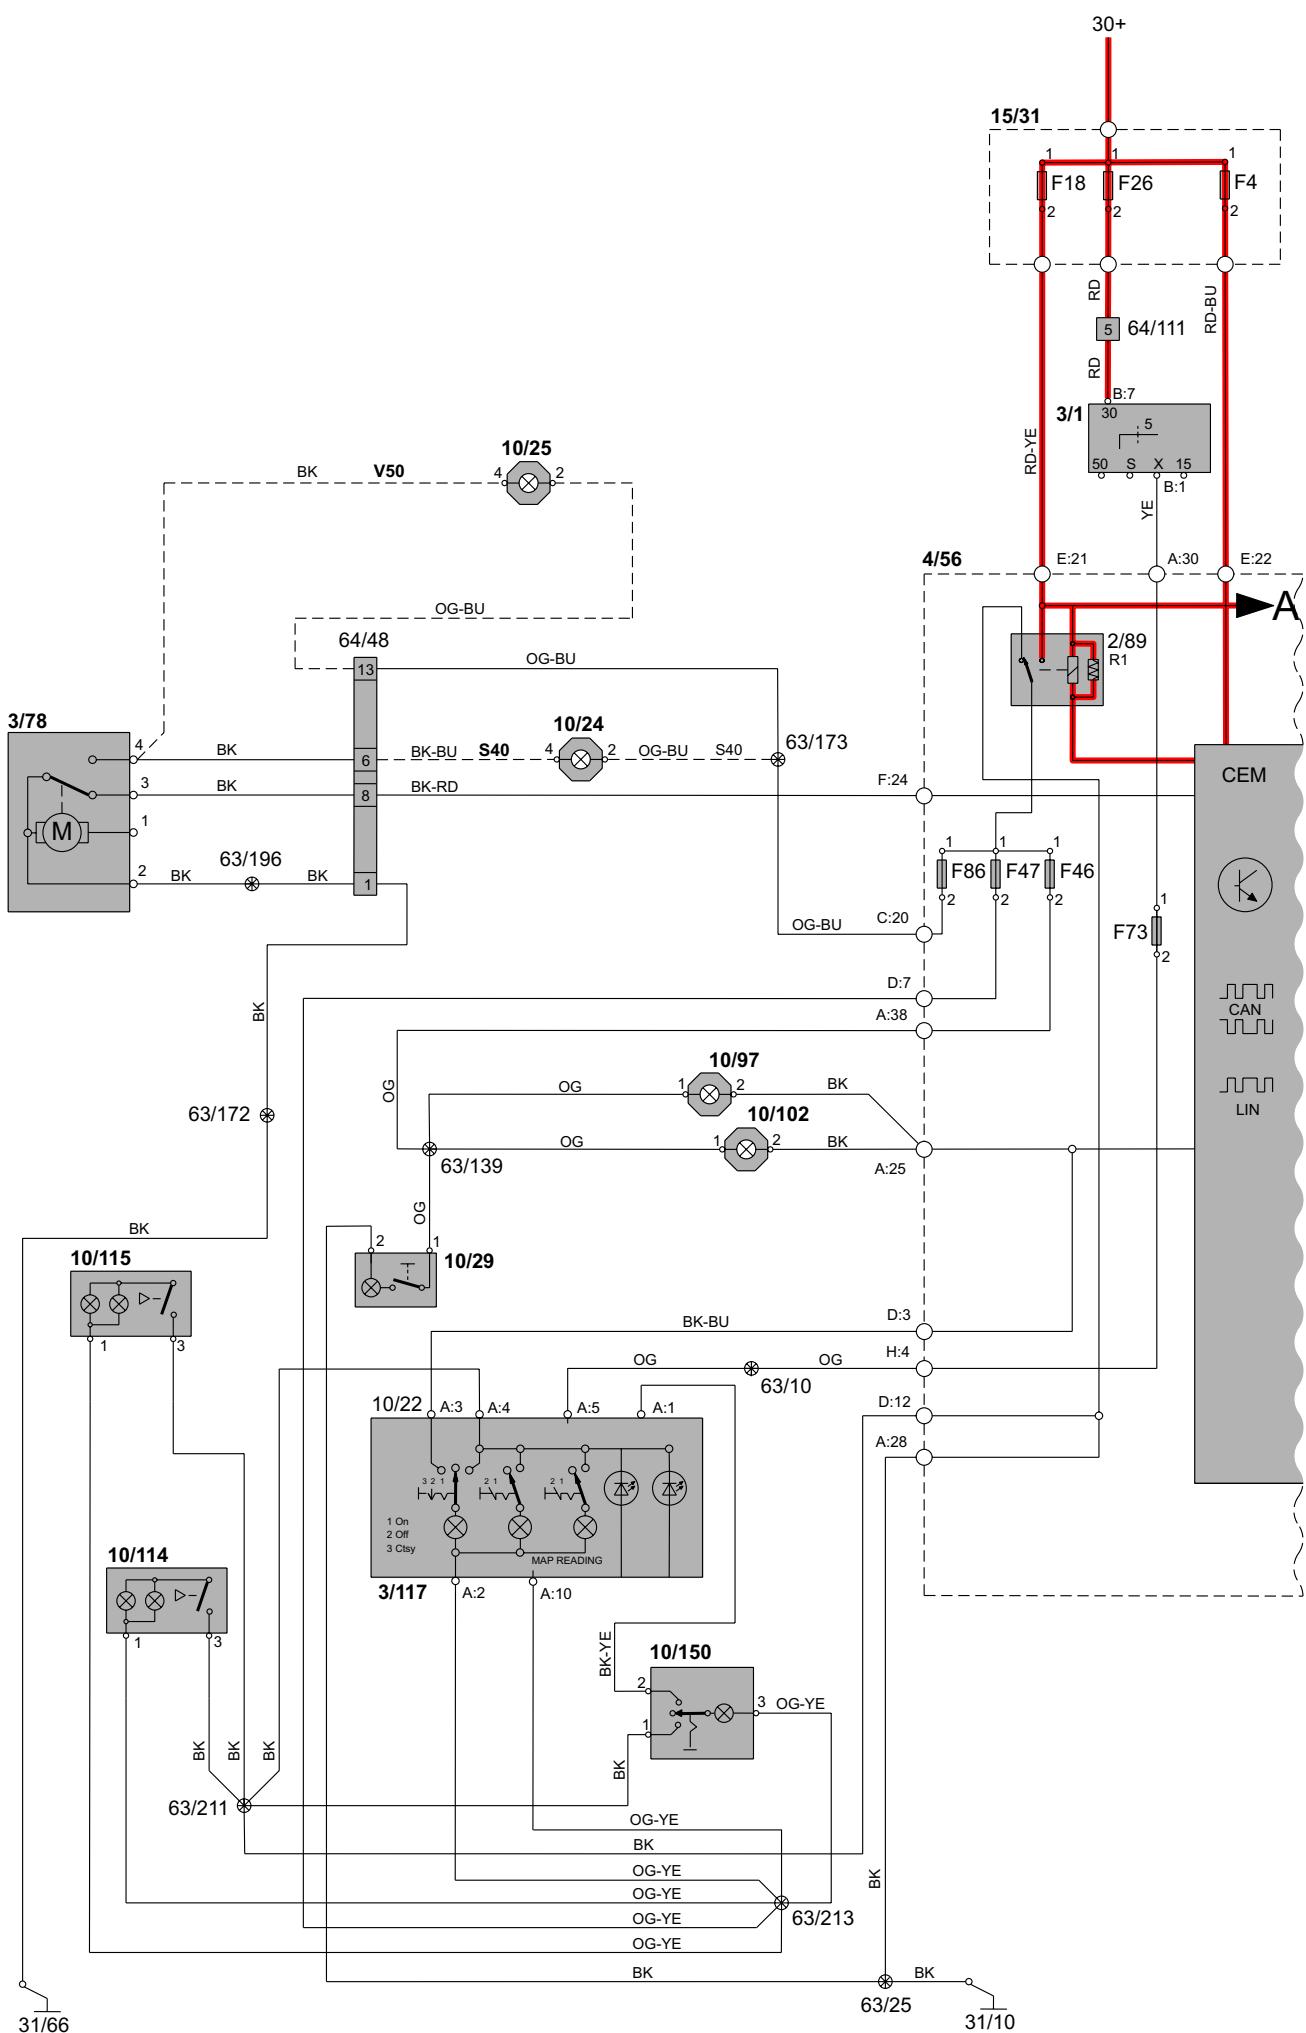


Group 35 Lighting

Interior lighting S40/V50 2:2

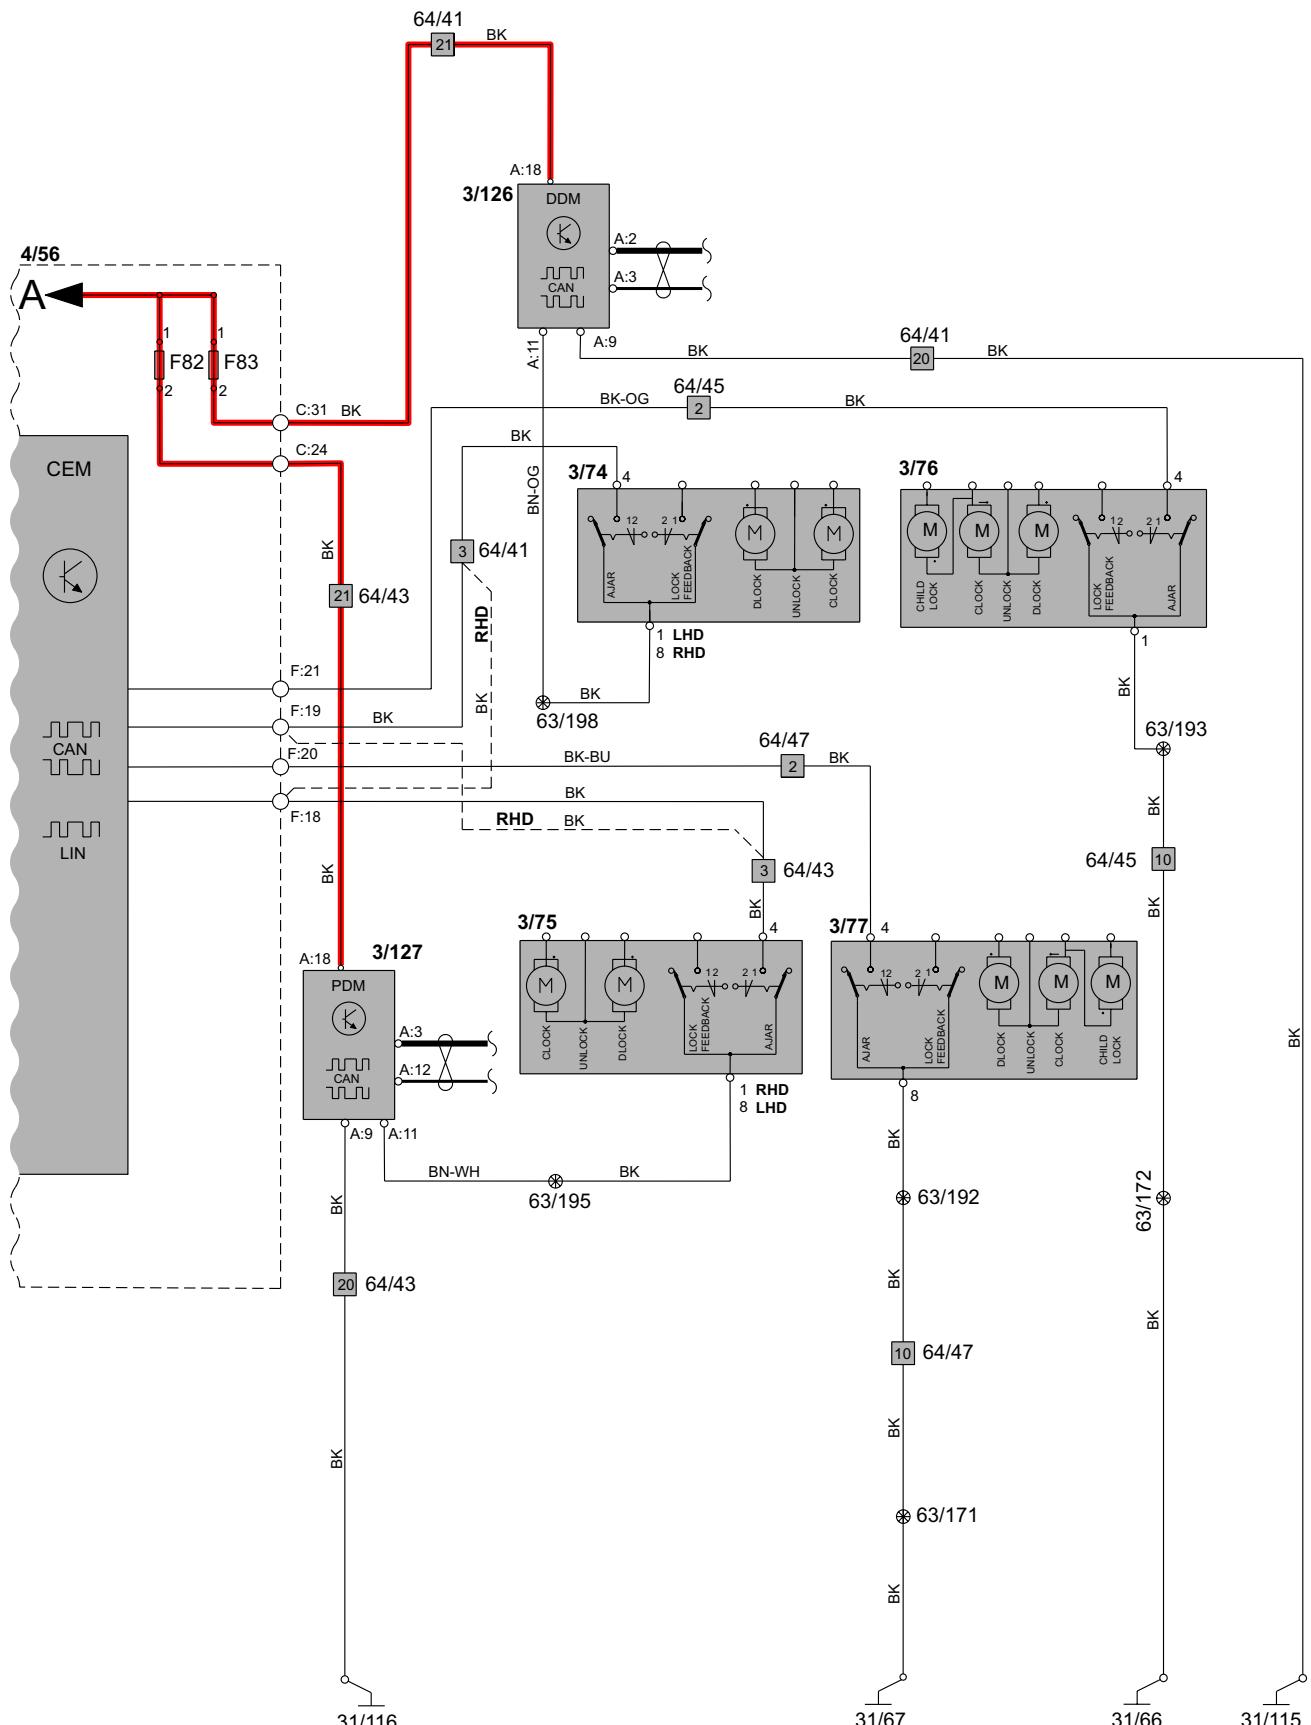


Group 35 Lighting

Interior lighting C70 1:2

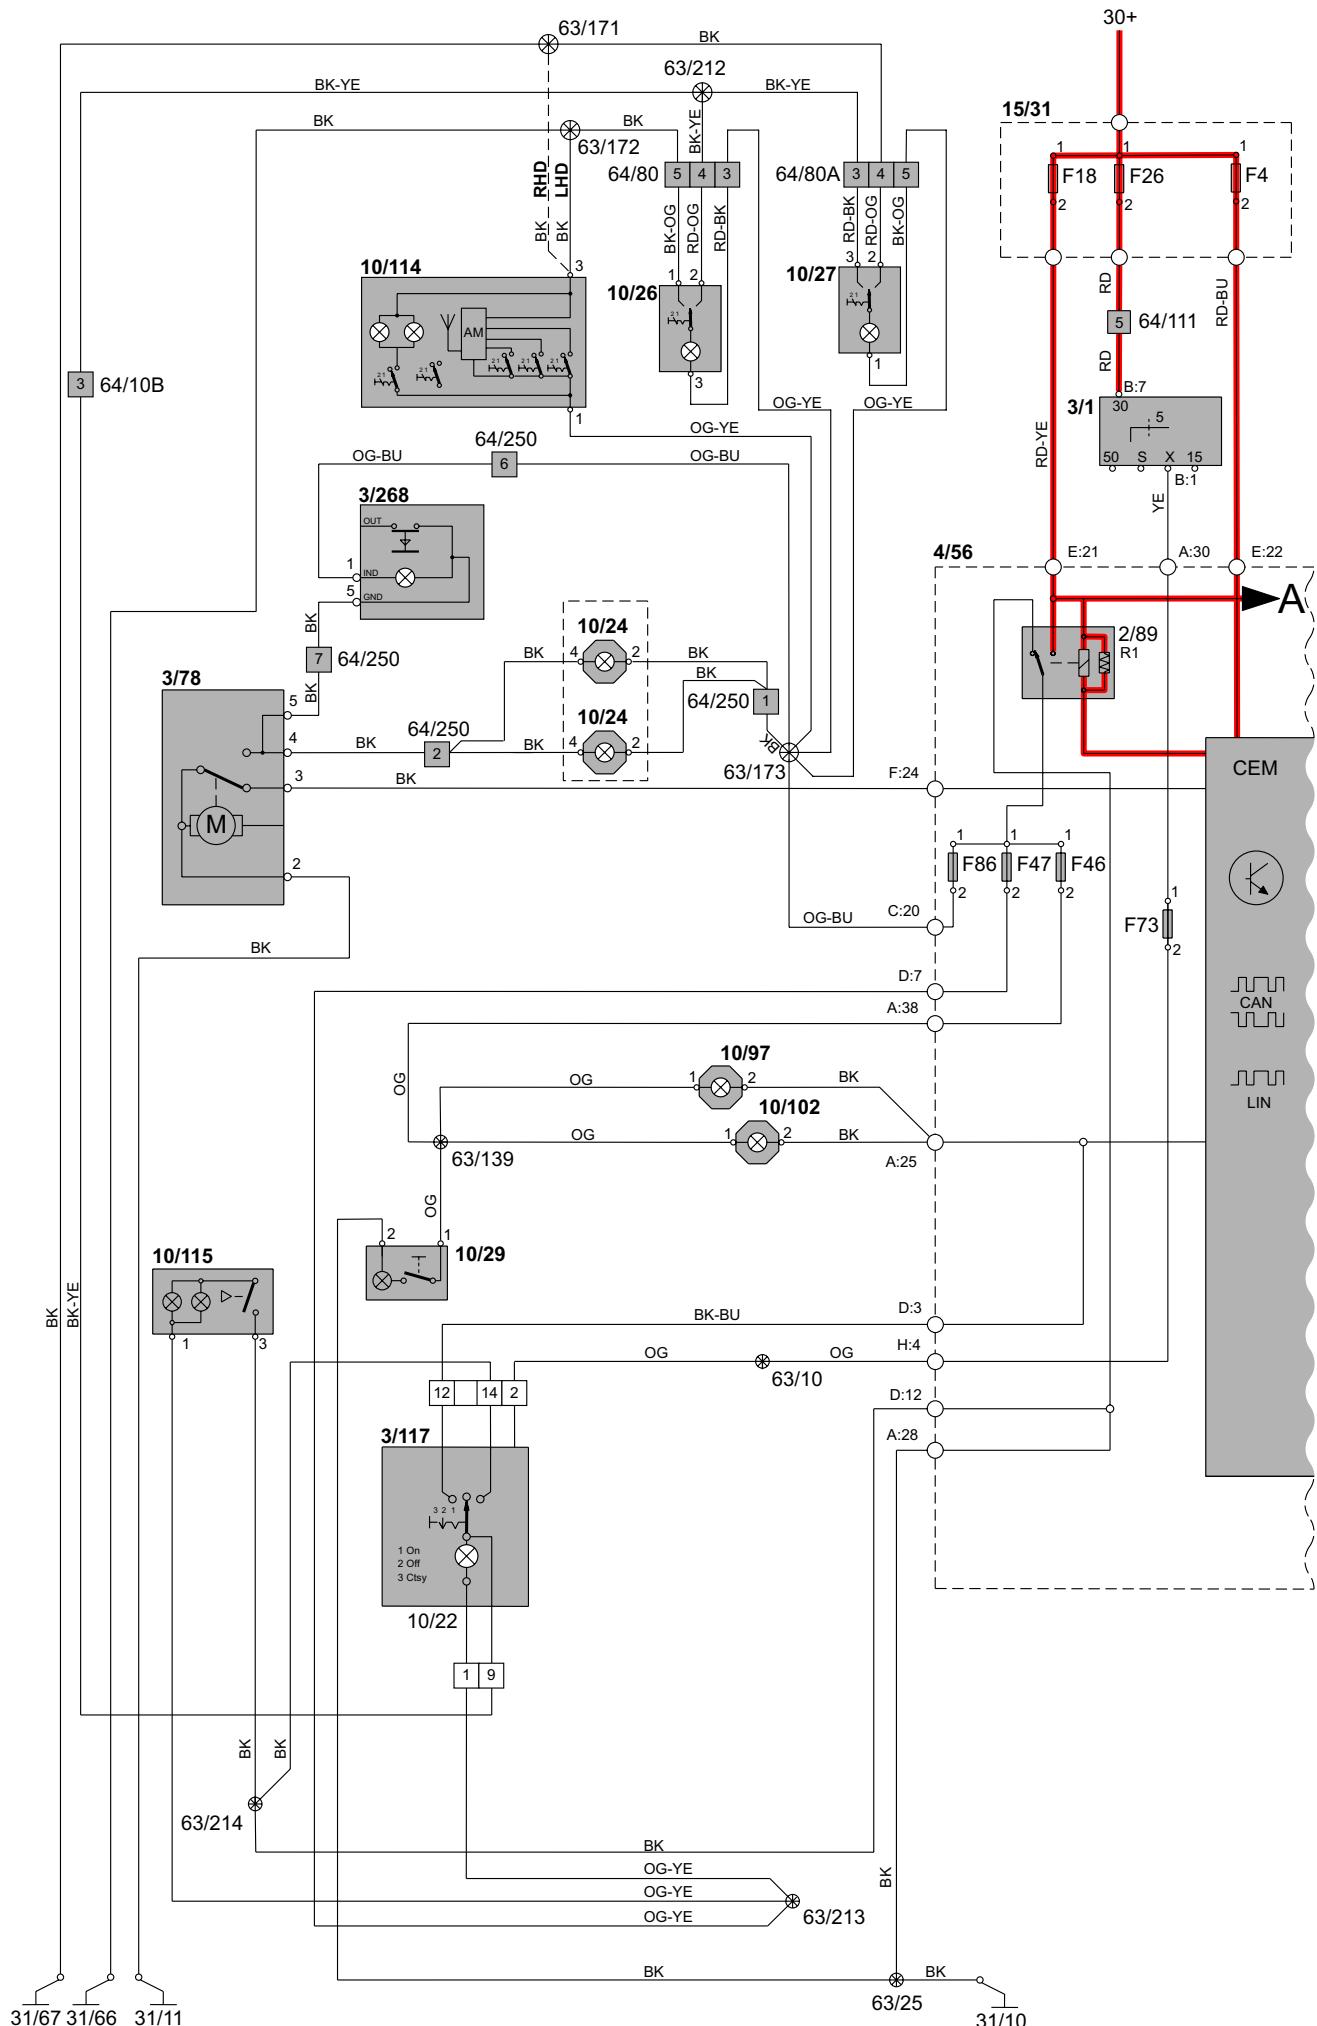


Group 35 Lighting

Interior lighting C70 2:2

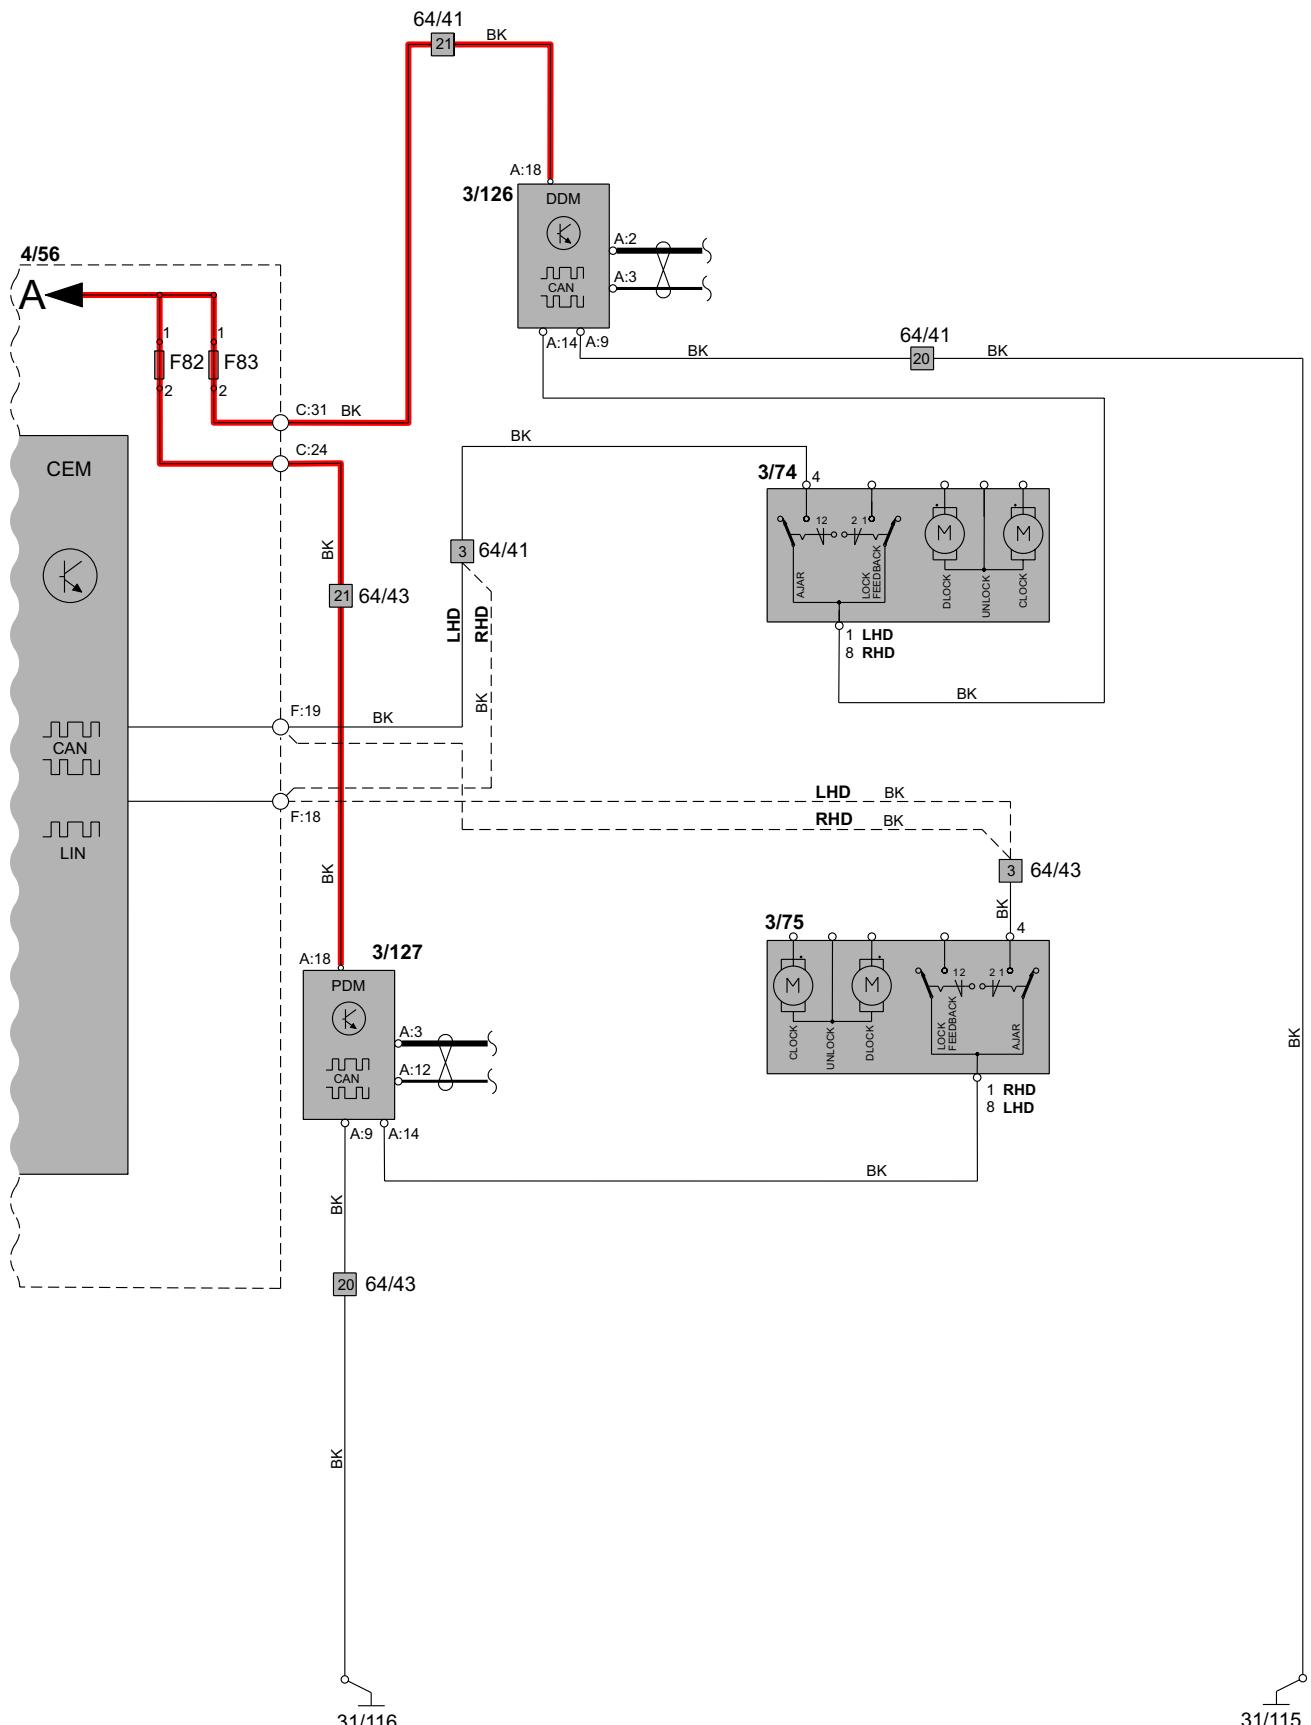


Group 35 Lighting

Instrument and control illumination

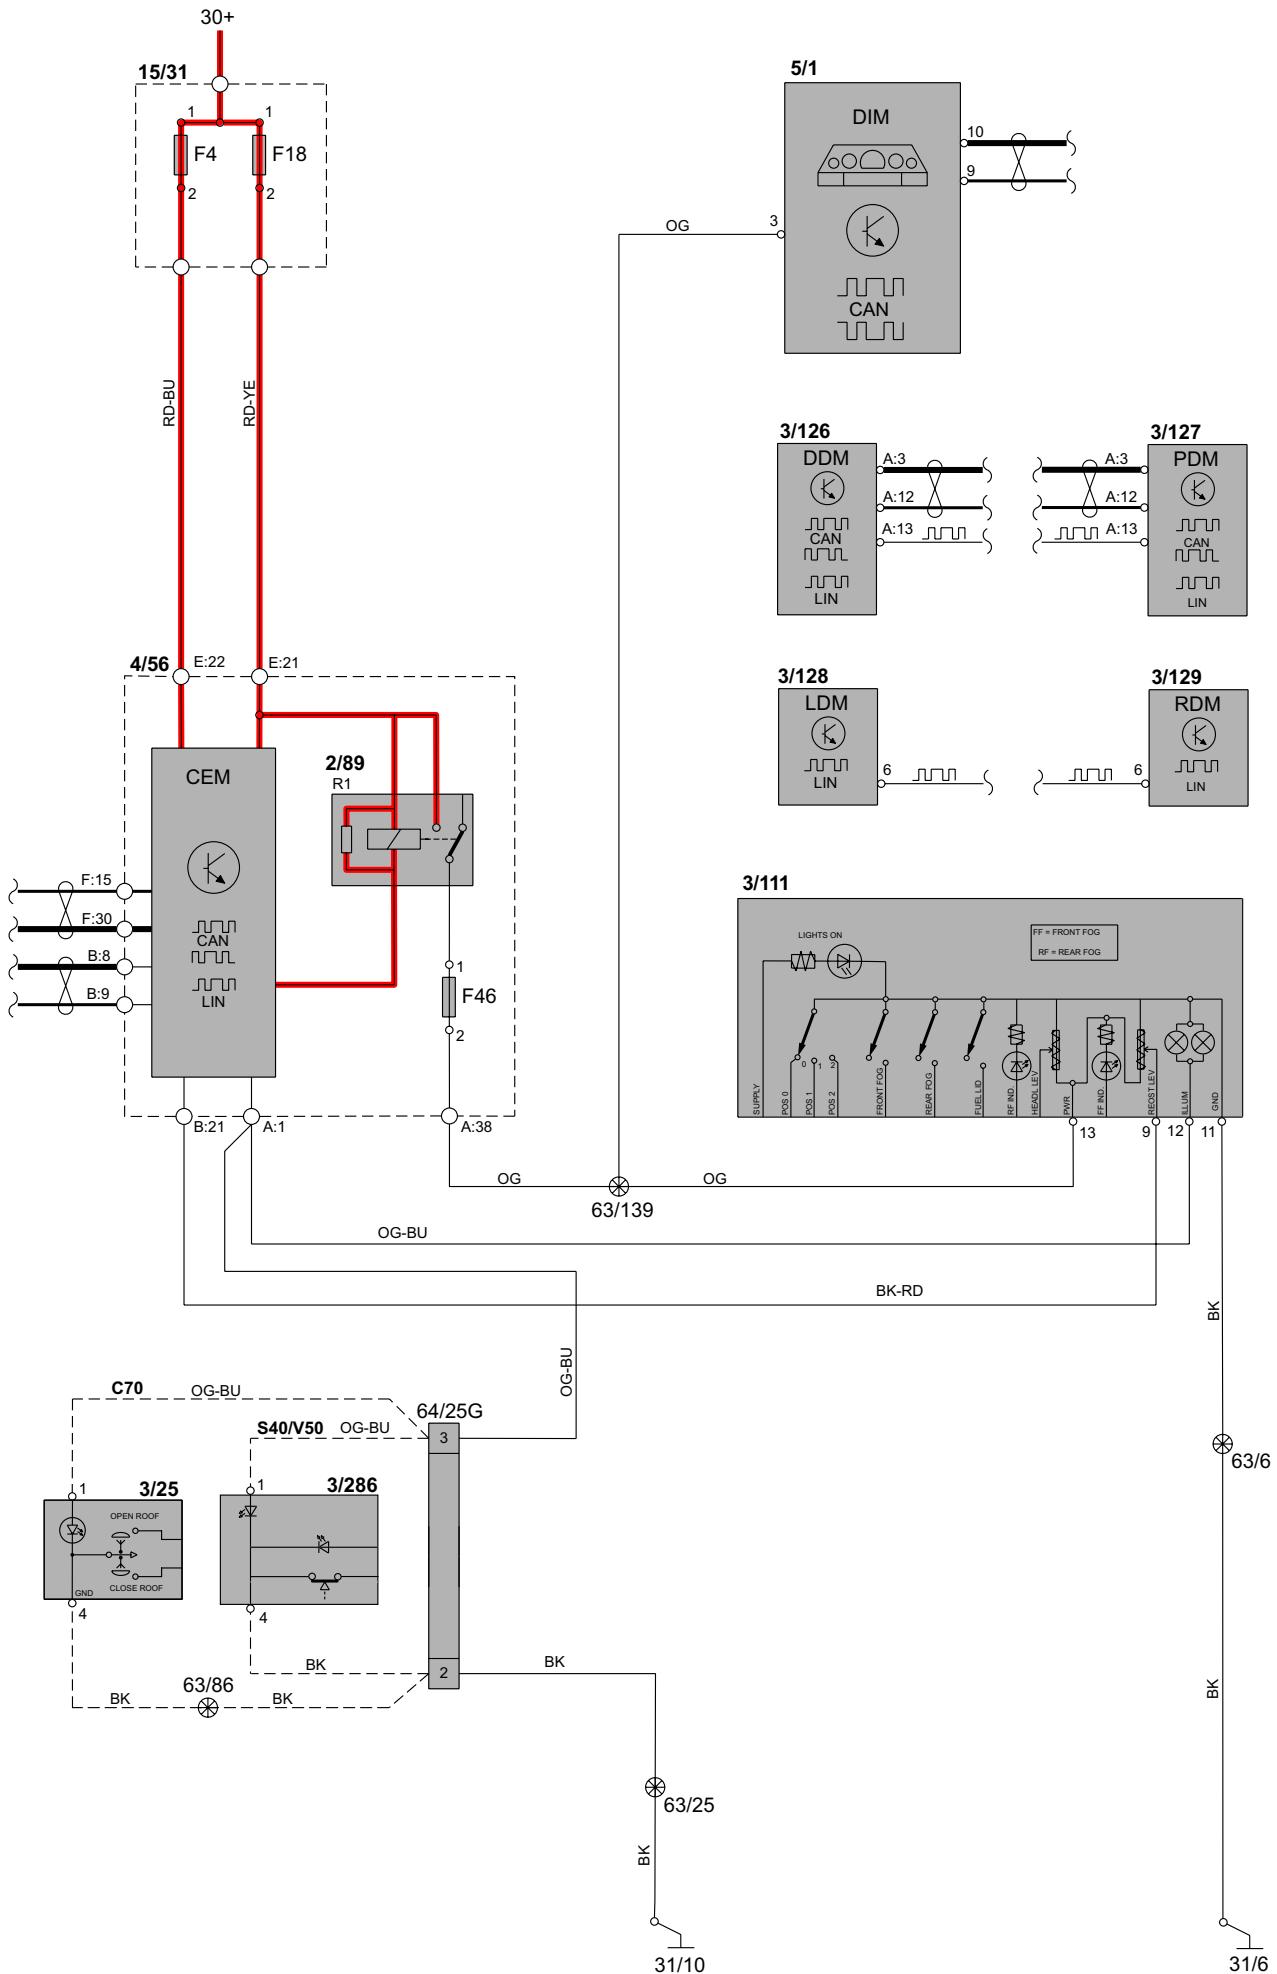


Group 35 Lighting, Accessories

Auxiliary lights

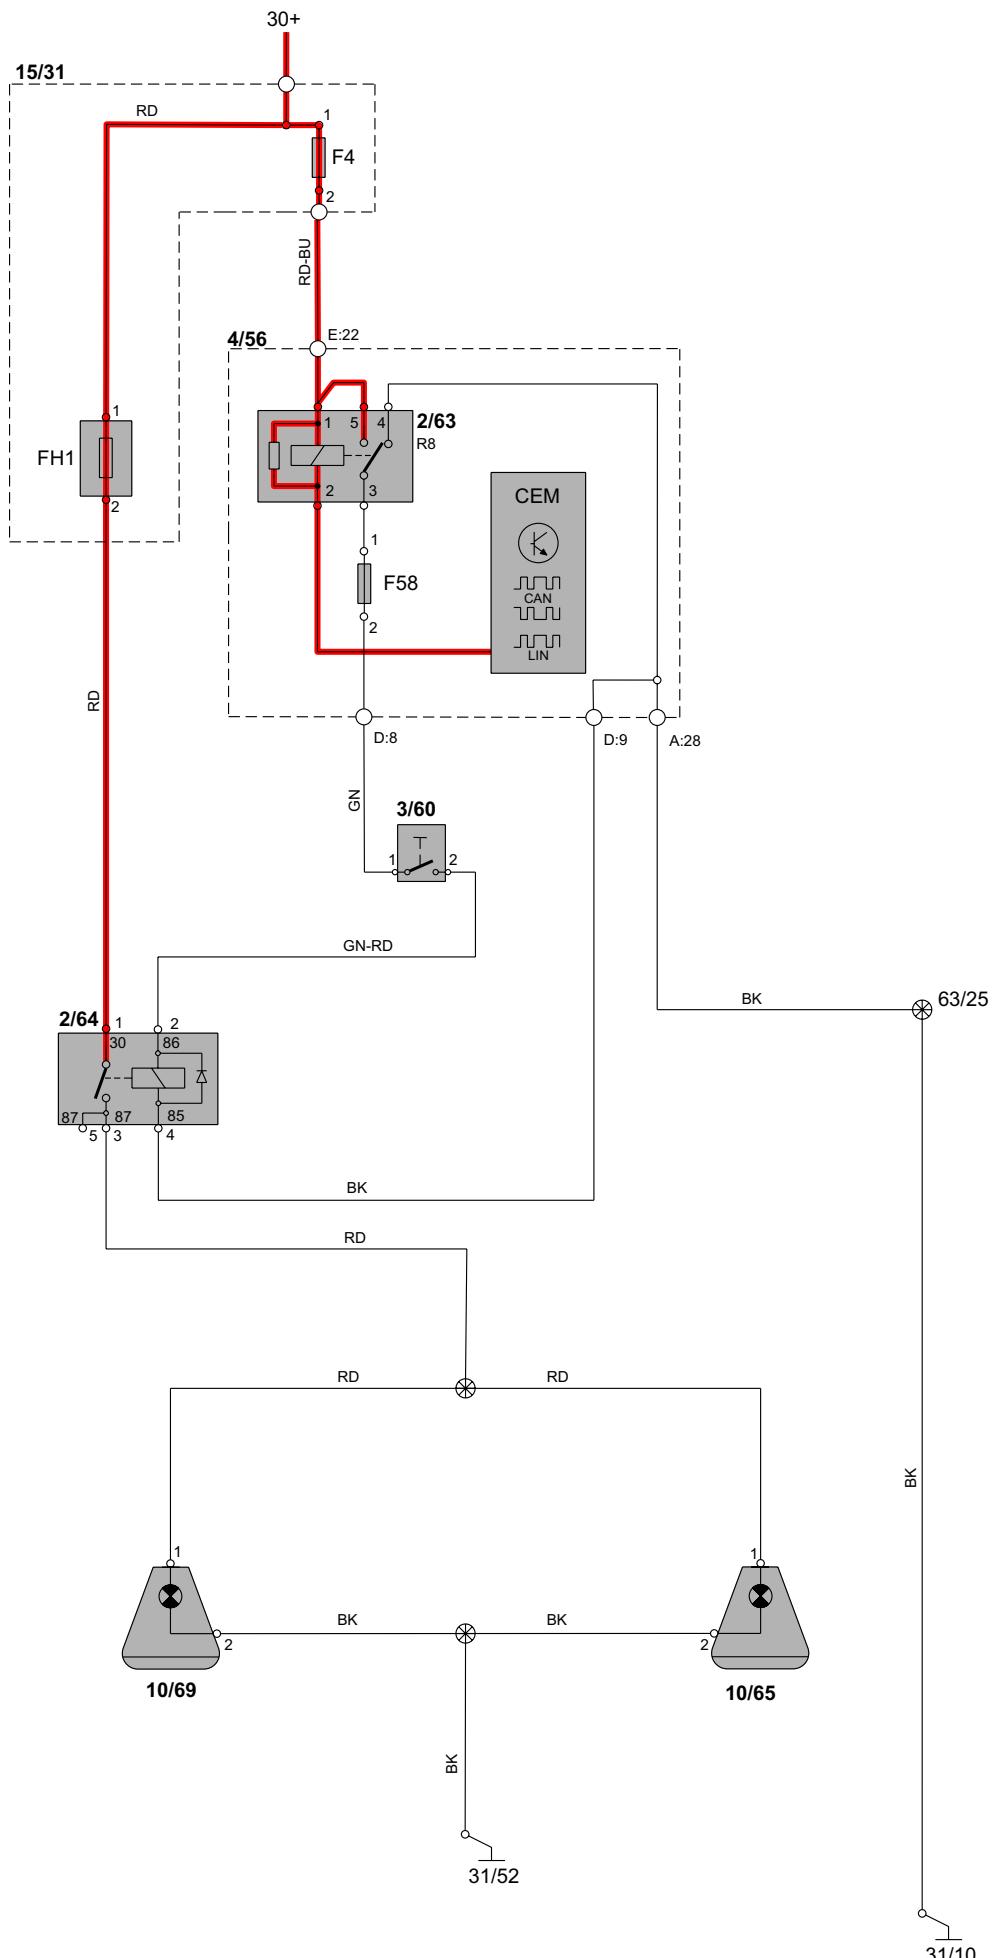


Group 36 Additional electrical equipment

Direction indicators and hazard warning flashers S40/V50

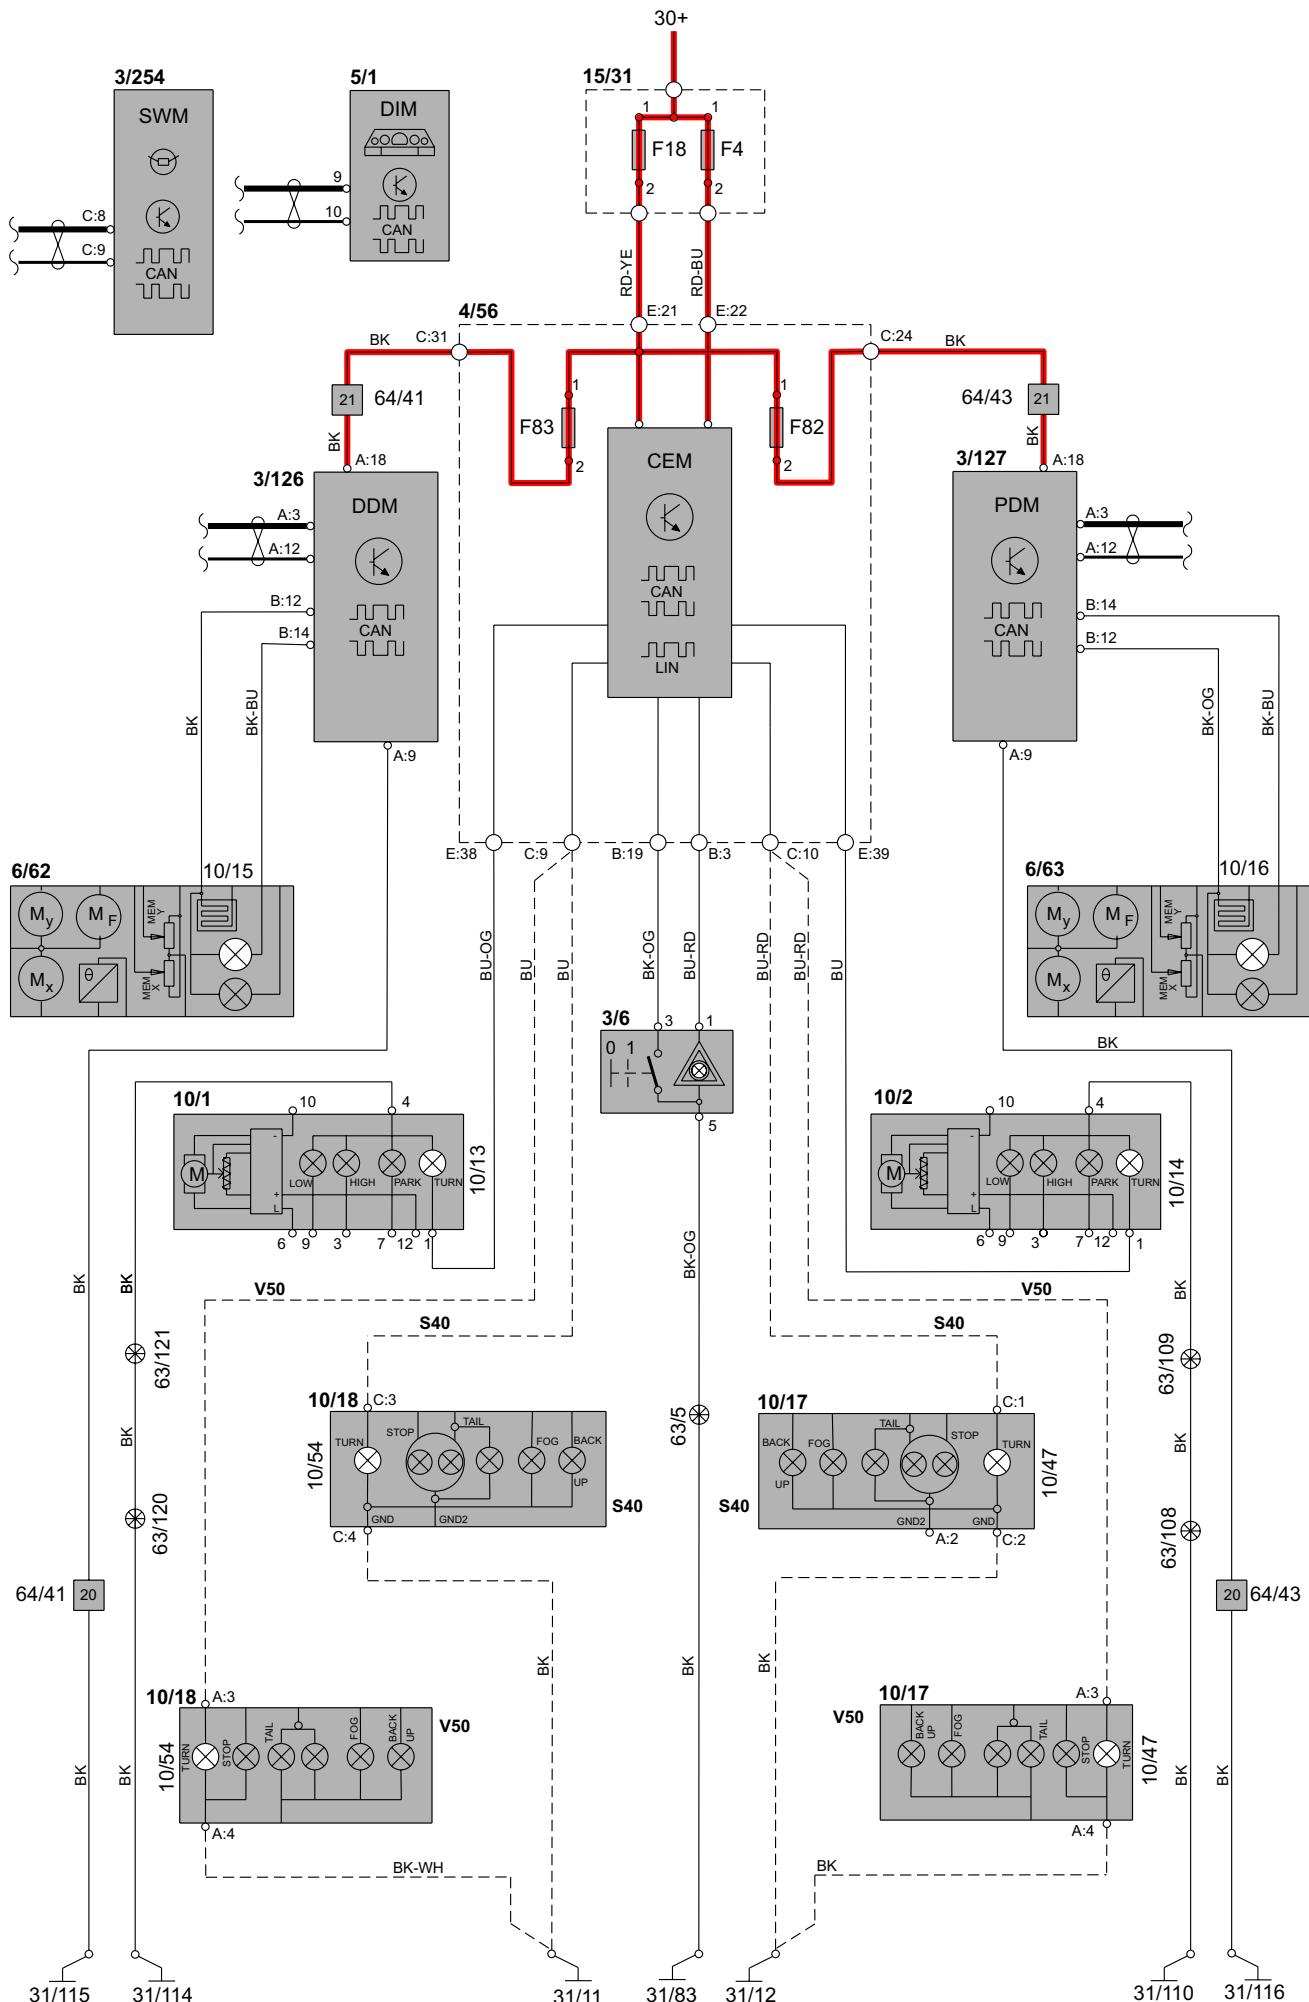


Group 36 Additional electrical equipment

Direction indicators and hazard warning flashers (Bi-Xenon) S40/V50

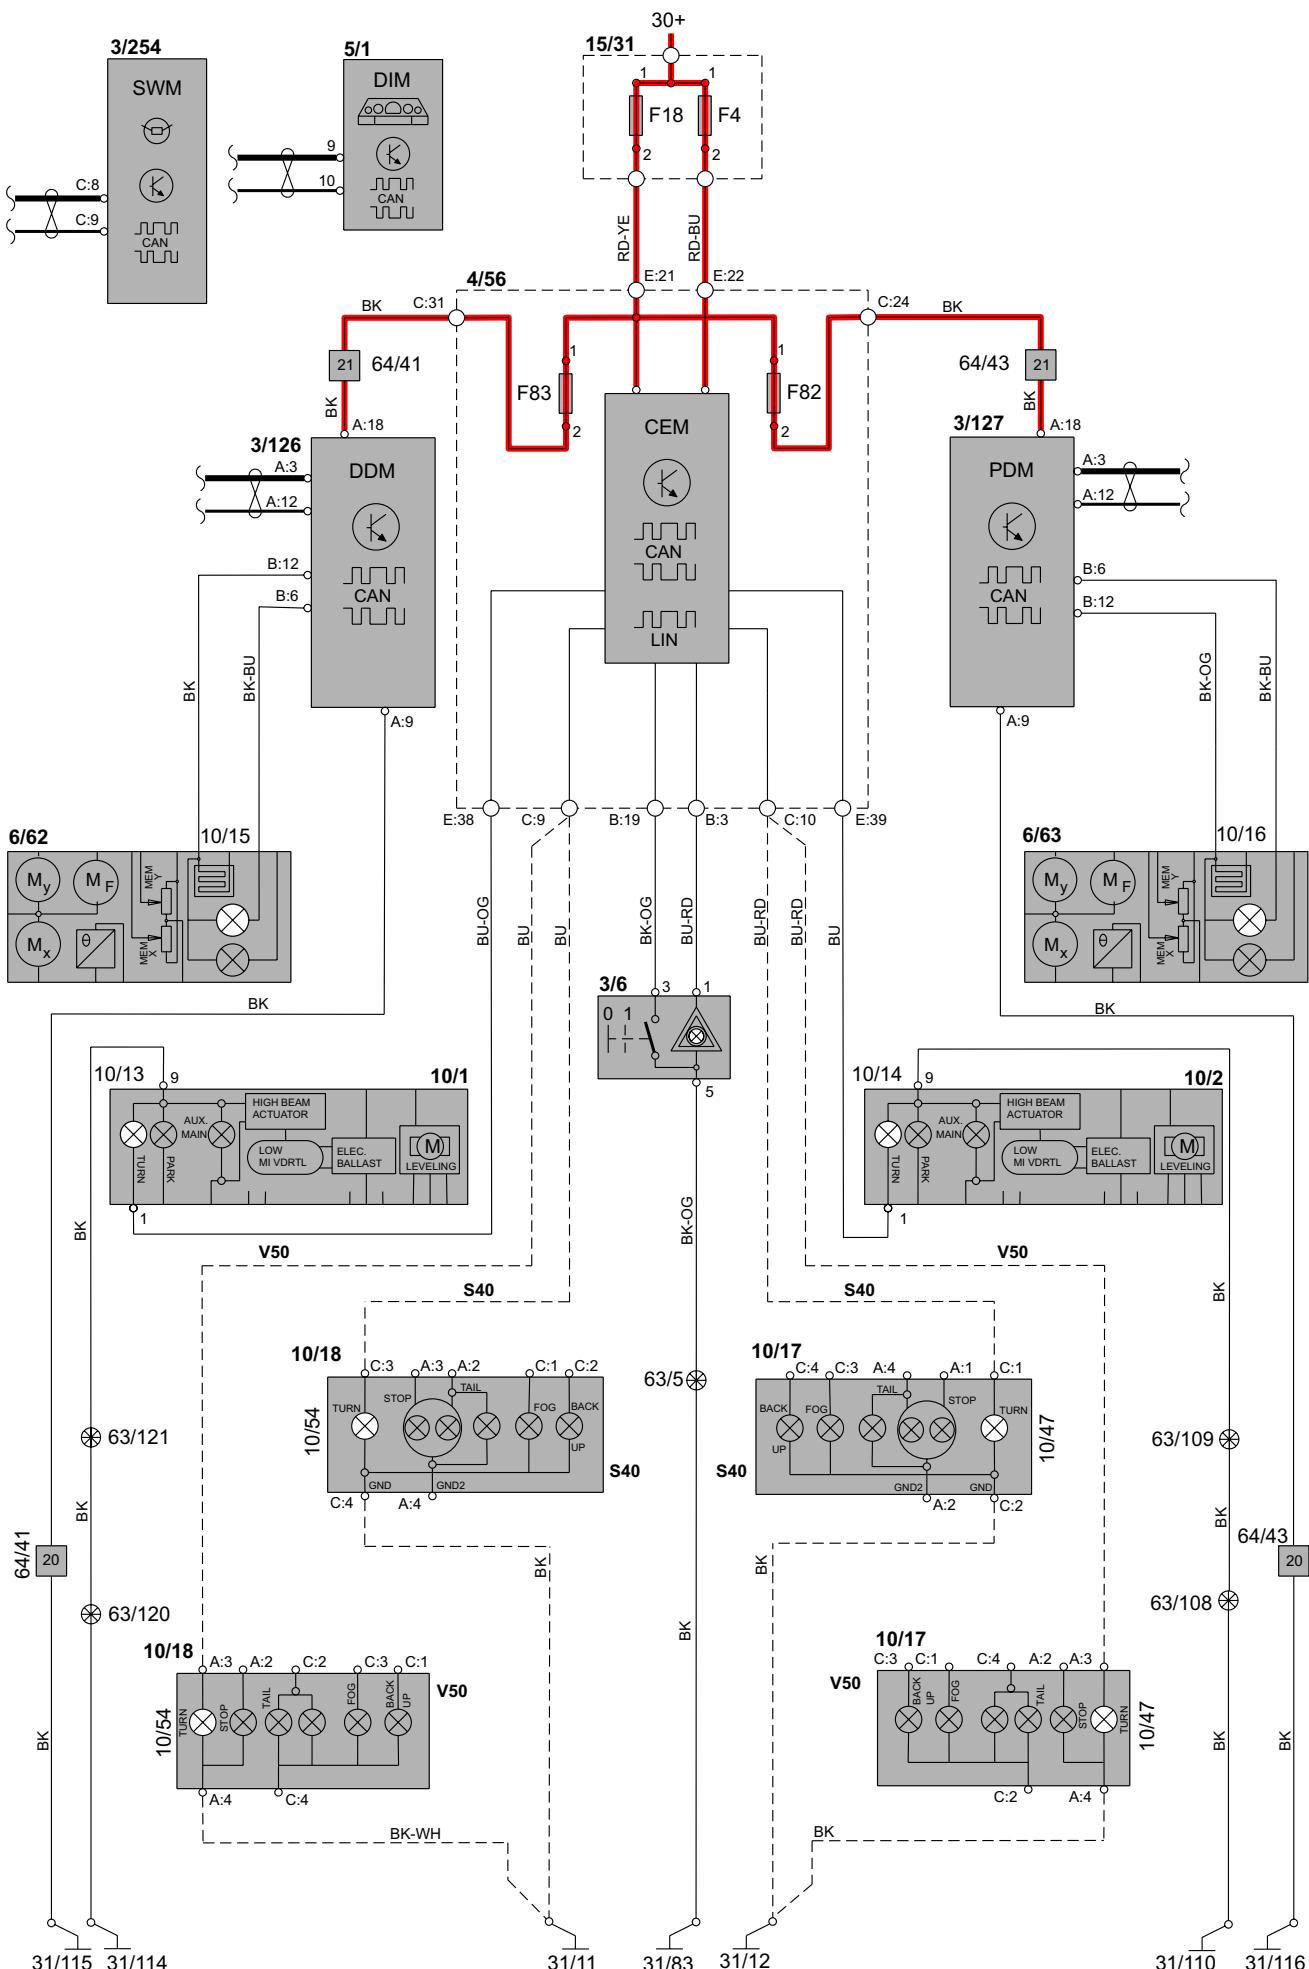


Group 36 Additional electrical equipment

Direction indicators and hazard warning flashers C70

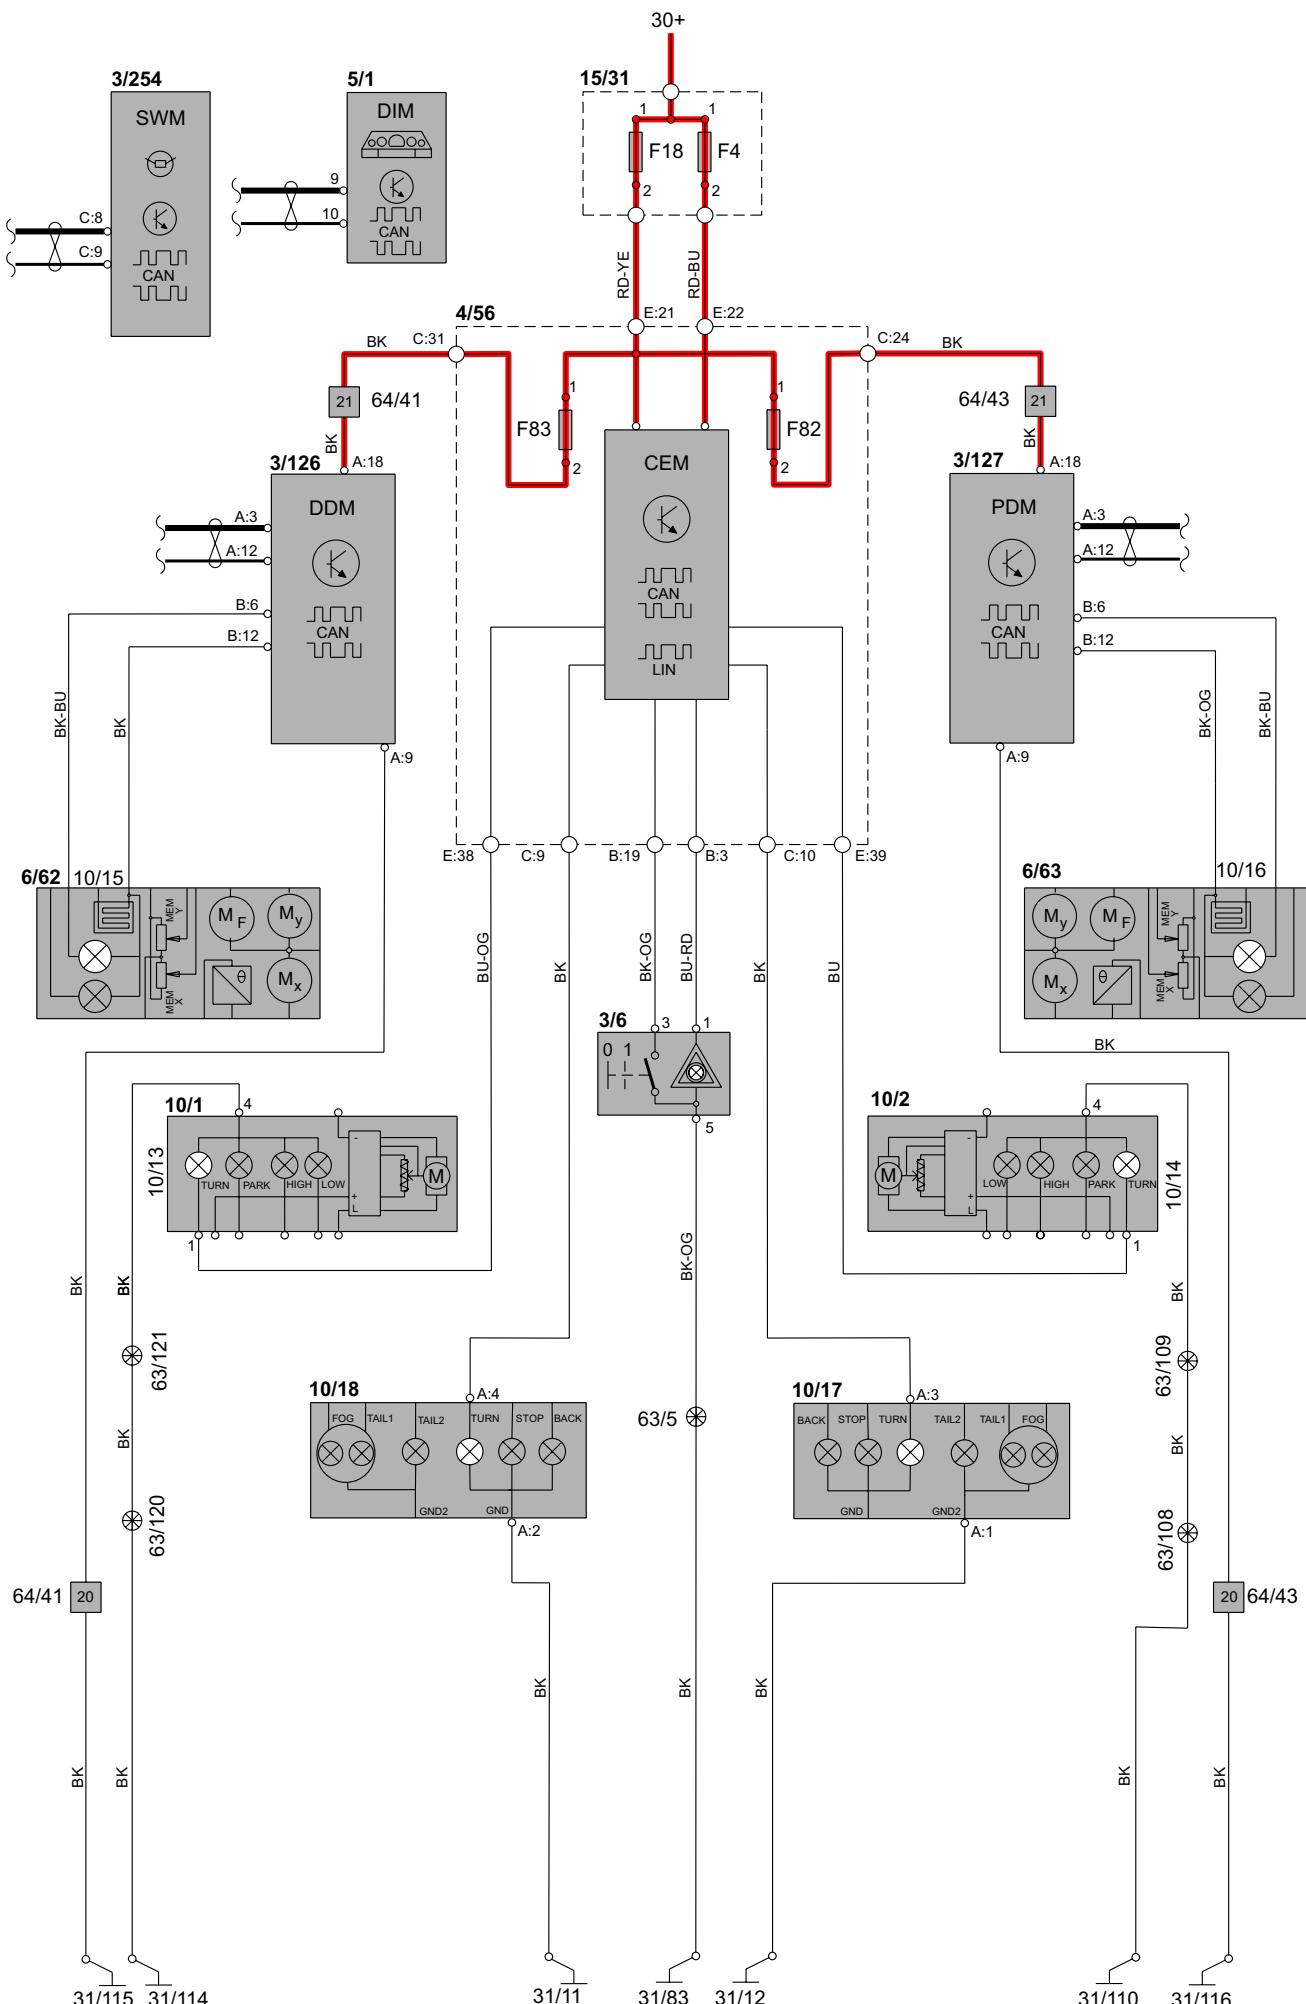


Group 36 Additional electrical equipment

Direction indicators and hazard warning flashers (Bi-Xenon) C70

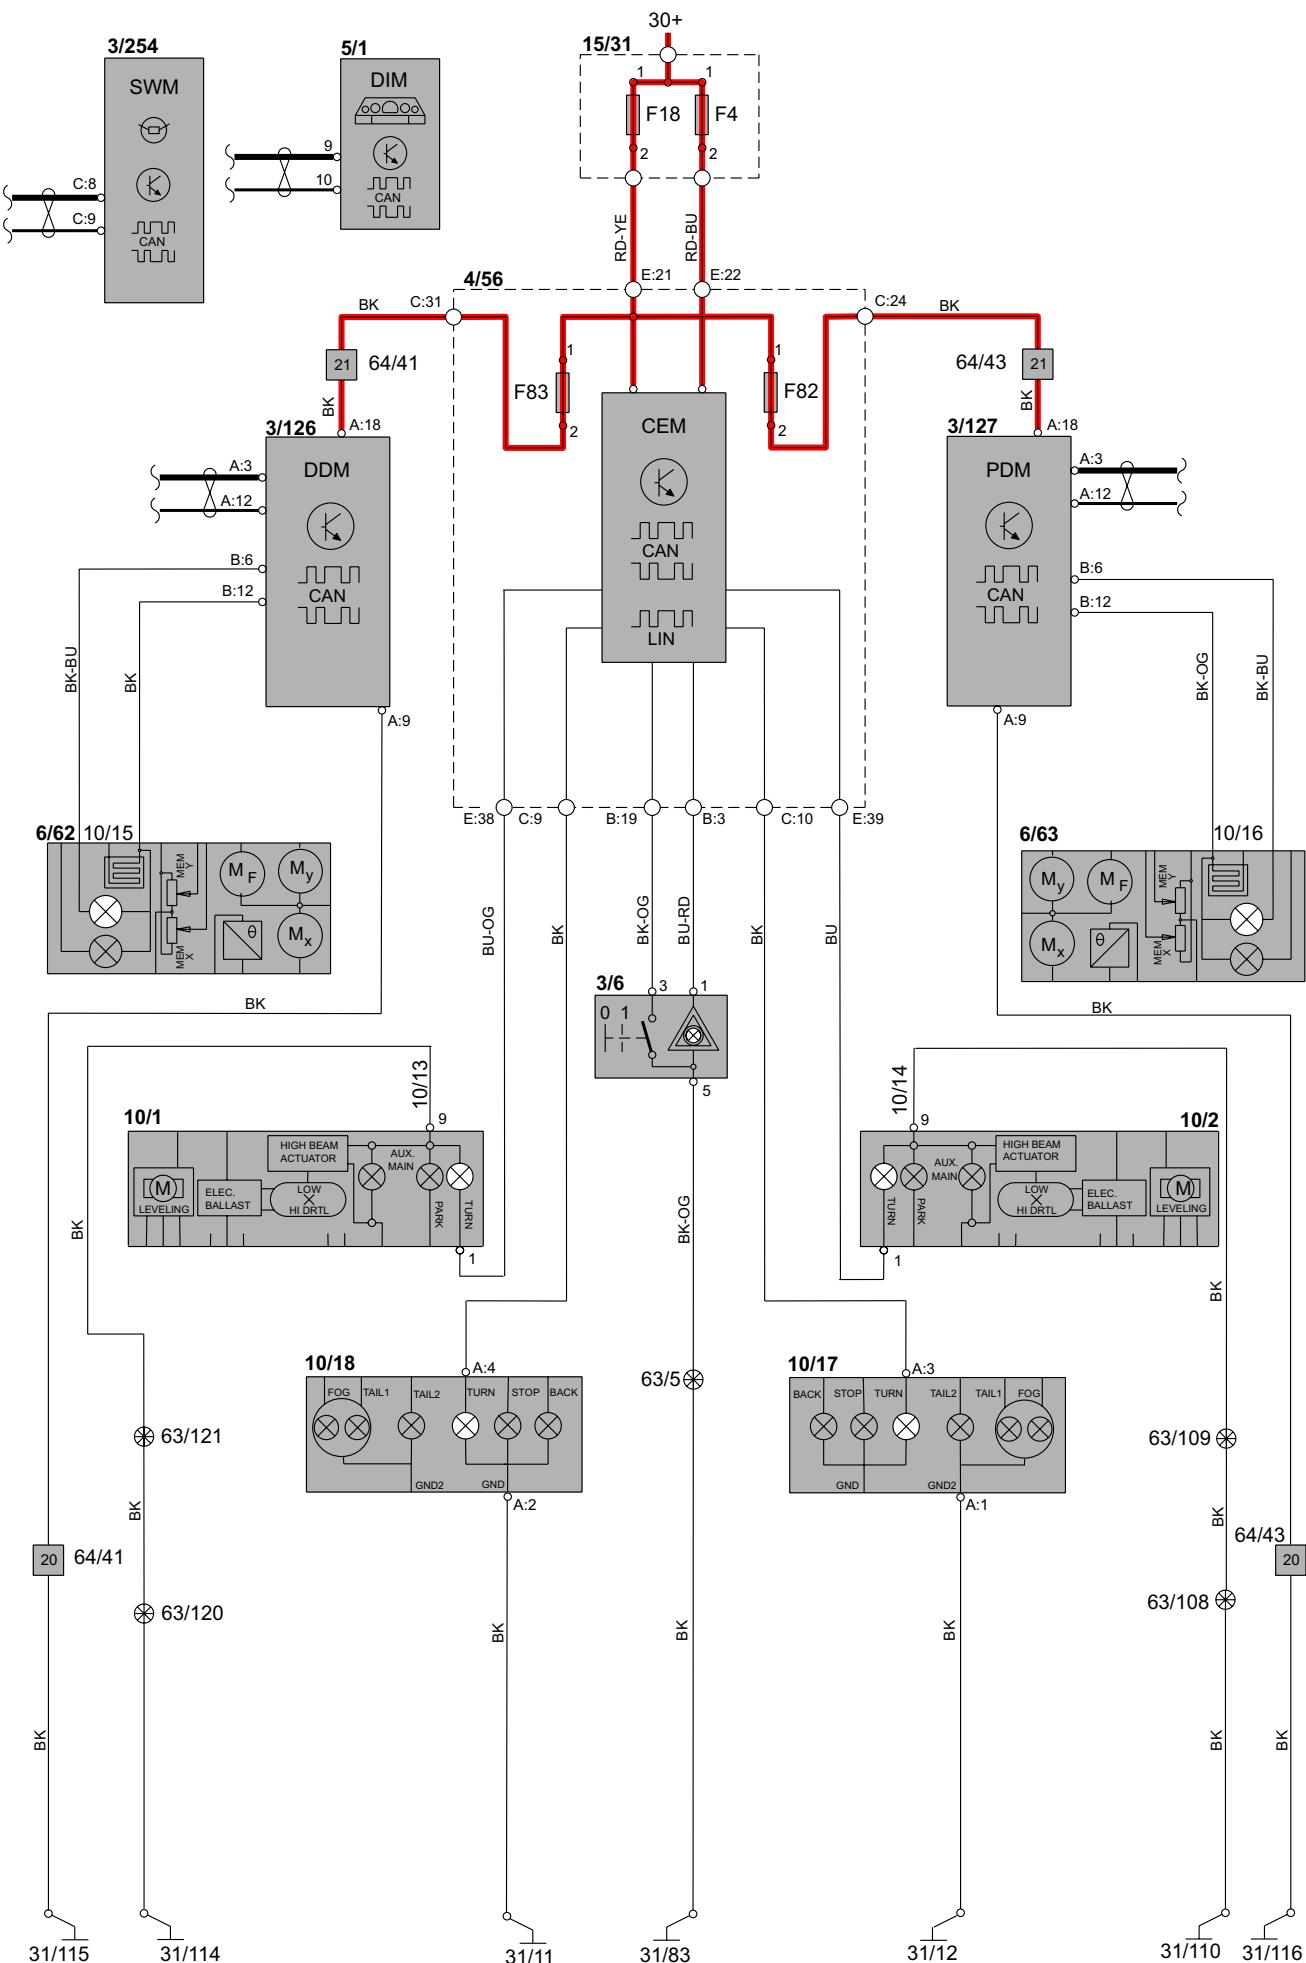


Group 36 Additional electrical equipment

Windshield wiper/washer

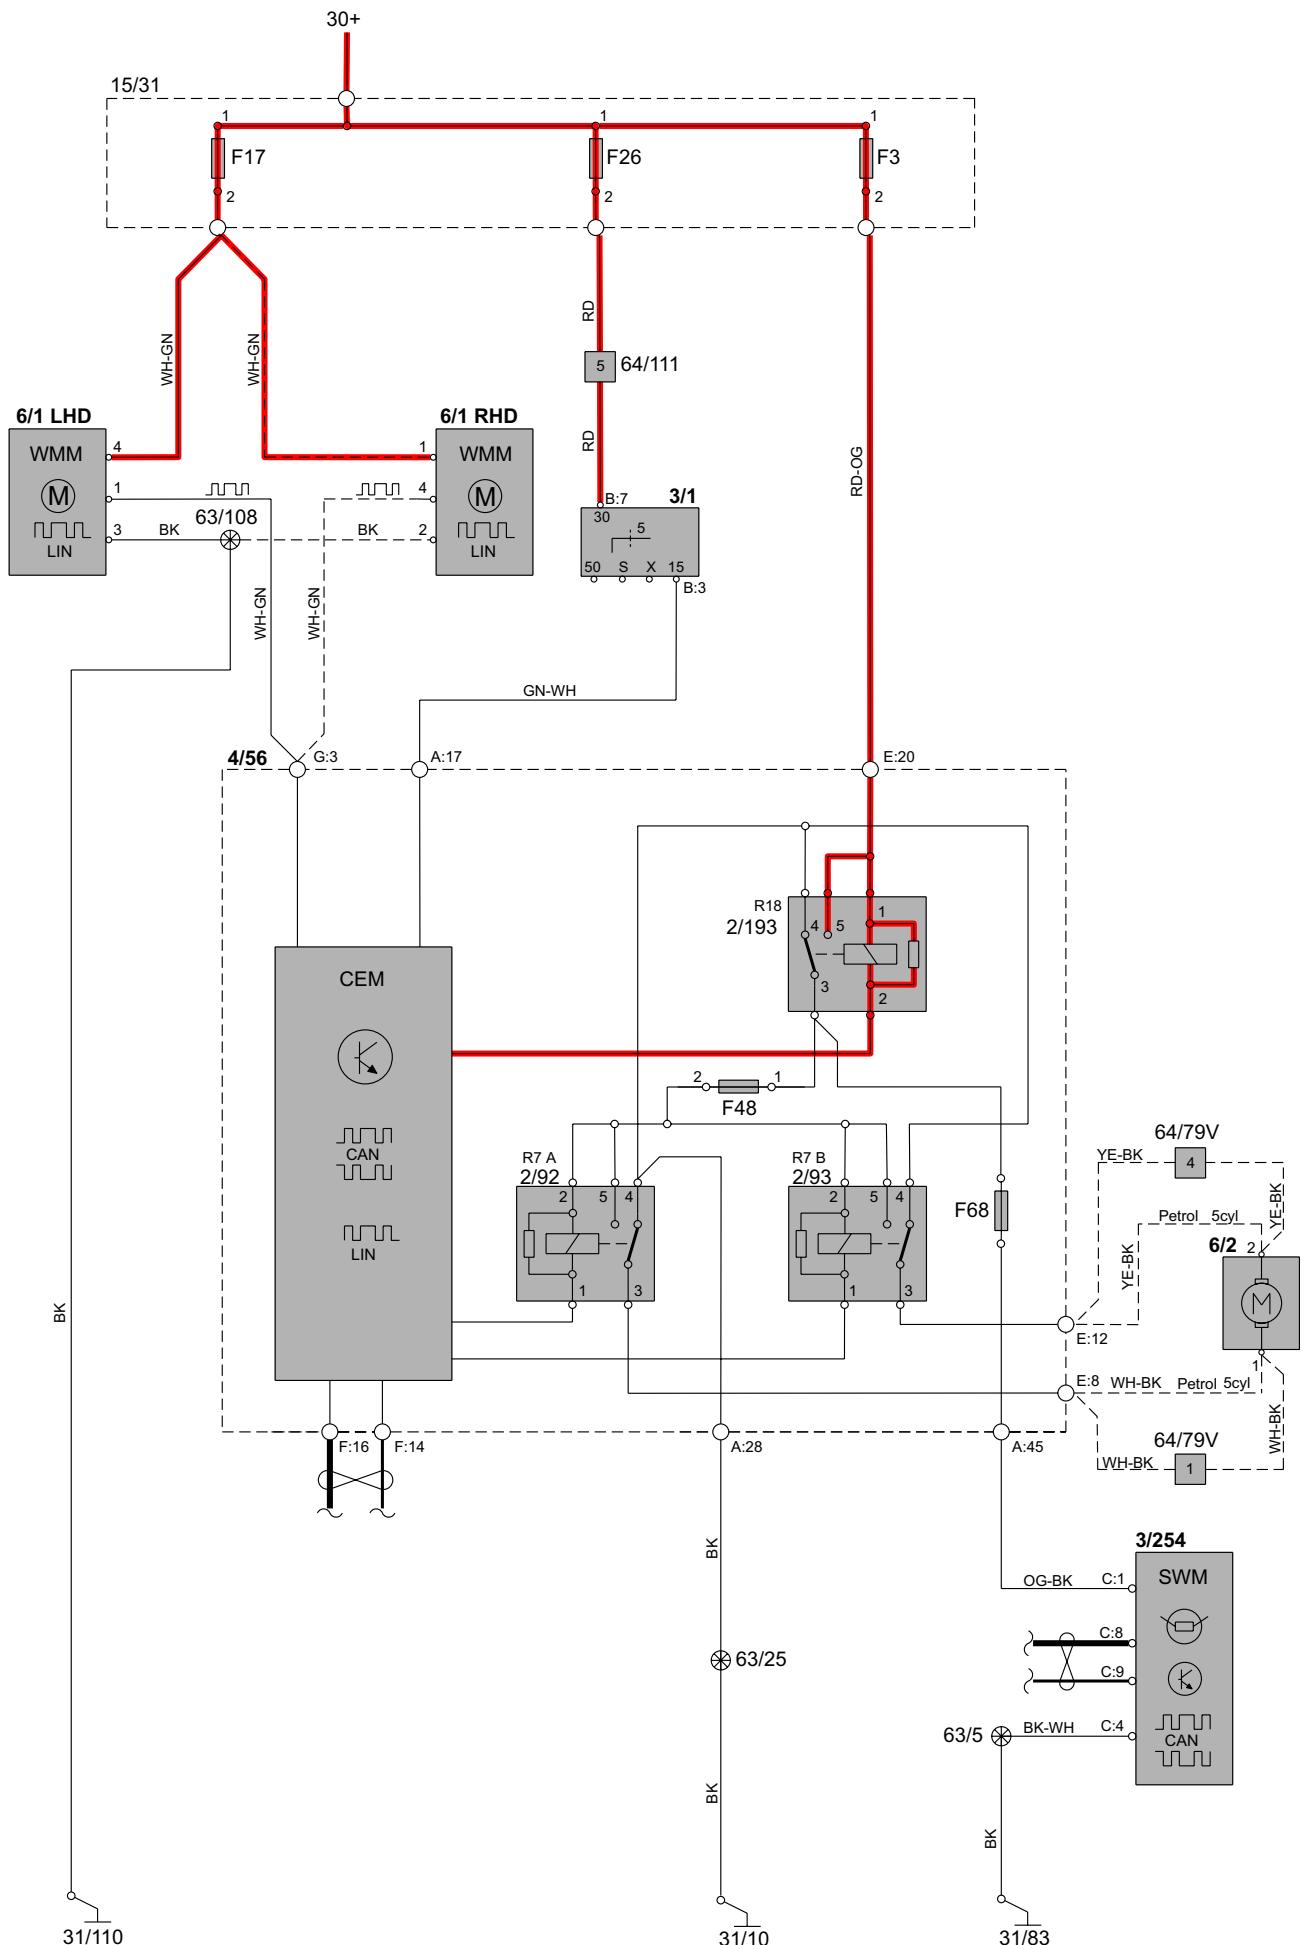


Group 36 Additional electrical equipment

Headlight washer

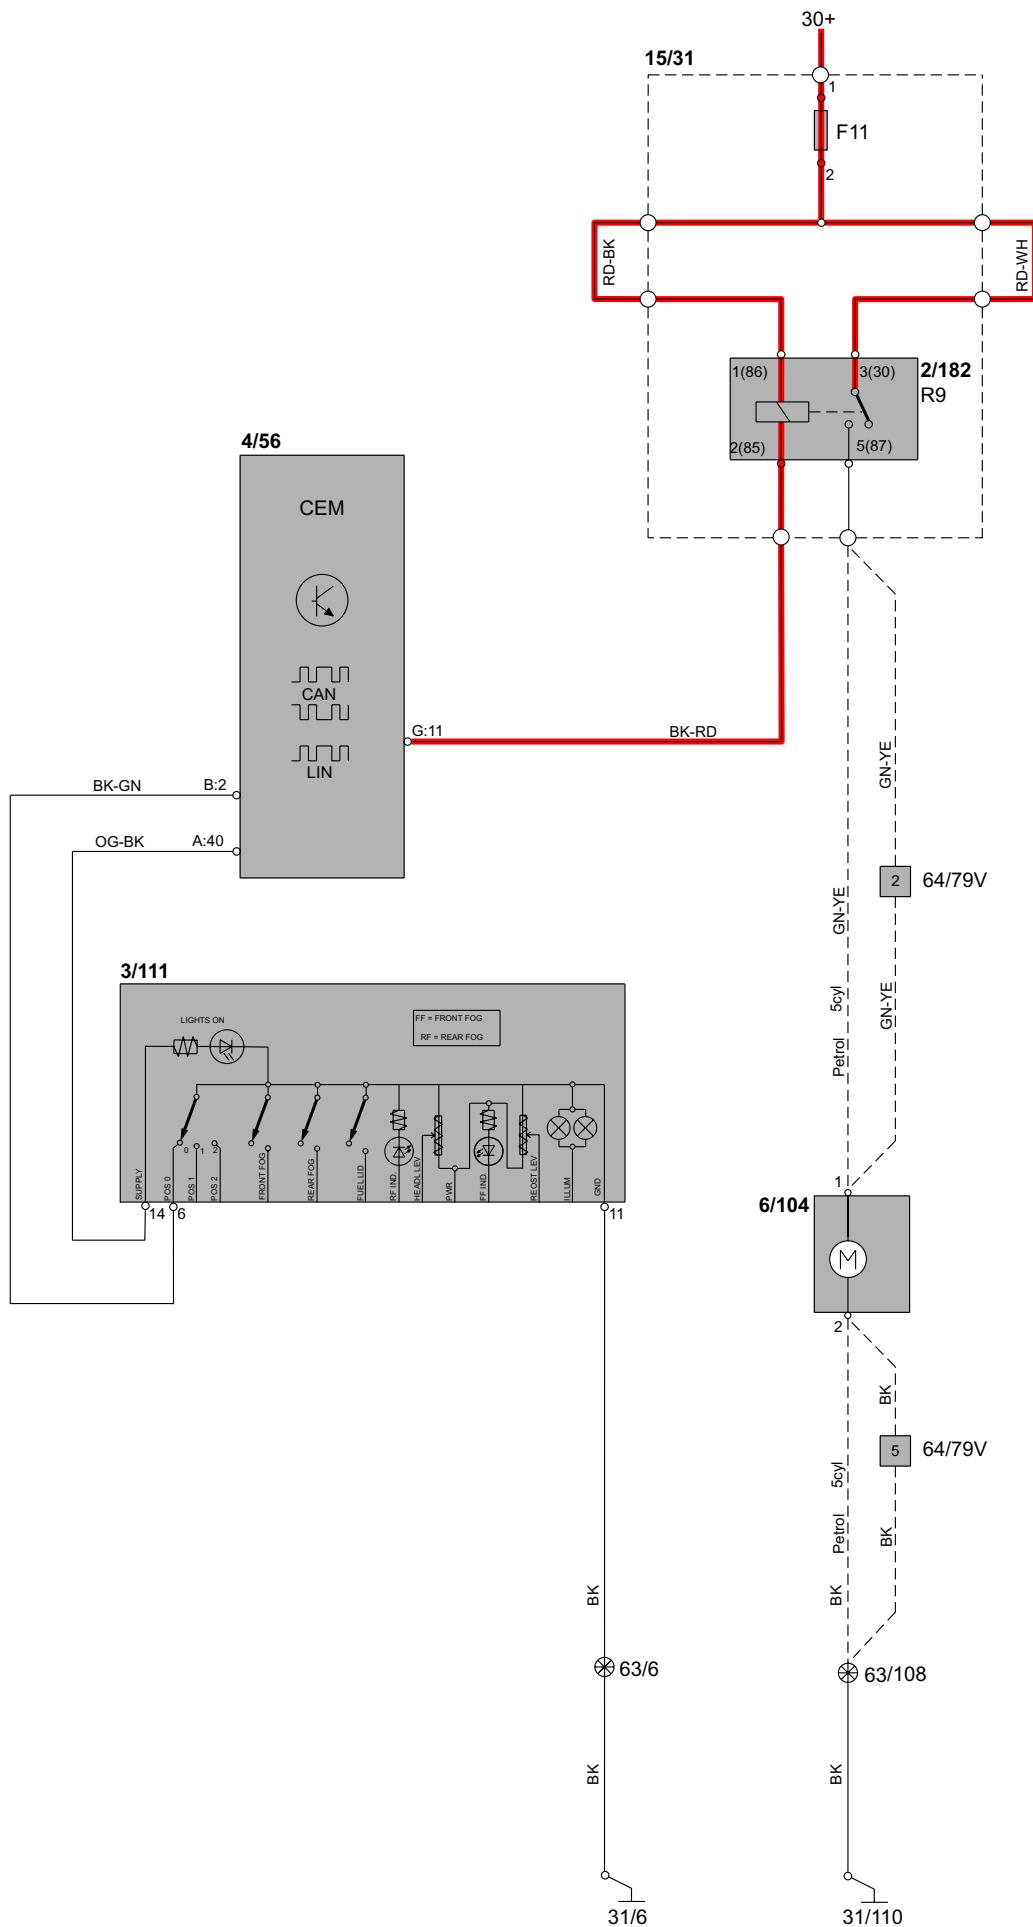


Group 36 Additional electrical equipment Rear window wiper/washer V50

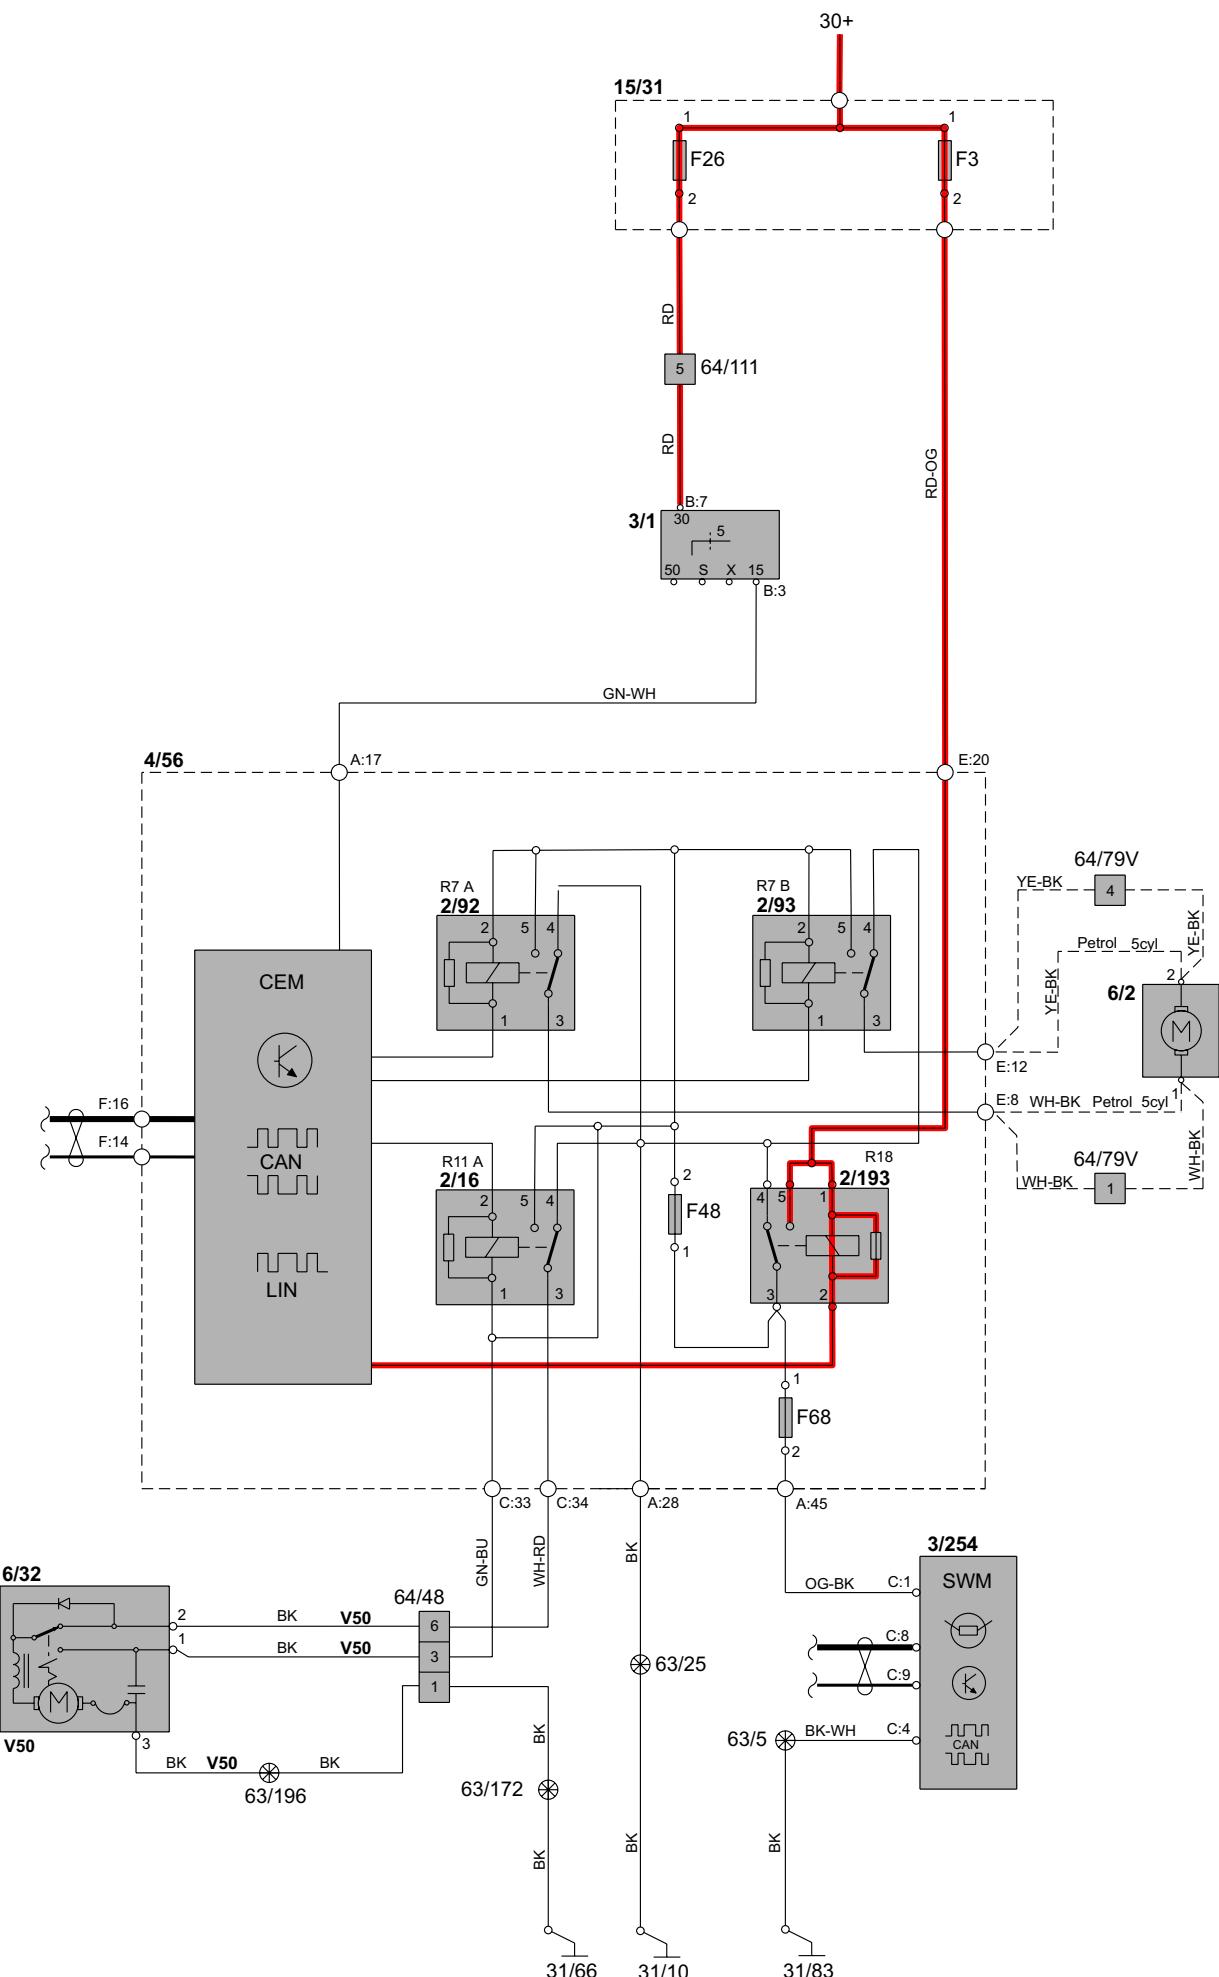


Group 36 Additional electrical equipment

Rain sensor

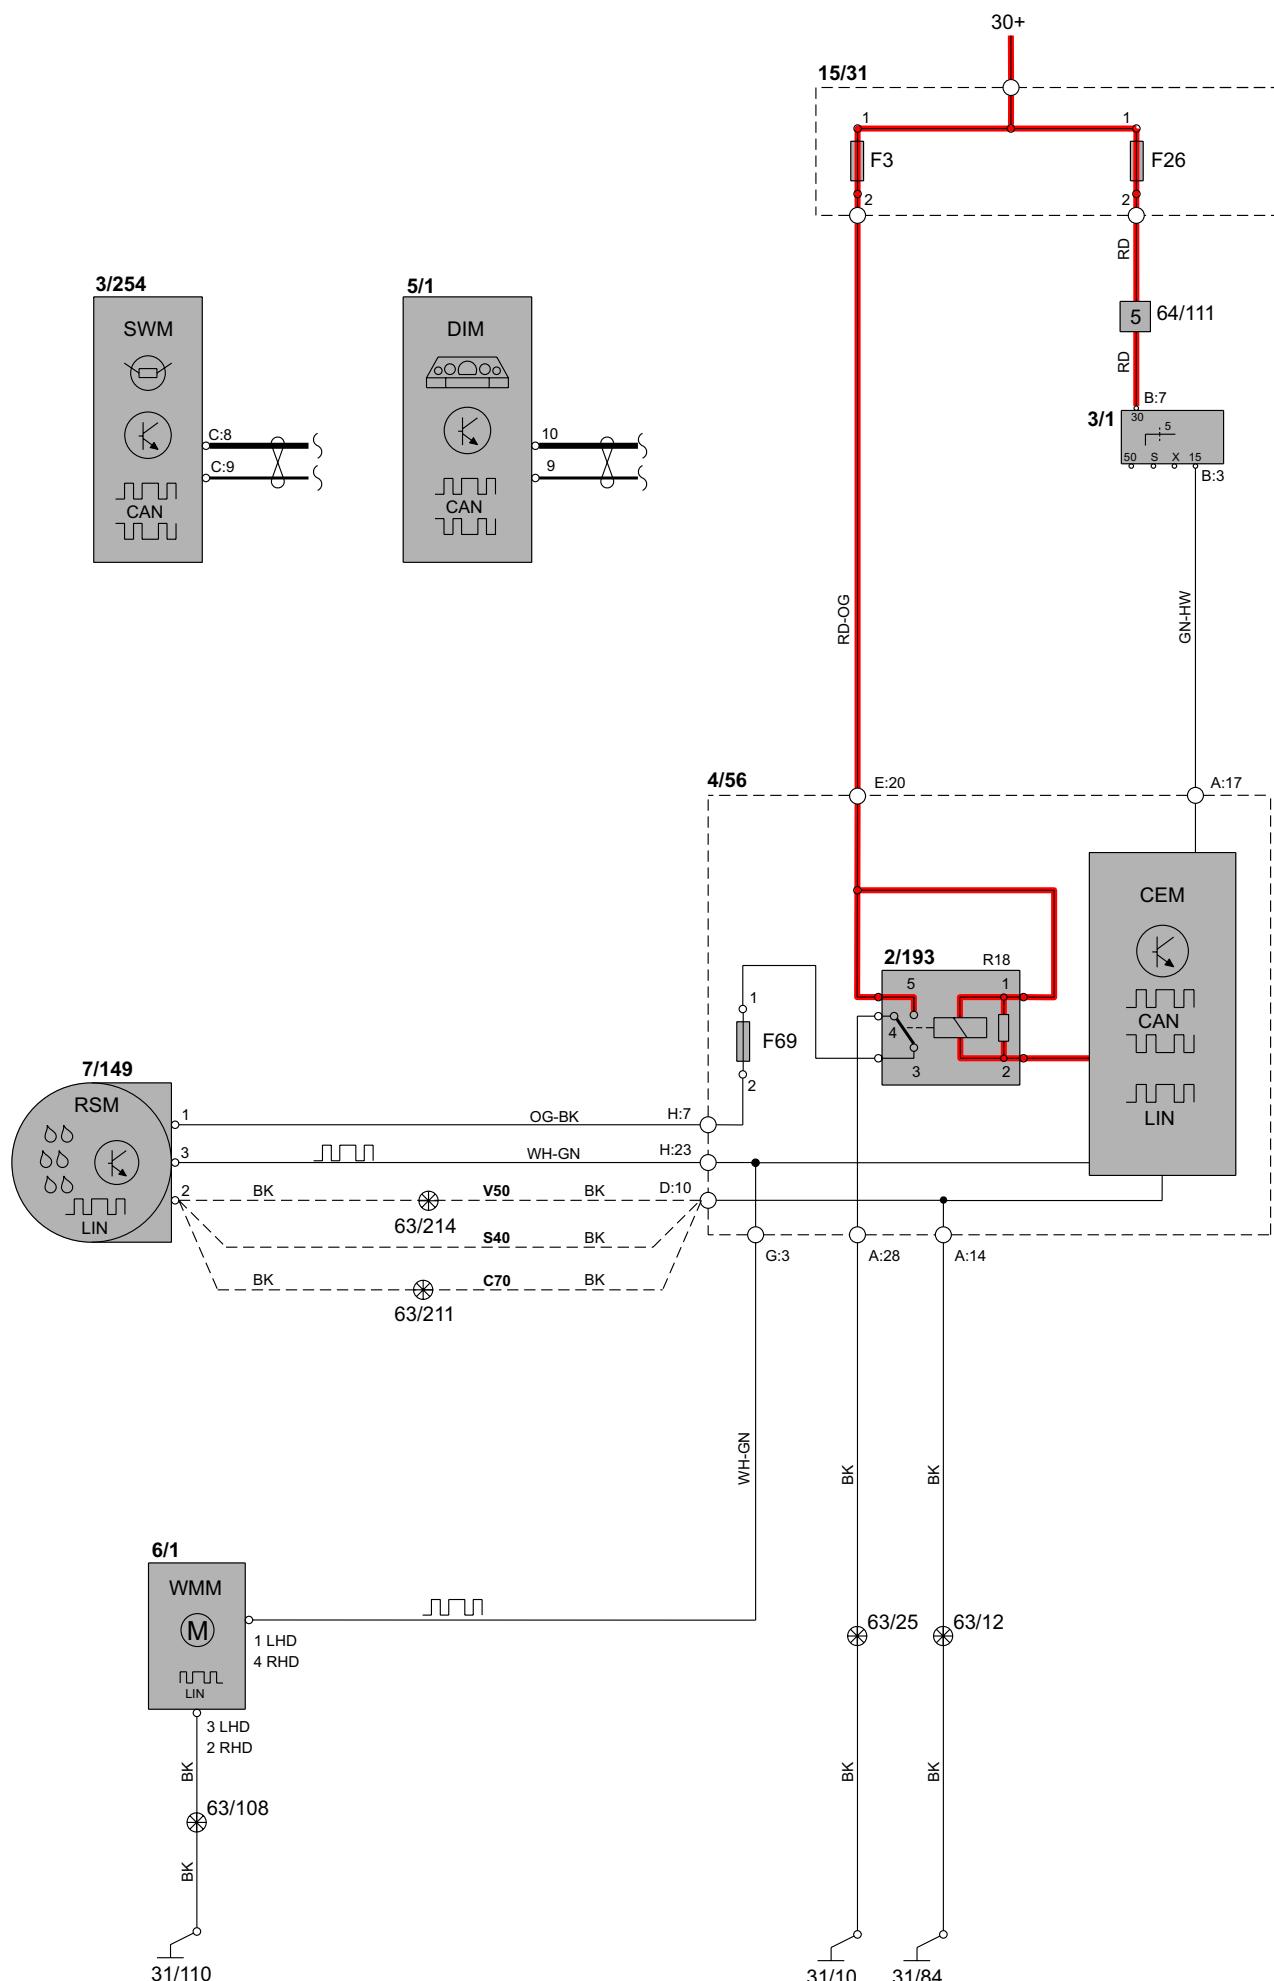


Group 36 Additional electrical equipment

Horn

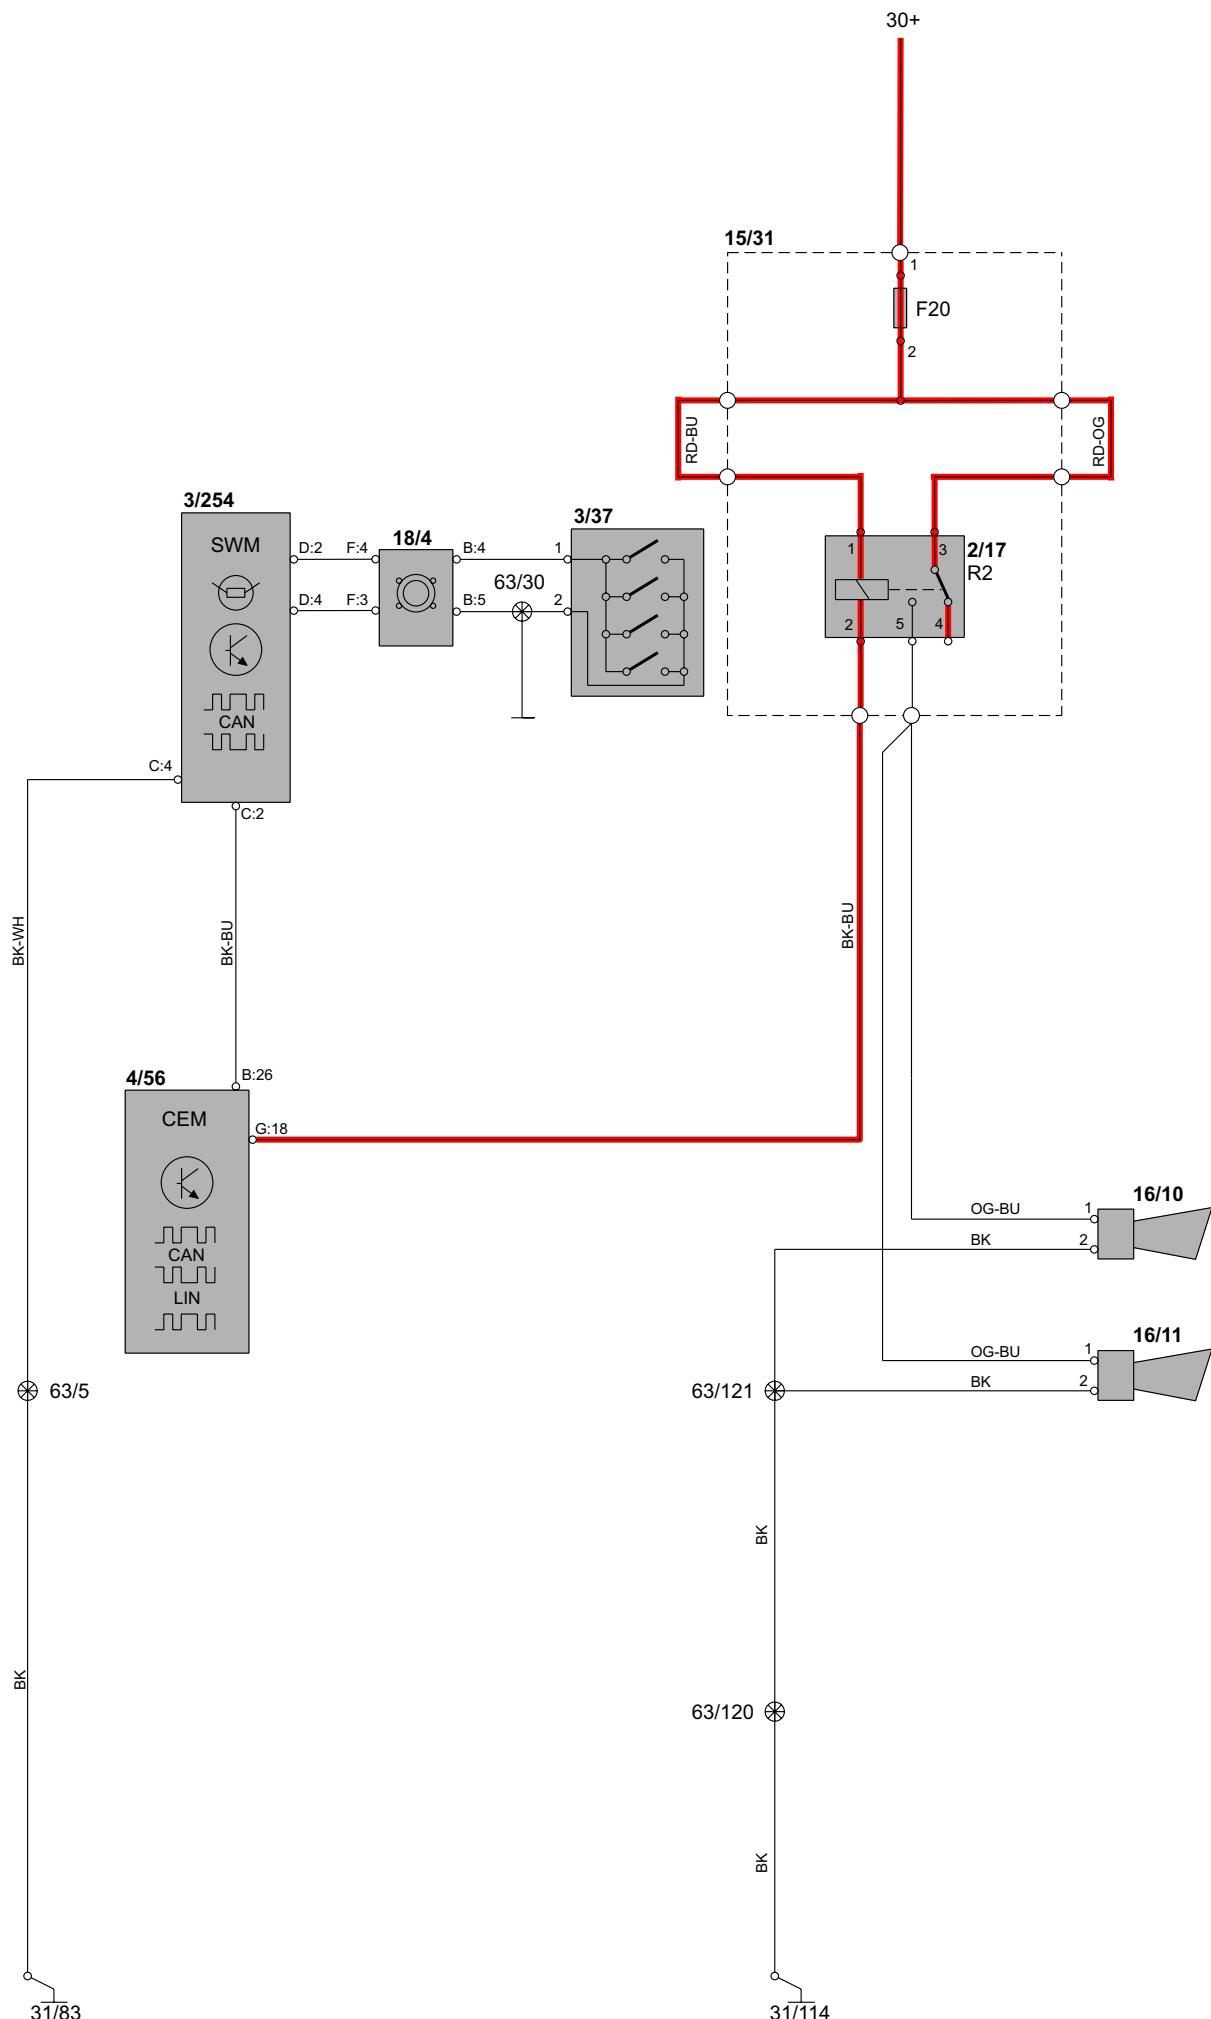


Group 36 Additional electrical equipment

Immobilizer/Steering column lock module (SCL)

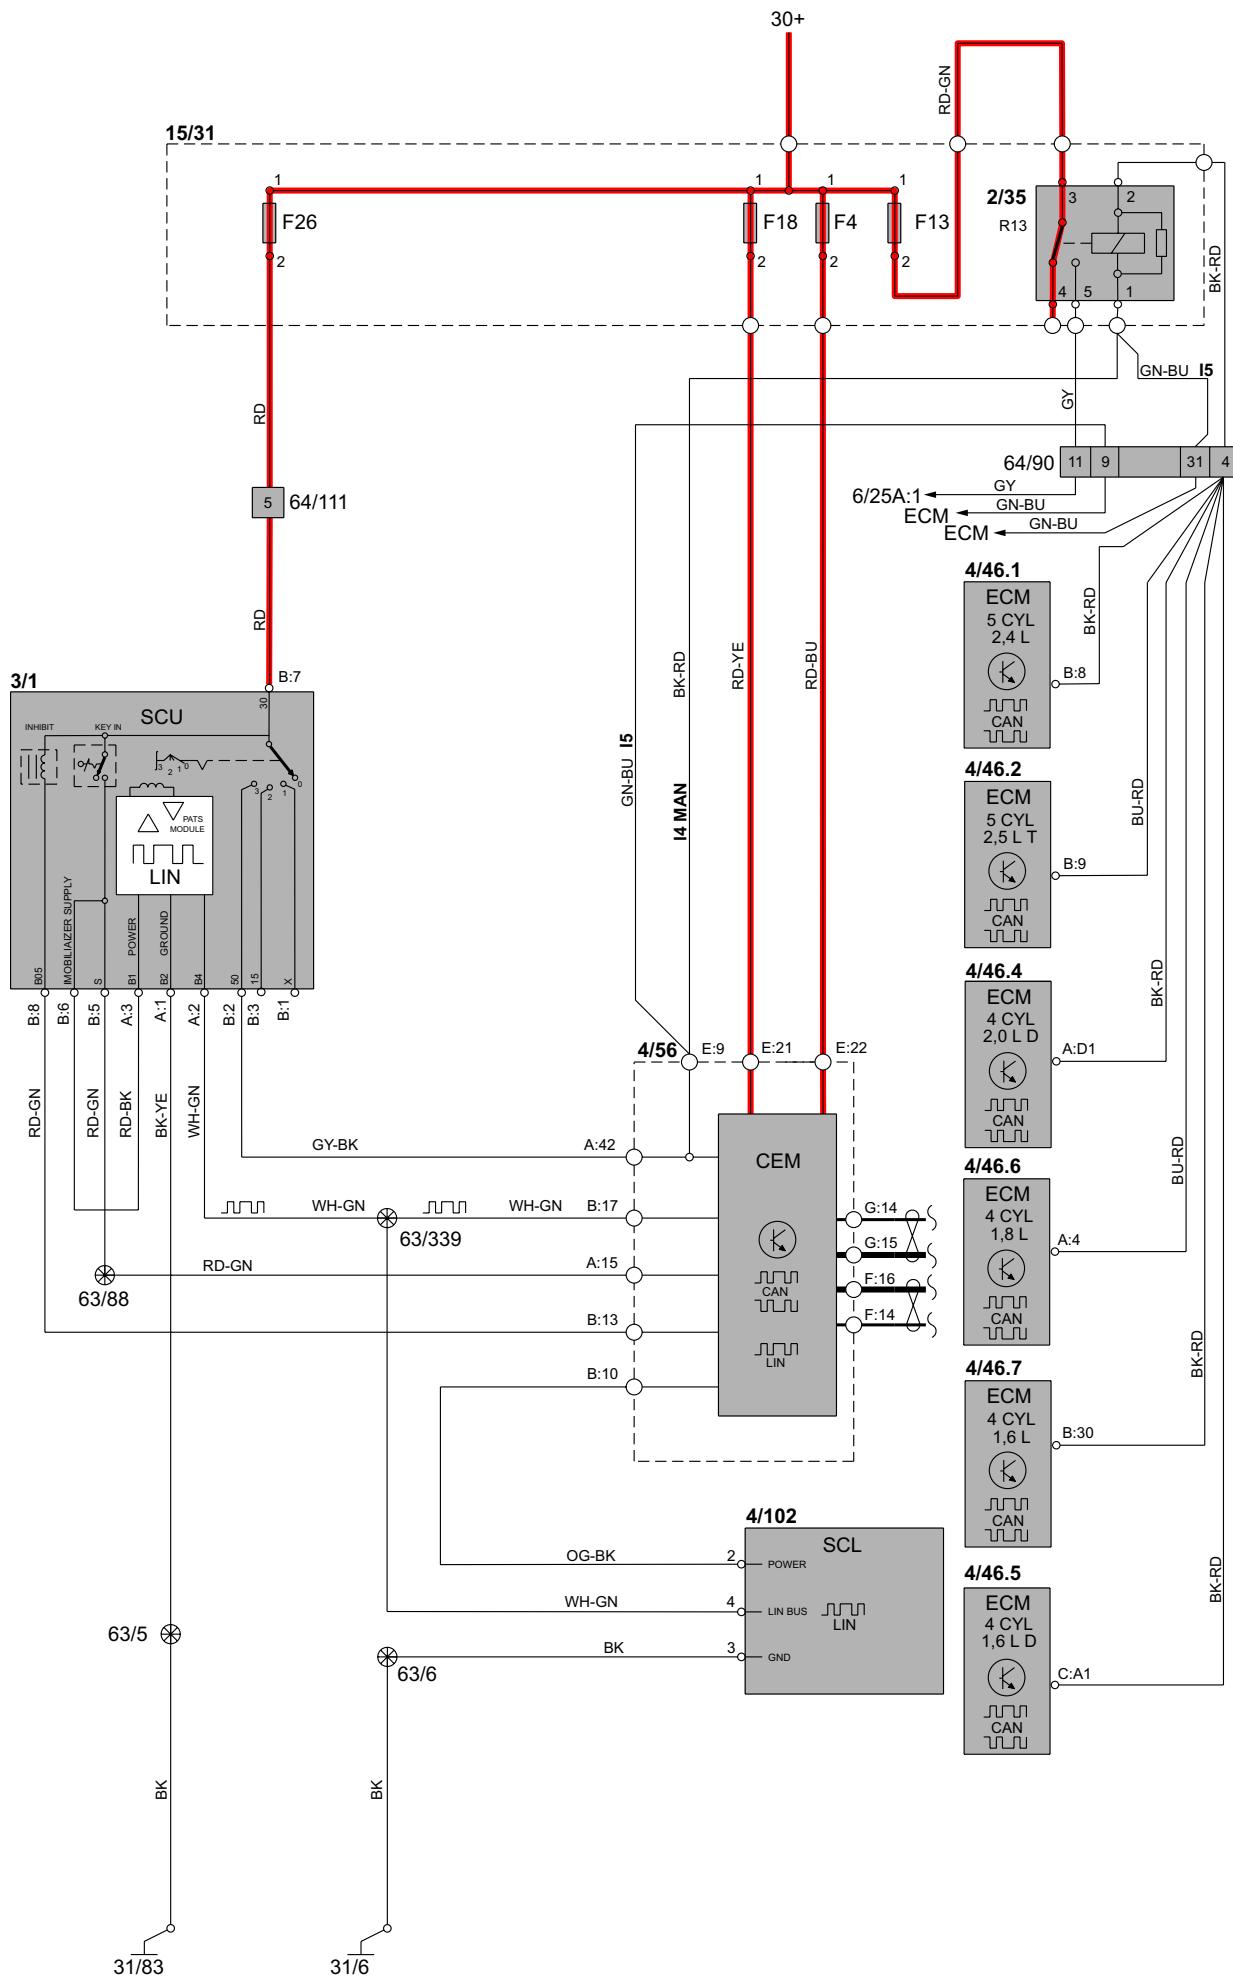


**Group 36 Additional electrical equipment
Keyless vehicle S40/V50 1:2**

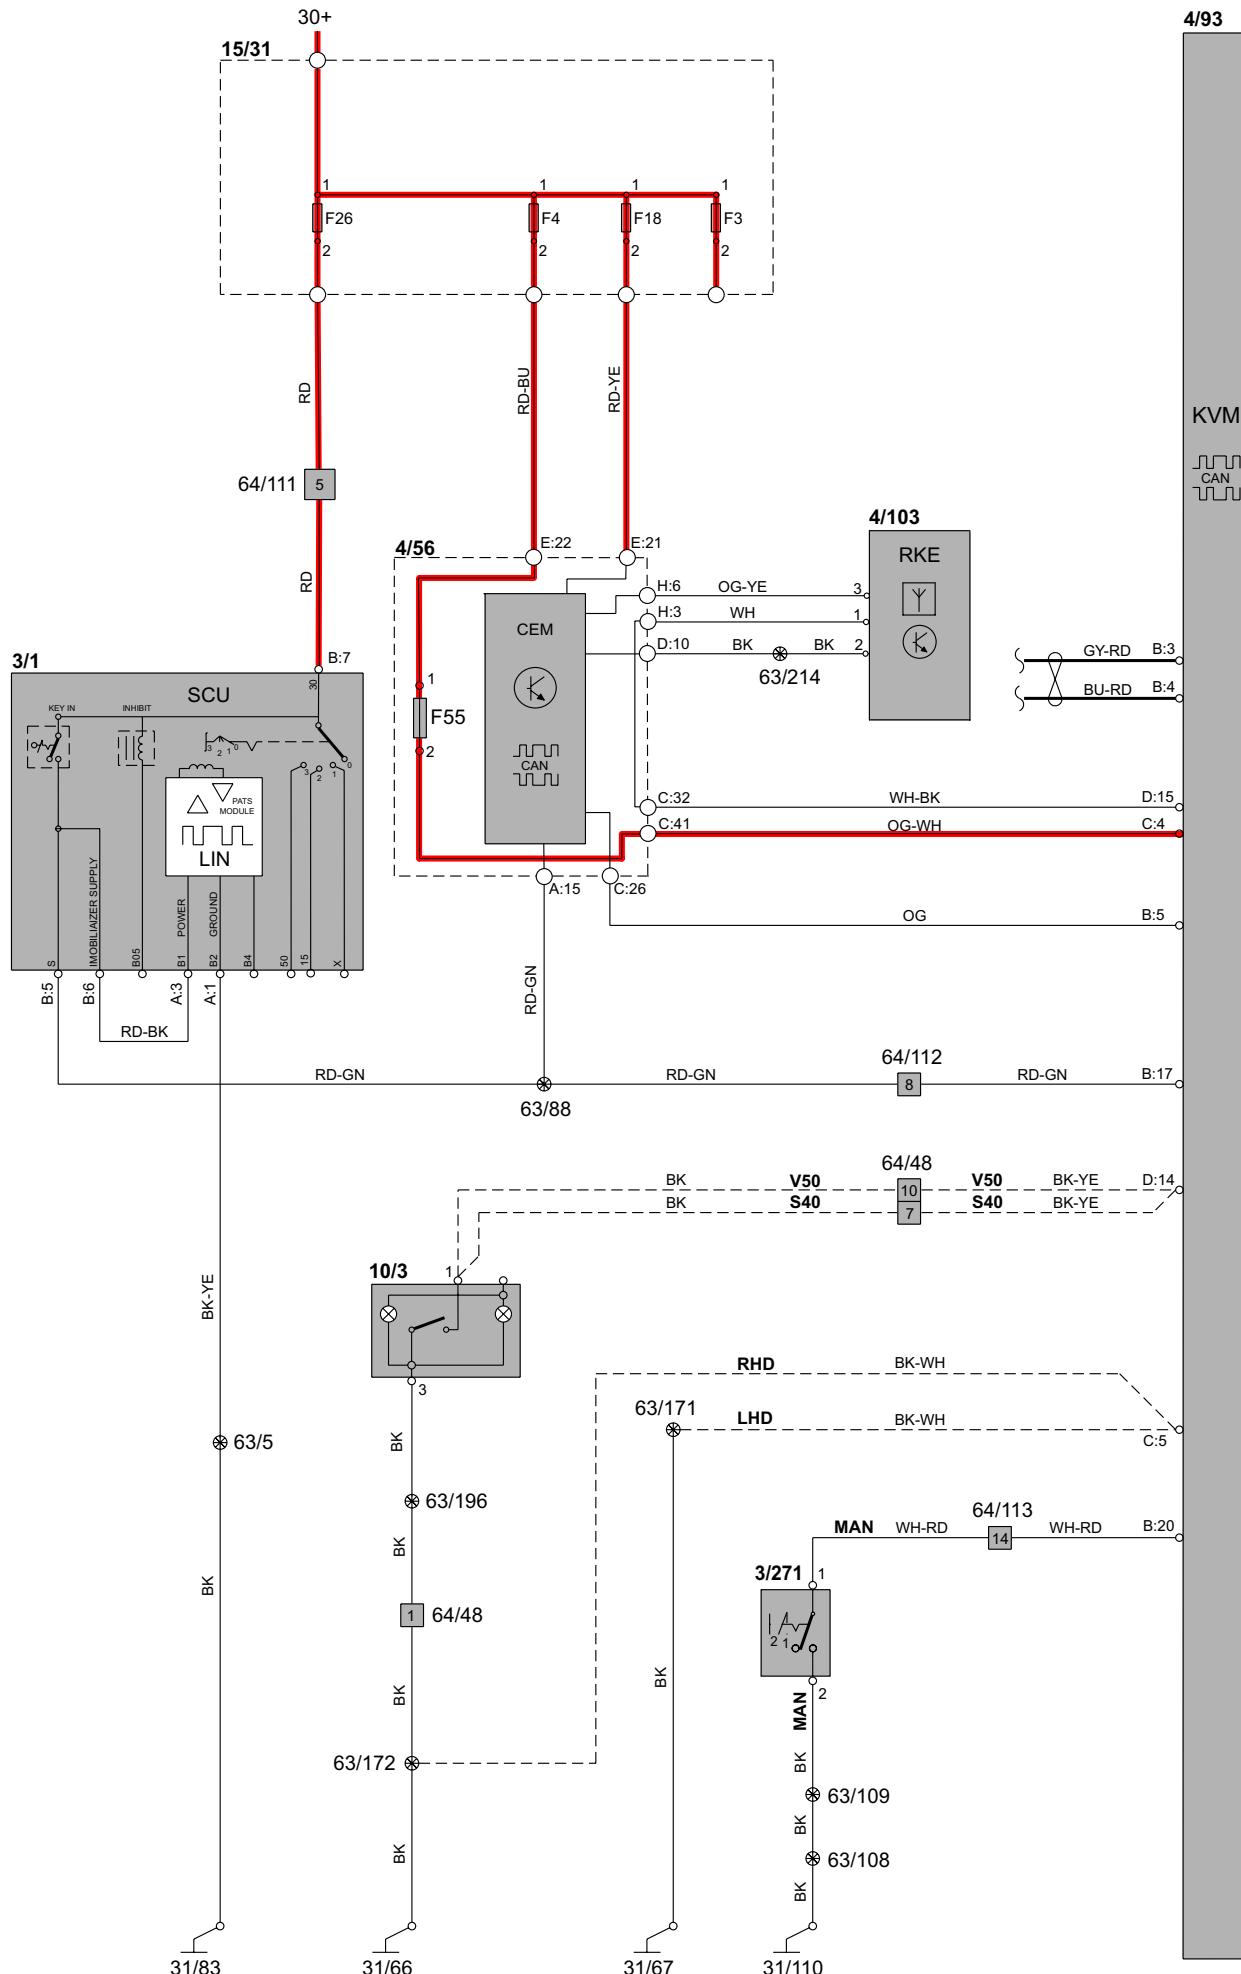


Group 36 Additional electrical equipment

Keyless vehicle S40/V50 2:2

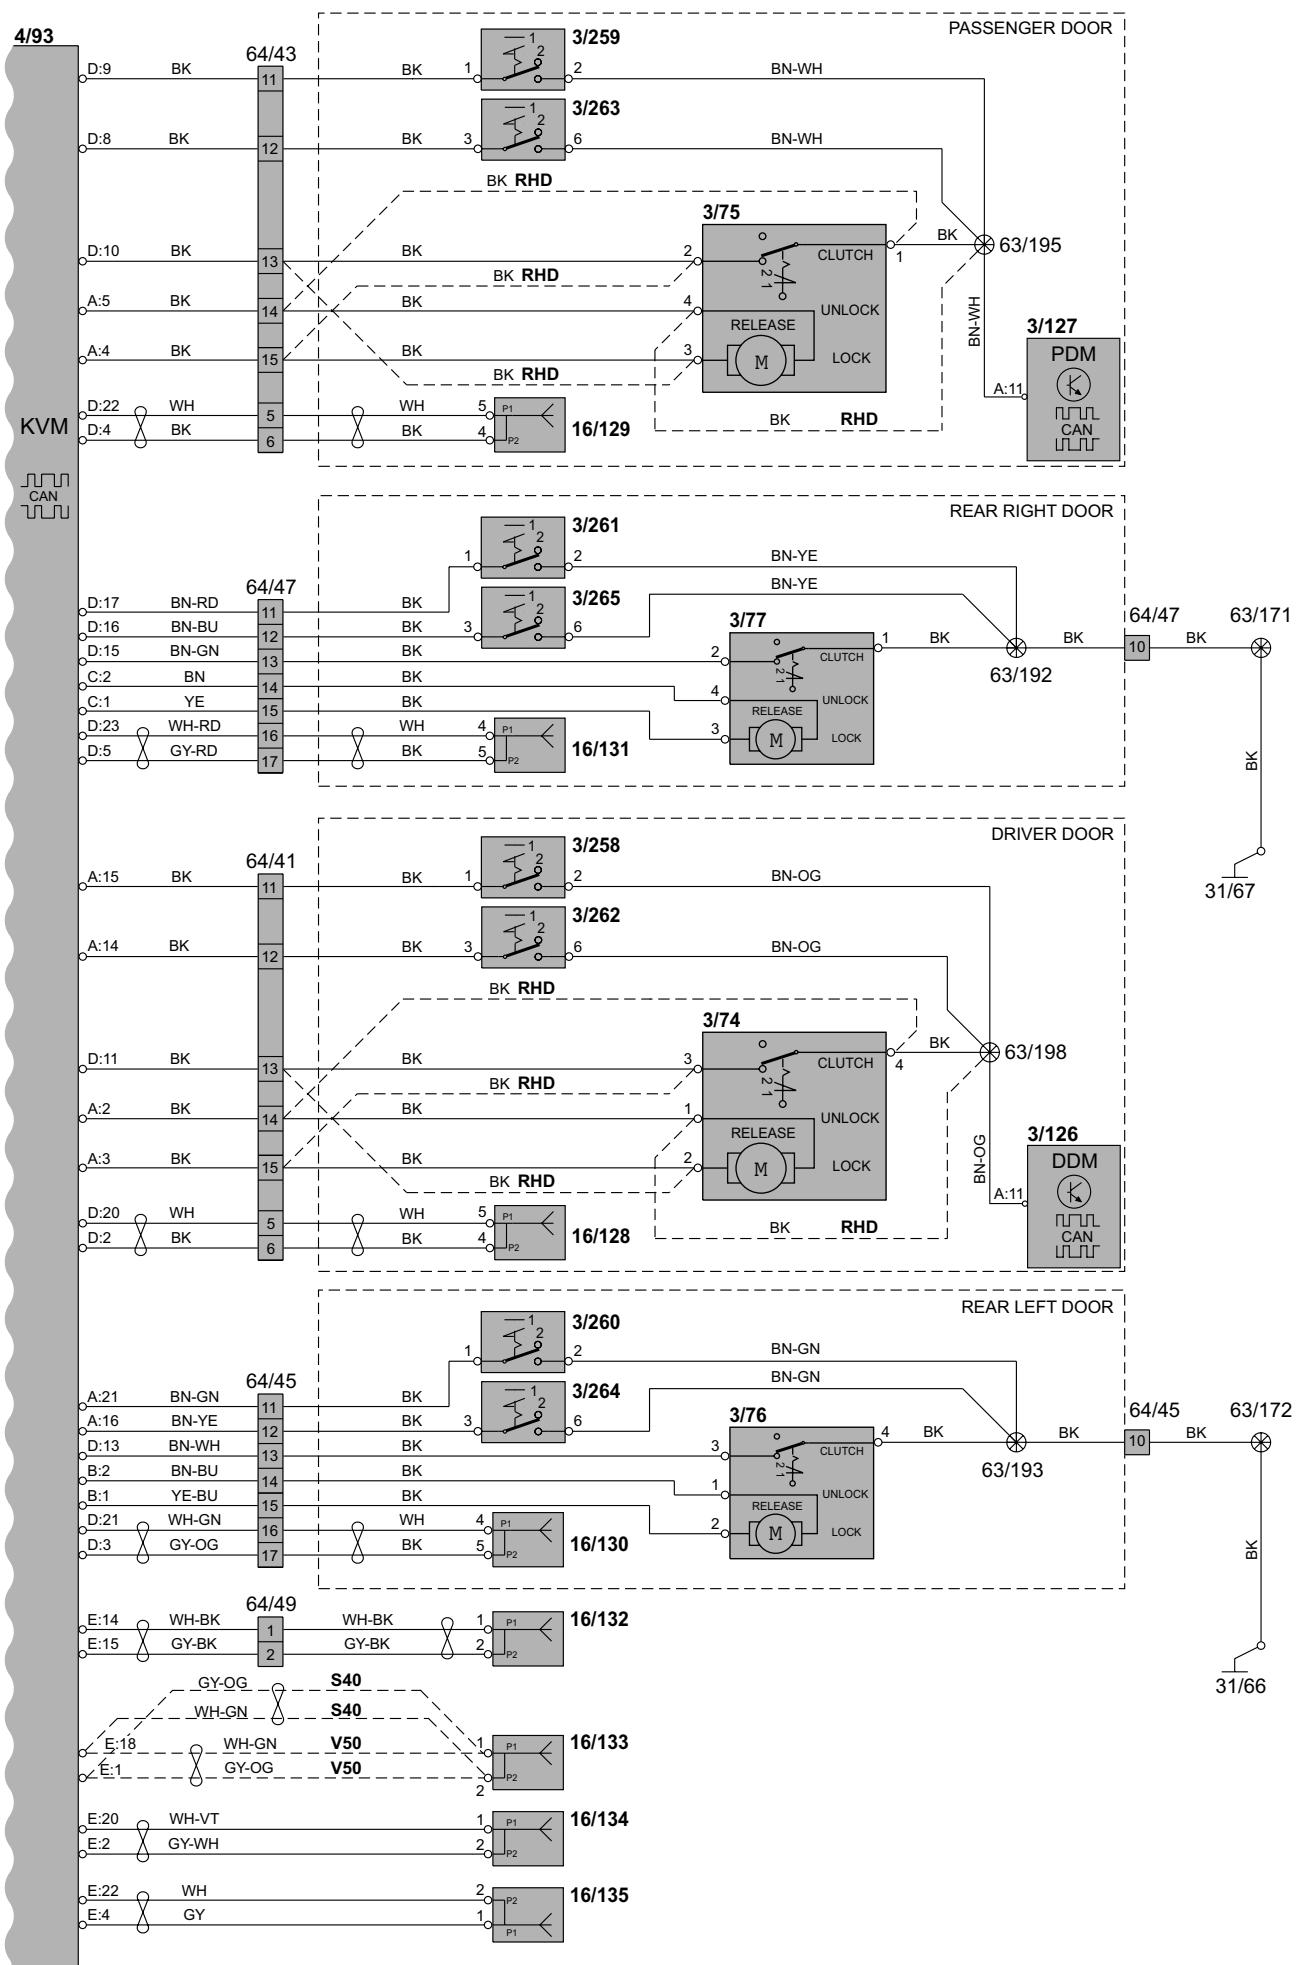


Group 36 Additional electrical equipment

Keyless vehicle C70 1:2

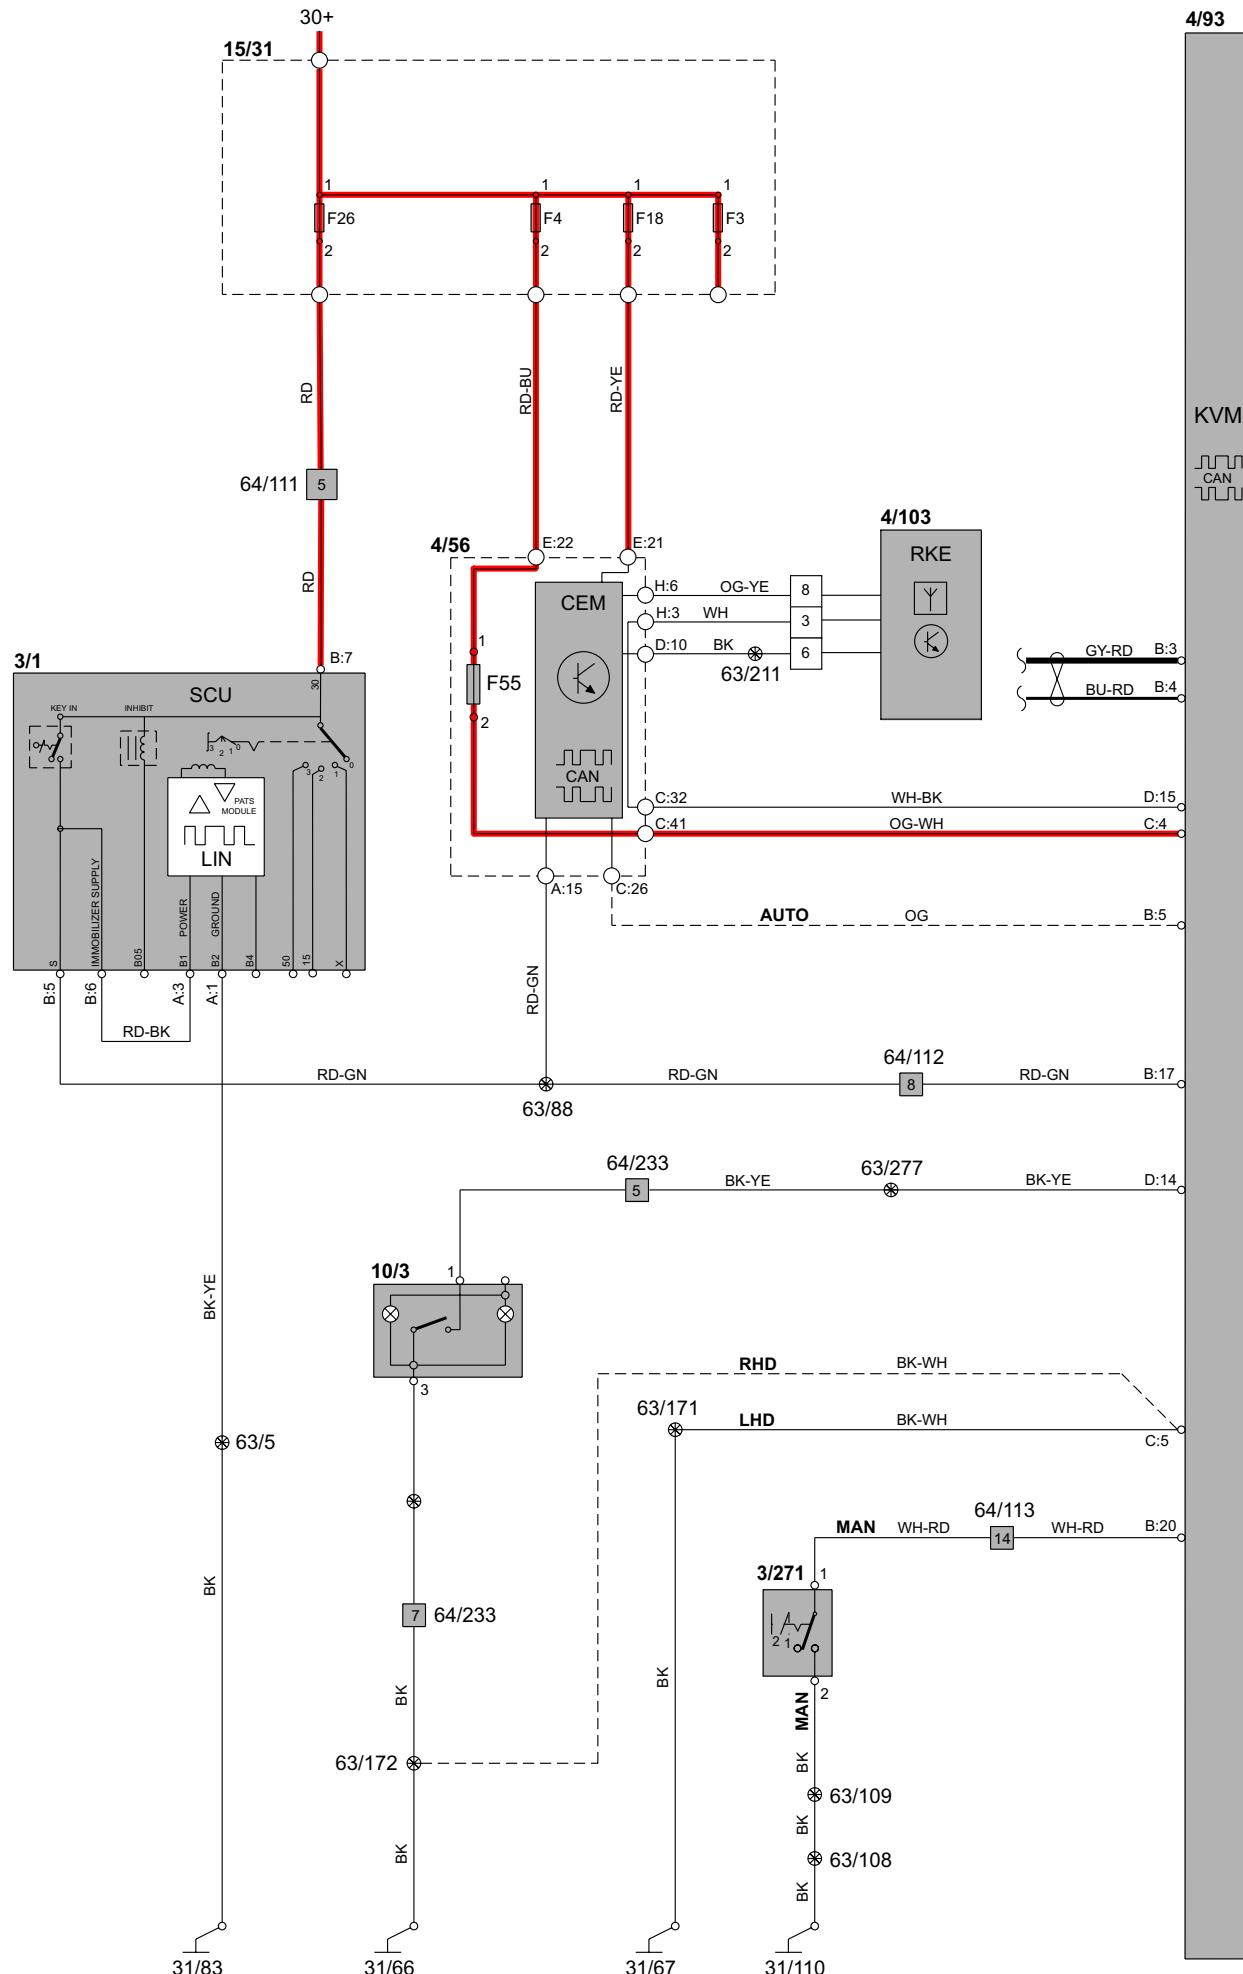


Group 36 Additional electrical equipment

Keyless vehicle C70 2:2

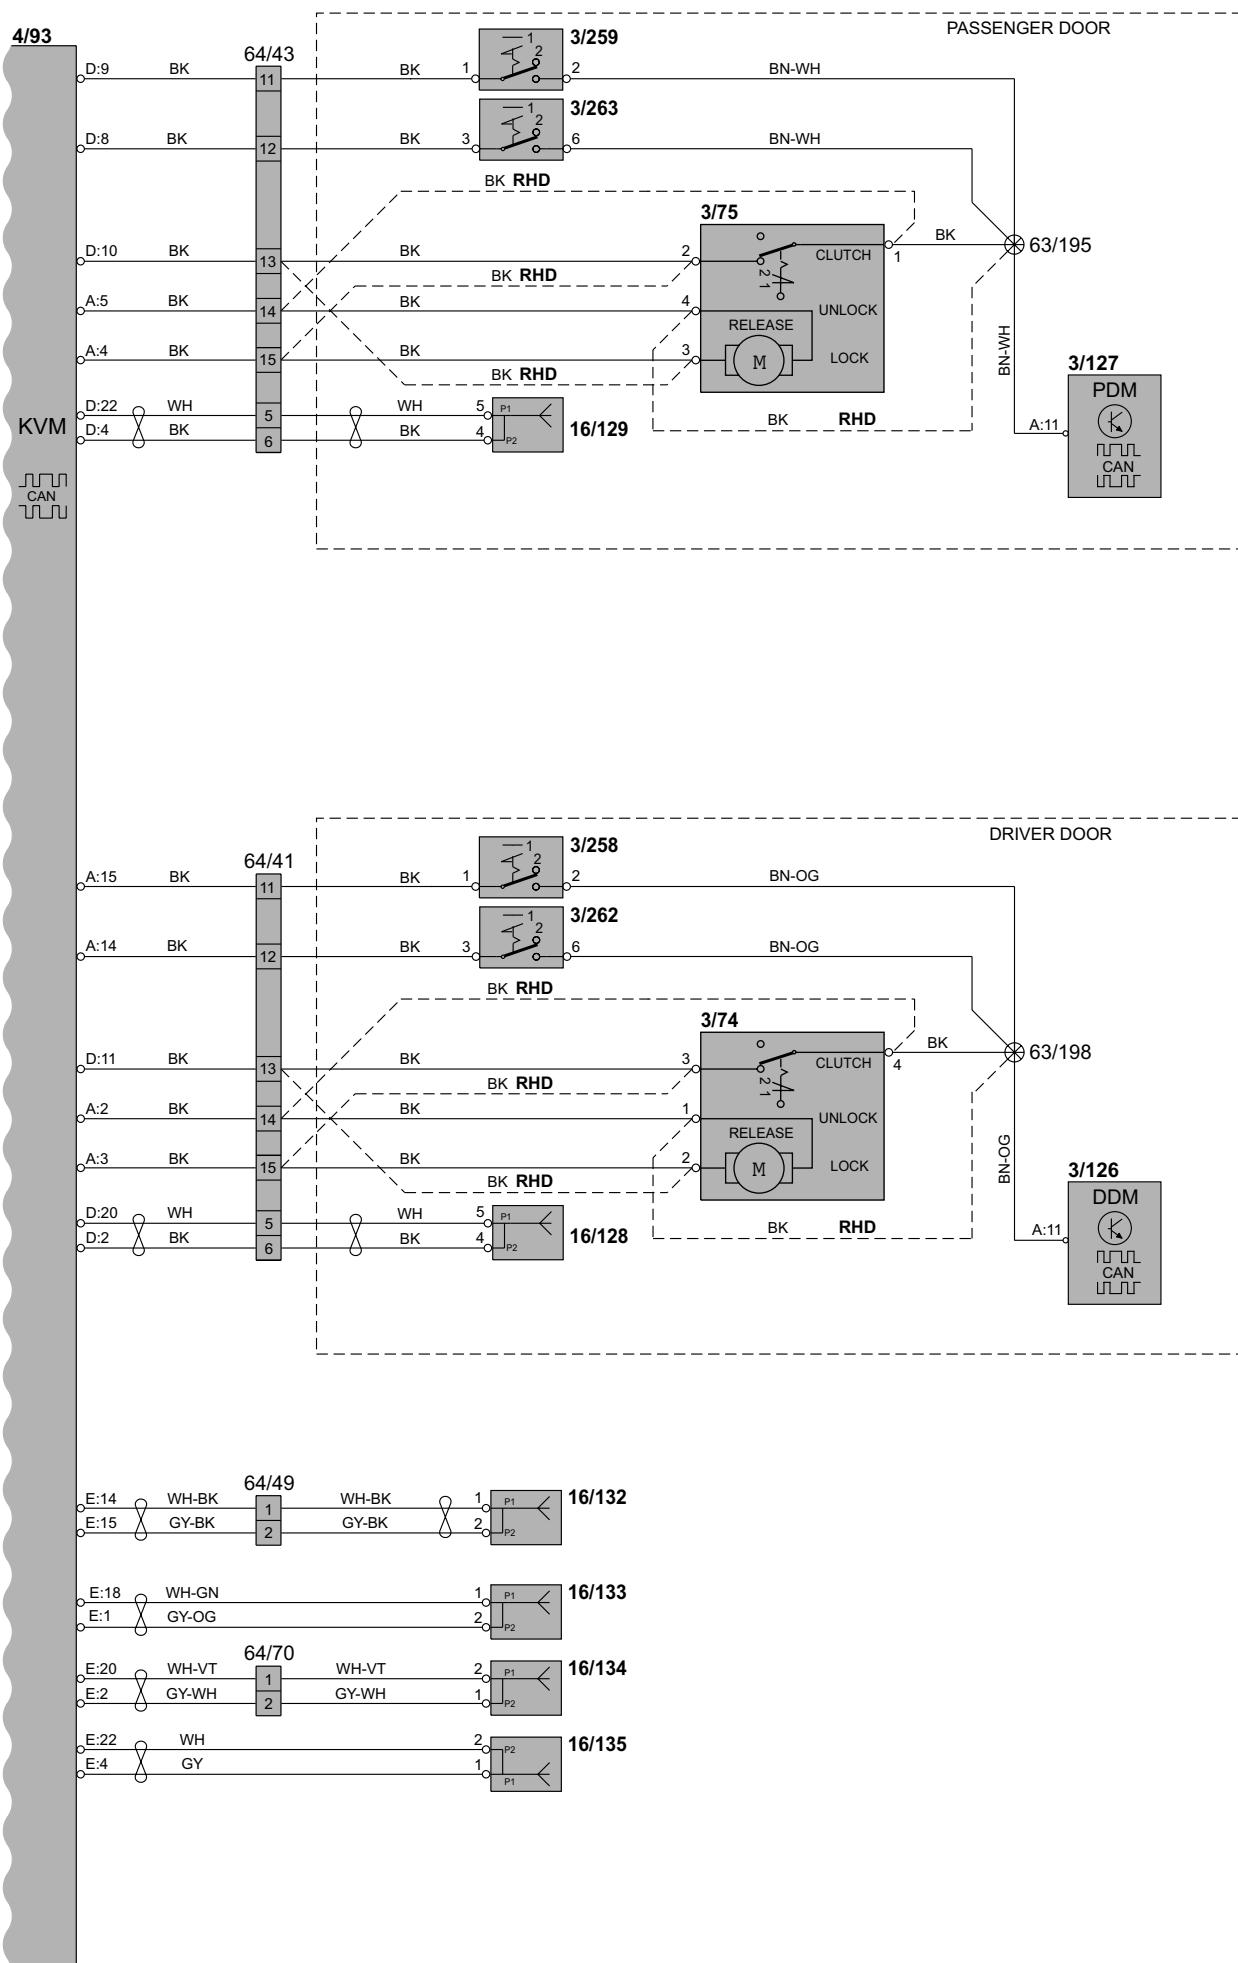


Group 36 Additional electrical equipment

Rear parking assistance

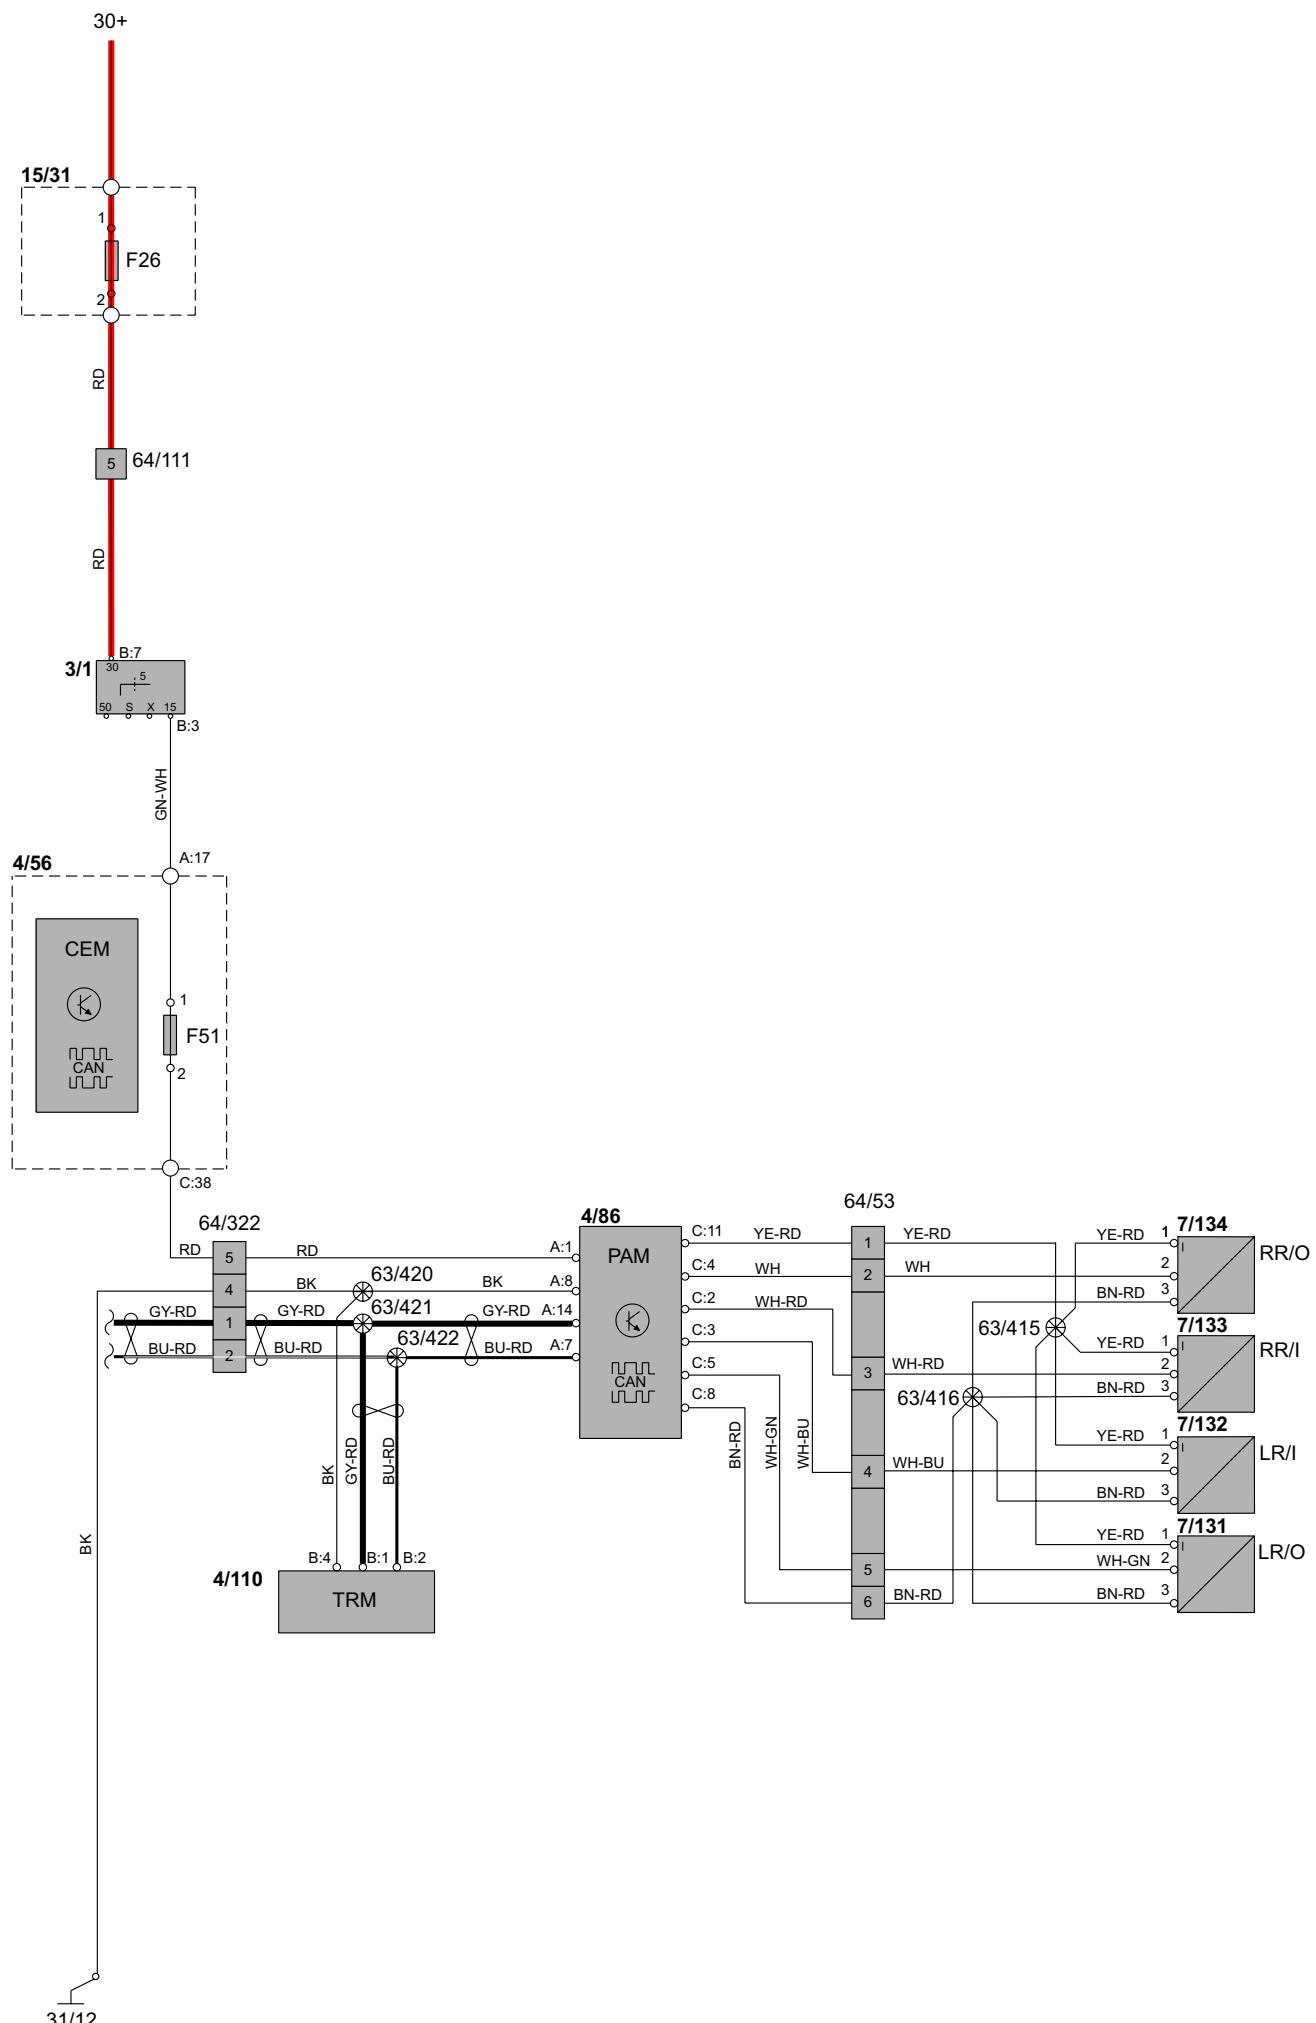


Group 36 Additional electrical equipment

Front parking assistance

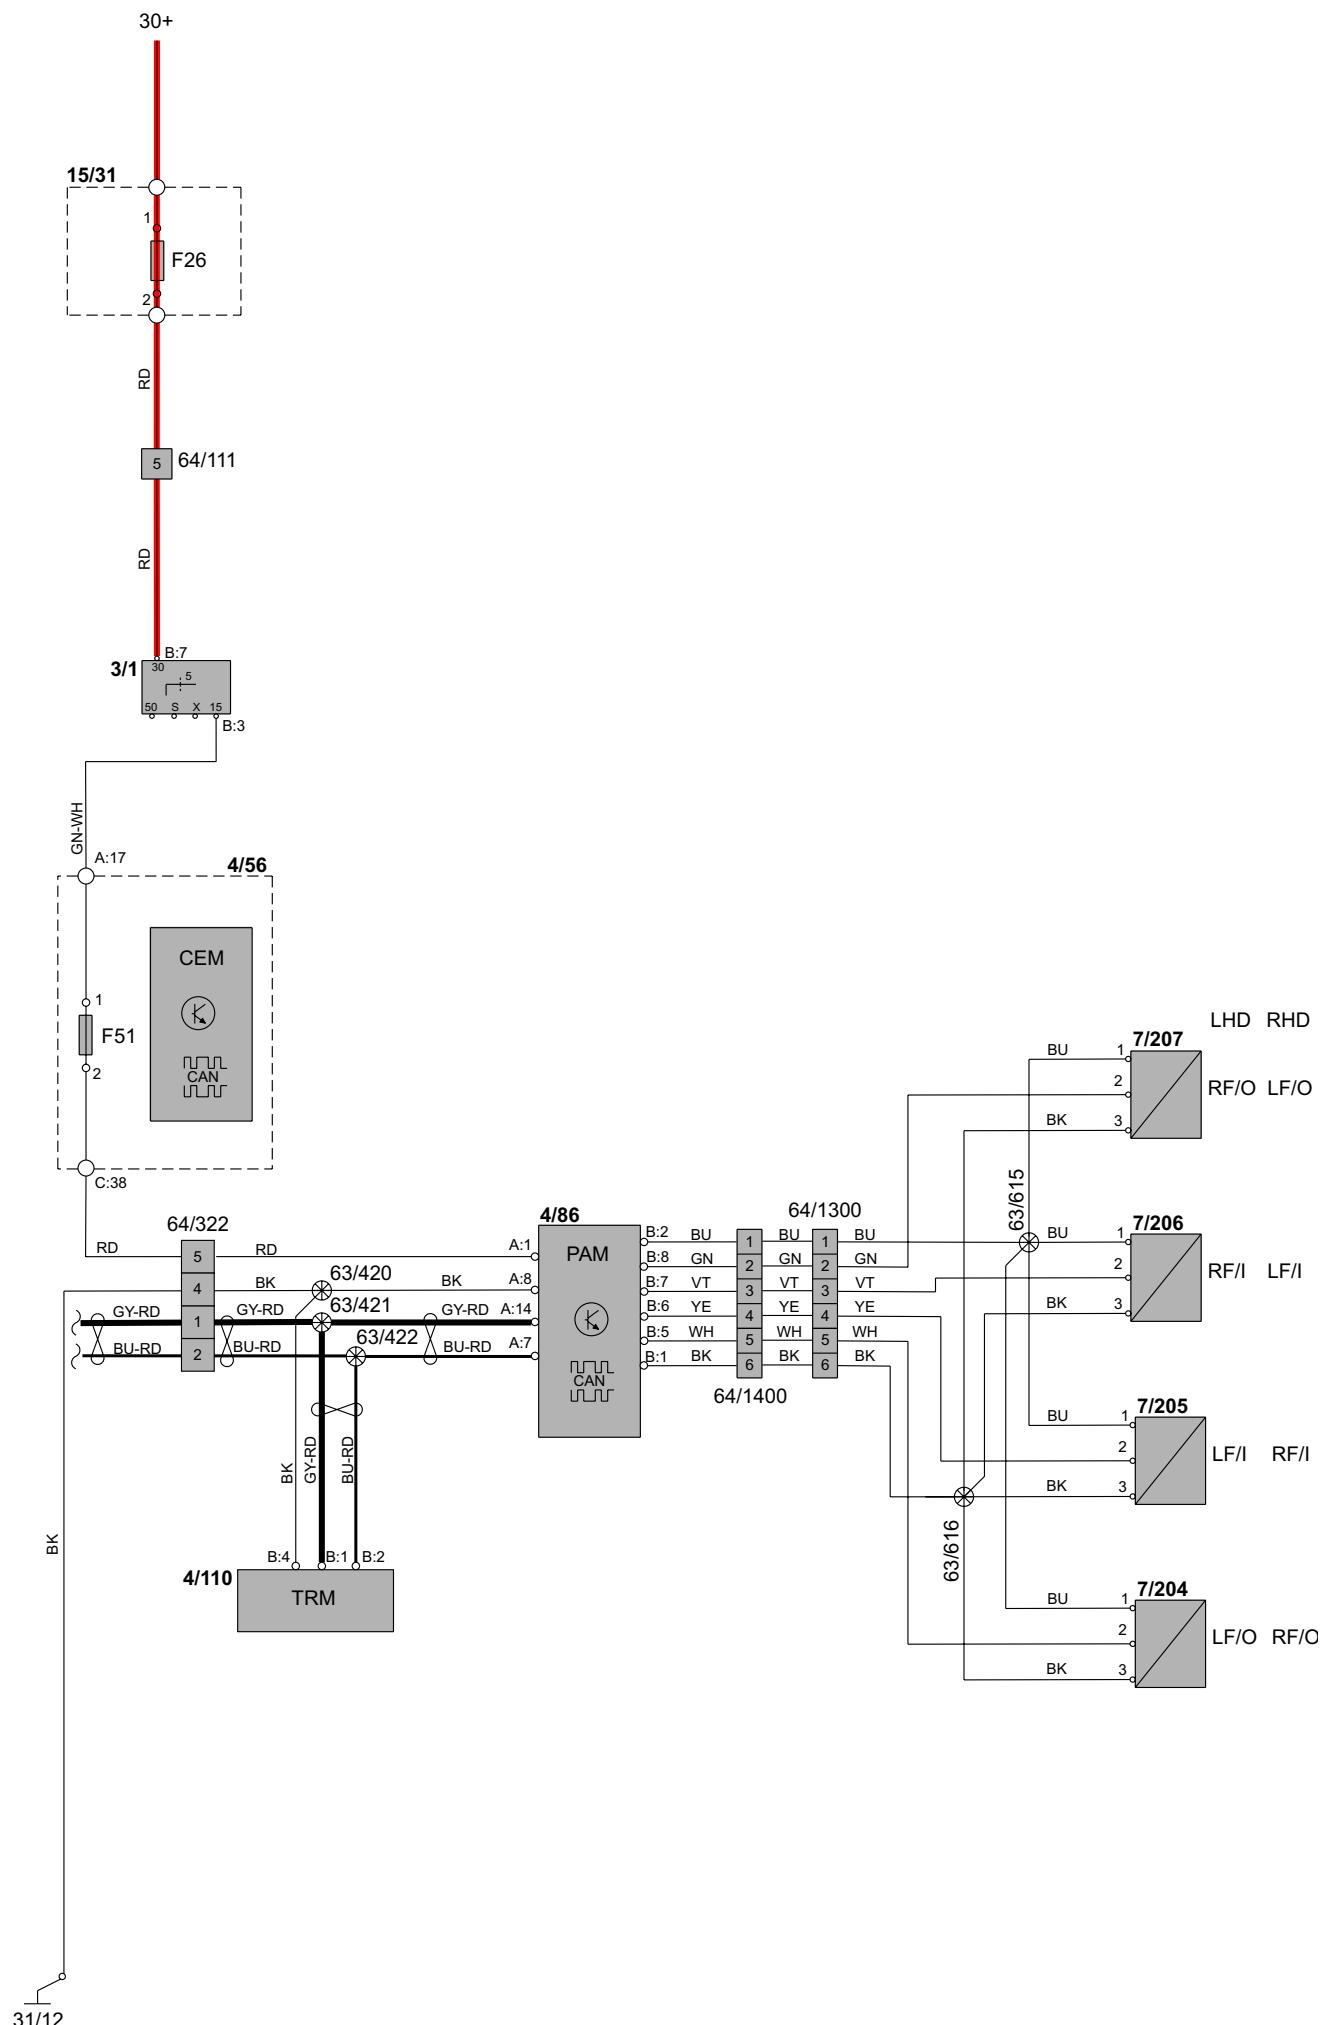


Group 36 Additional electrical equipment Anti-theft alarm S40/V50

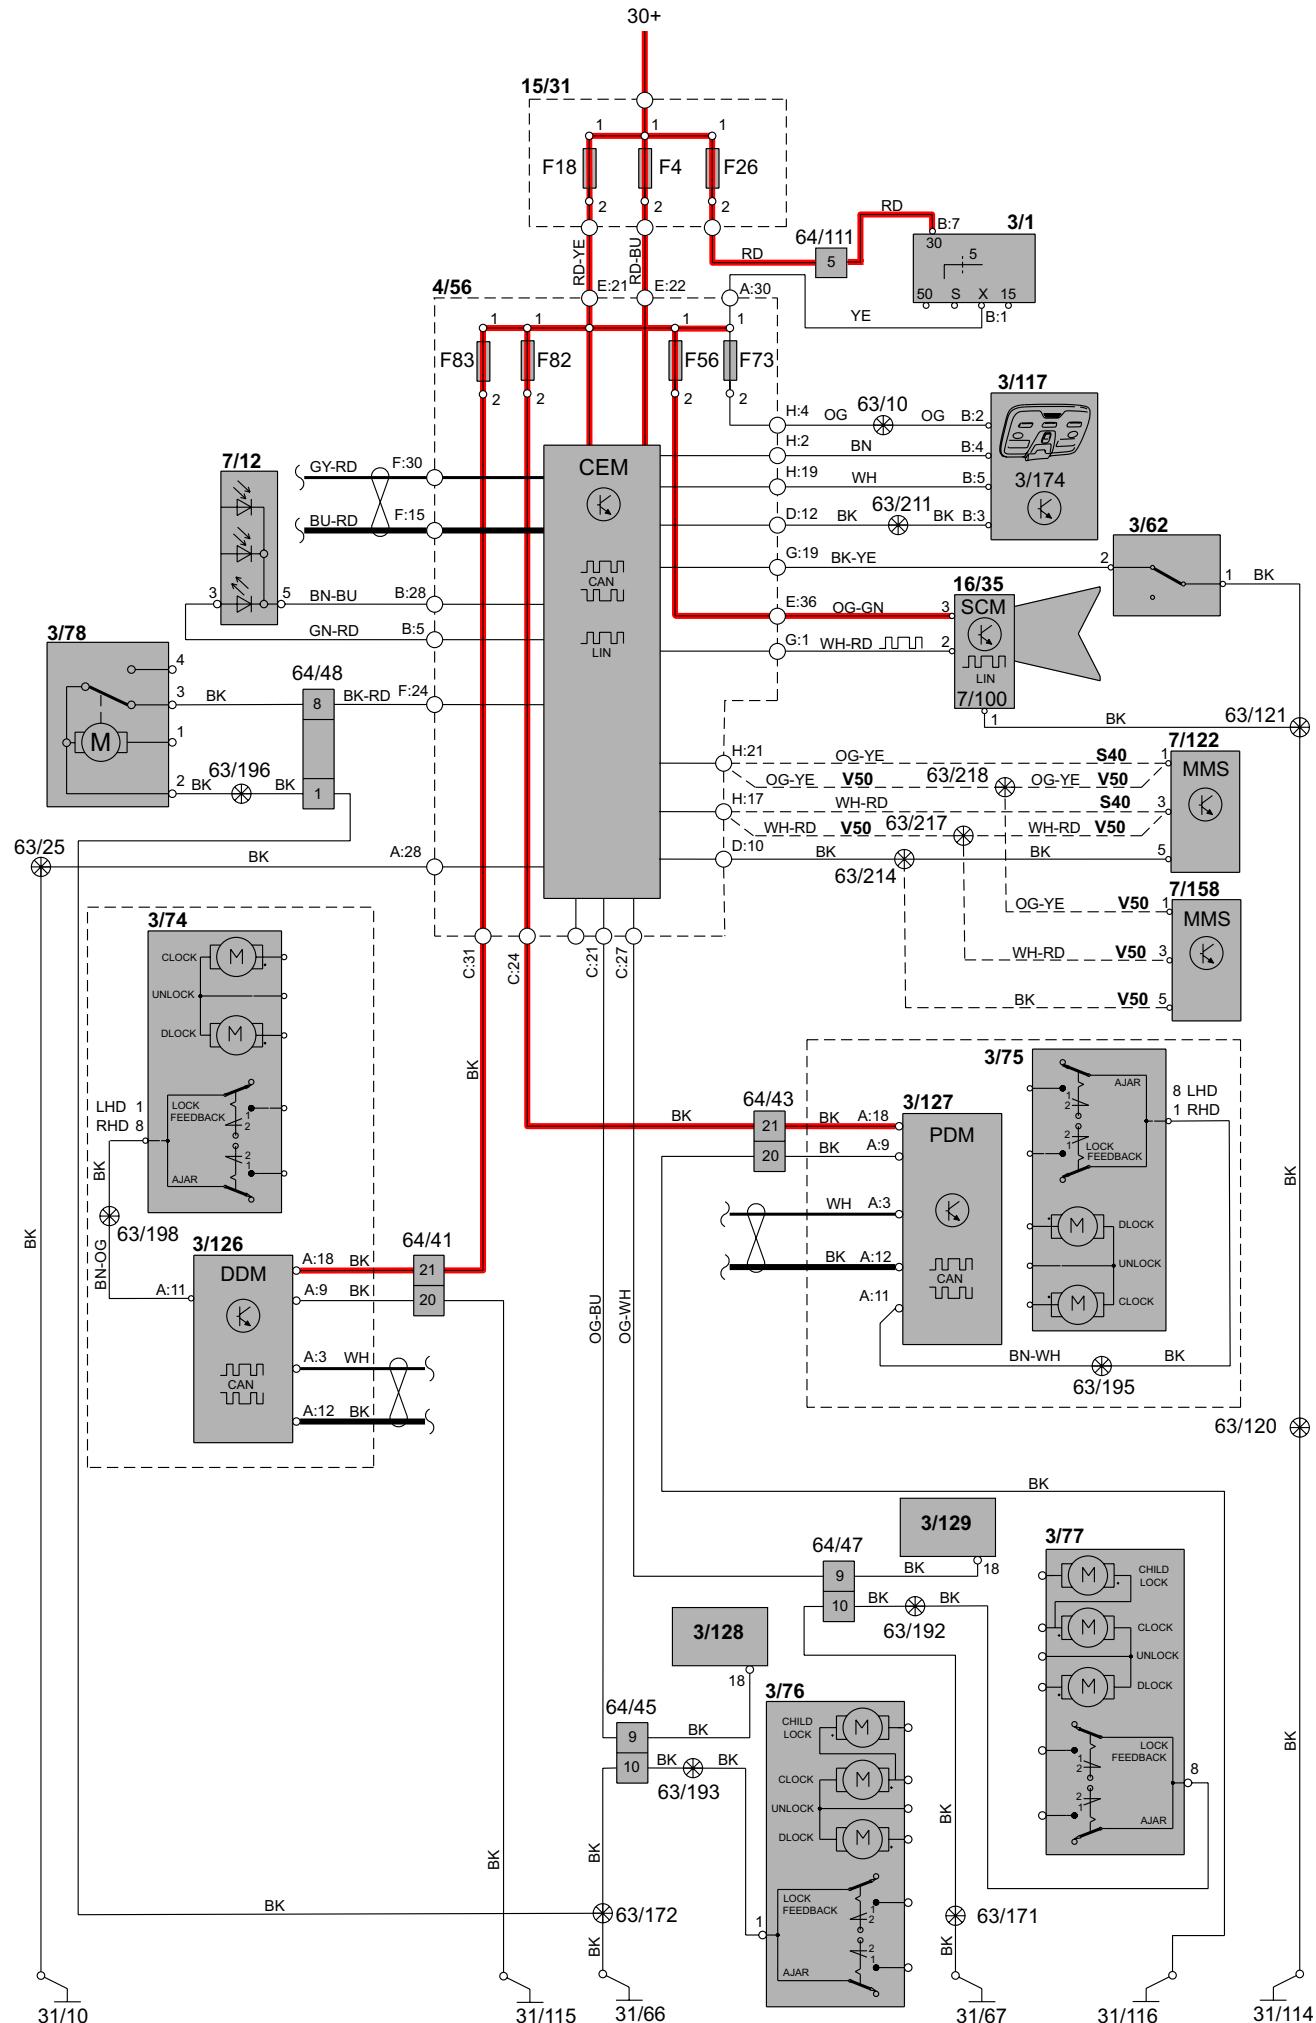


Group 36 Additional electrical equipment

Anti-theft alarm C70

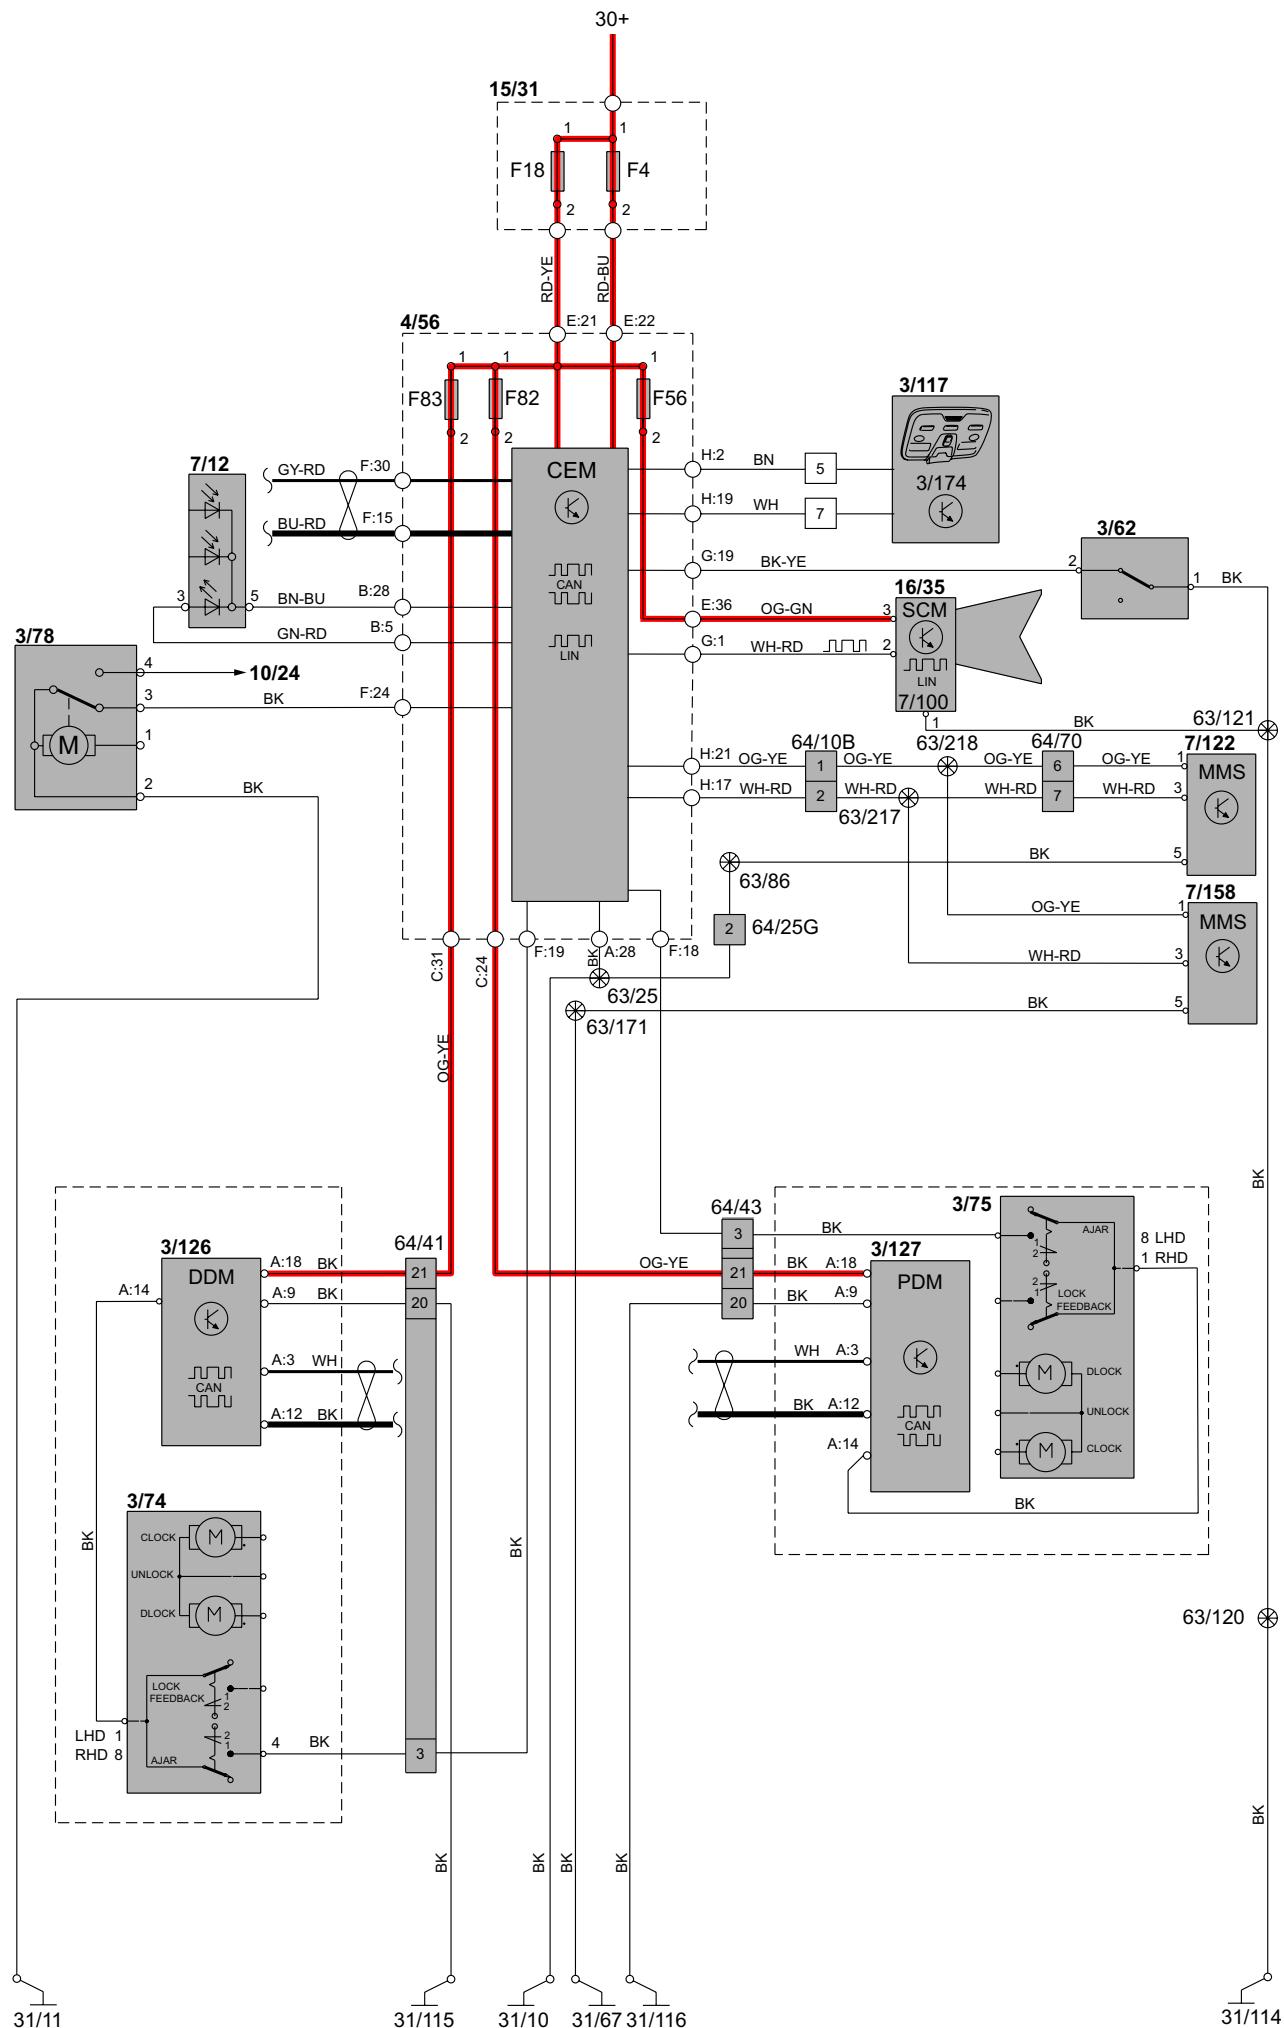


Group 36 Additional electrical equipment, Accessories

Accessory Electronic Module (AEM)

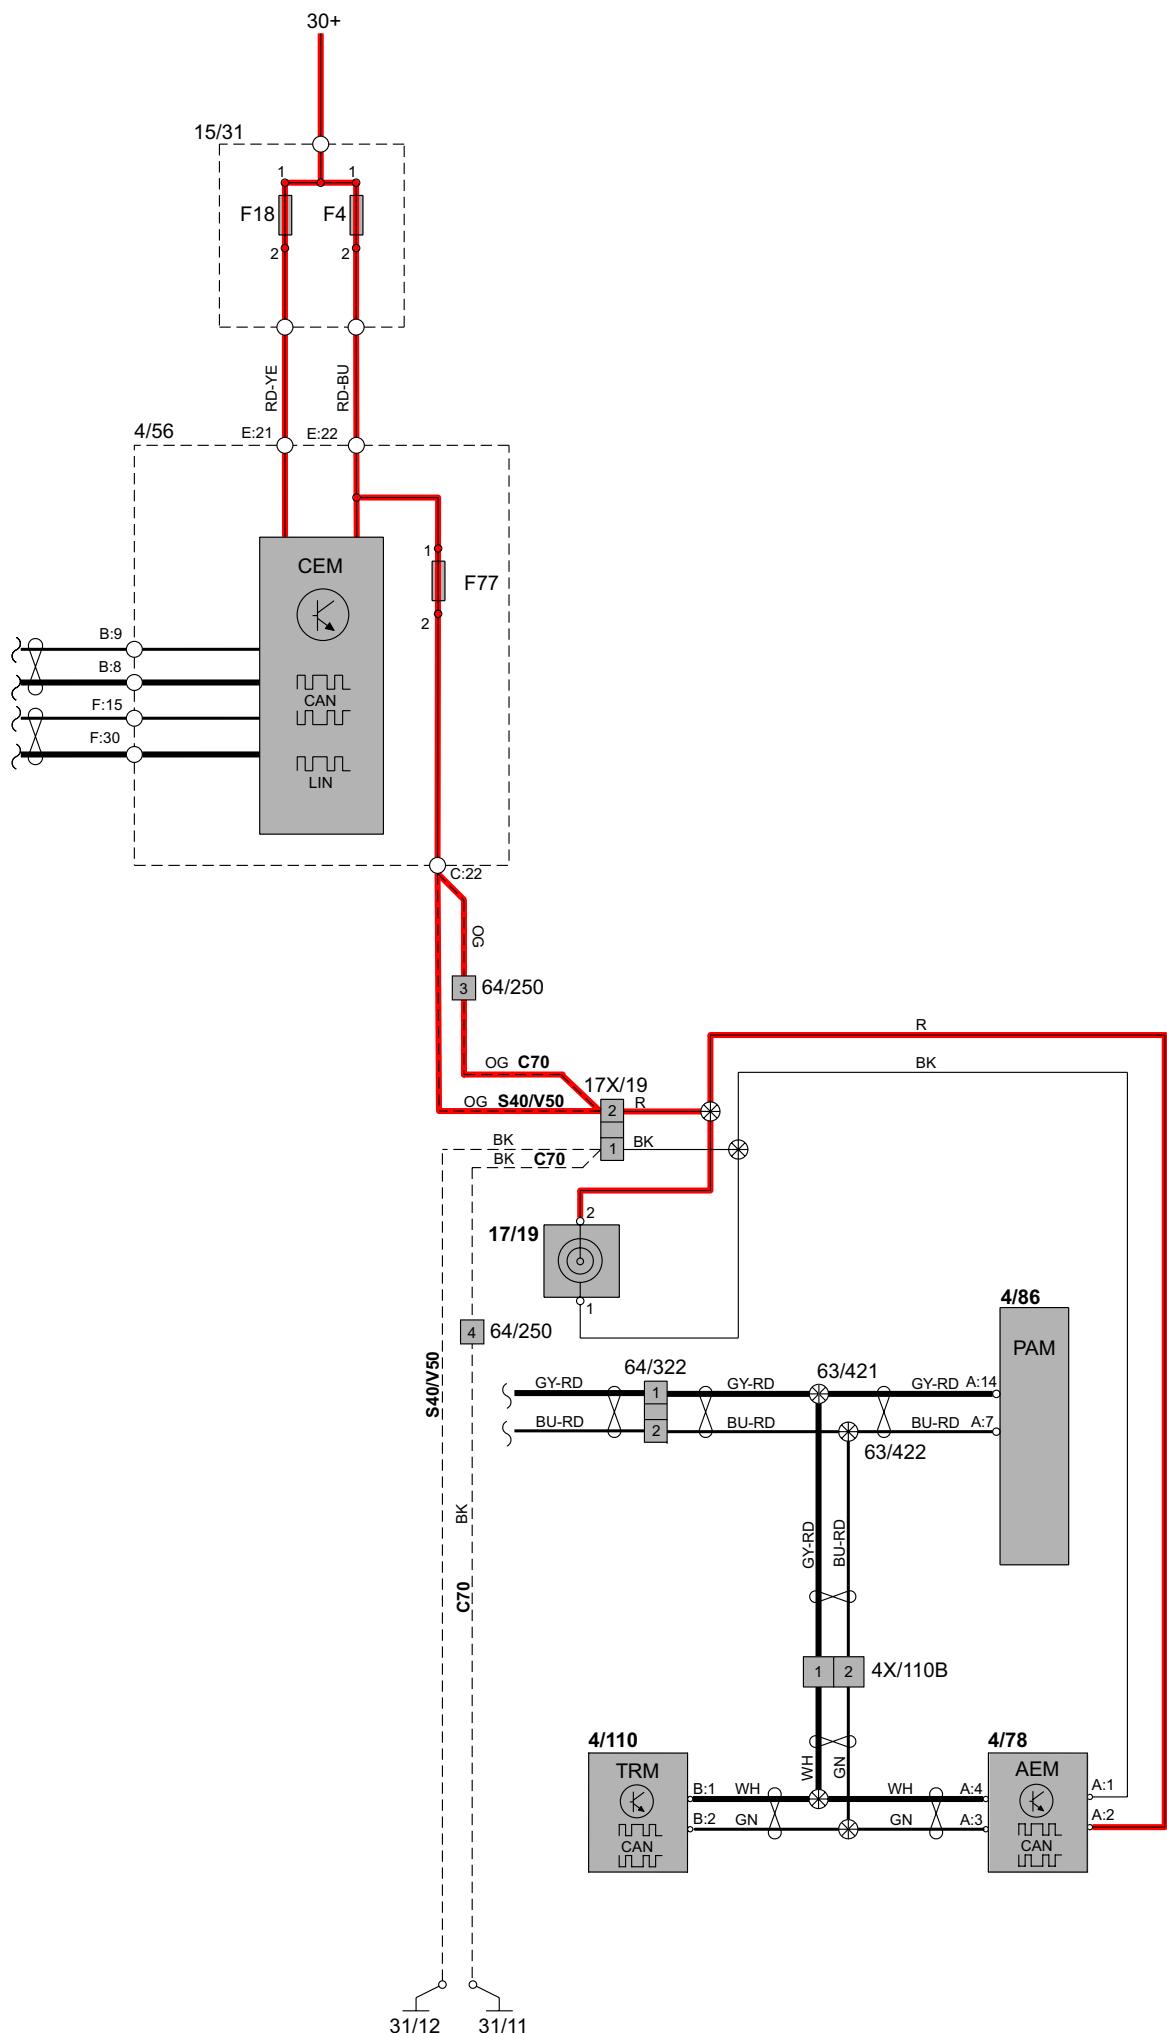


Group 37 Wiring and fuses

12V outlet S40/V50

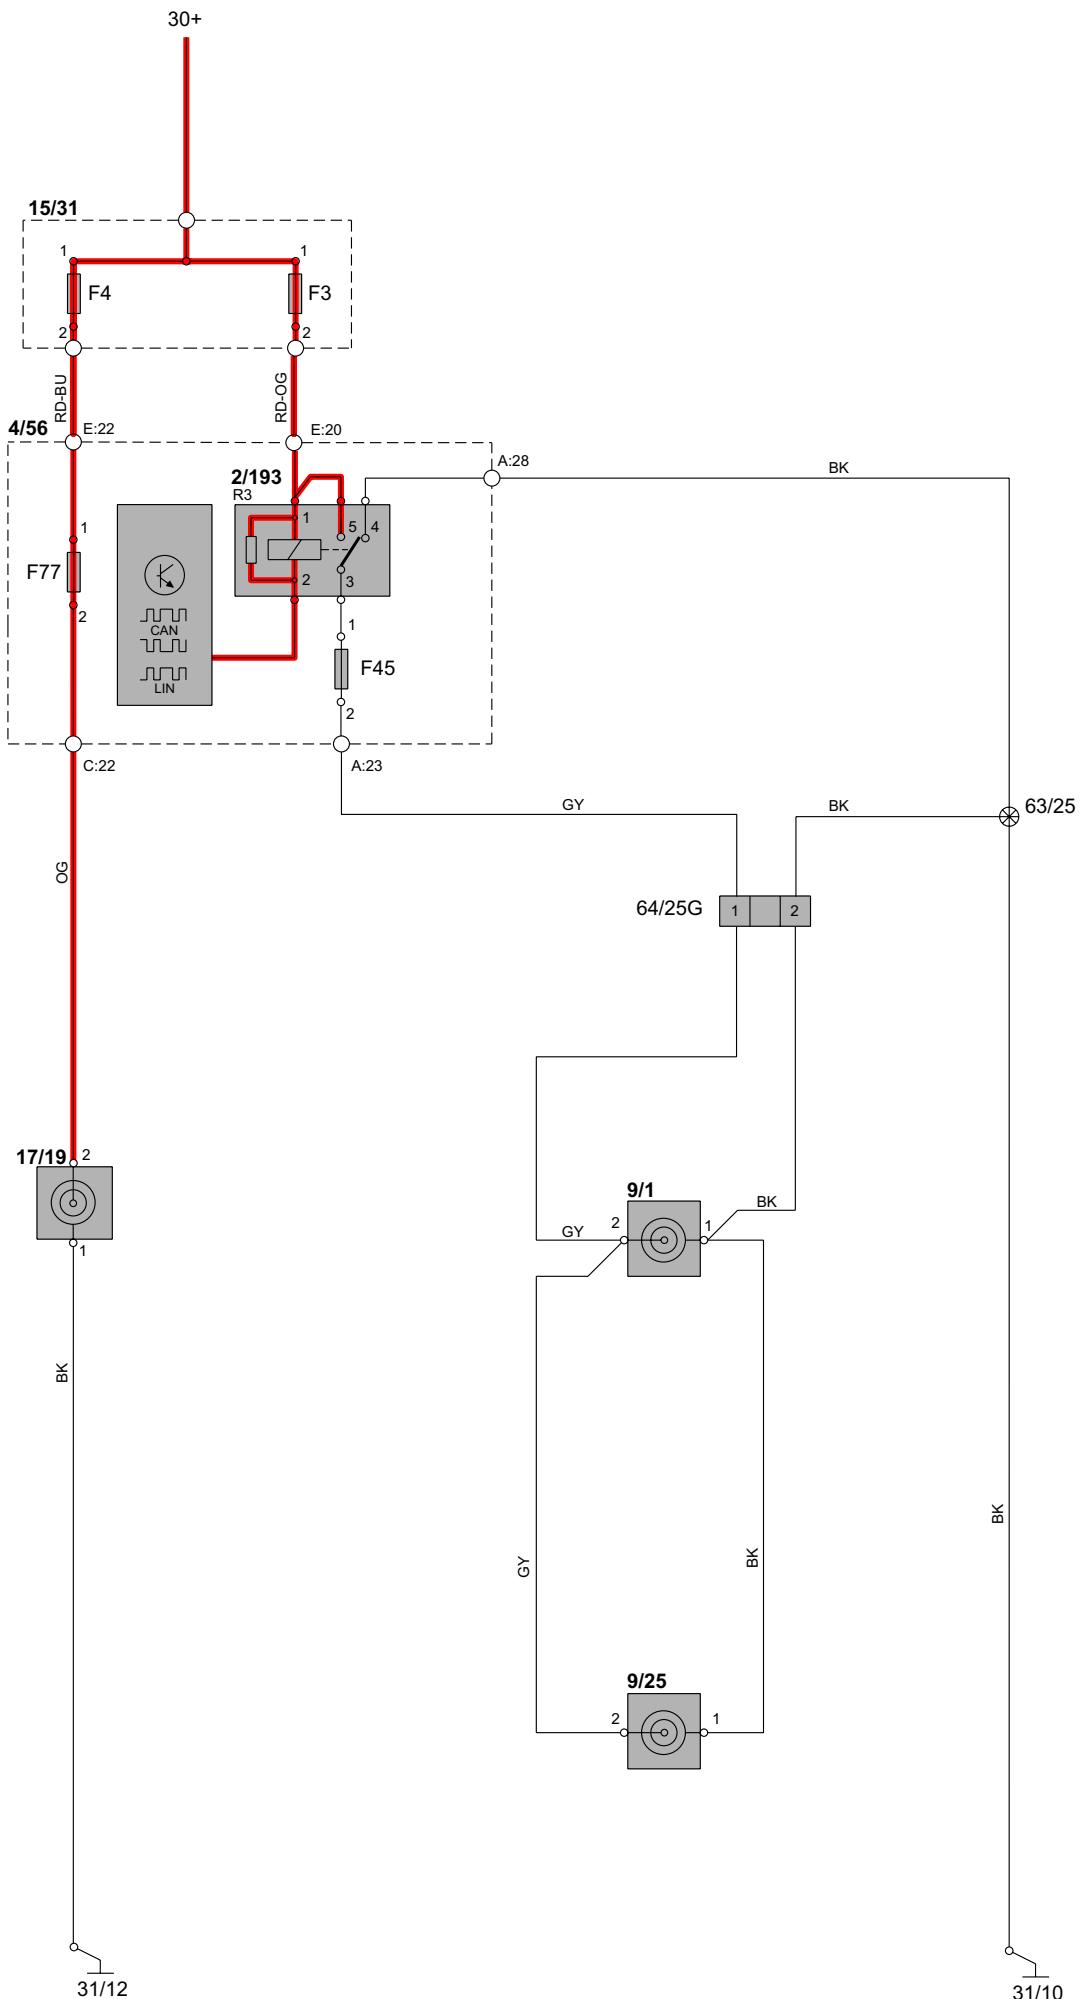


Group 37 Wiring and fuses

12V outlet C70

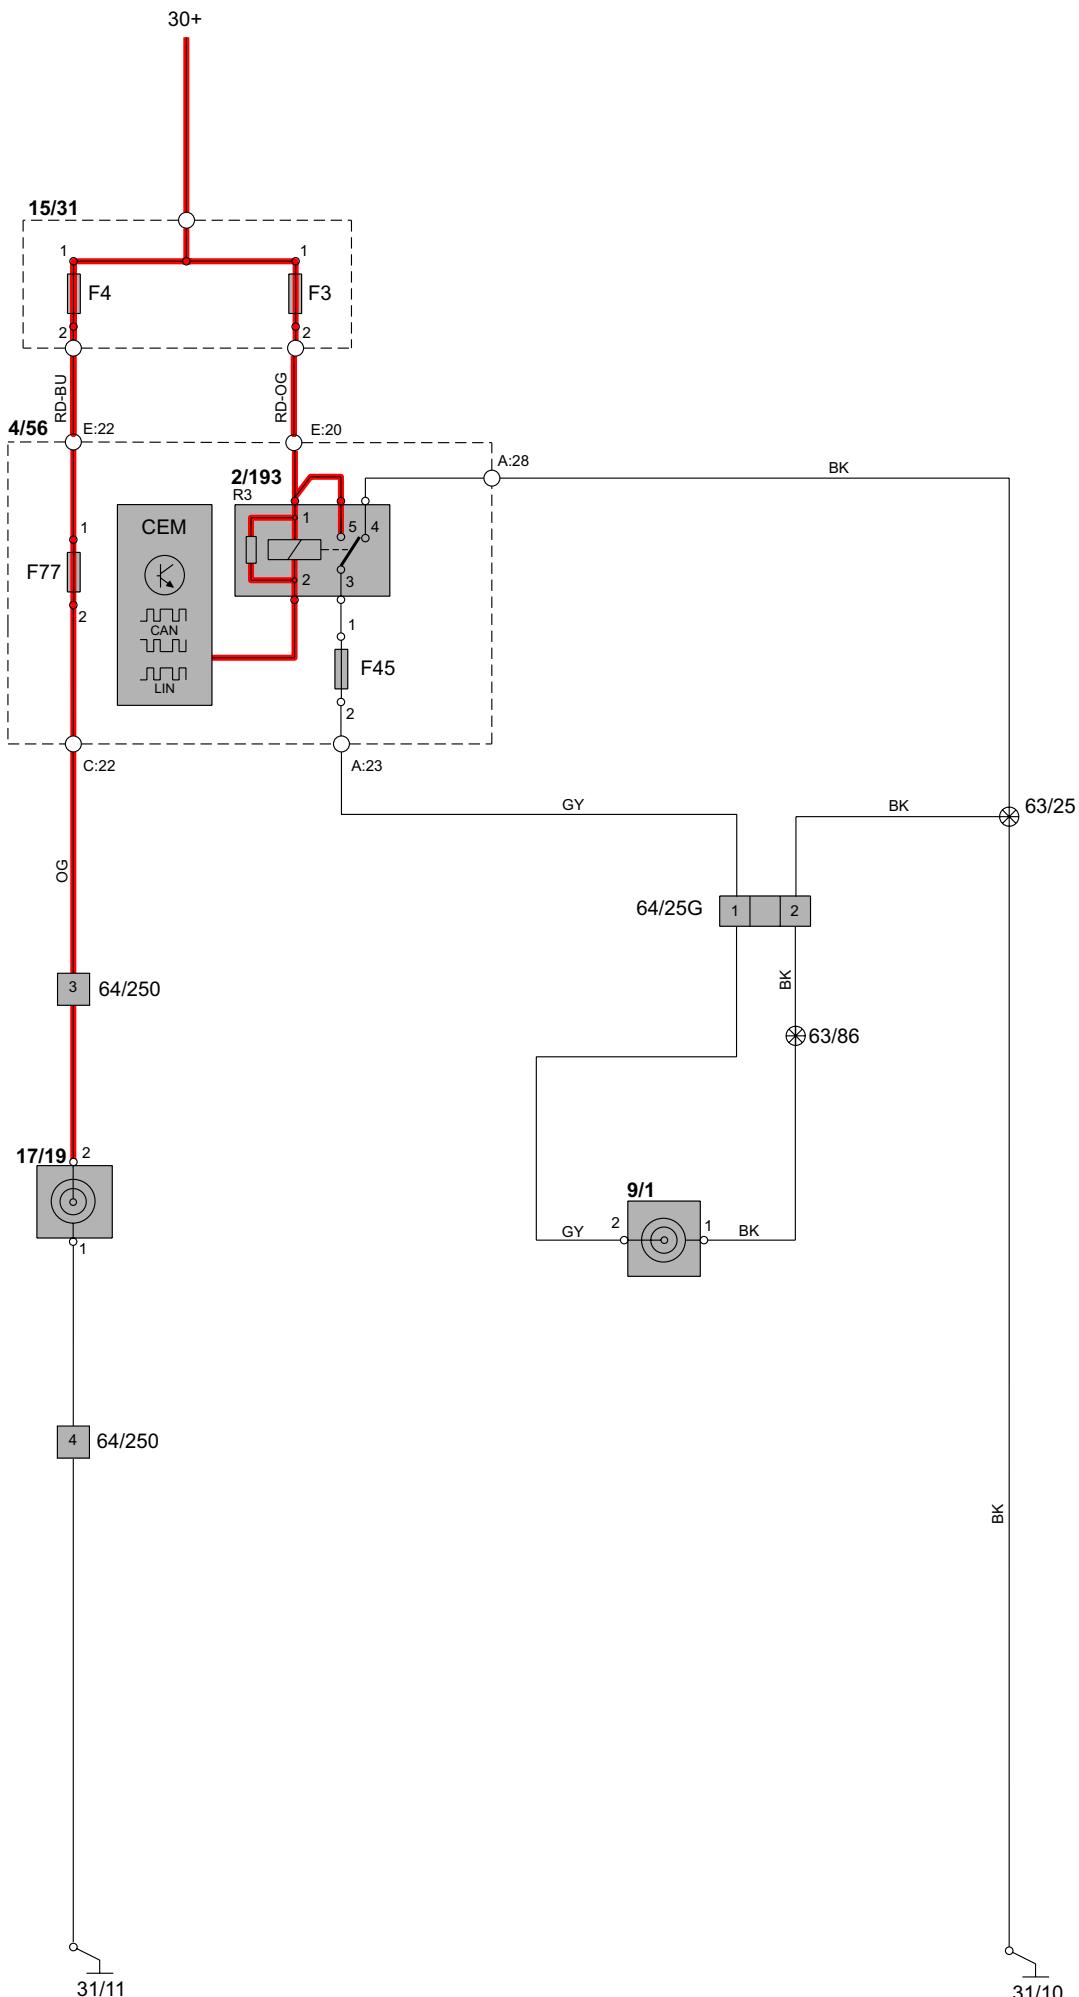


Group 37 Wiring and fuses

Diagnostics system

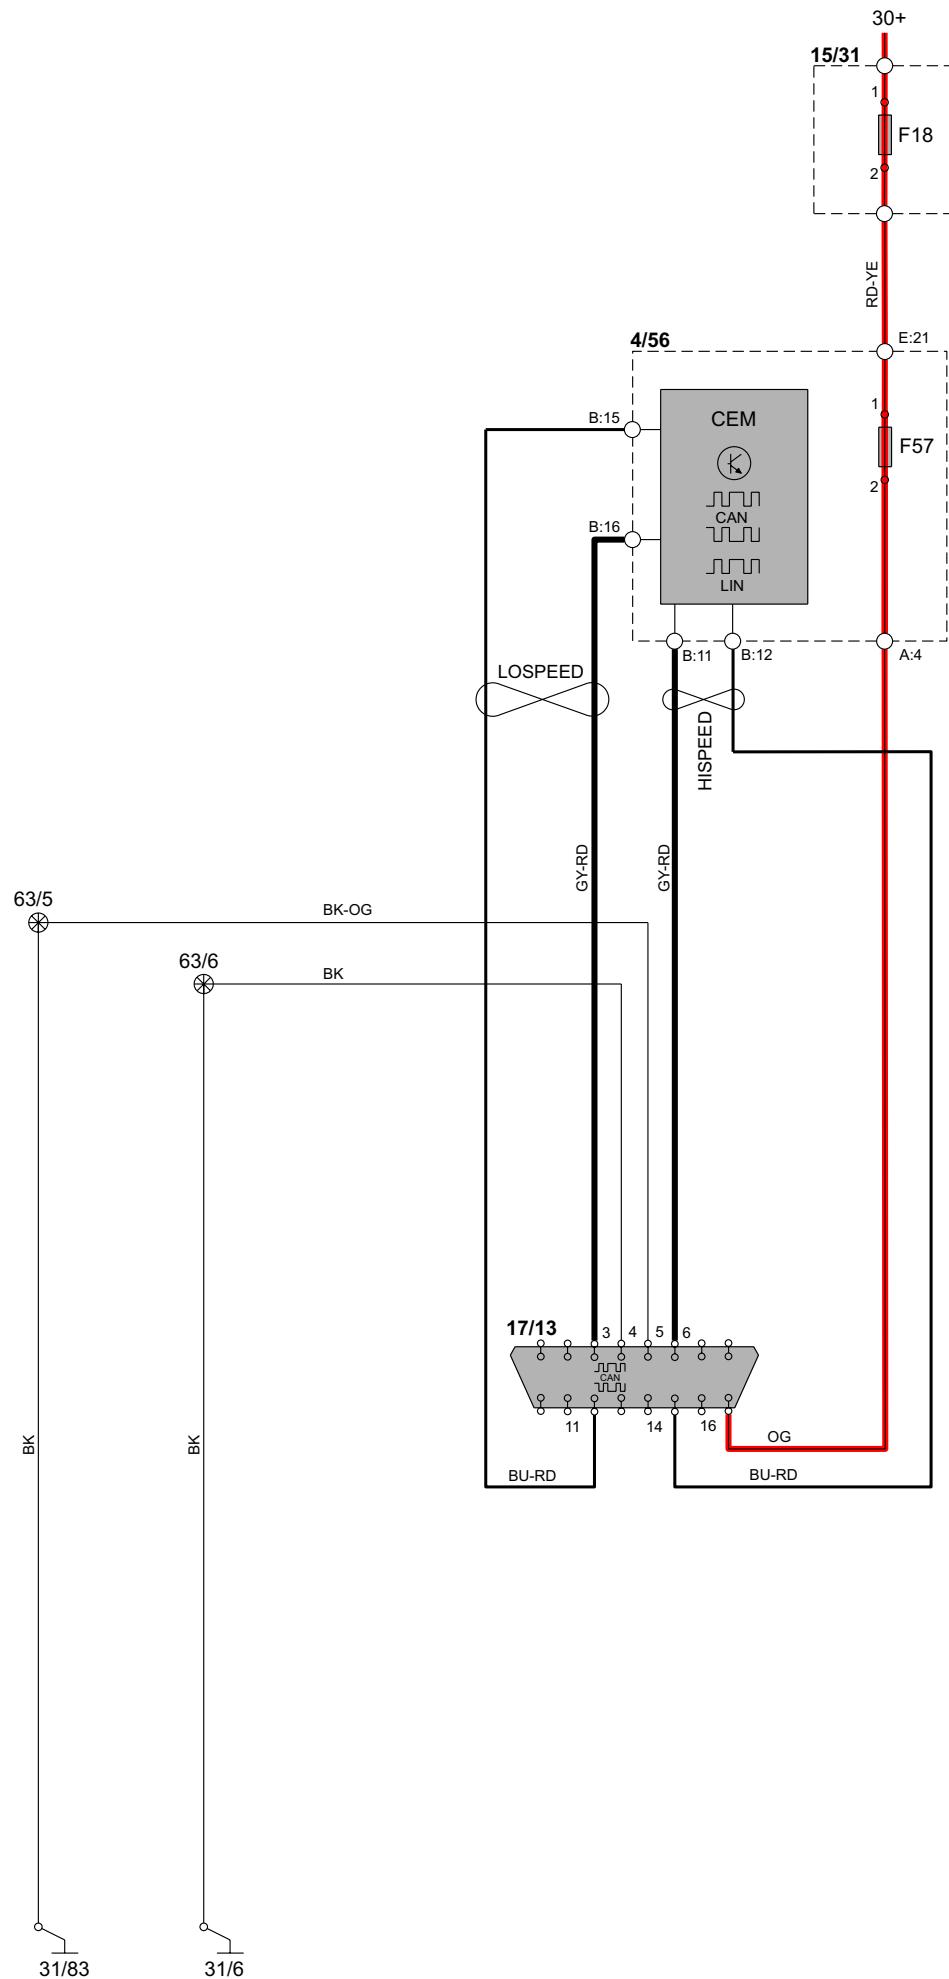


Group 37 Wiring and fuses, Accessories

Tow hitch cable harness, 4-pin

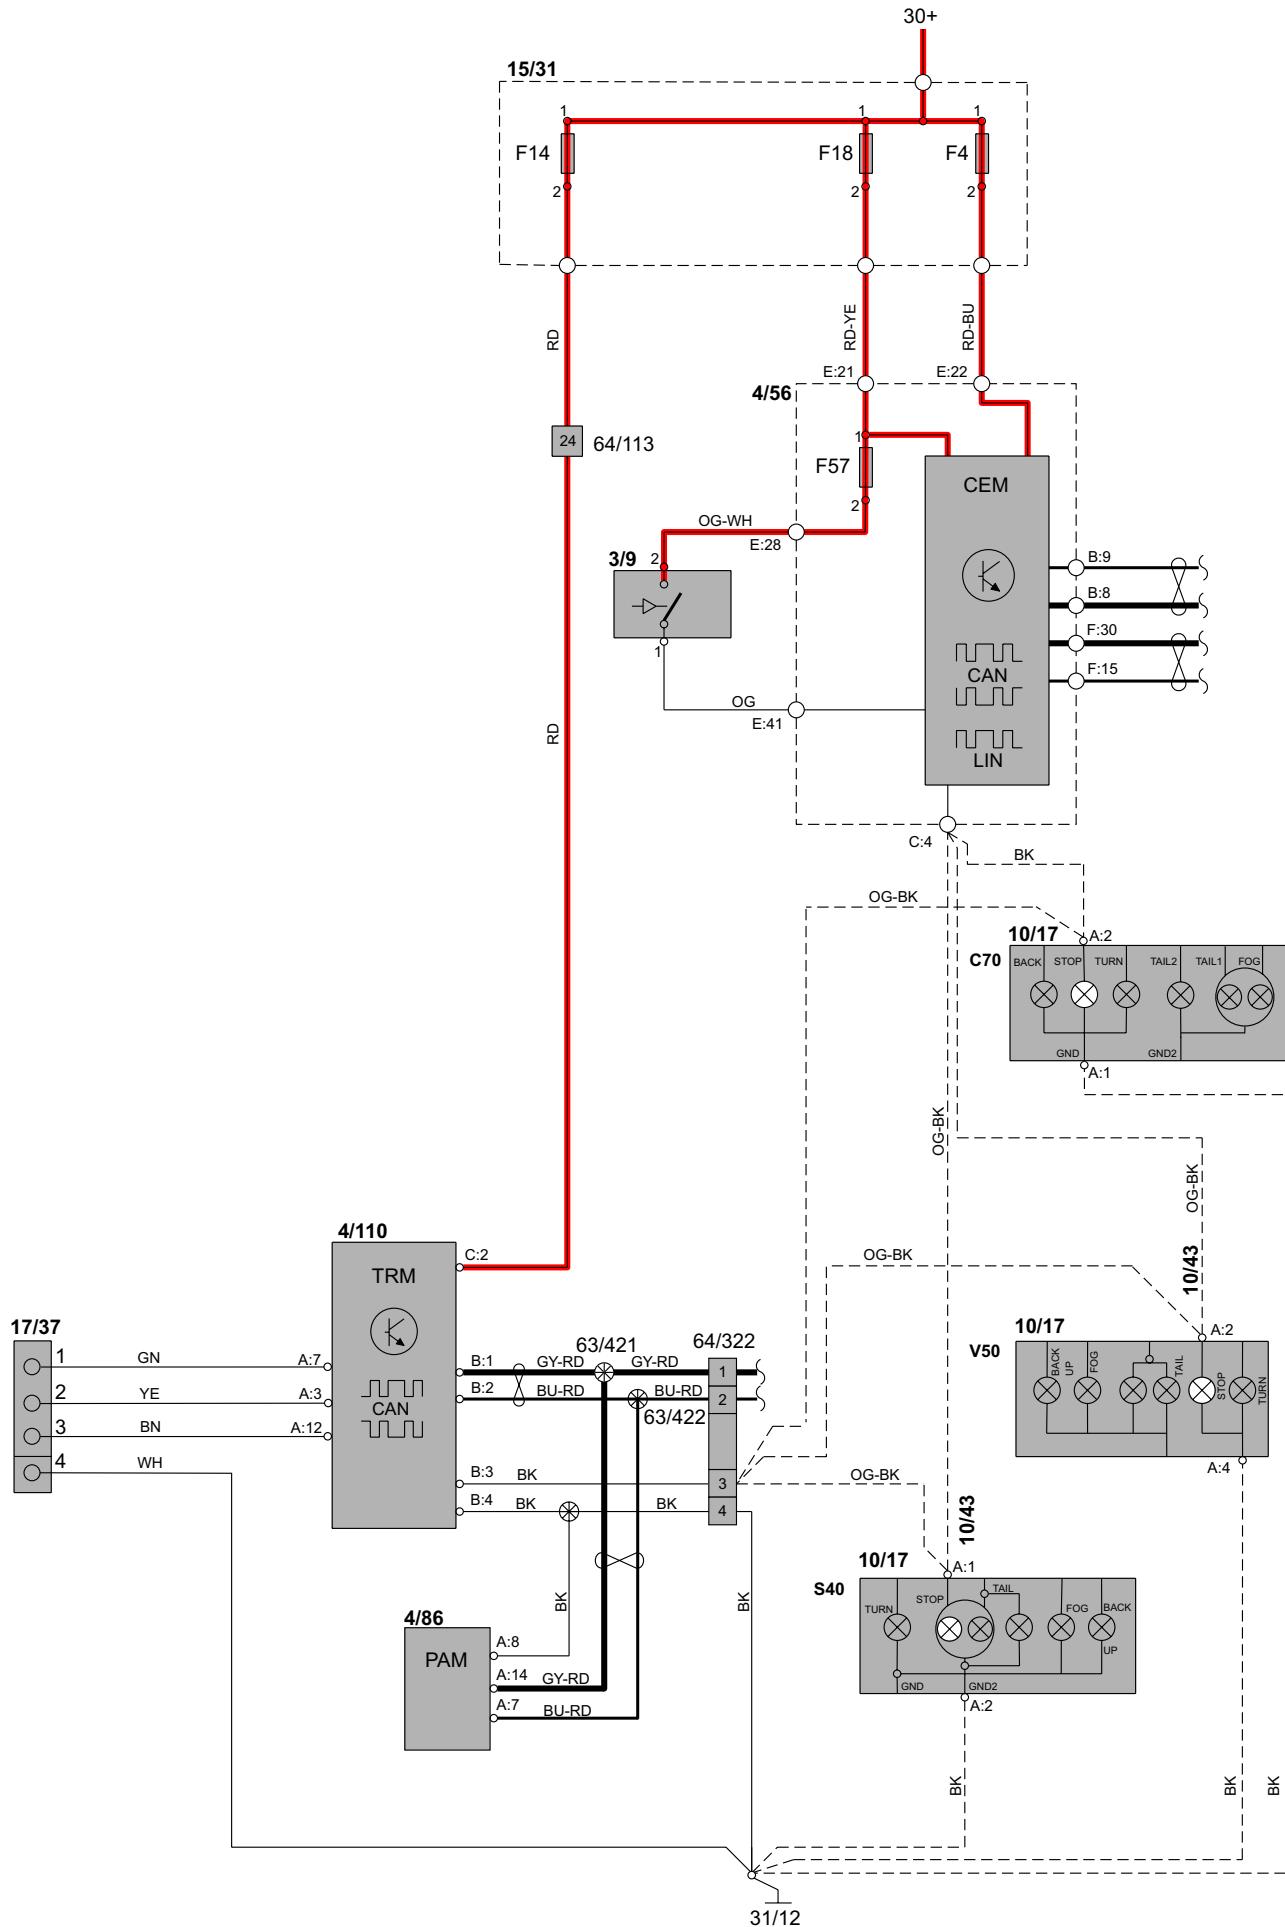


Group 37 Wiring and fuses, Accessories

Tow hitch cable harness, 7-pin

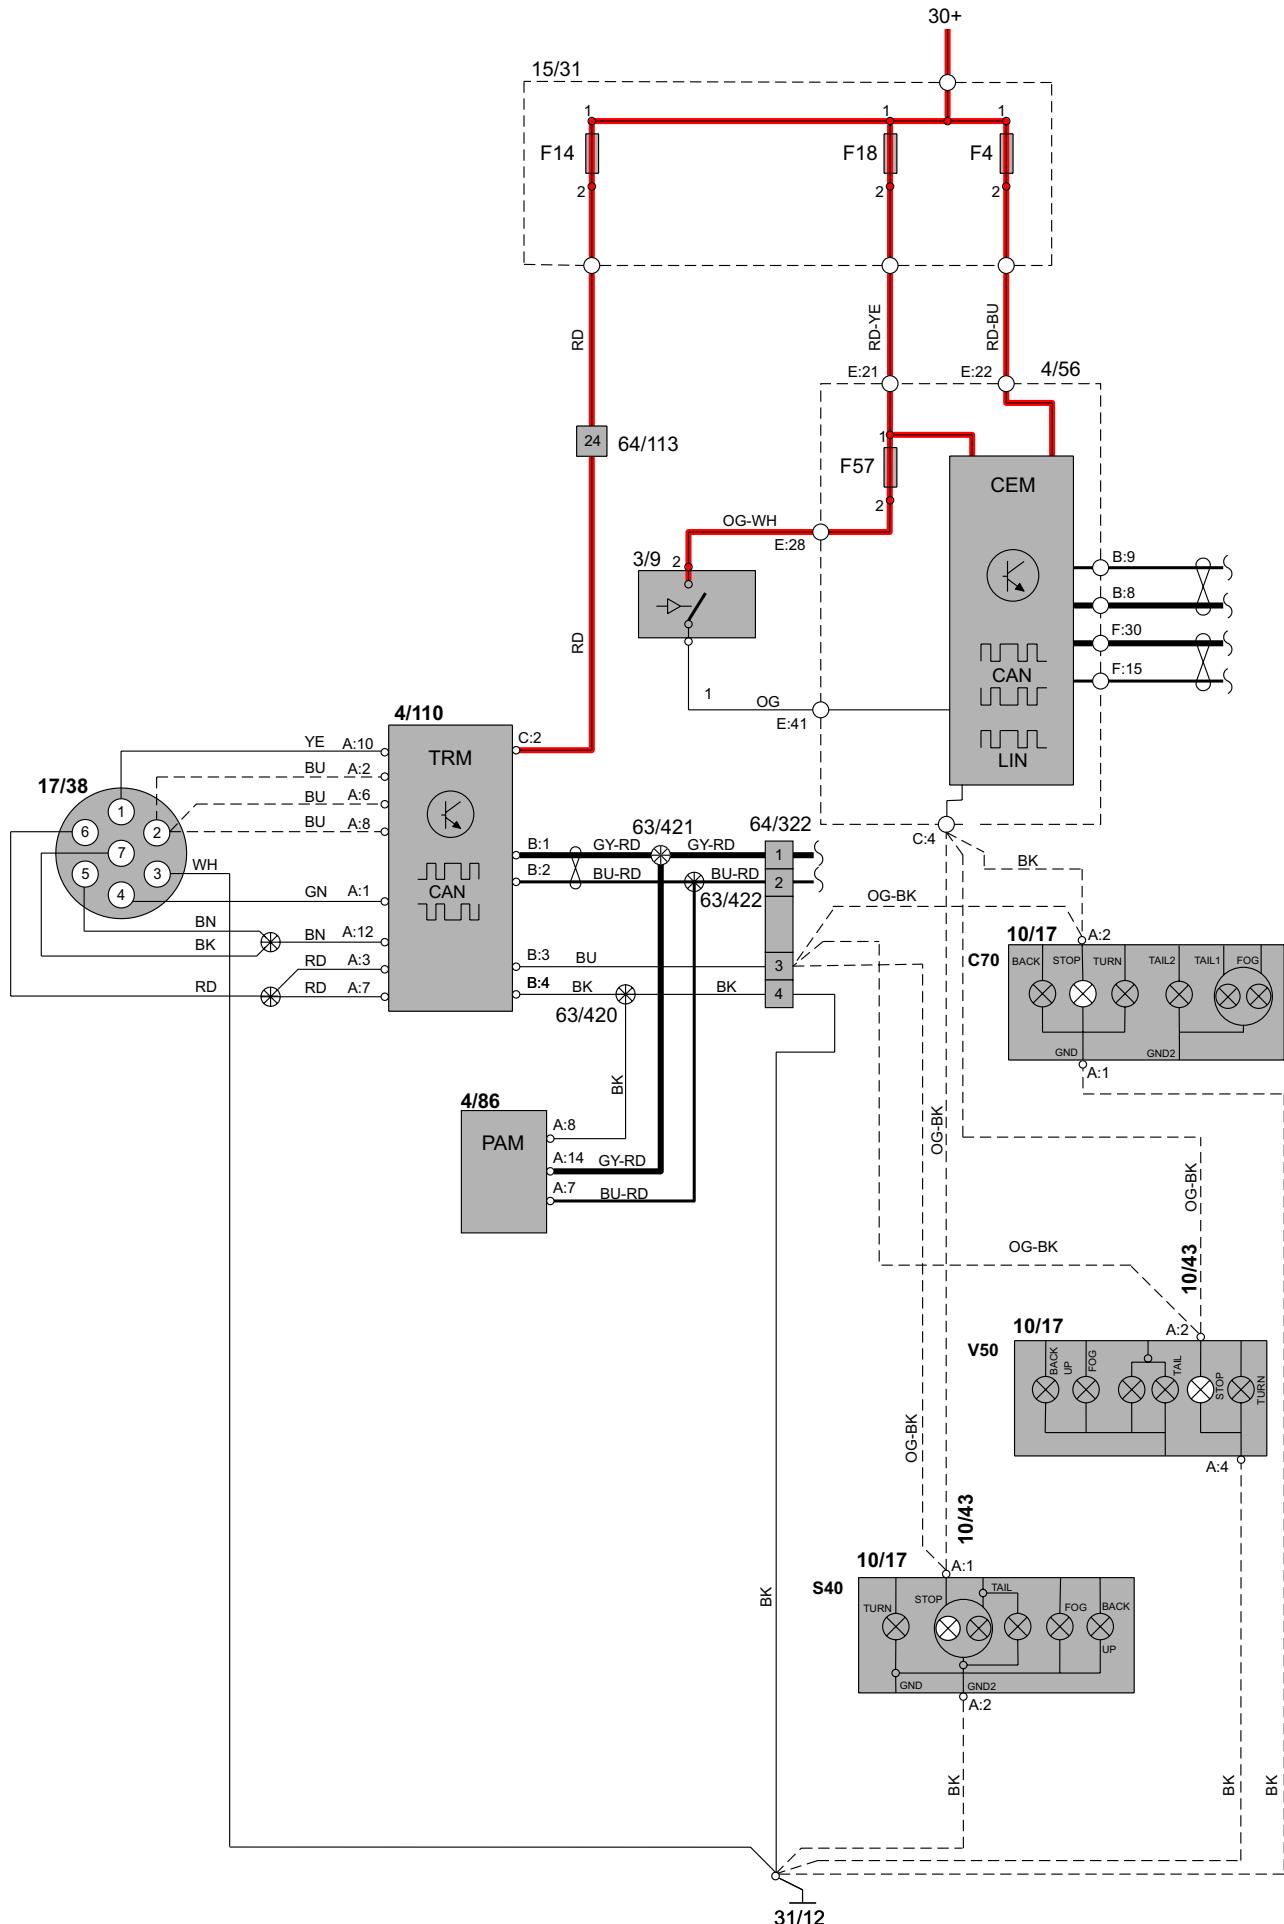


Group 37 Wiring and fuses, Accessories Tow hitch cable harness, 13-pin

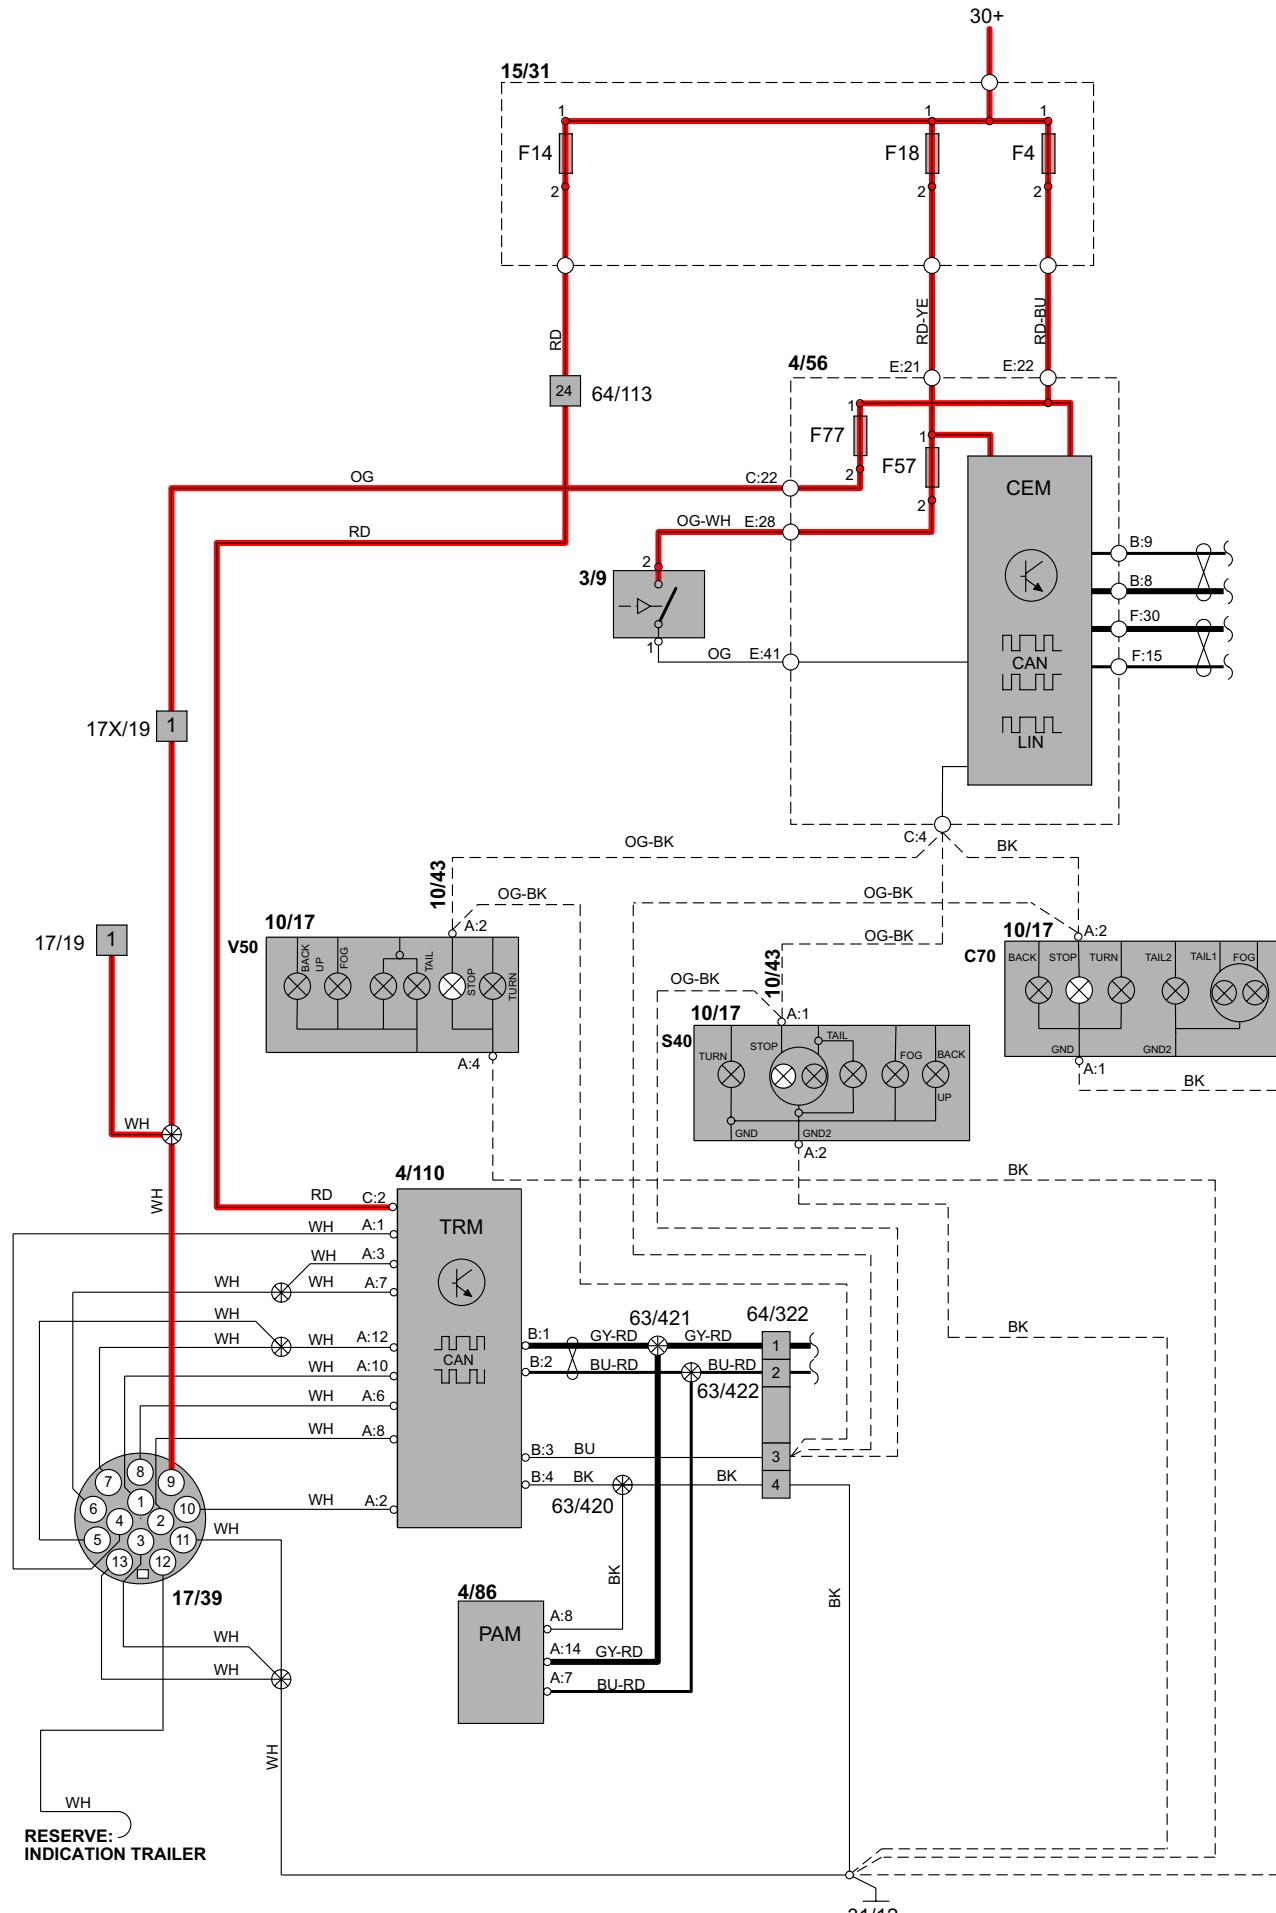


Group 38 Instruments

Driver information module

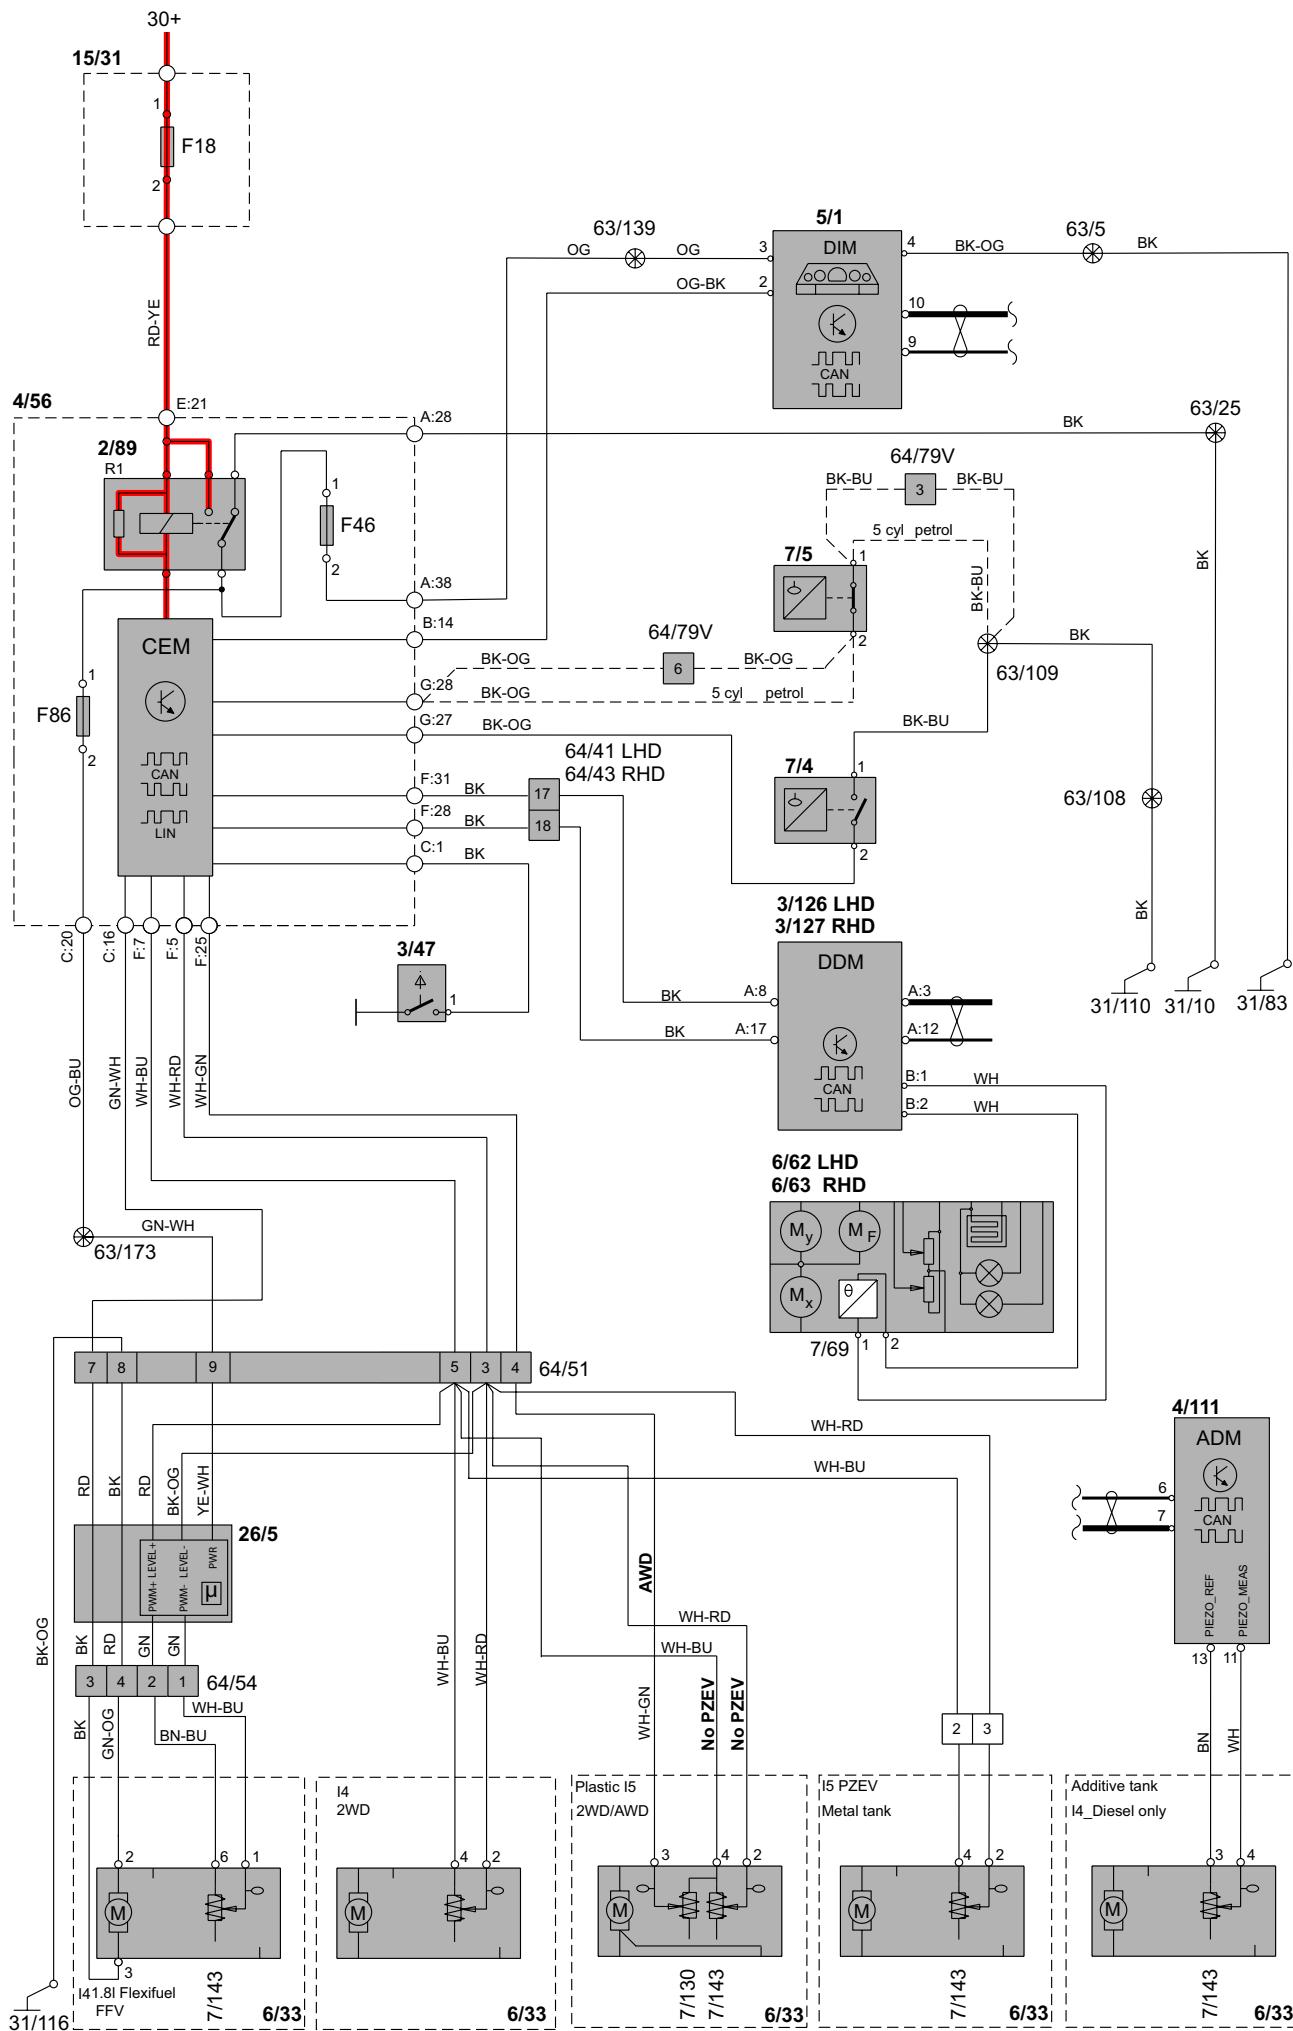


Group 38 Instruments

Seat belt reminder S40/V50

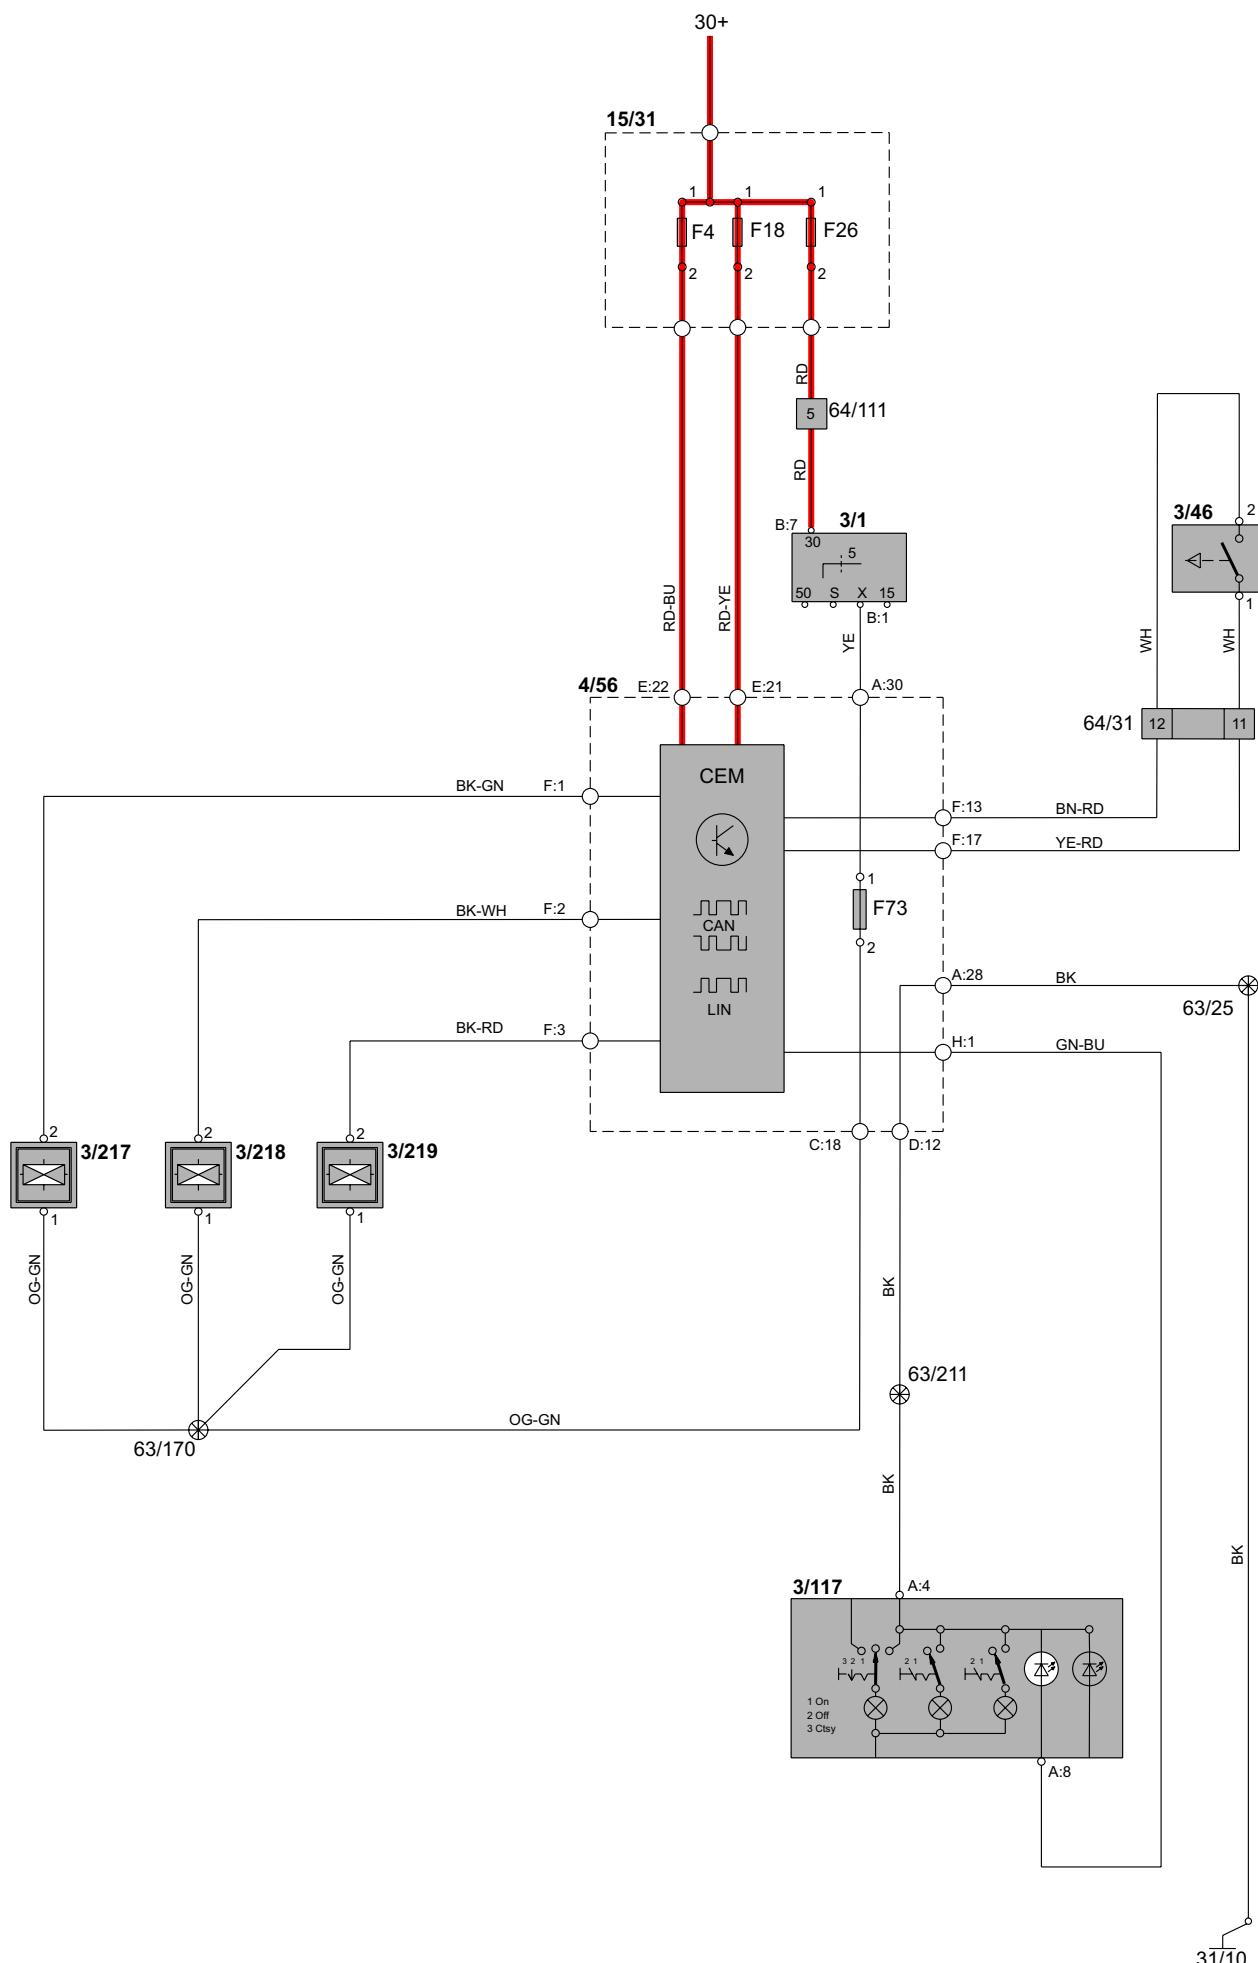


Group 38 Instruments


Seat belt reminder C70

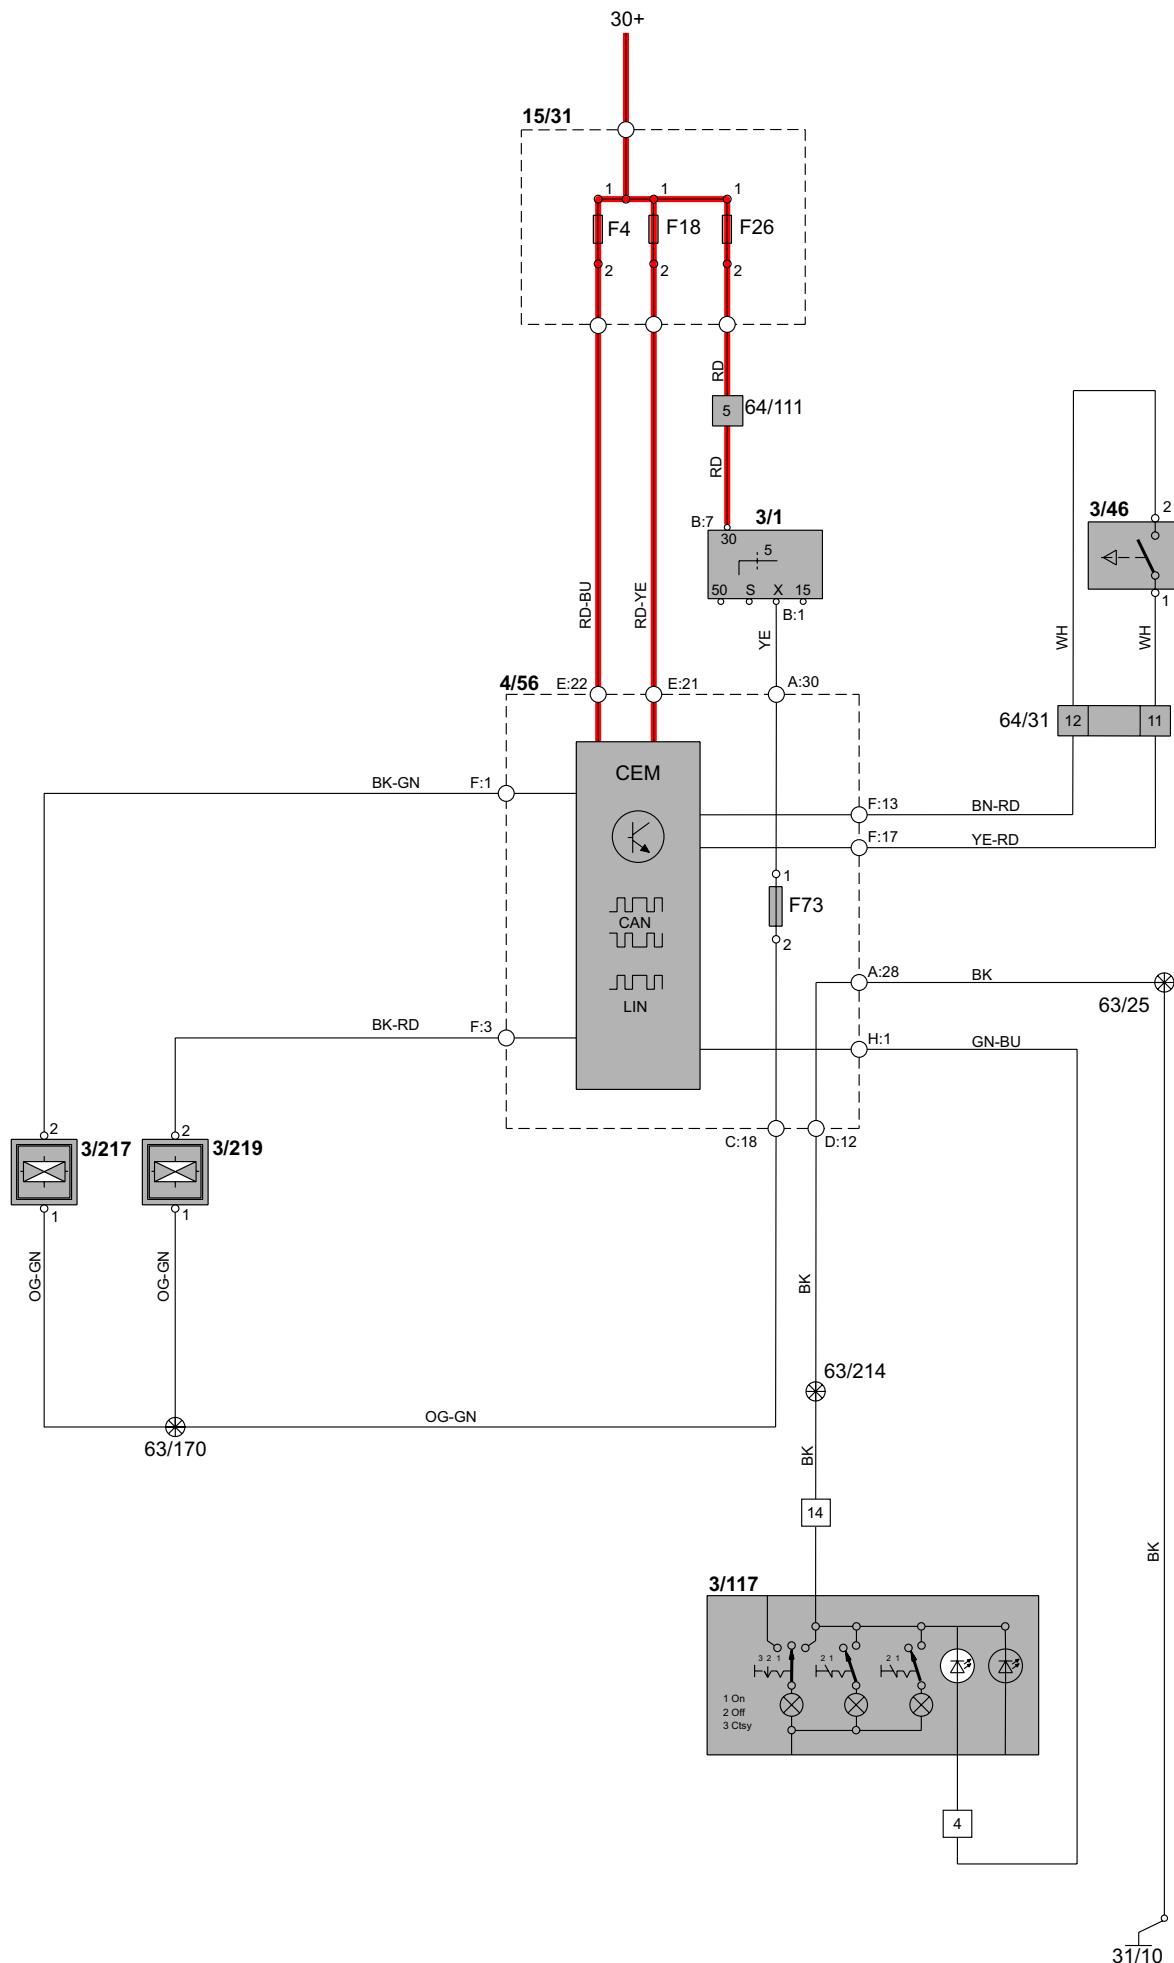


**Group 39 Other
Audio S40/V50 1:2**

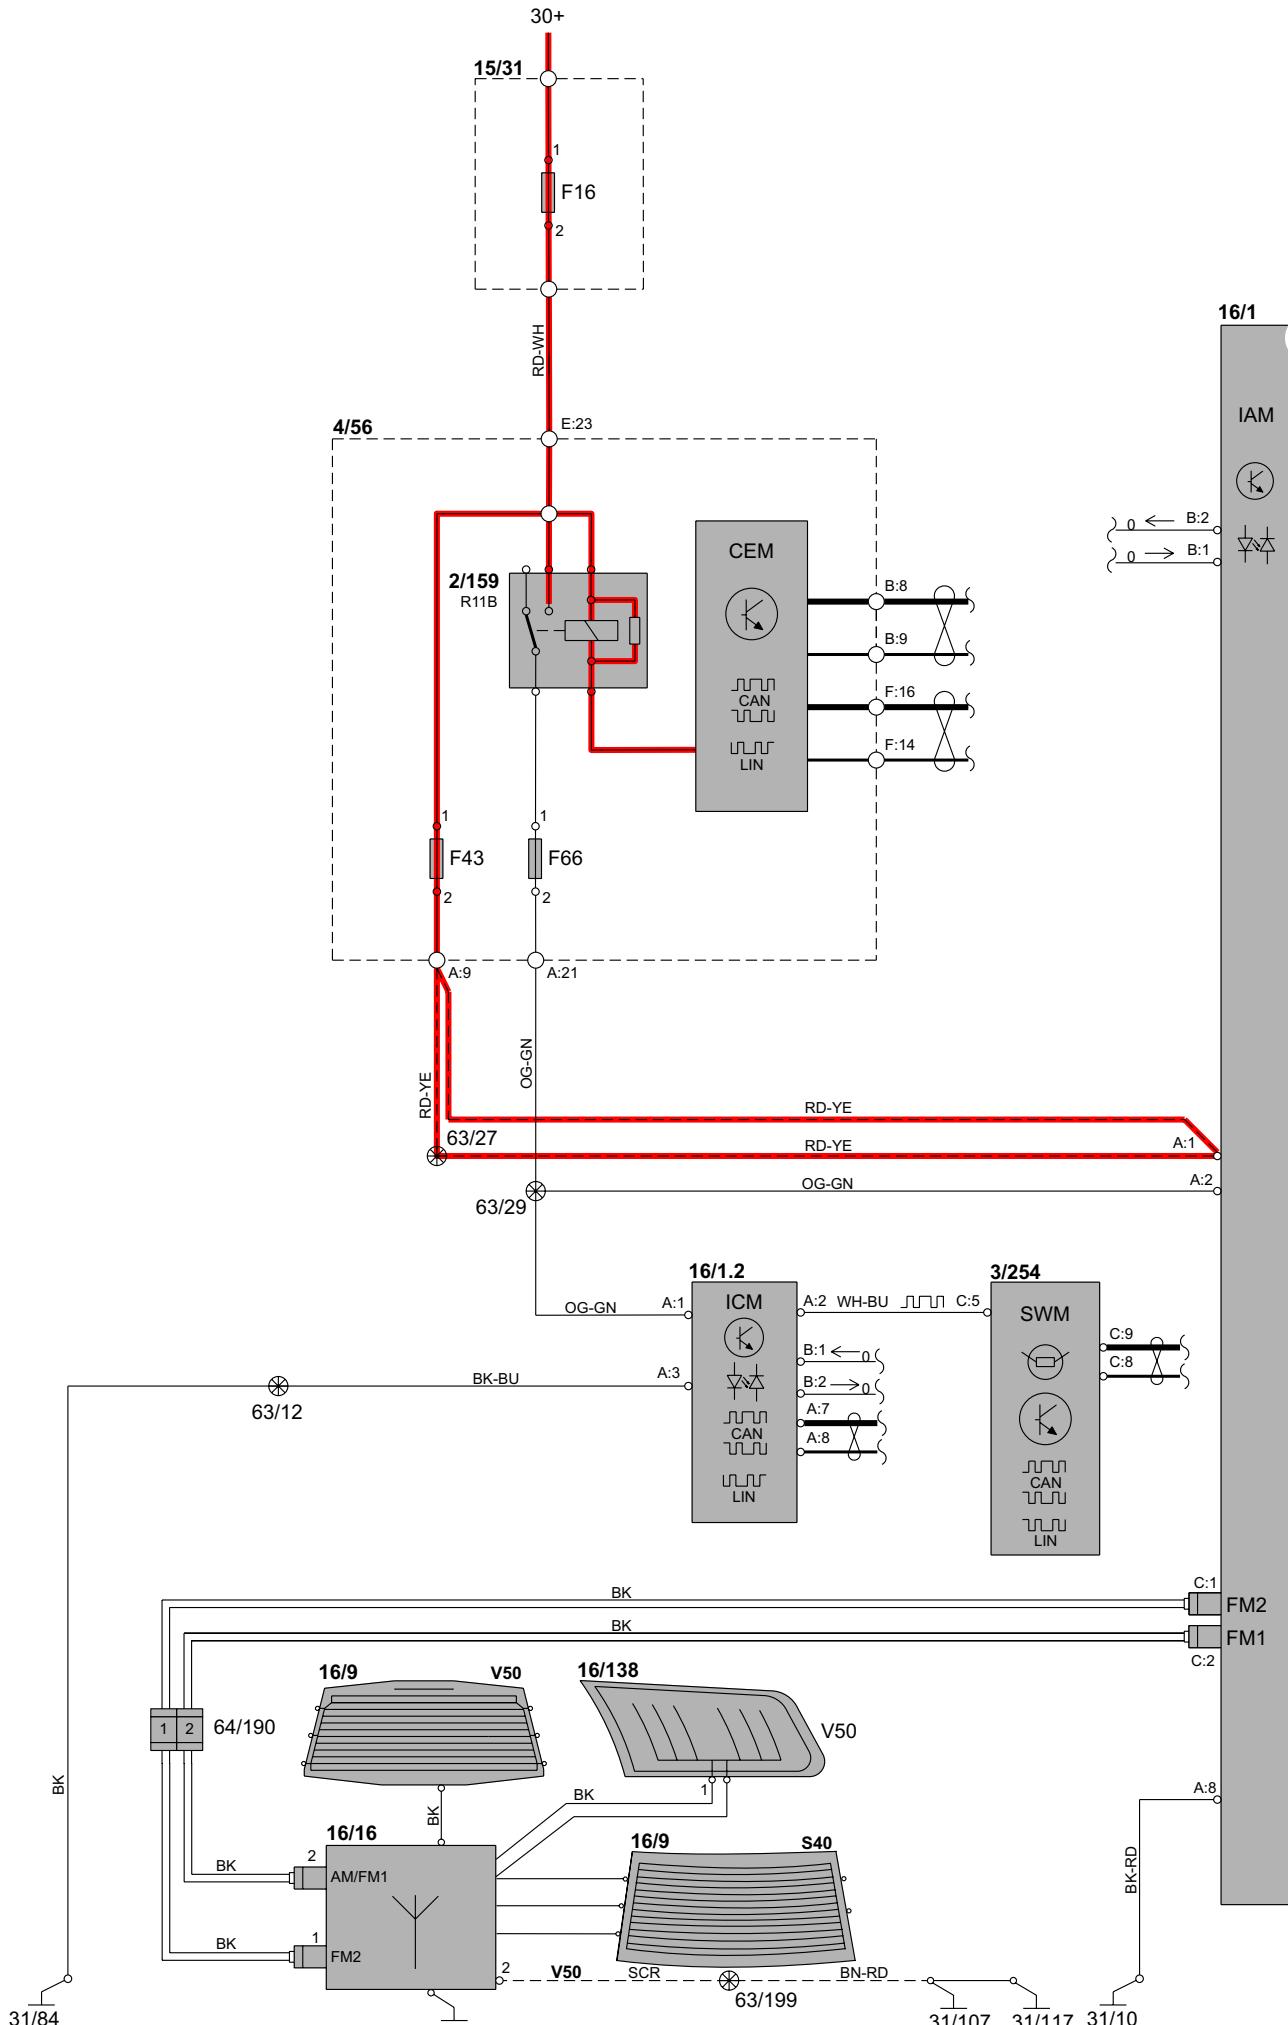


**Group 39 Other
Audio S40/V50 2:2**

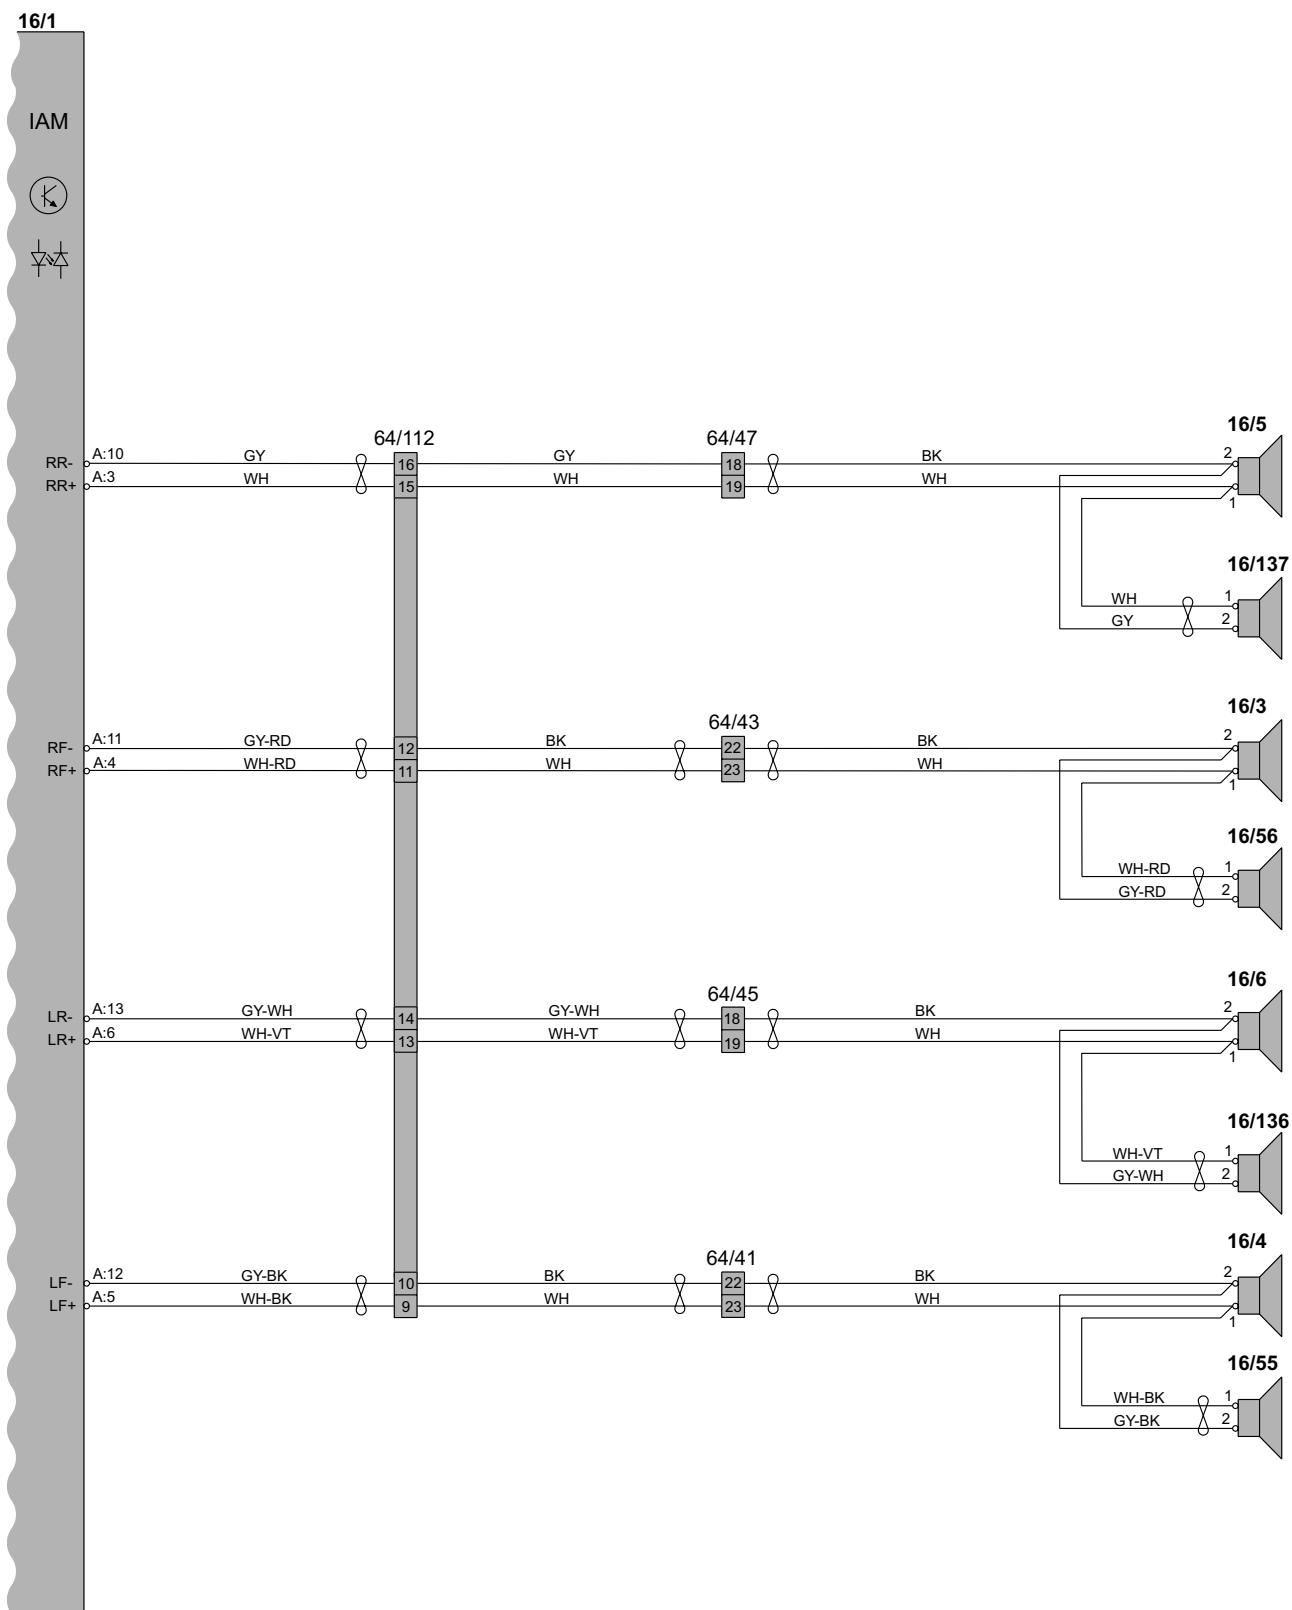


**Group 39 Other
Audio C70 1:2**

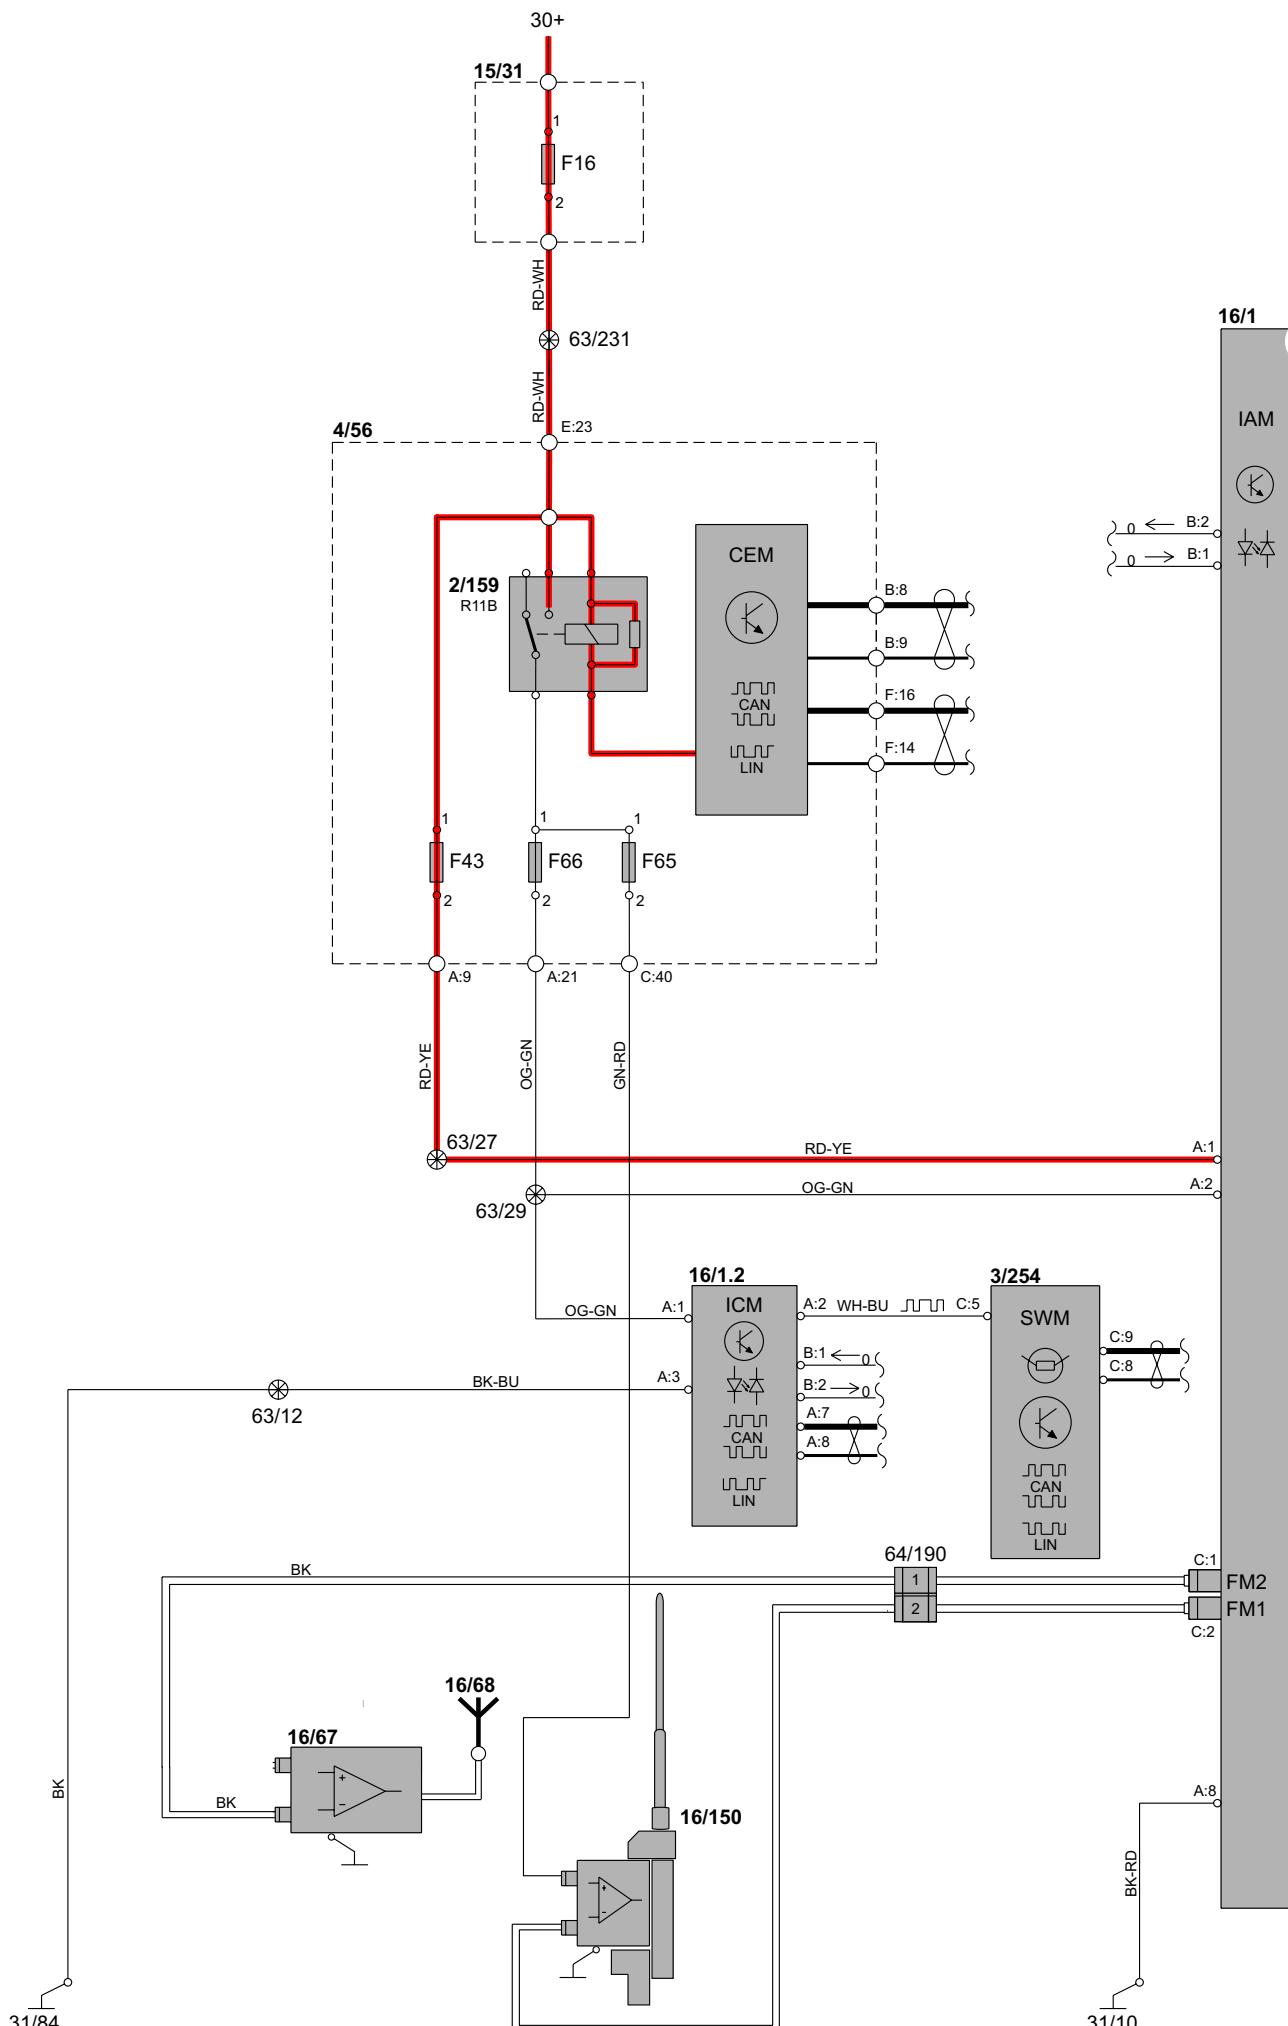

**Group 39 Other
Audio C70 2:2**

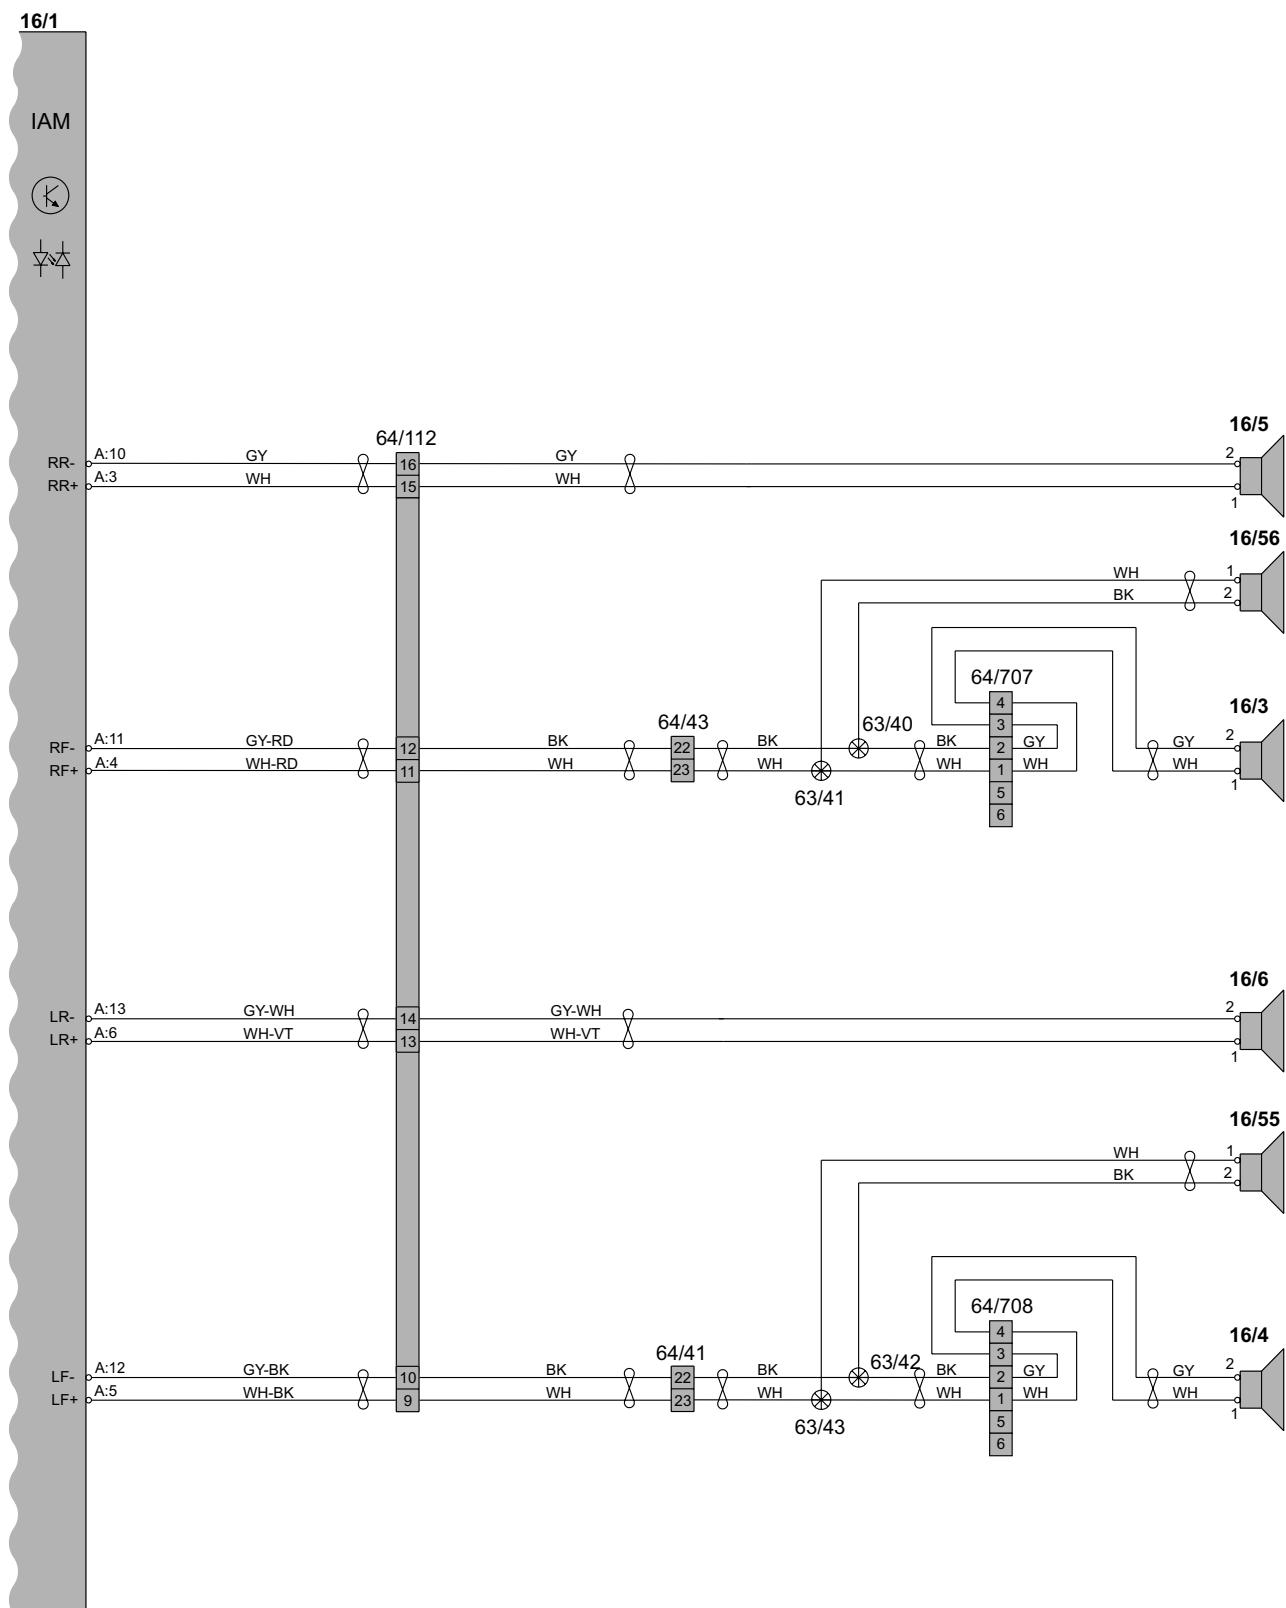


Group 39 Other
Audio High Performance/Premium Sound S40/V50 1:2

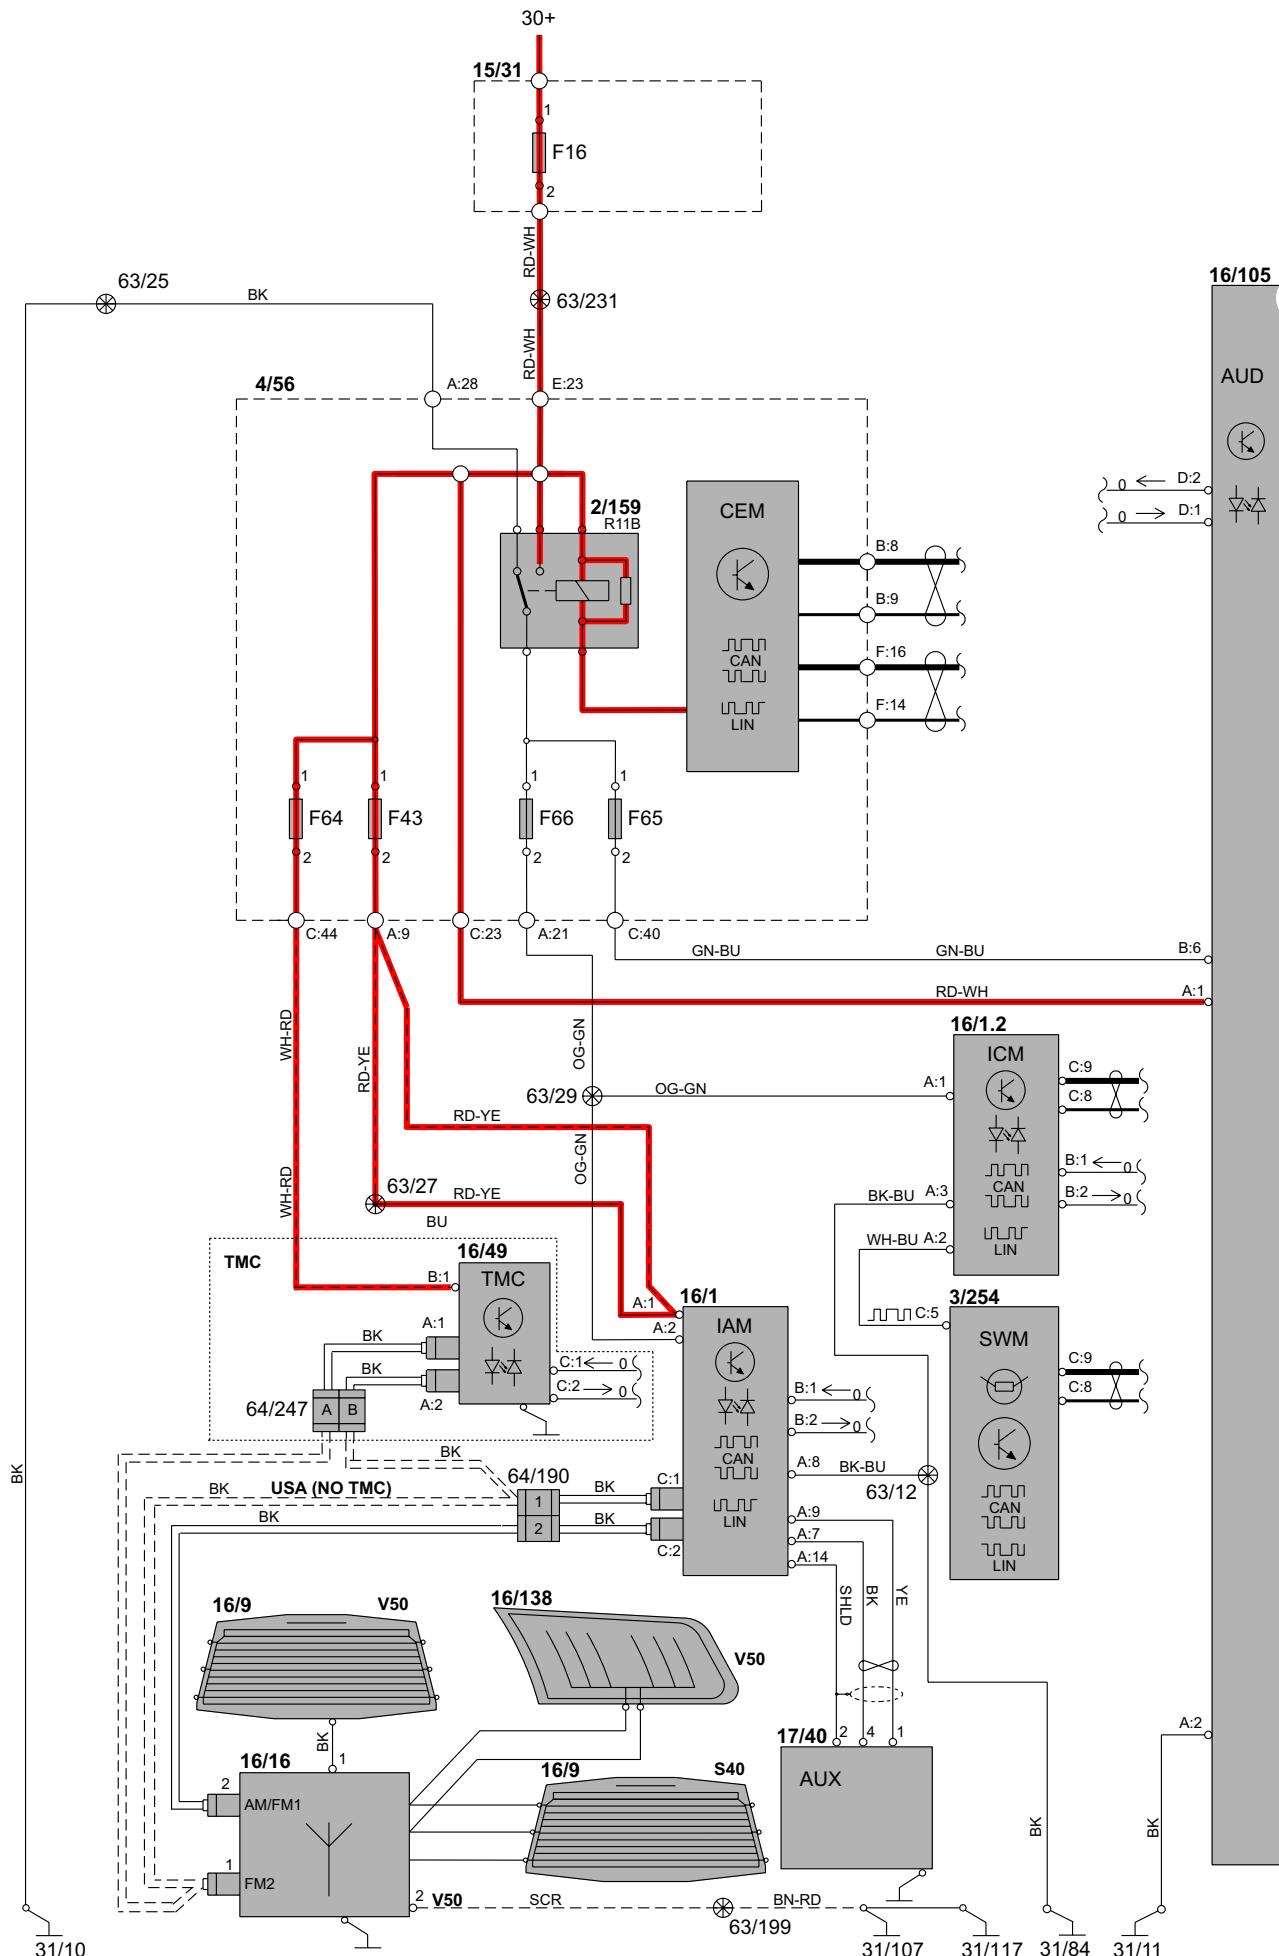


Group 39 Other

Audio High Performance/Premium Sound S40/V50 2:2

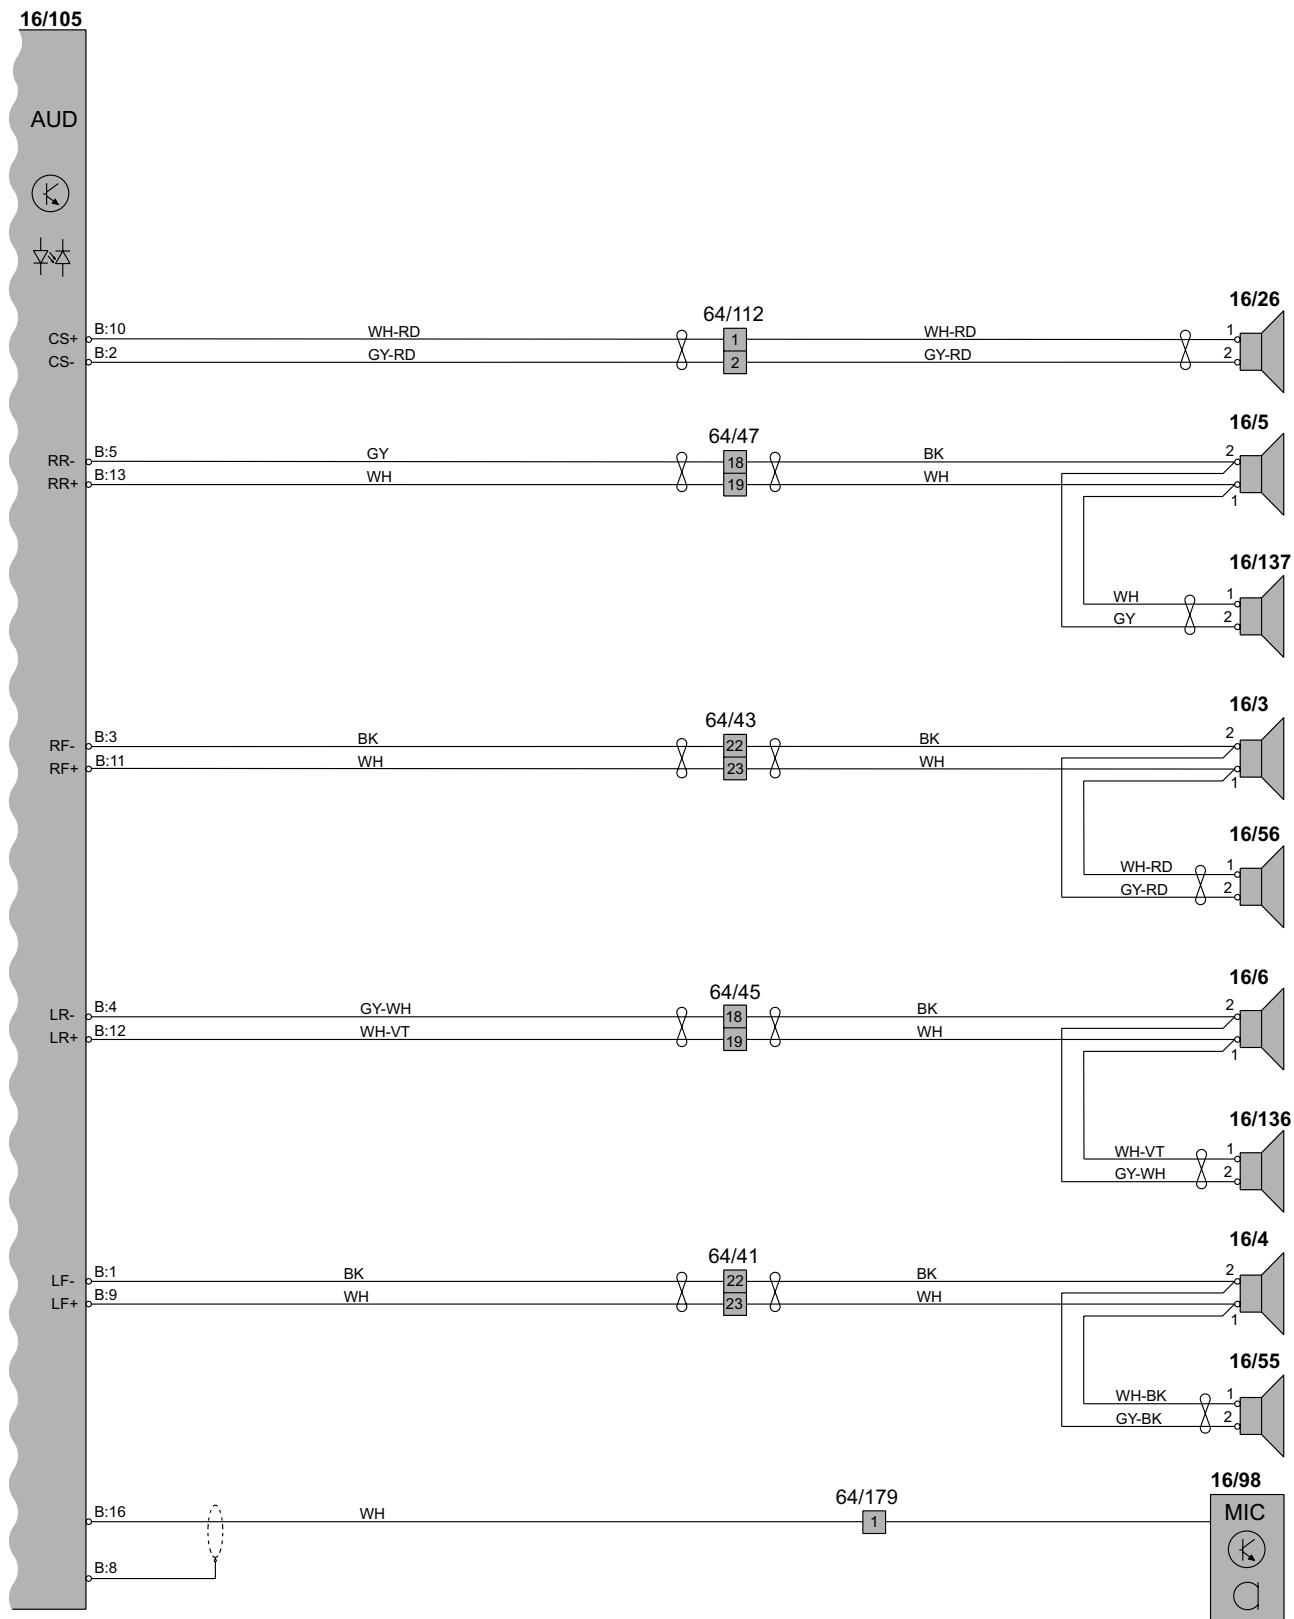


Group 39 Other
Audio High Performance/Premium Sound C70 1:2

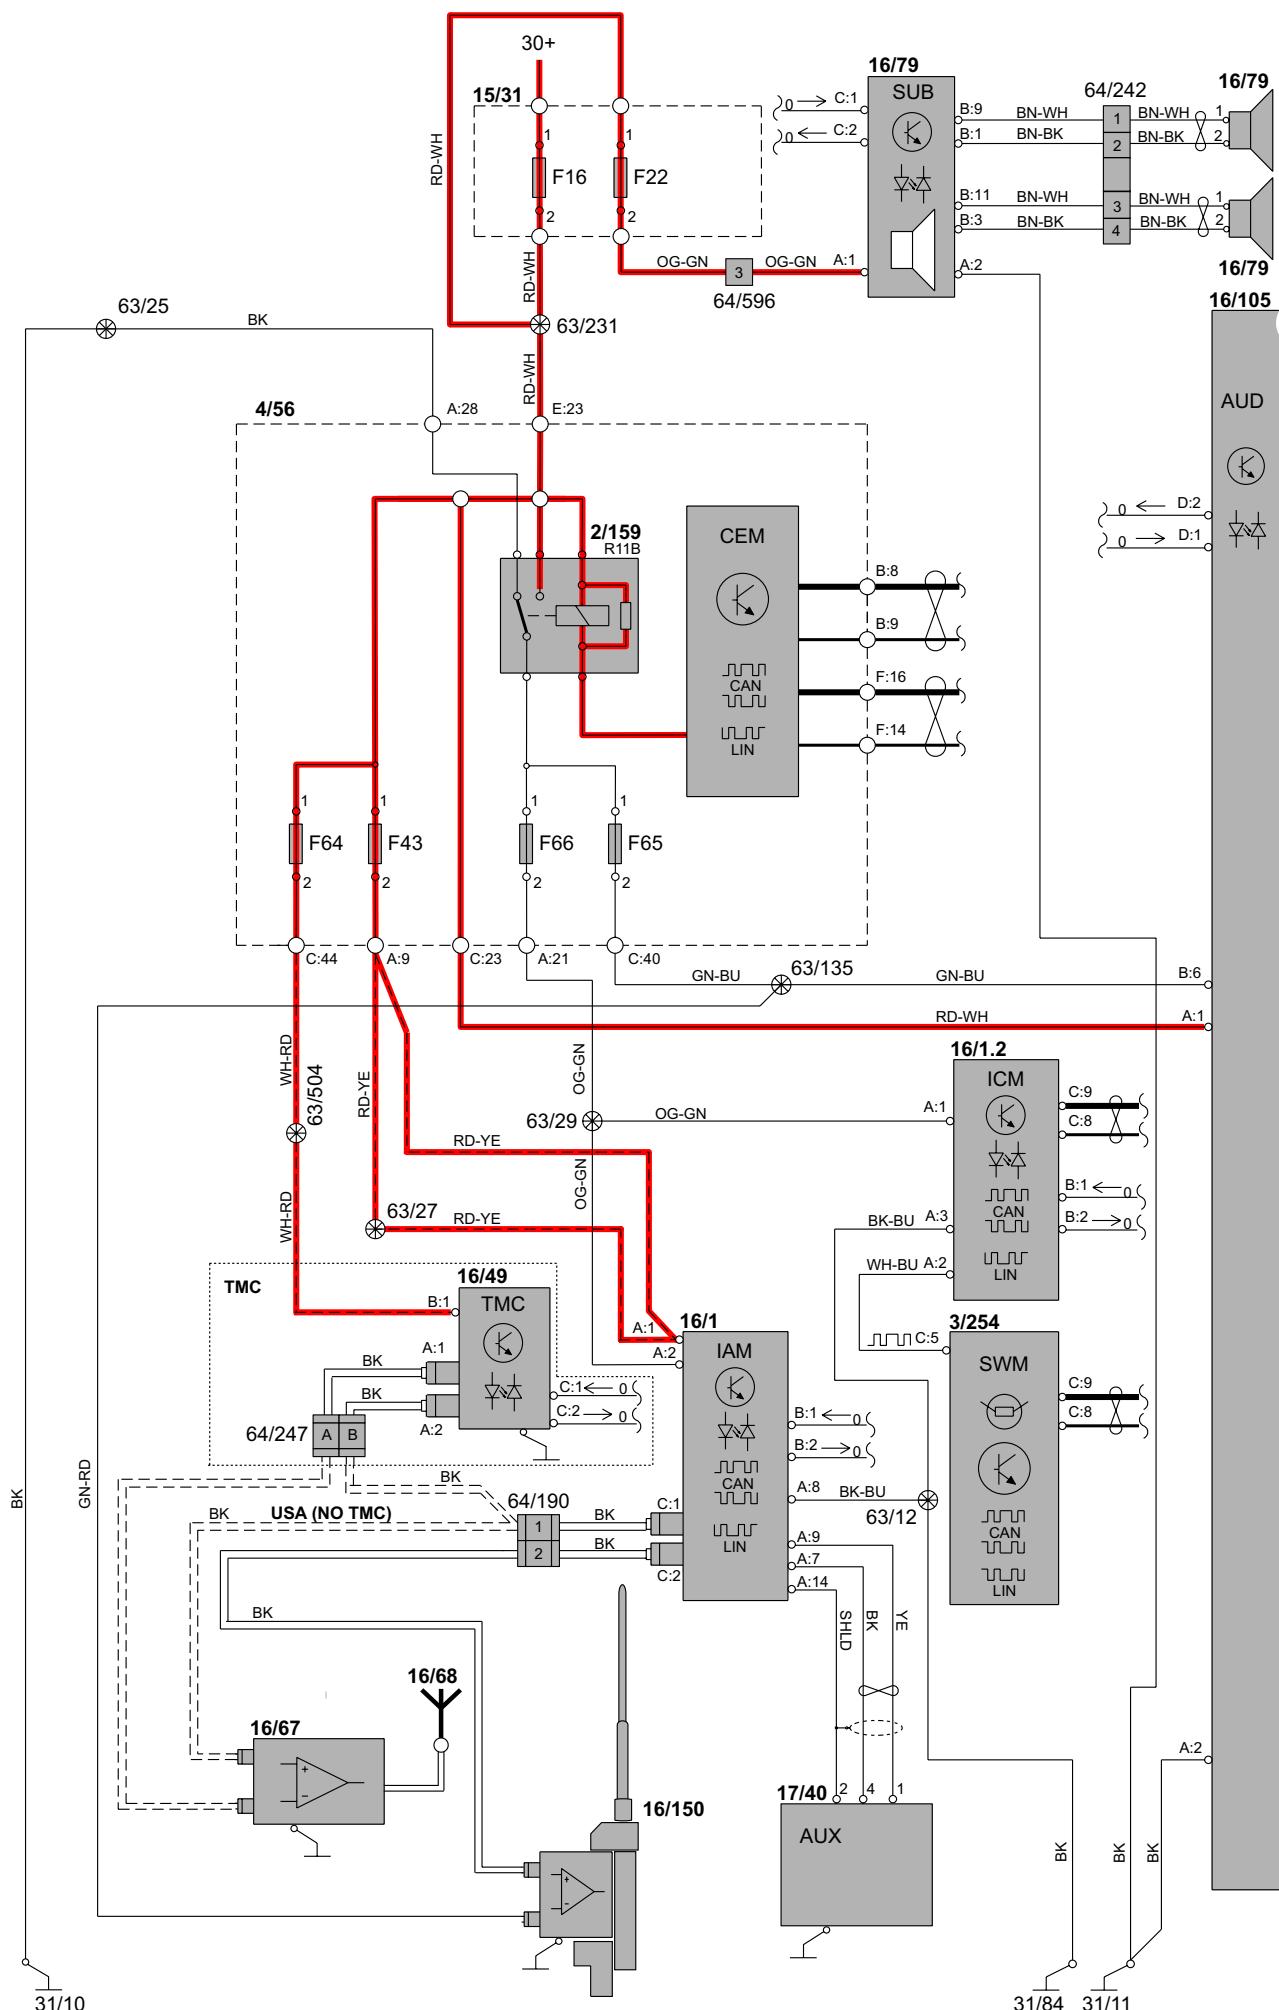


Group 39 Other

Audio High Performance/Premium Sound C70 2:2

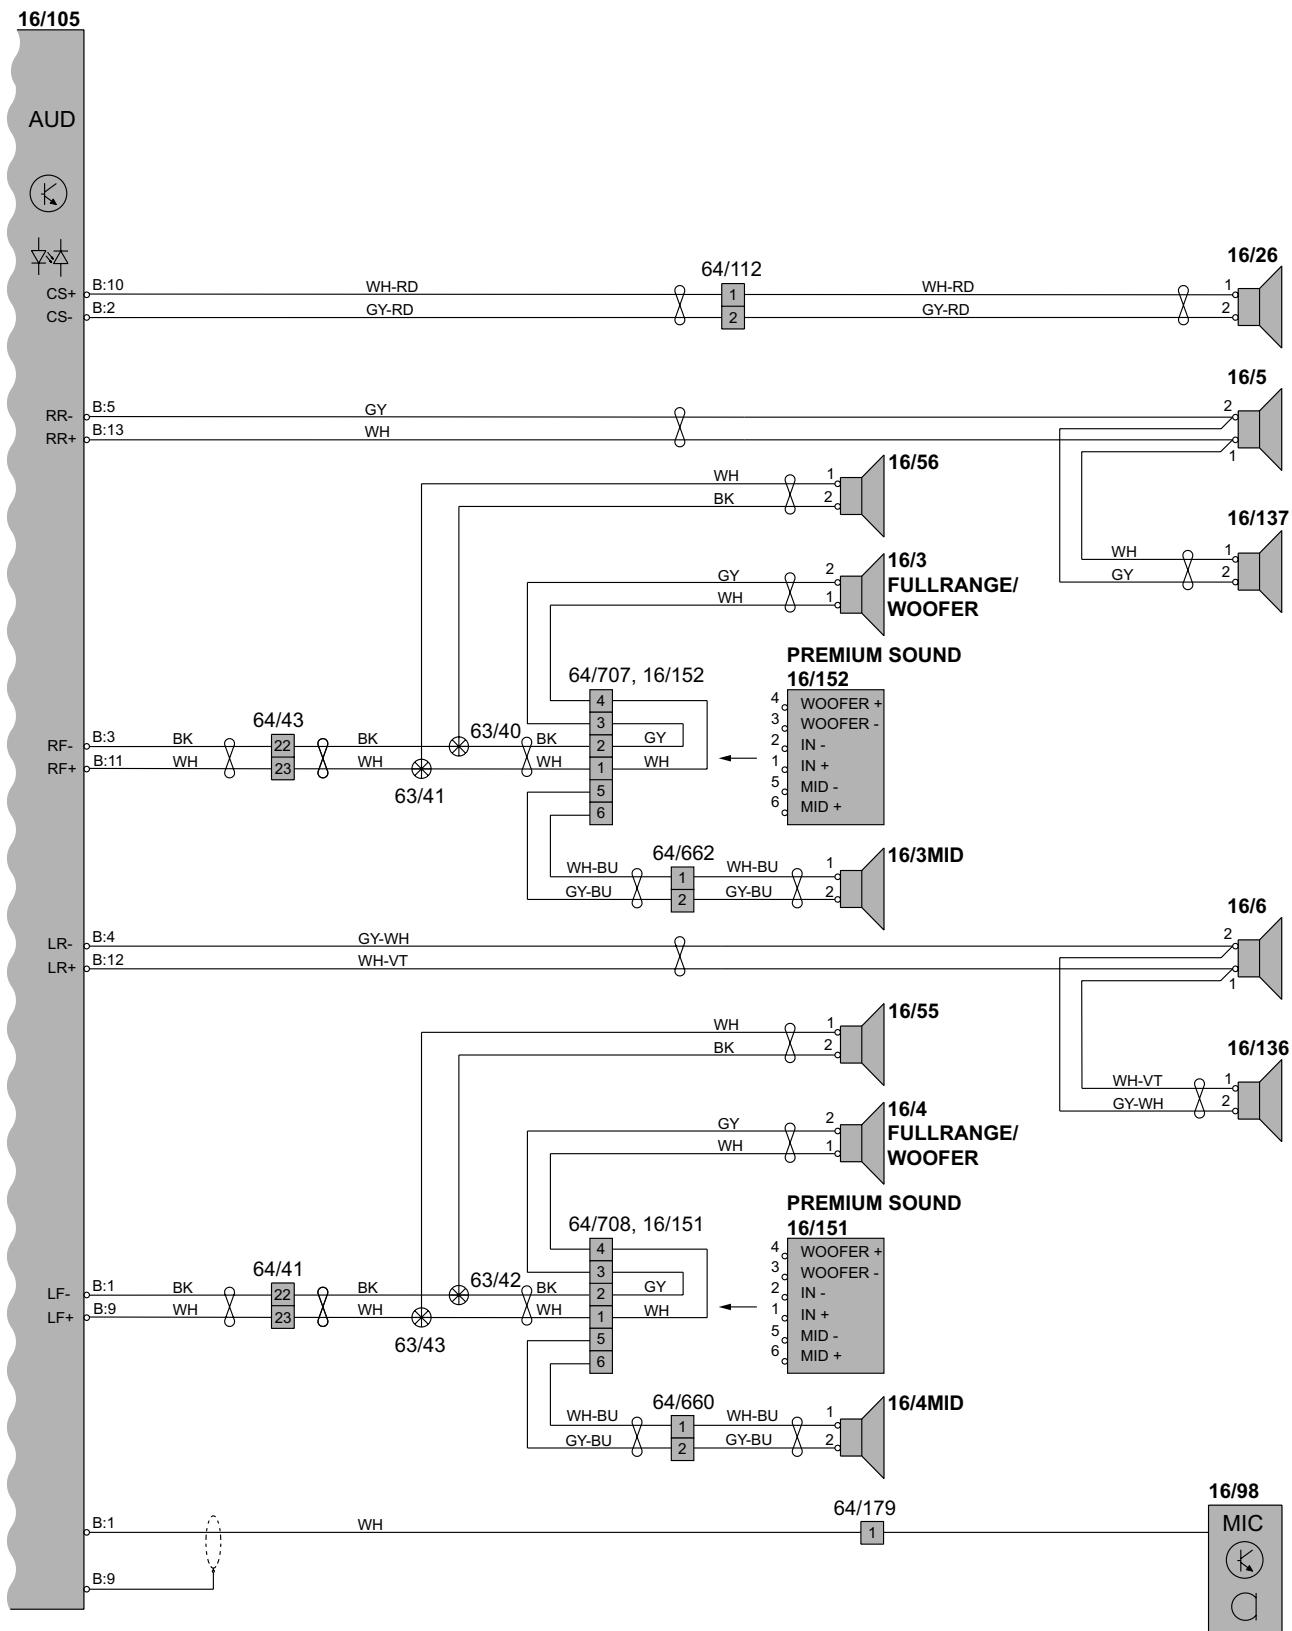


Group 39 Other


Cellular phone 1:2

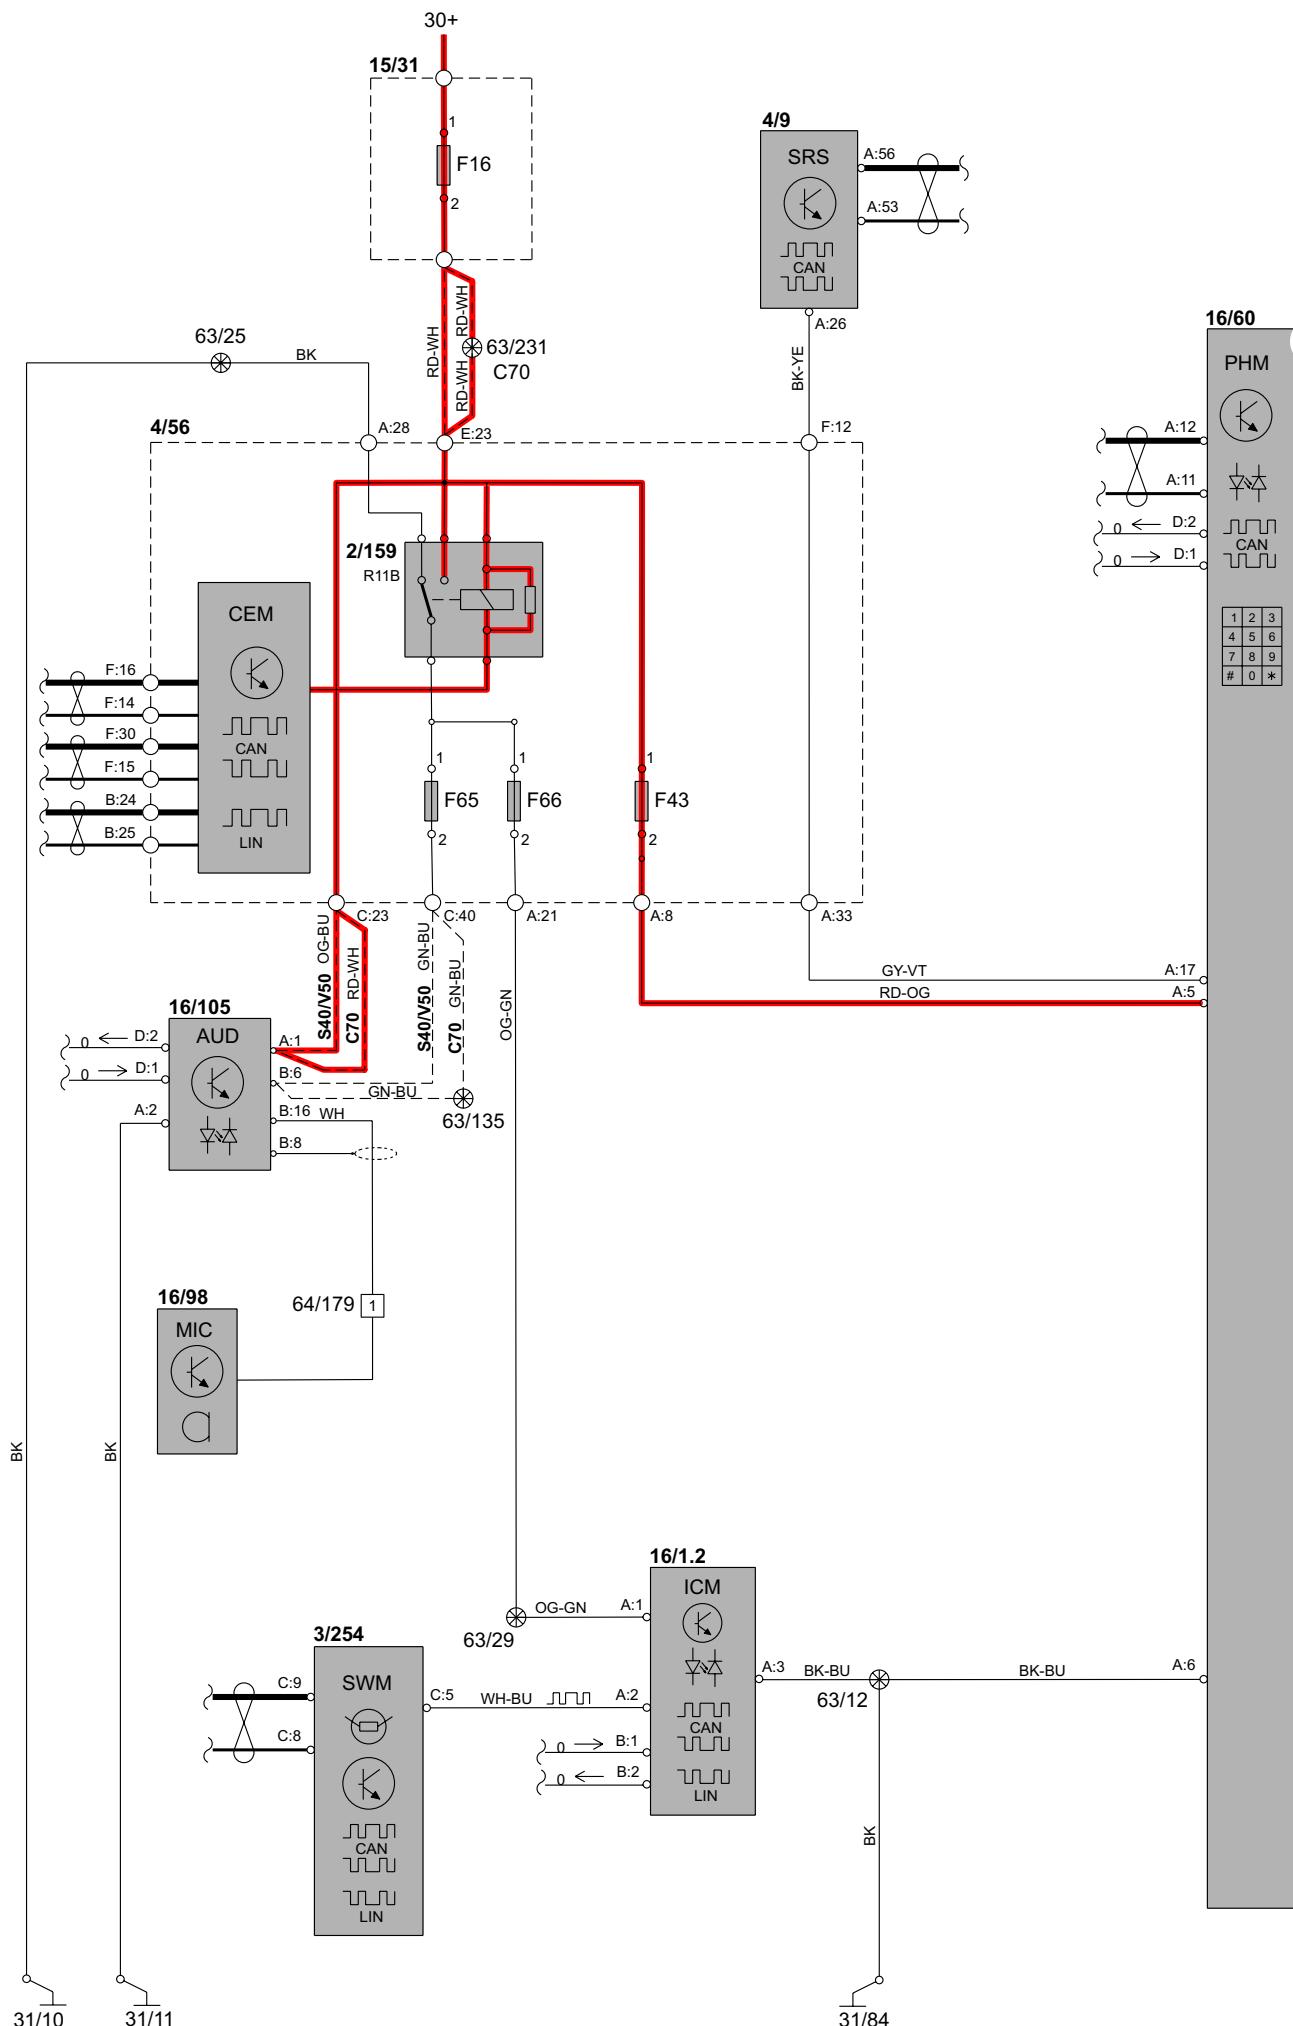

Group 39 Other Cellular phone 2:2

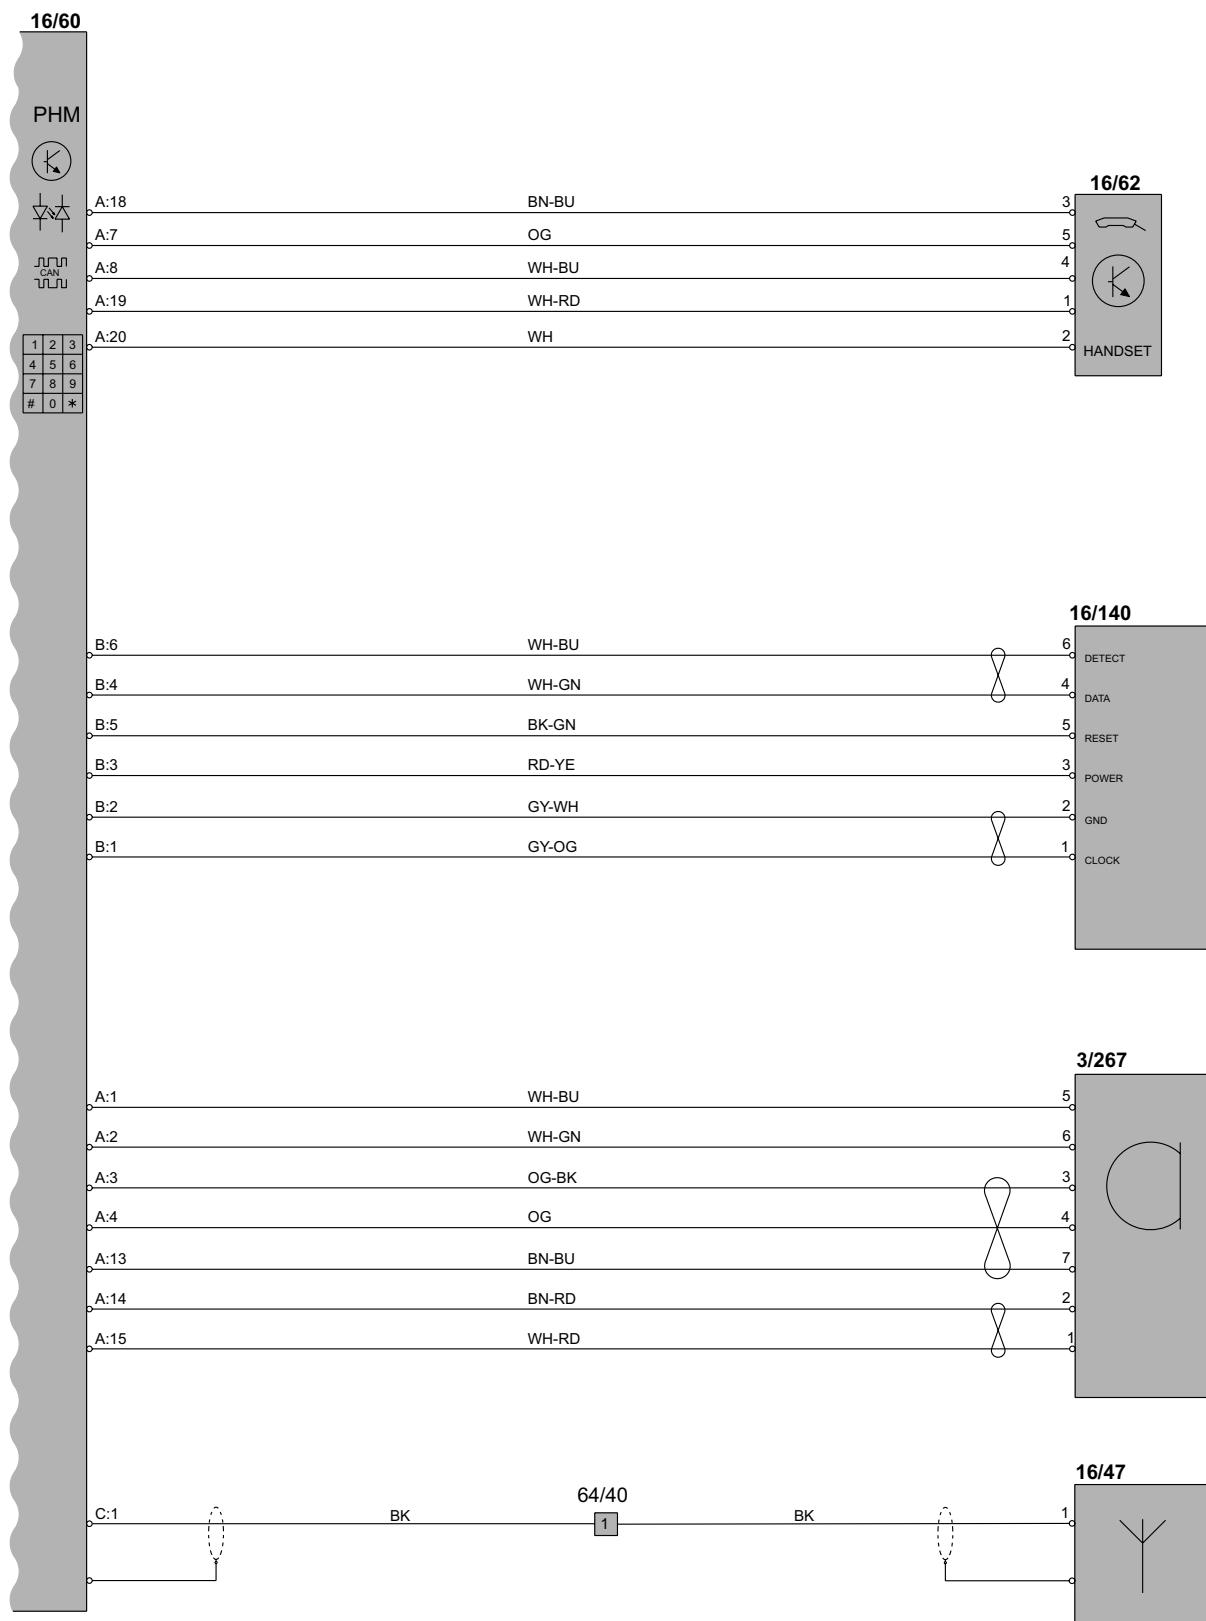


Group 39 Other Satellite radio

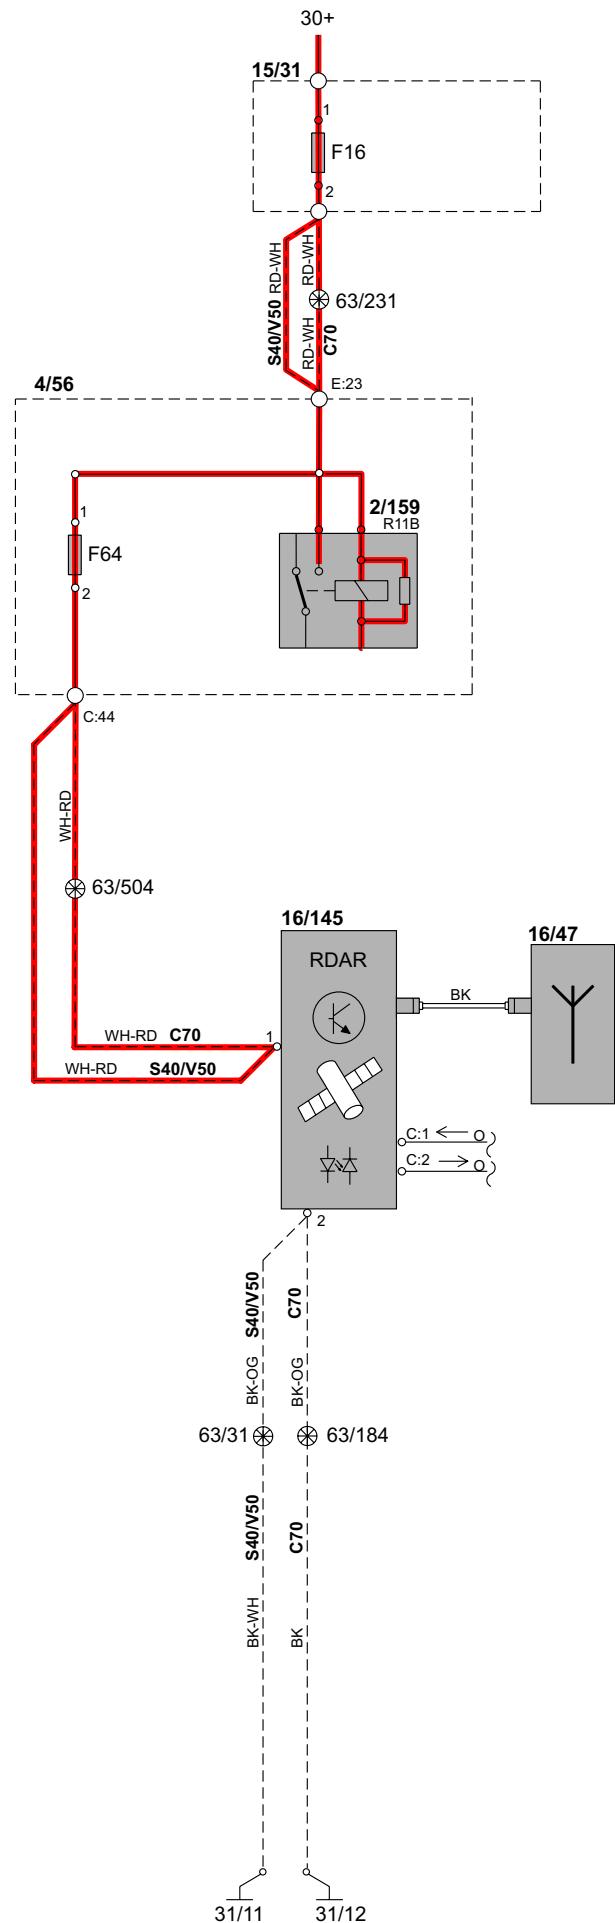


Group 39 Other

Multimedia & Traffic information

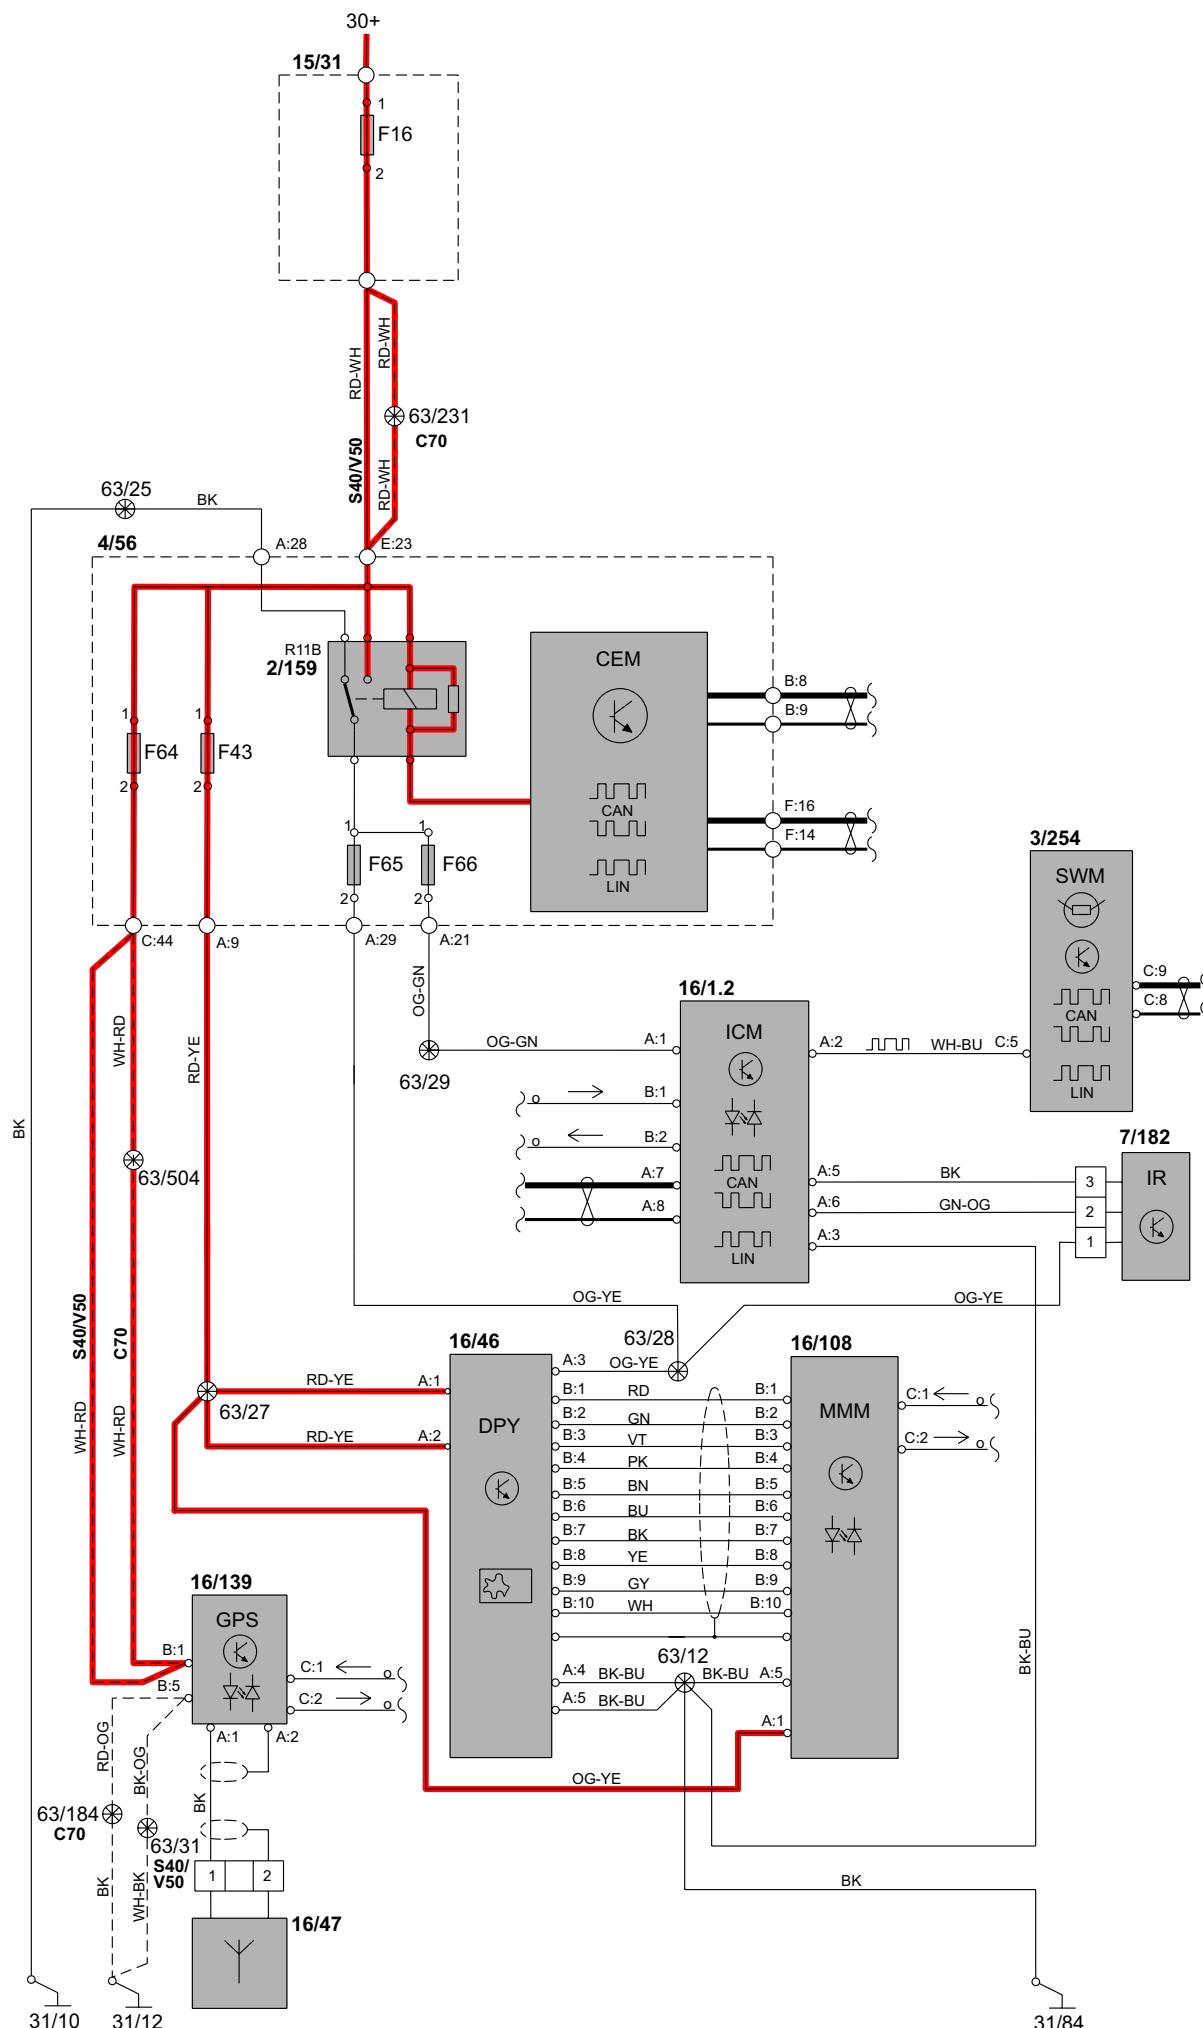


Group 39 Other

Turn by Turn navigation, Audio

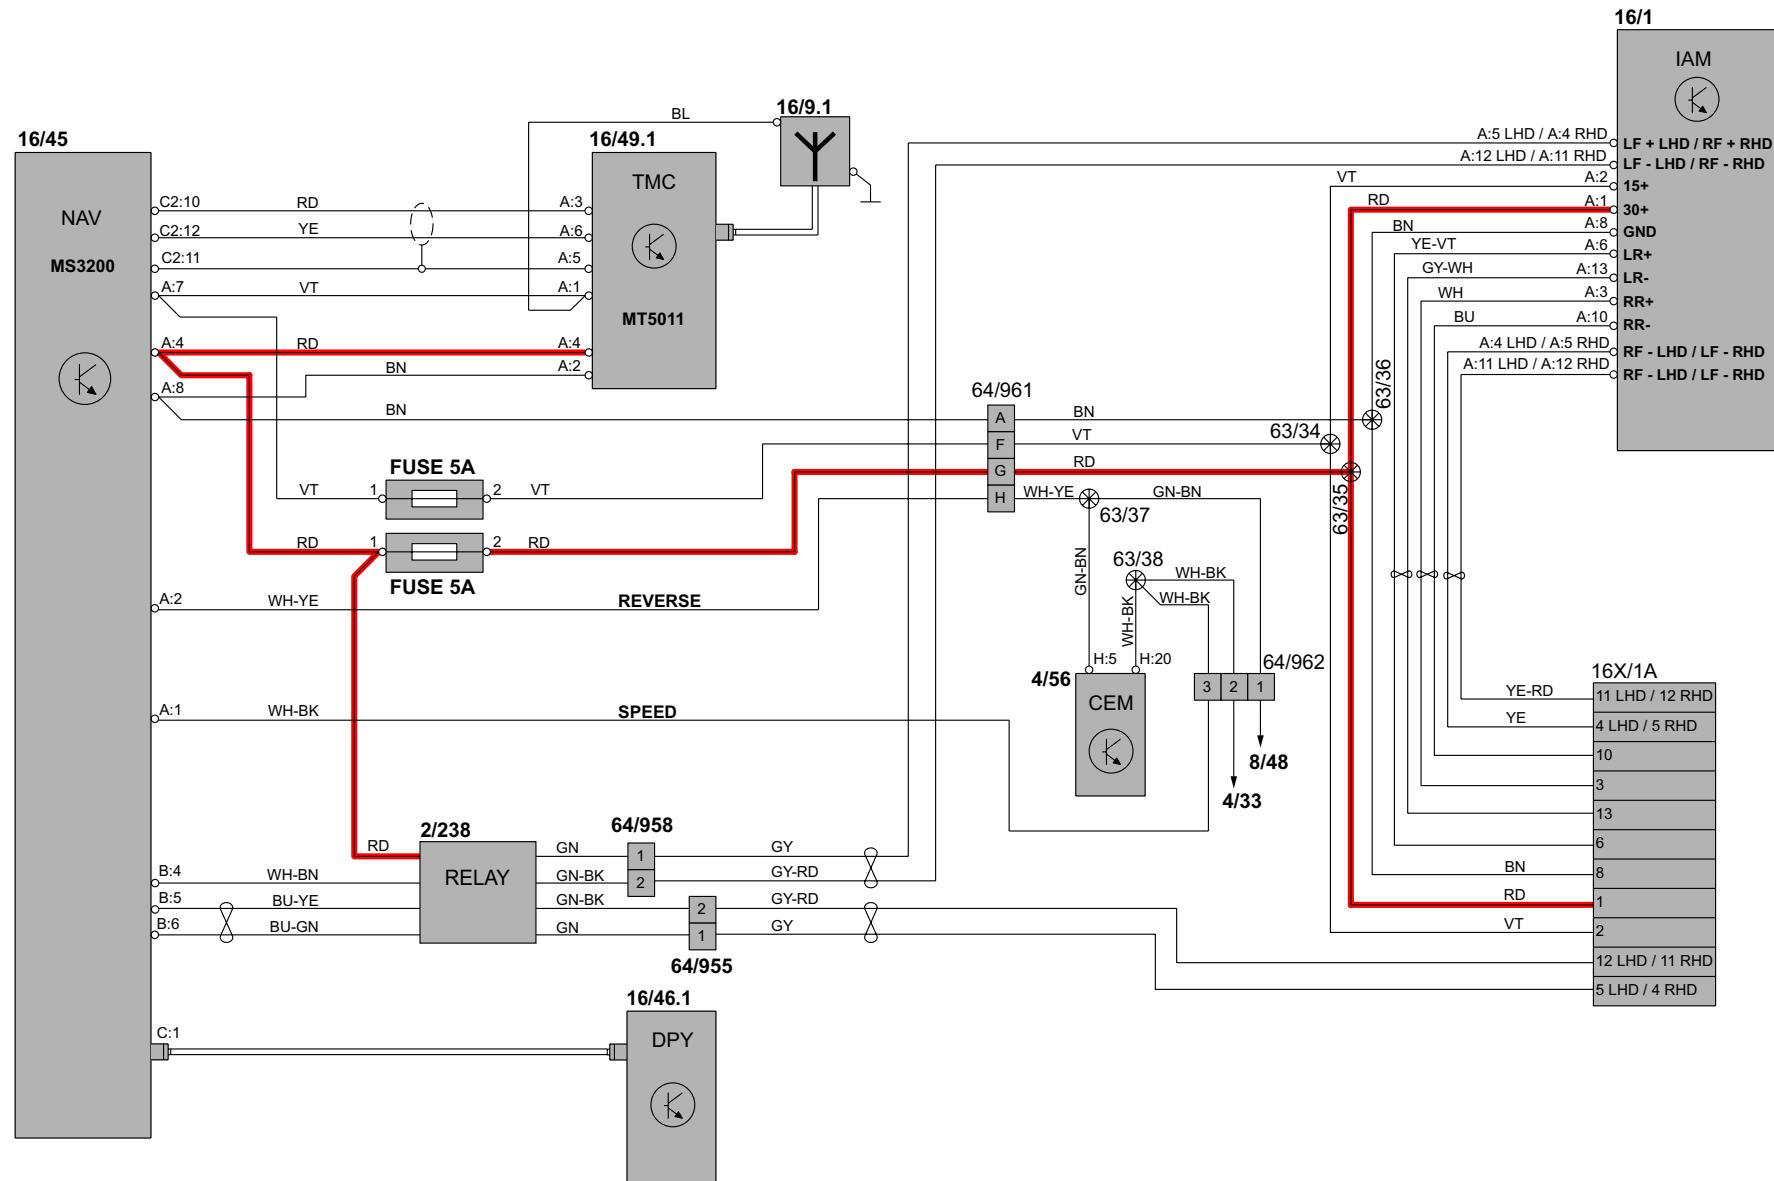


Group 39 Other


Turn by Turn navigation, Audio High Performance/Premium Sound

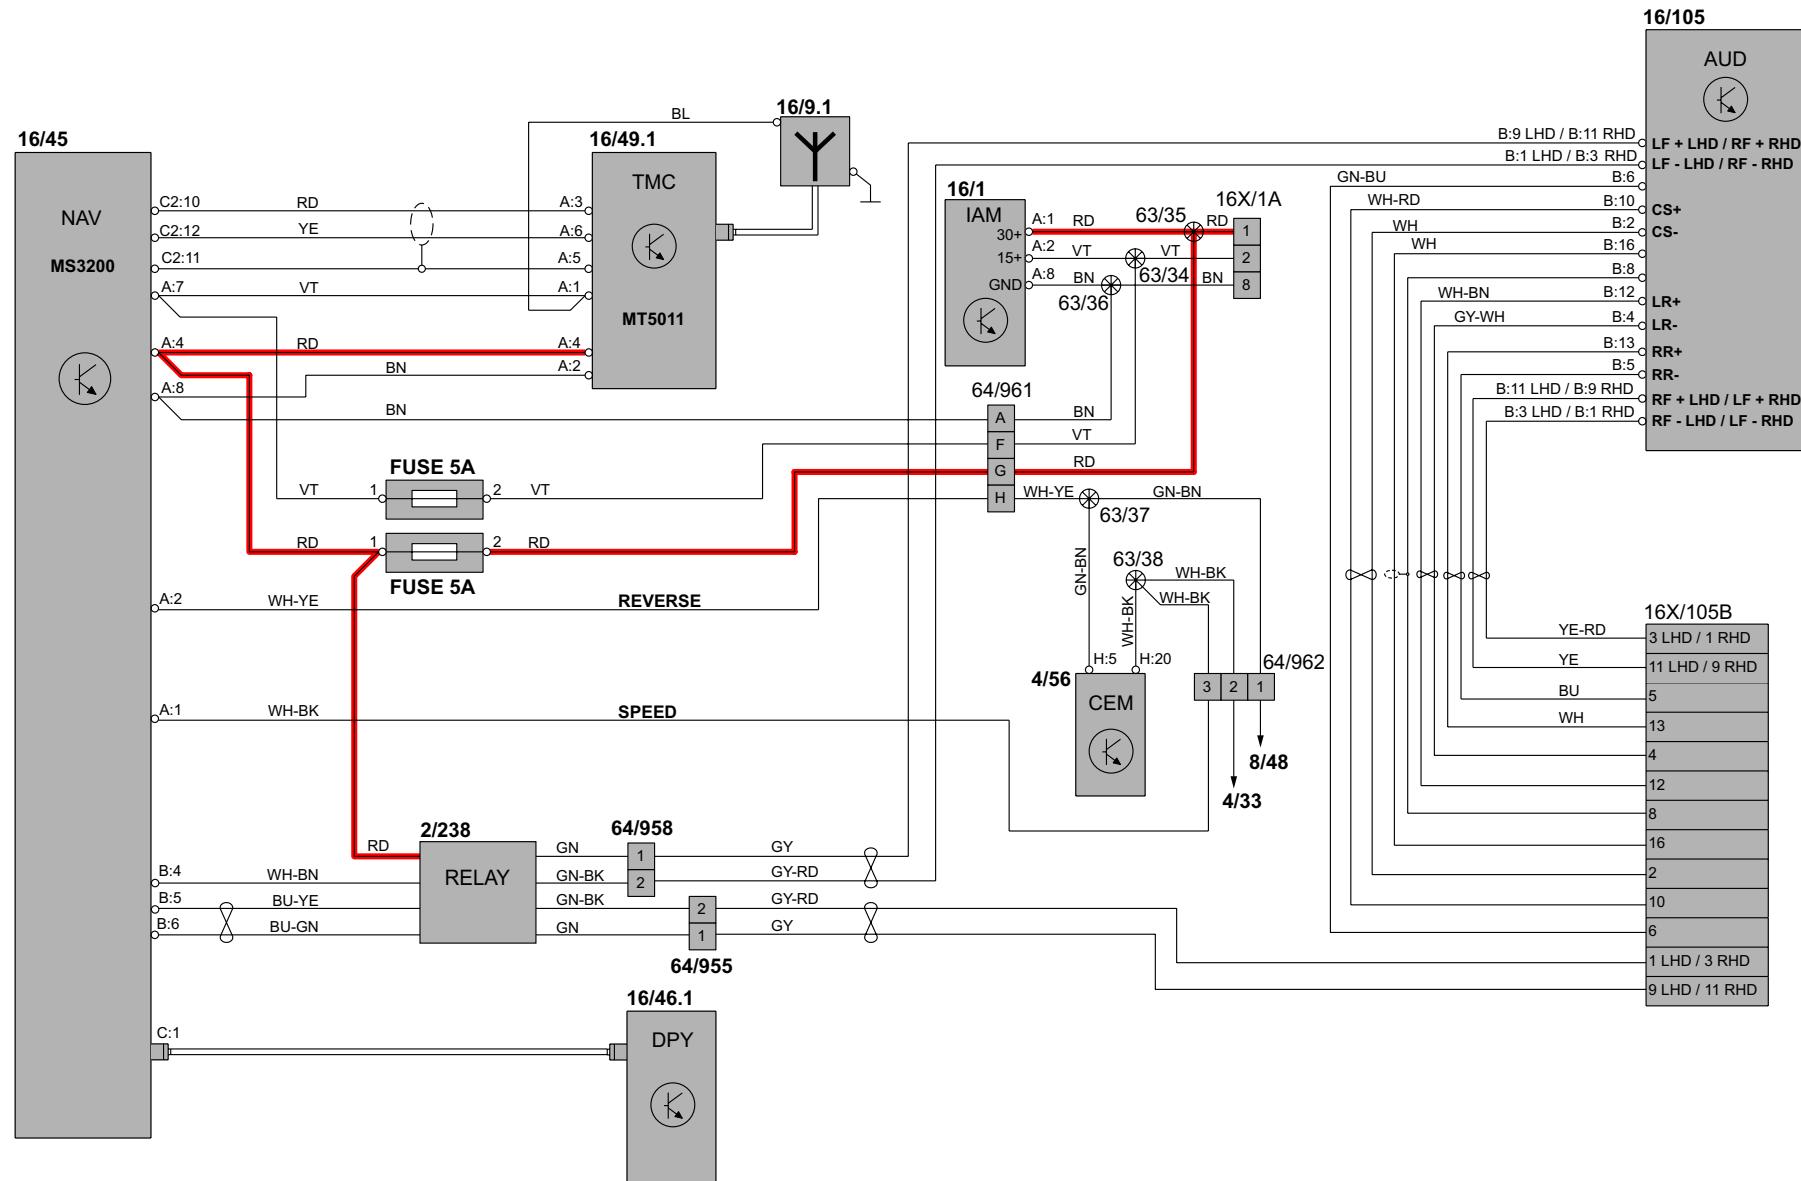

Group 39 Other, Accessories Handsfree Universal, Audio

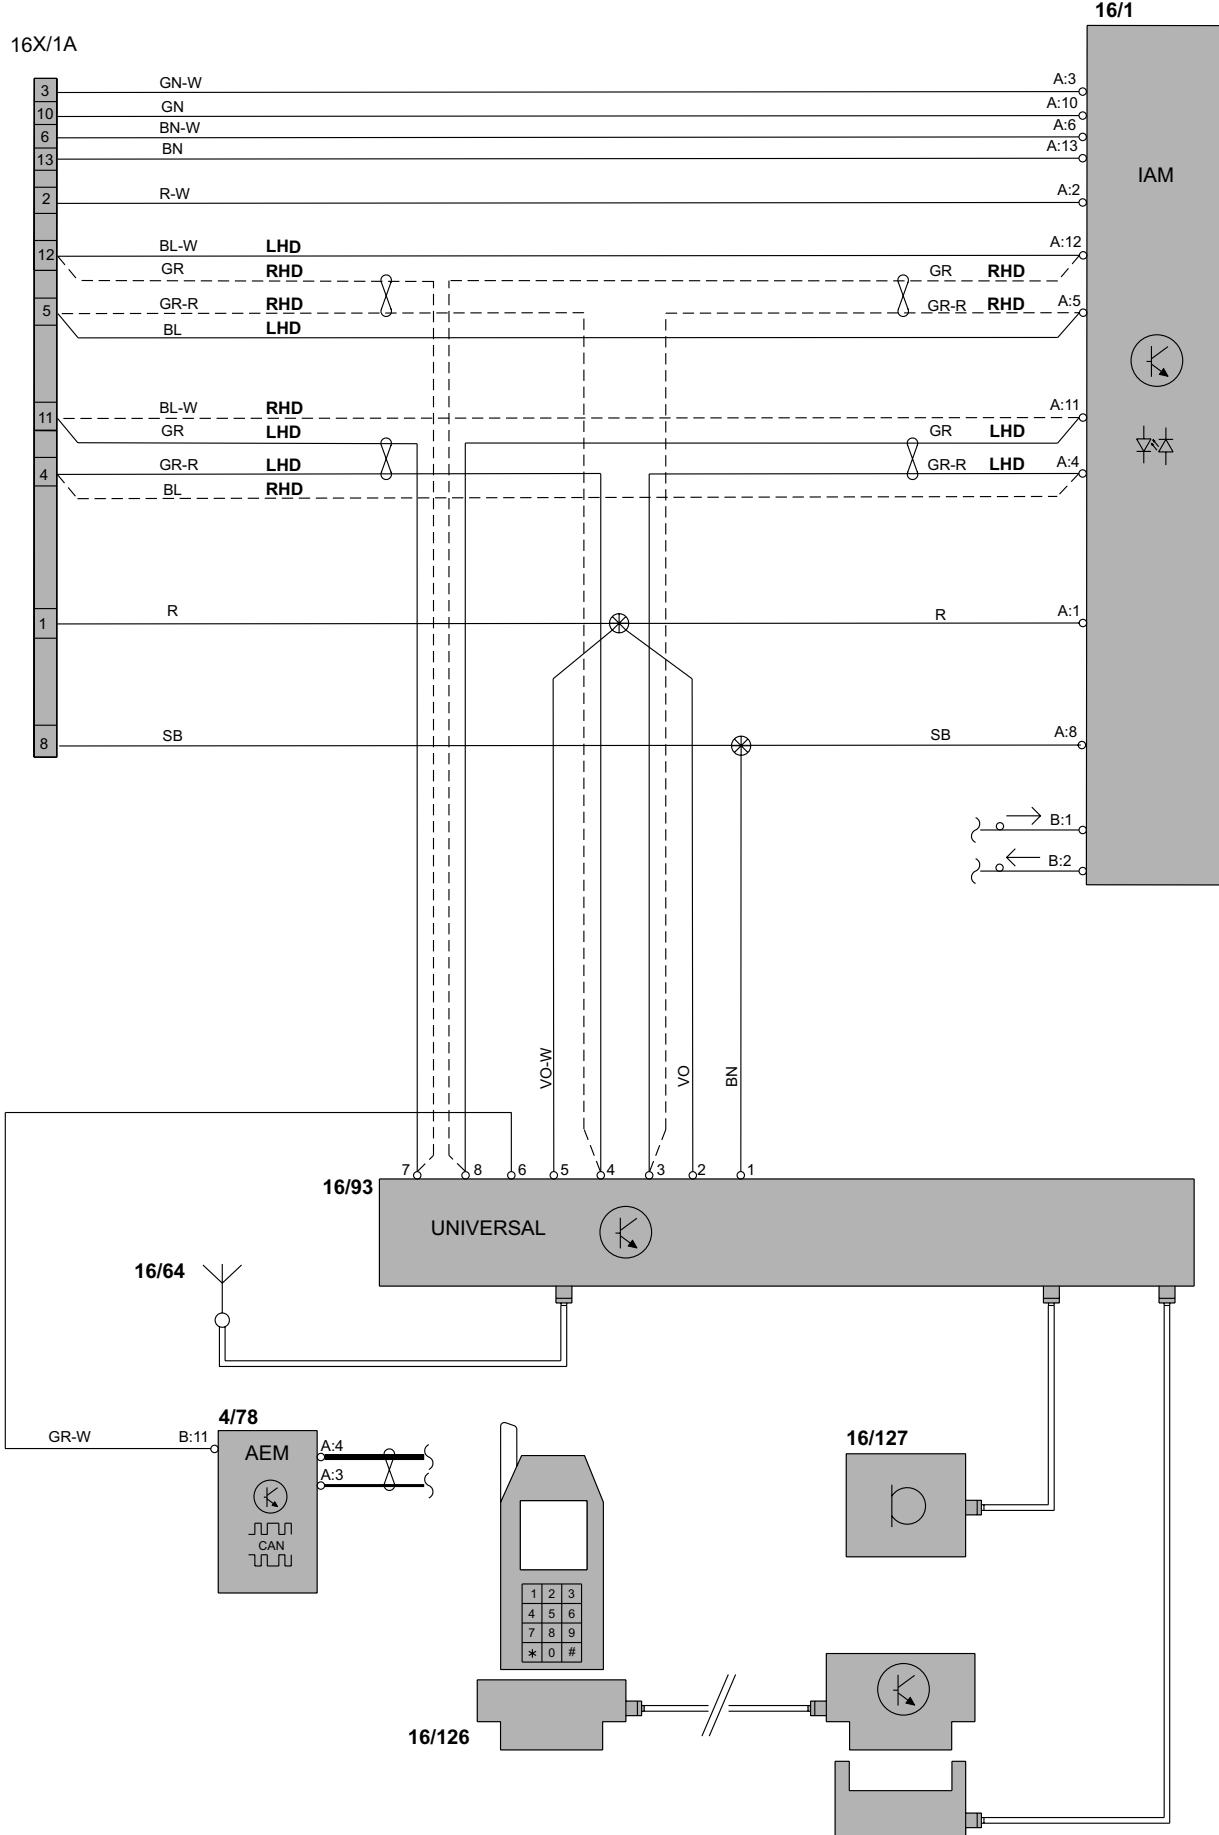


Group 39 Other, Accessories
Handsfree Universal, Audio High Performance/Premium Sound

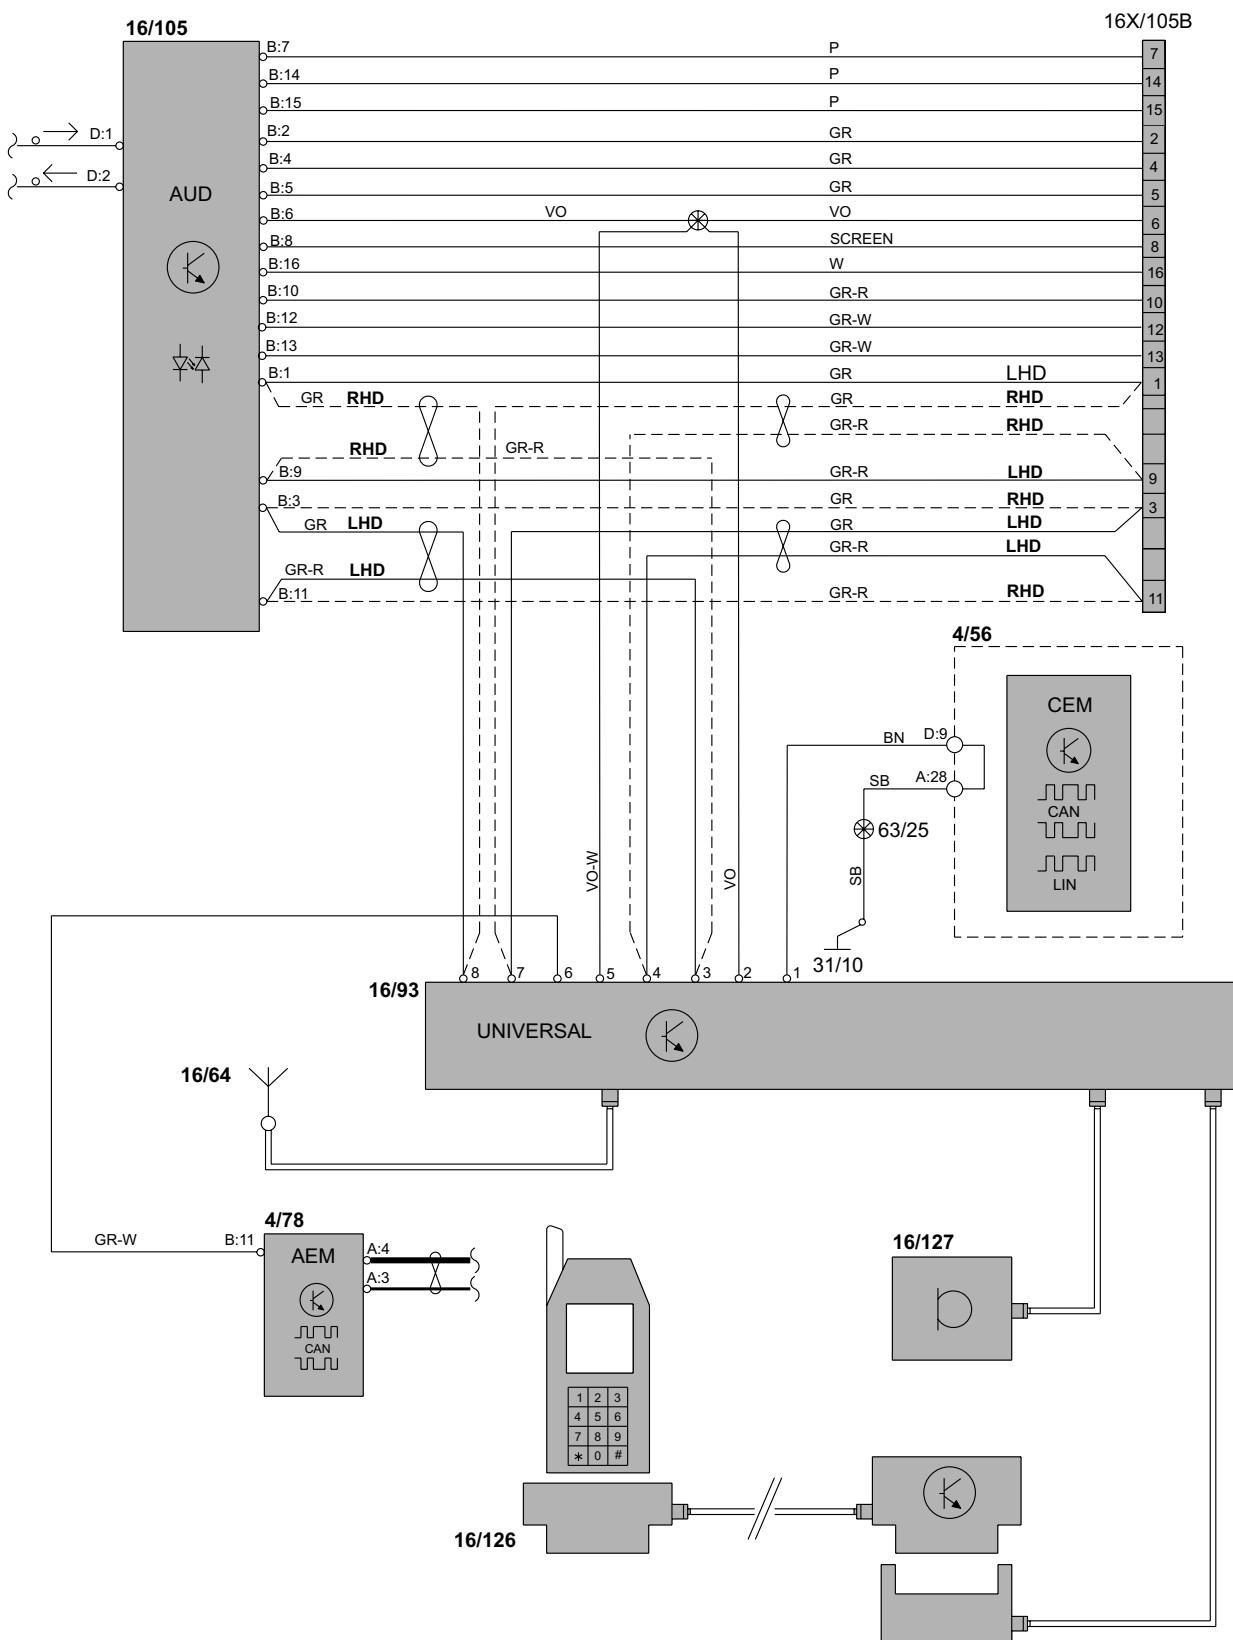


Group 39 Other, Accessories

Handsfree Max with Adapter

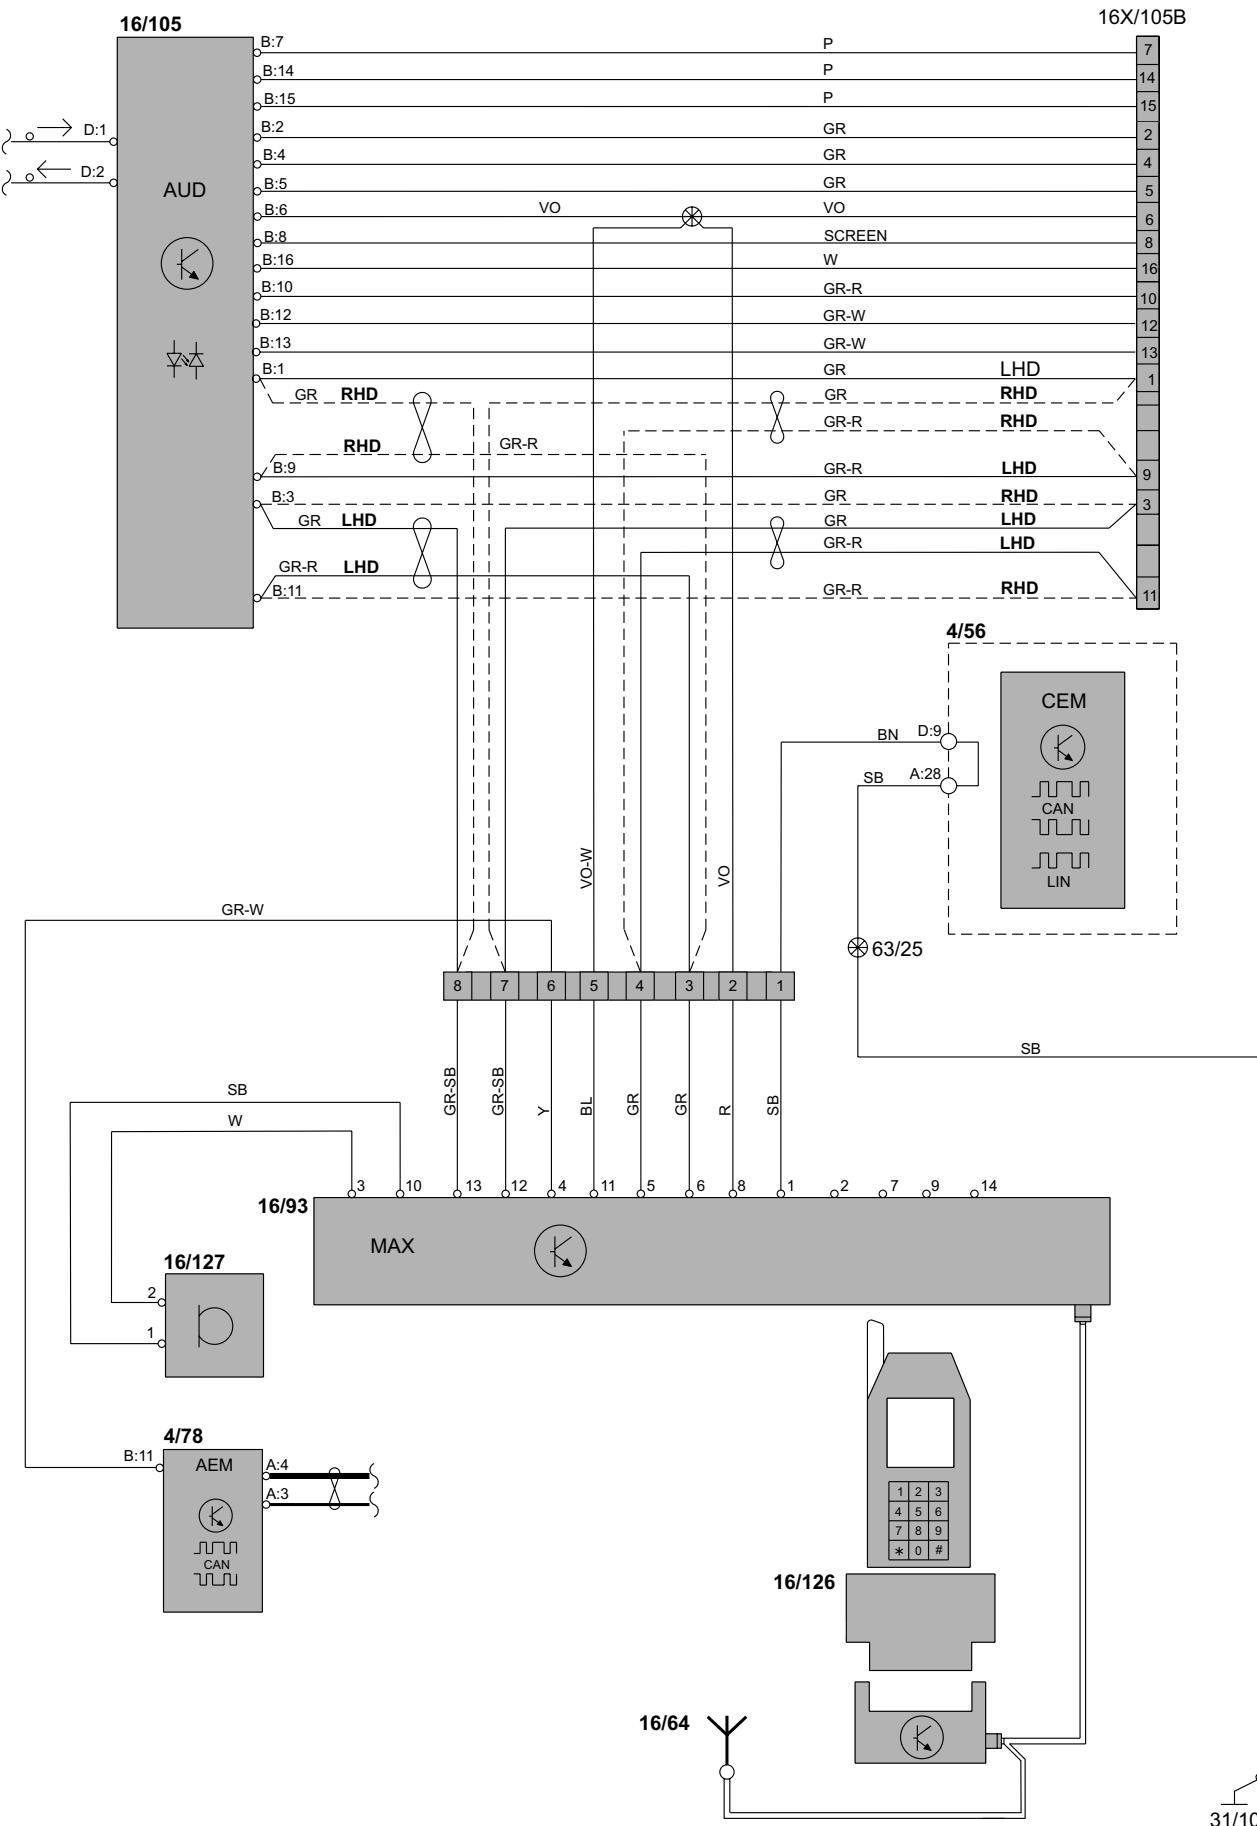


Group 39 Other, Accessories

Handsfree Max

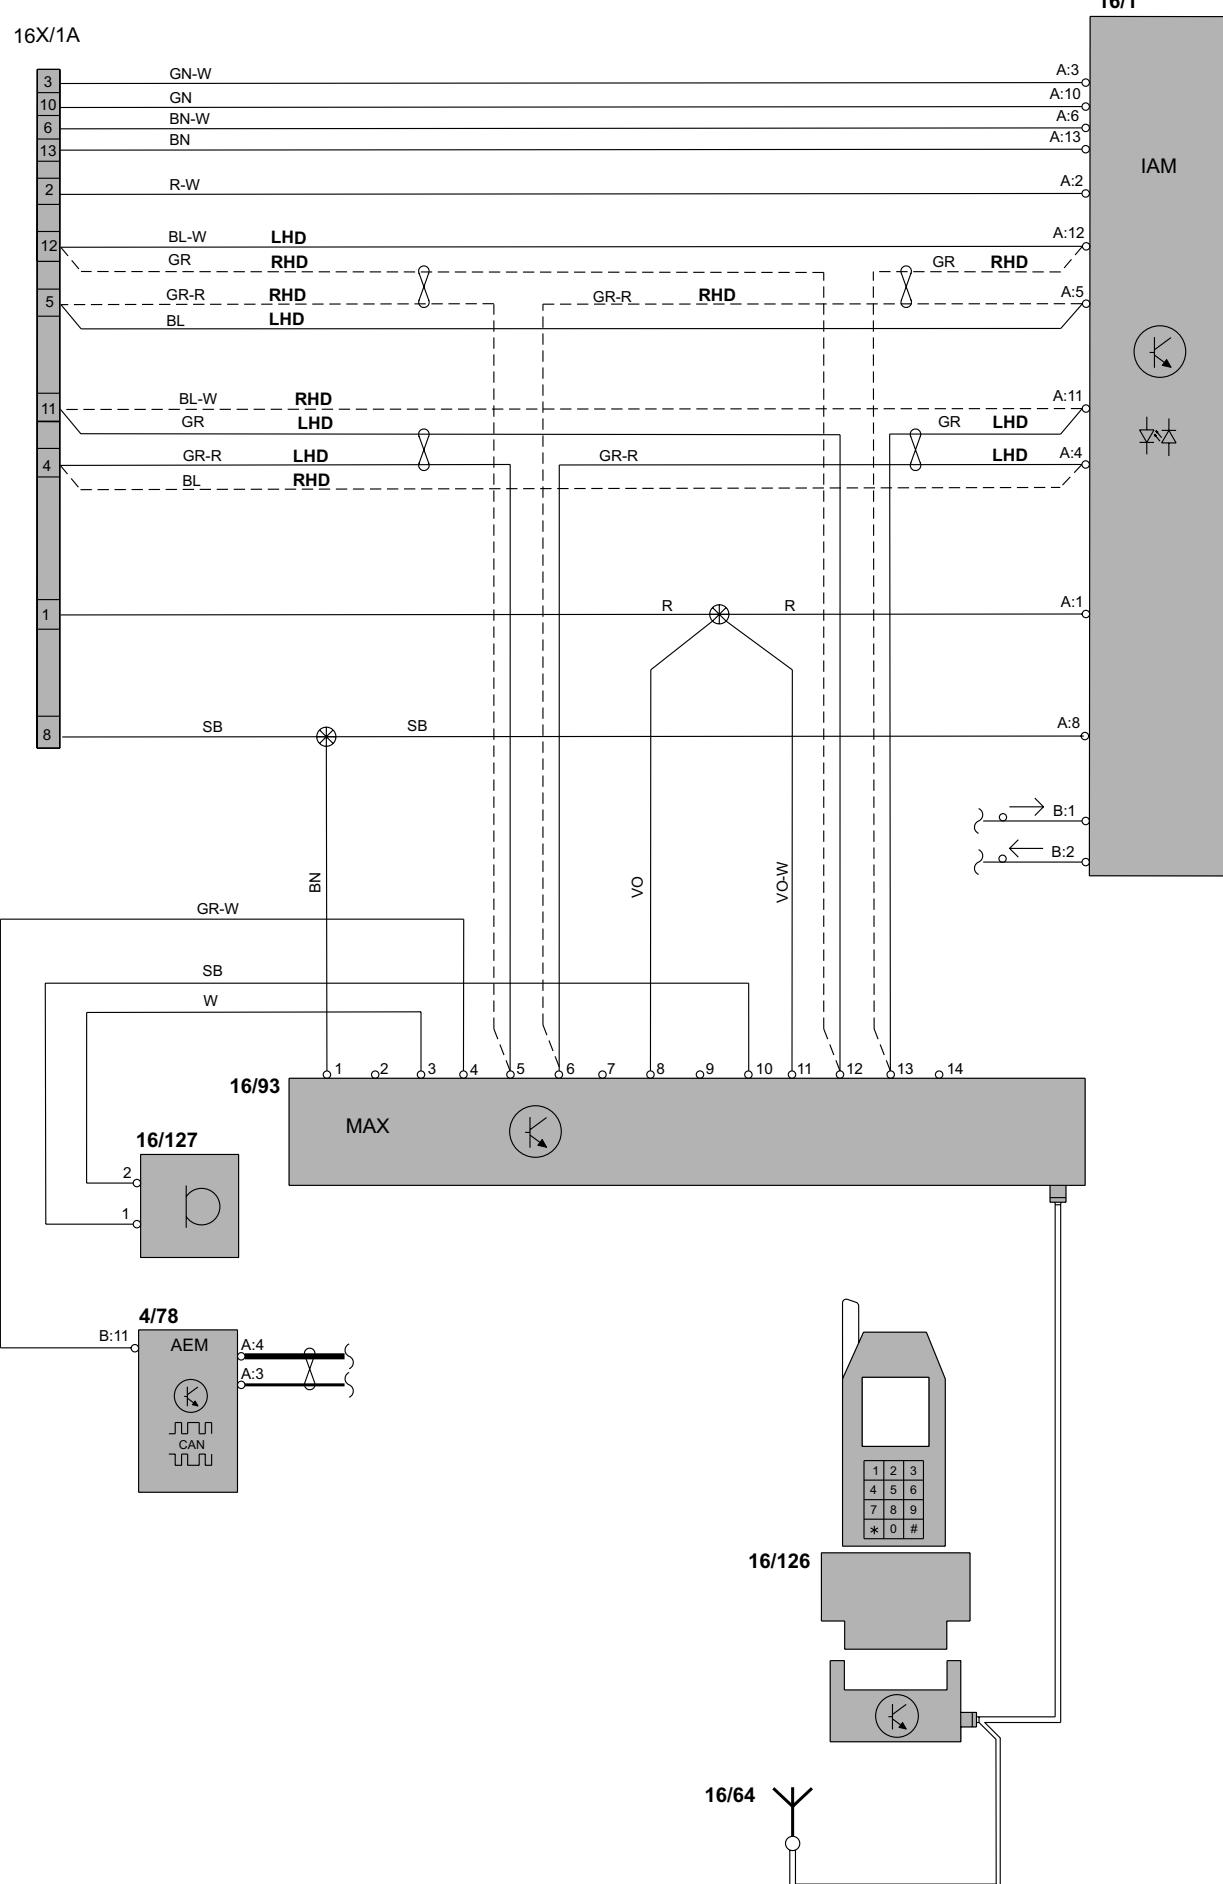


Group 39 Other, Accessories

Subwoofer

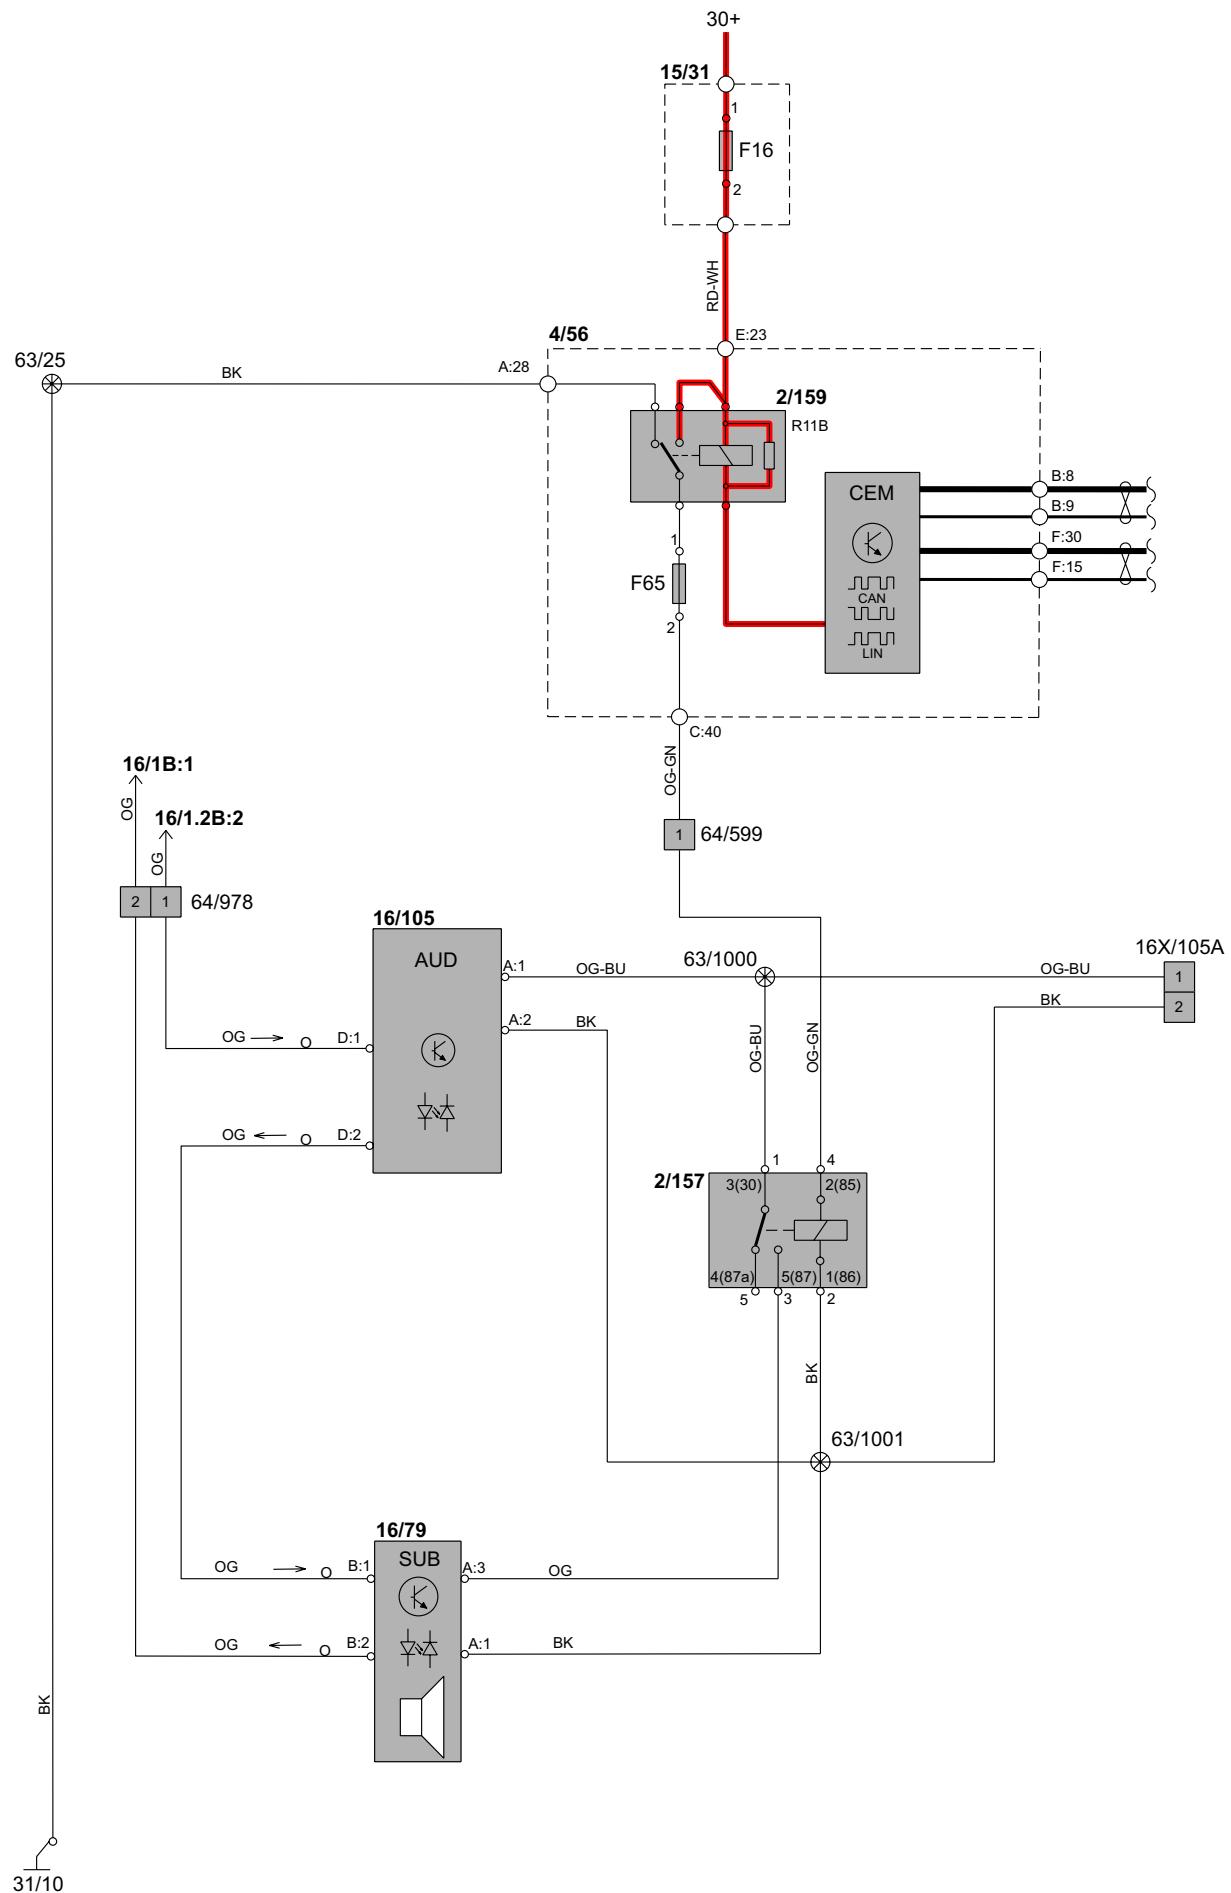


Group 43 Transmission

Automatic transmission AW55-51

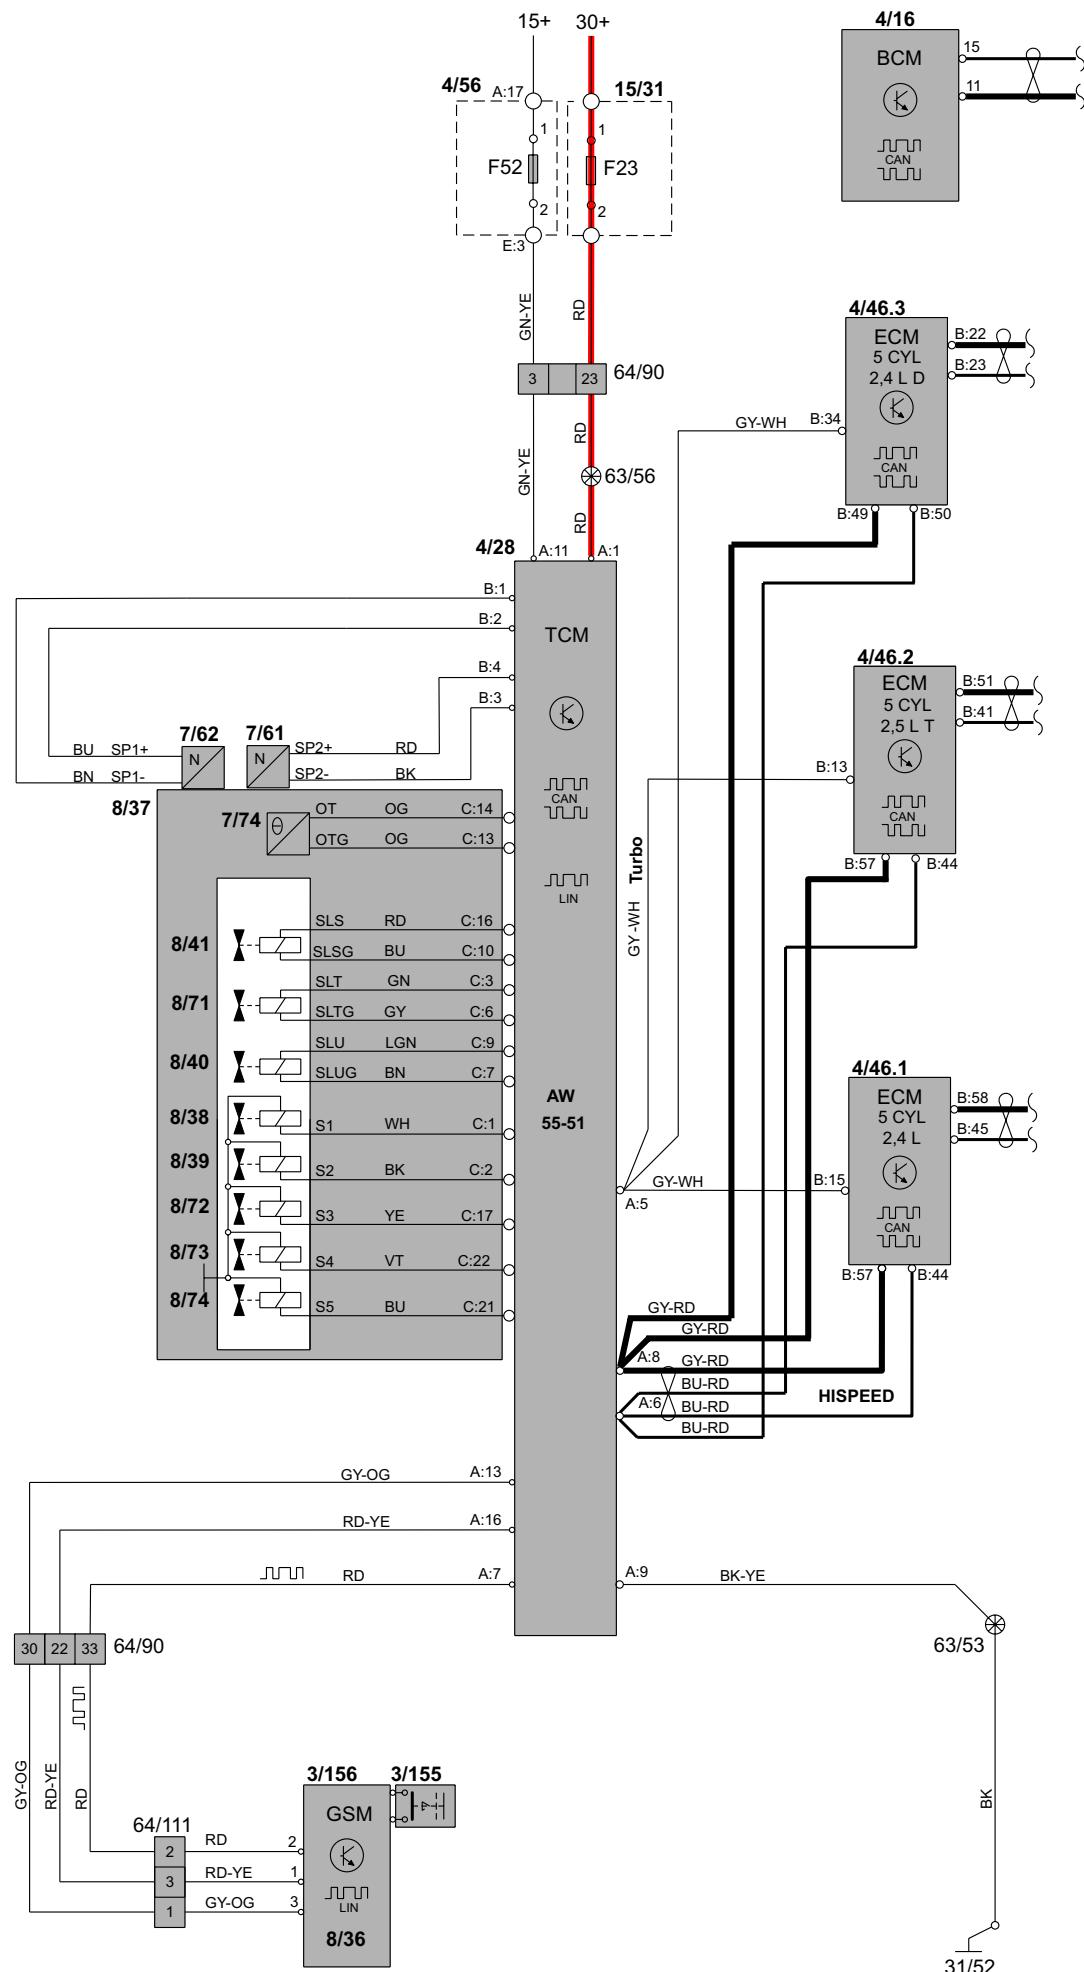


Group 43 Transmission

Transmission M66

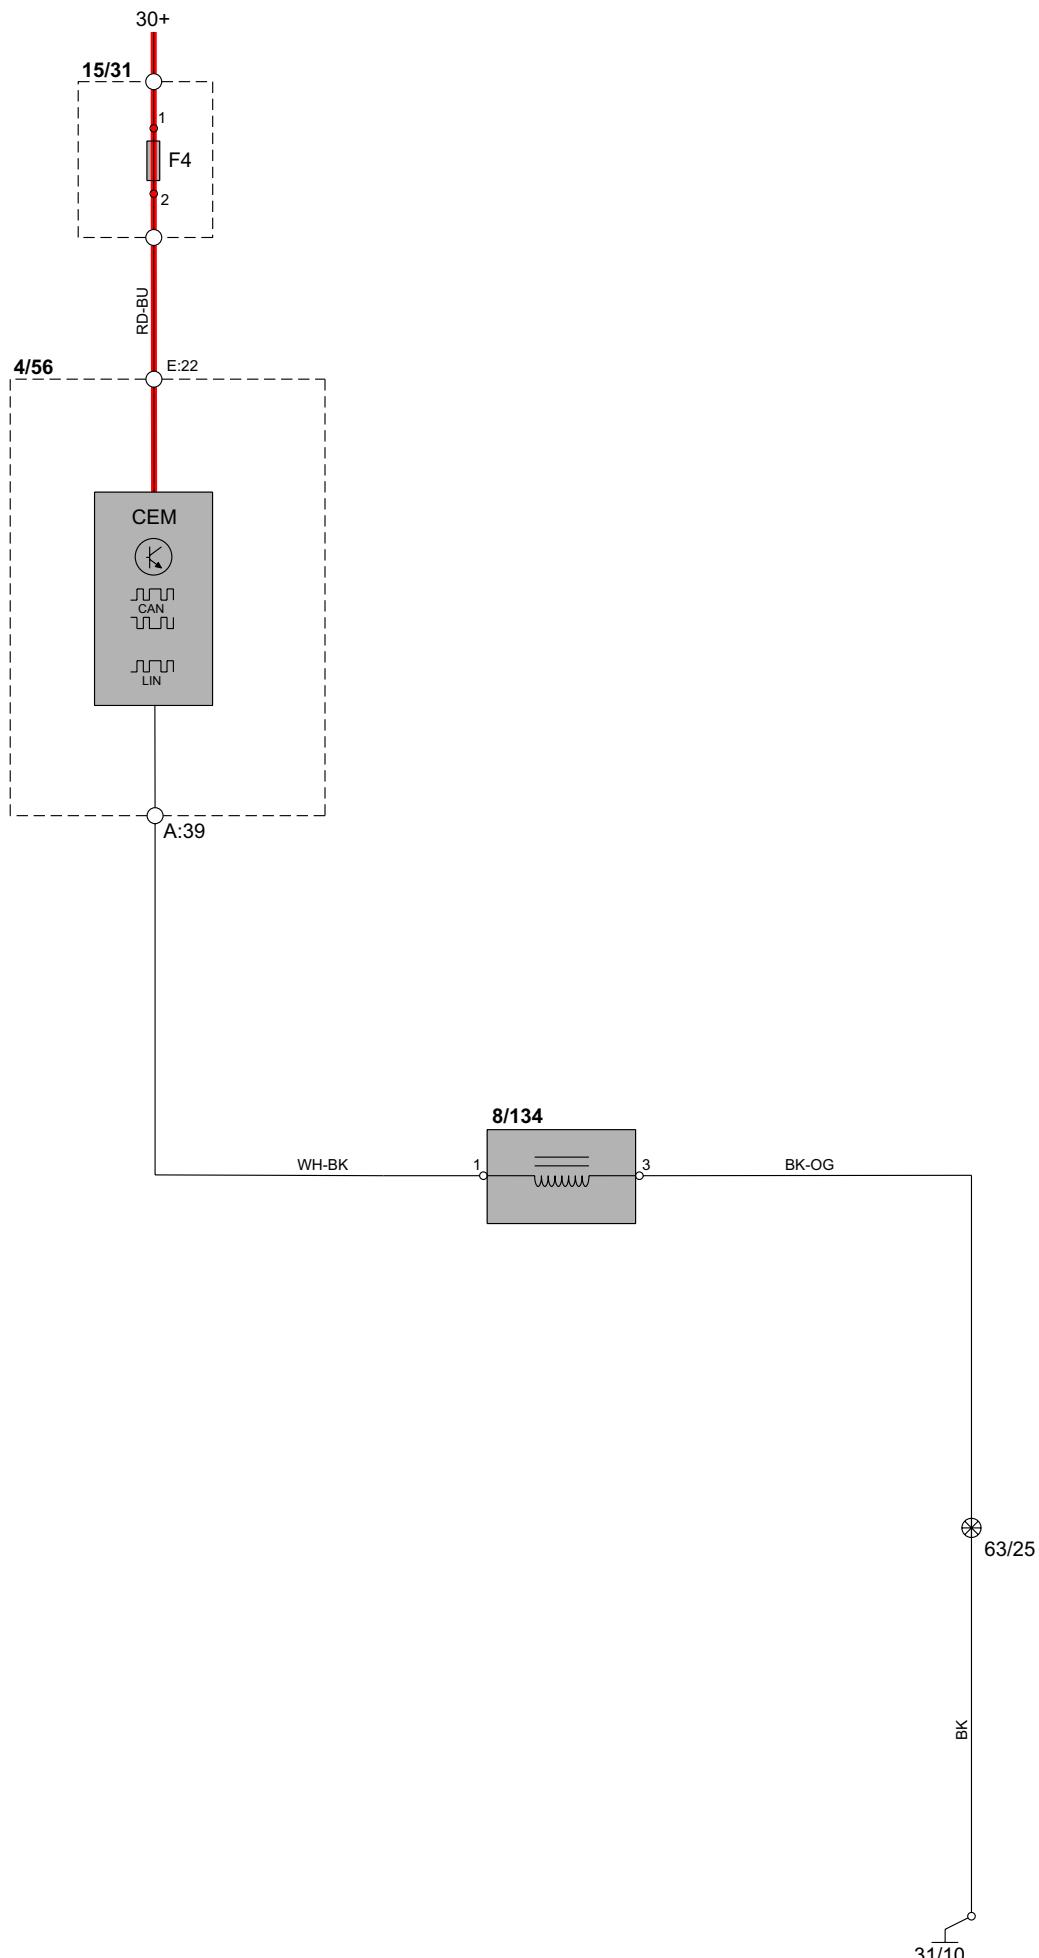


Group 43 Transmission

Differential Electronic Module (DEM)

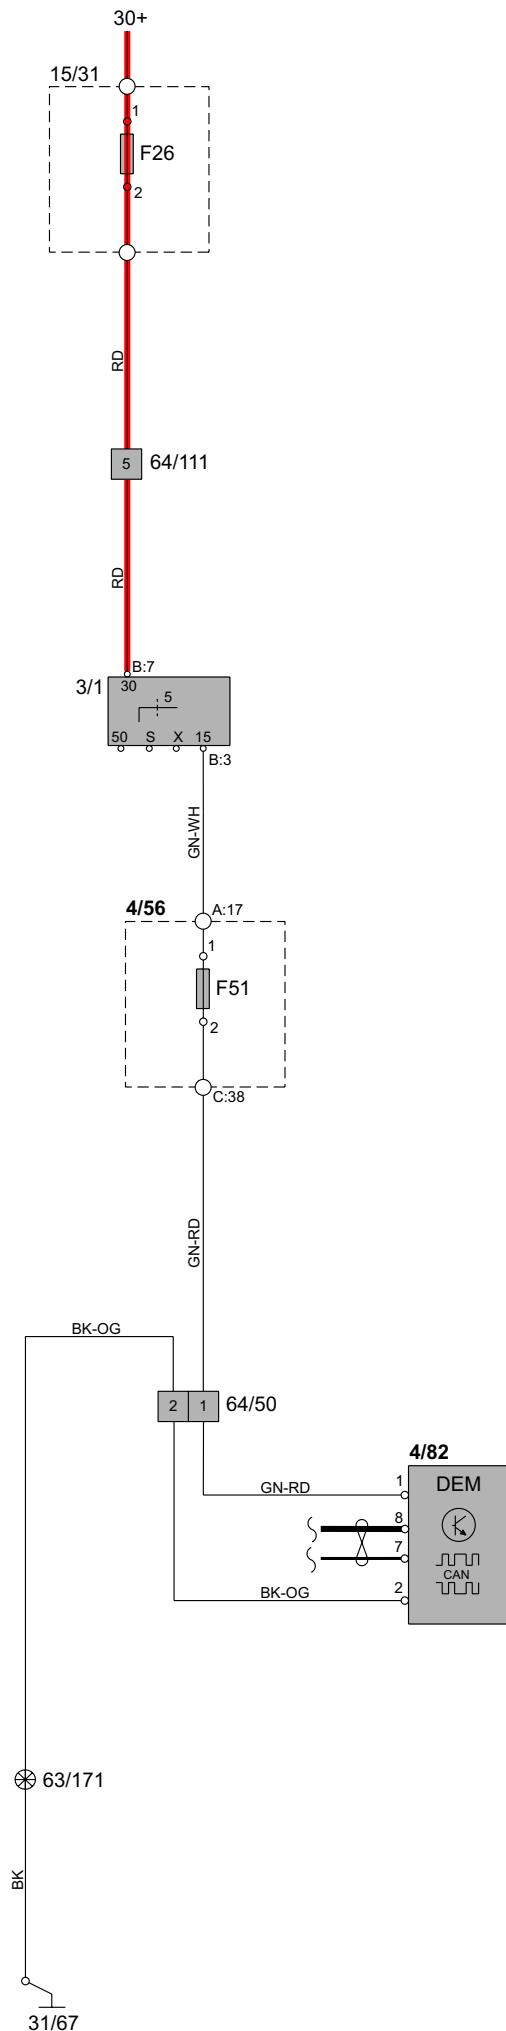


Group 59 Brake system

Brake control system & STC

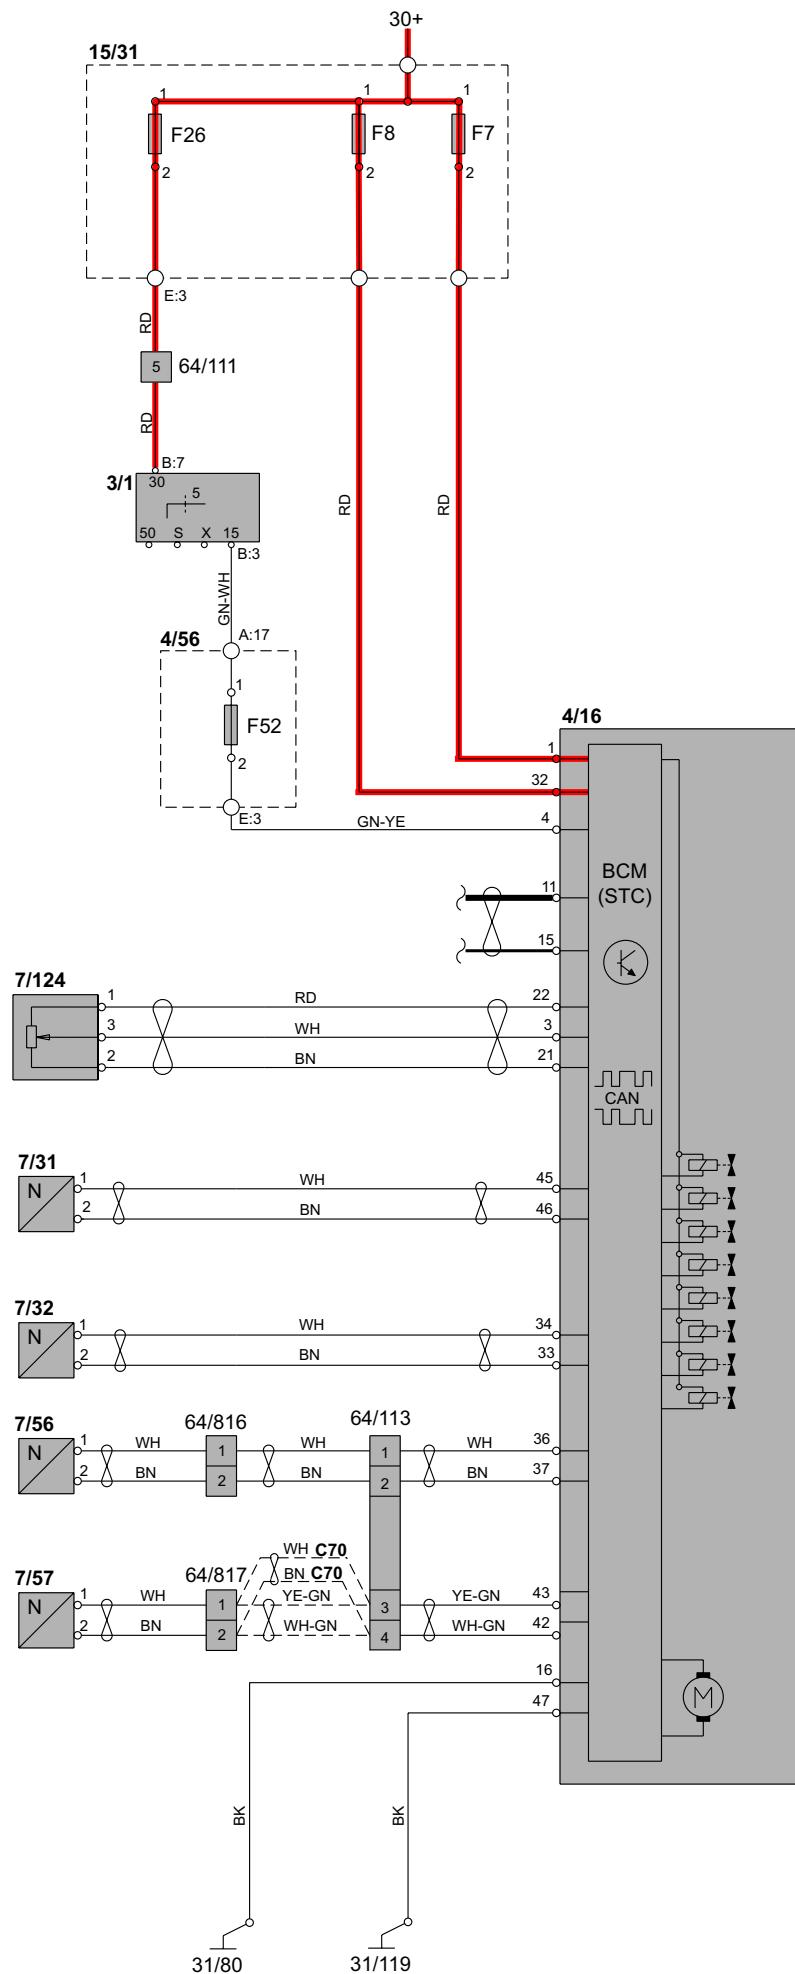


Group 59 Brake system

Brake control system & DSTC

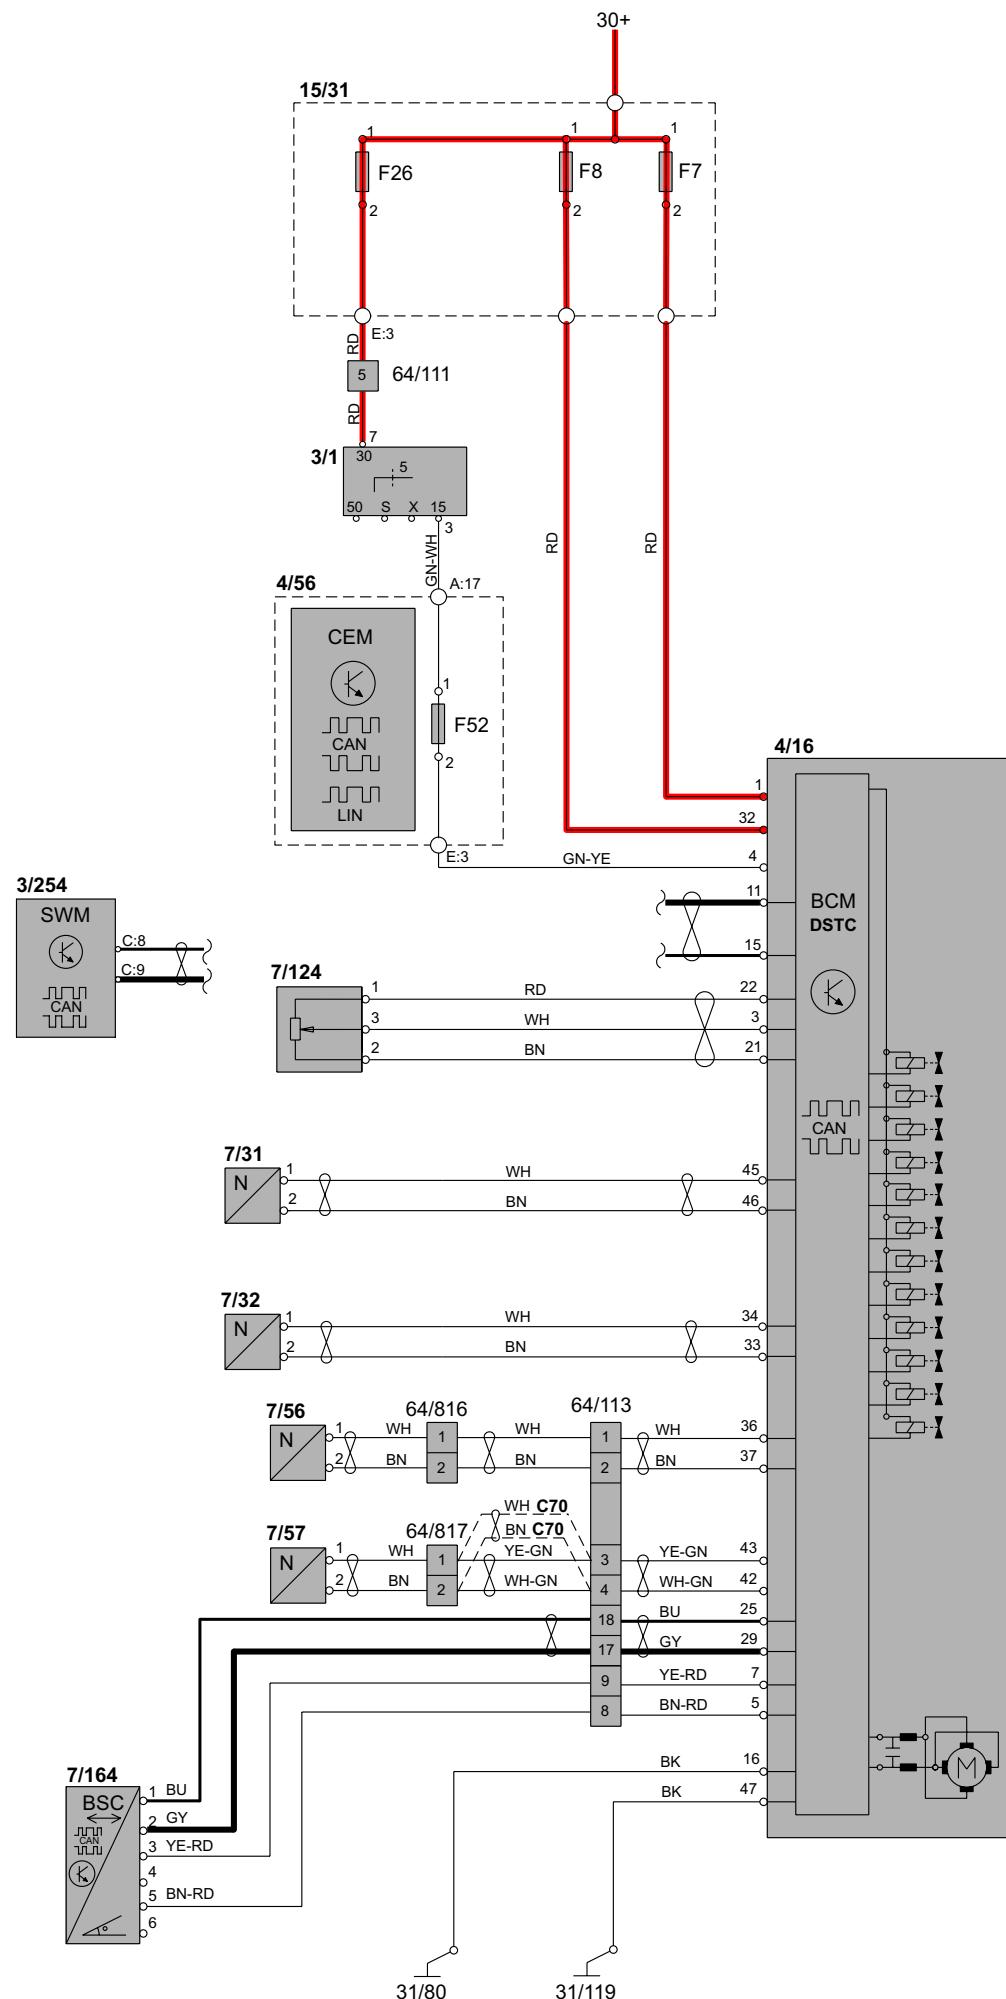


Group 64 Steering

Electronic power steering

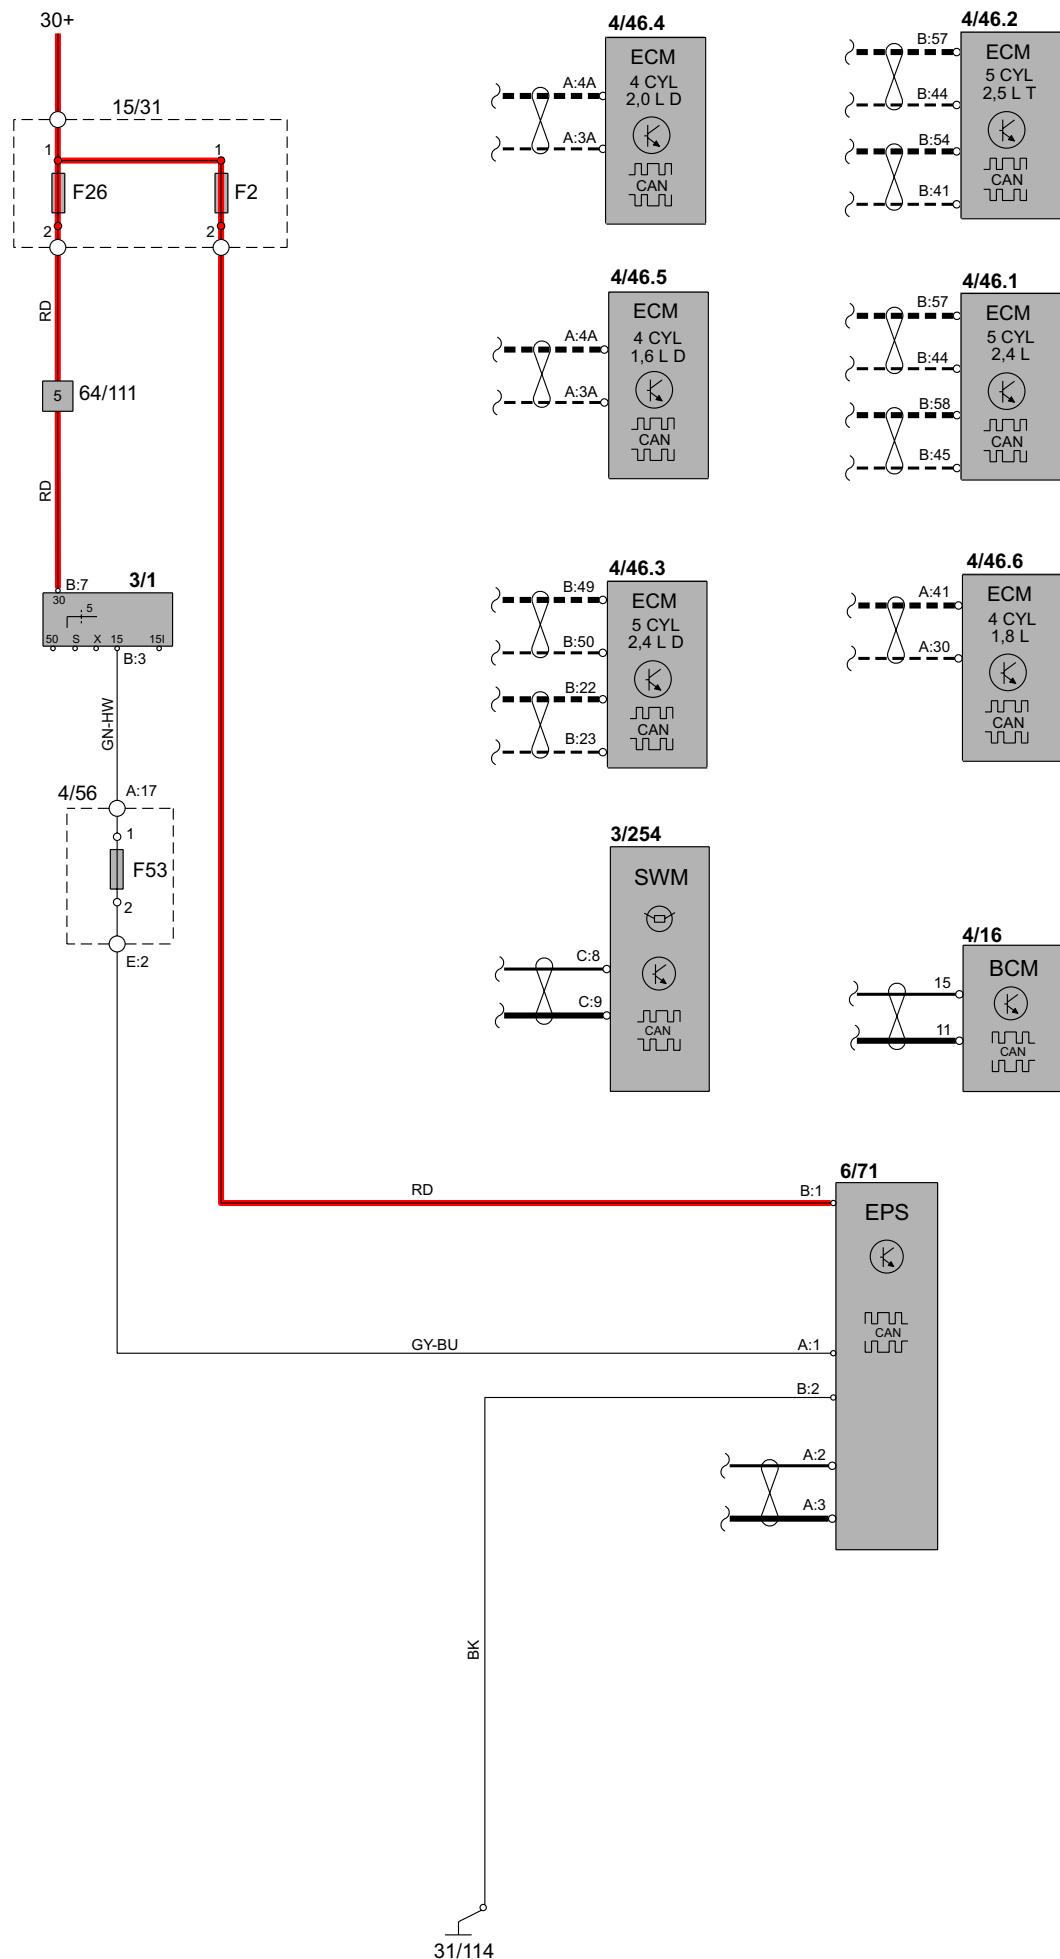


Group 83 Doors and openings

Central locking, front doors S40/V50

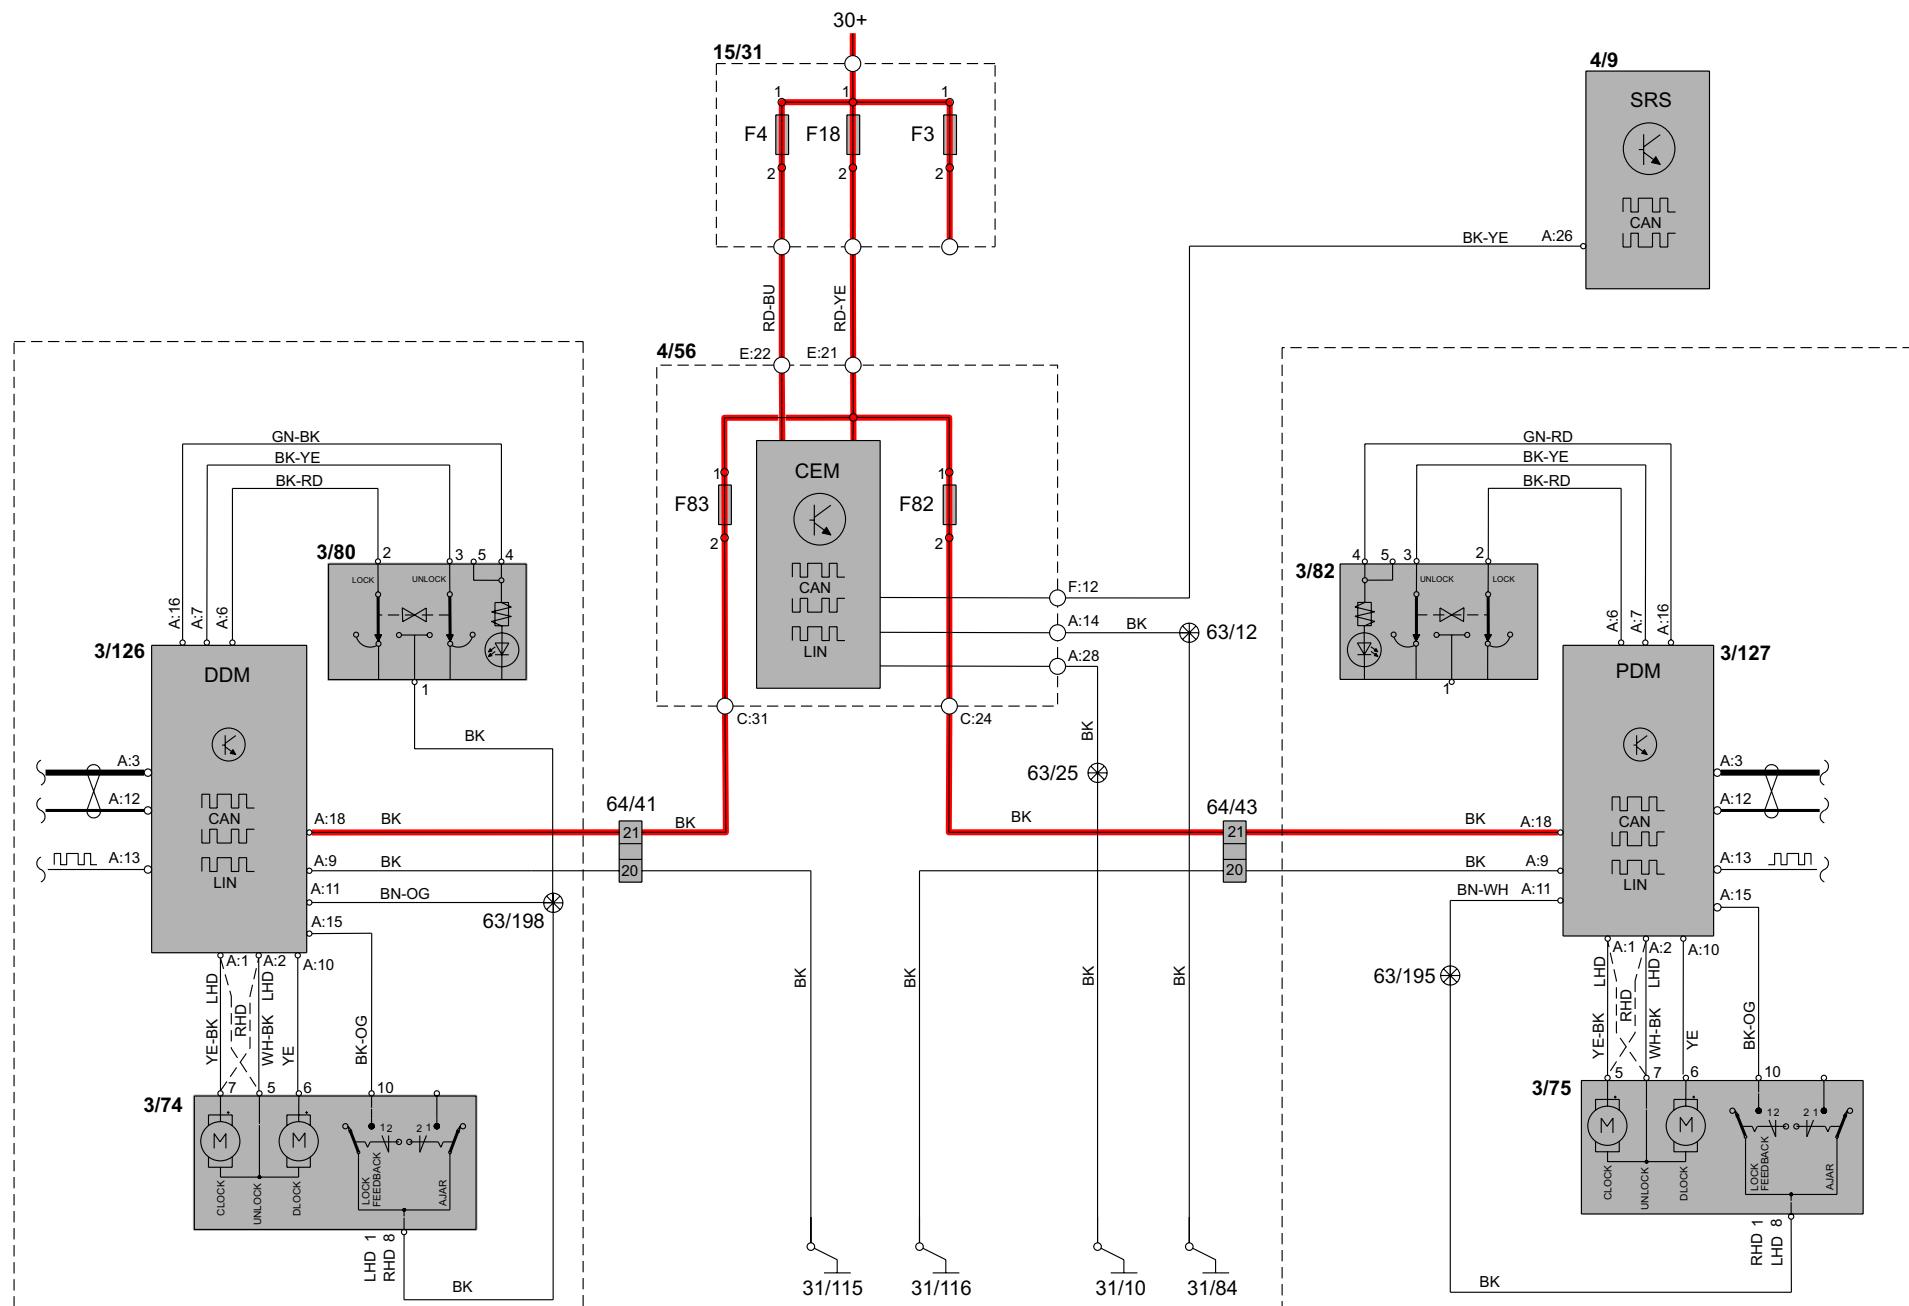




Group 83 Doors and openings

Central locking, rear doors S40/V50

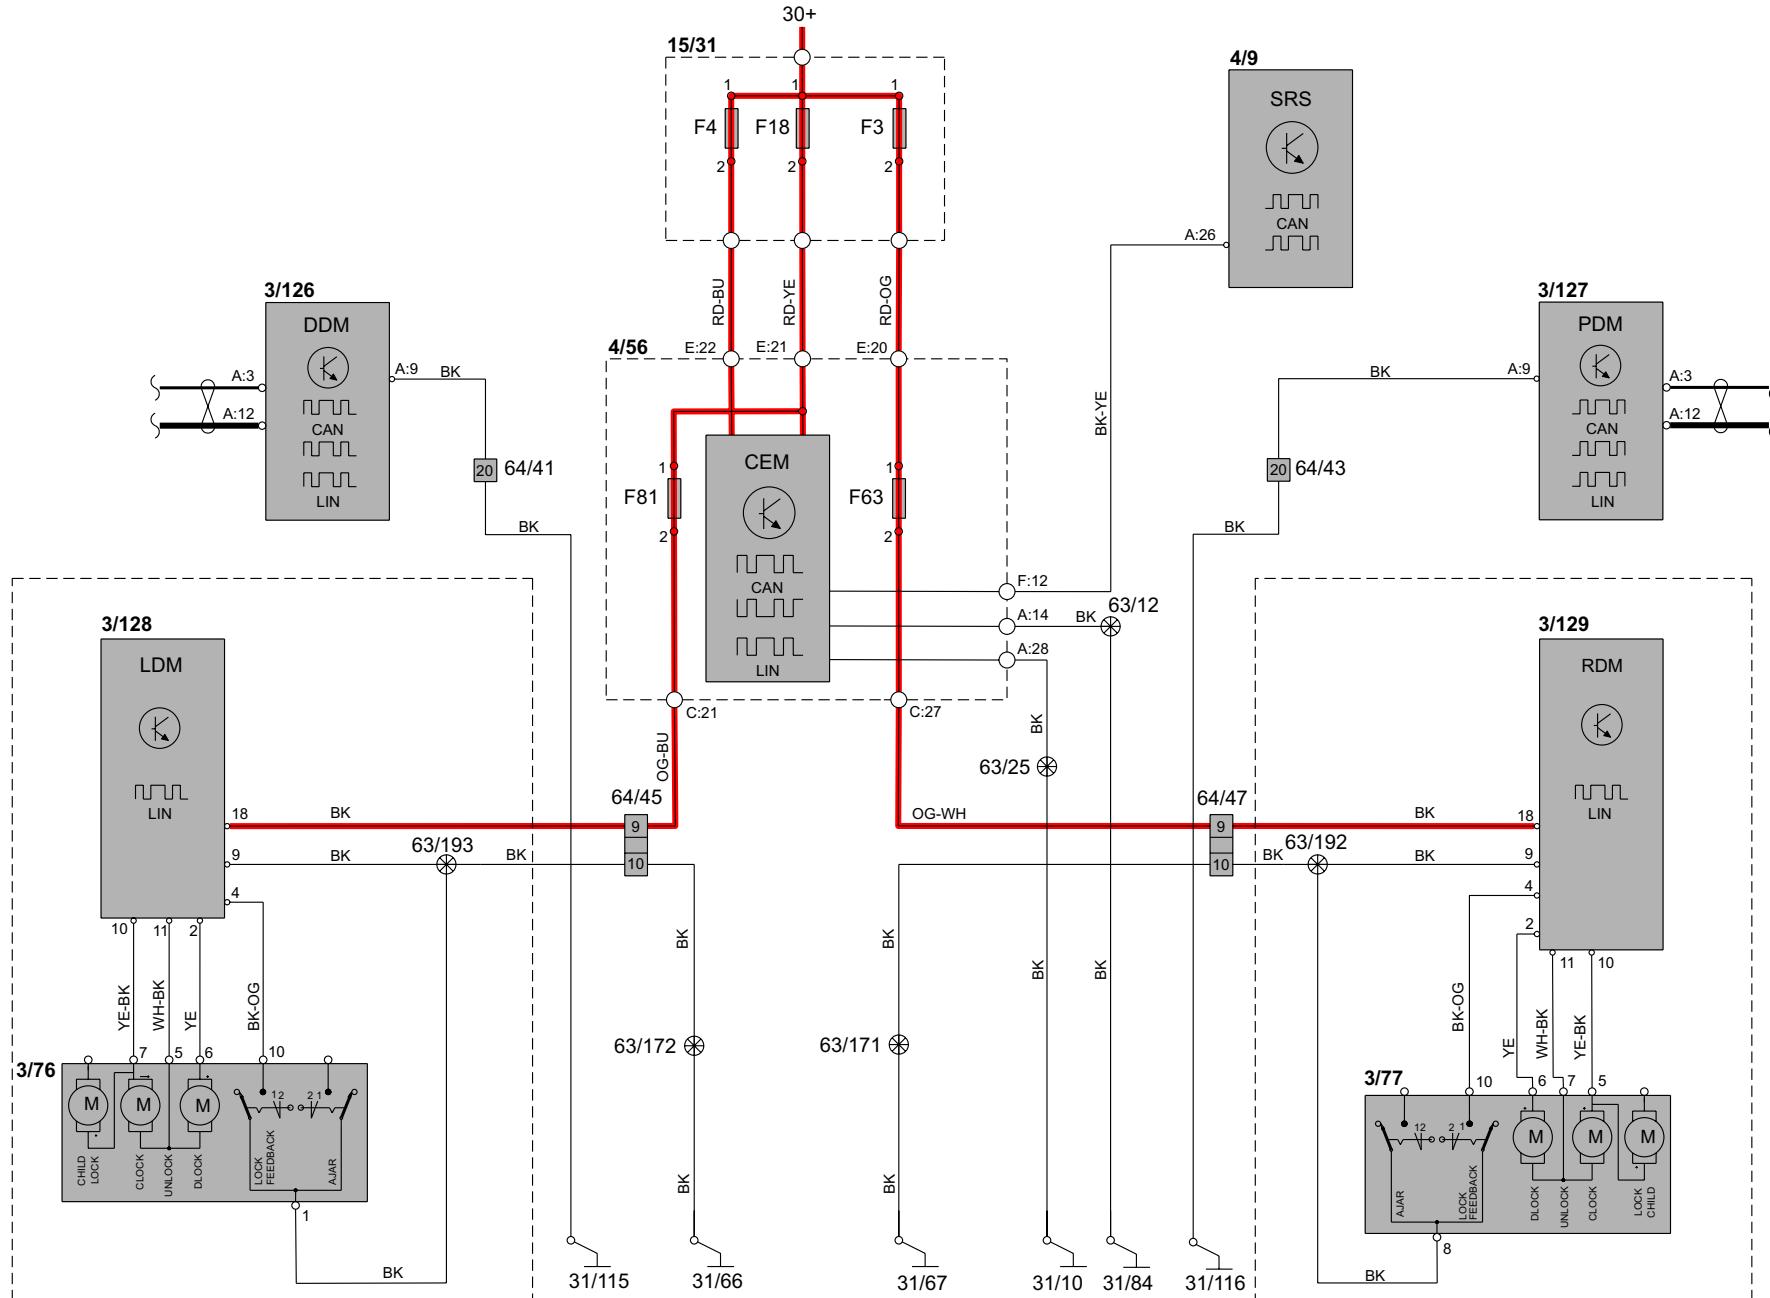


Group 83 Doors and openings

Central locking system C70

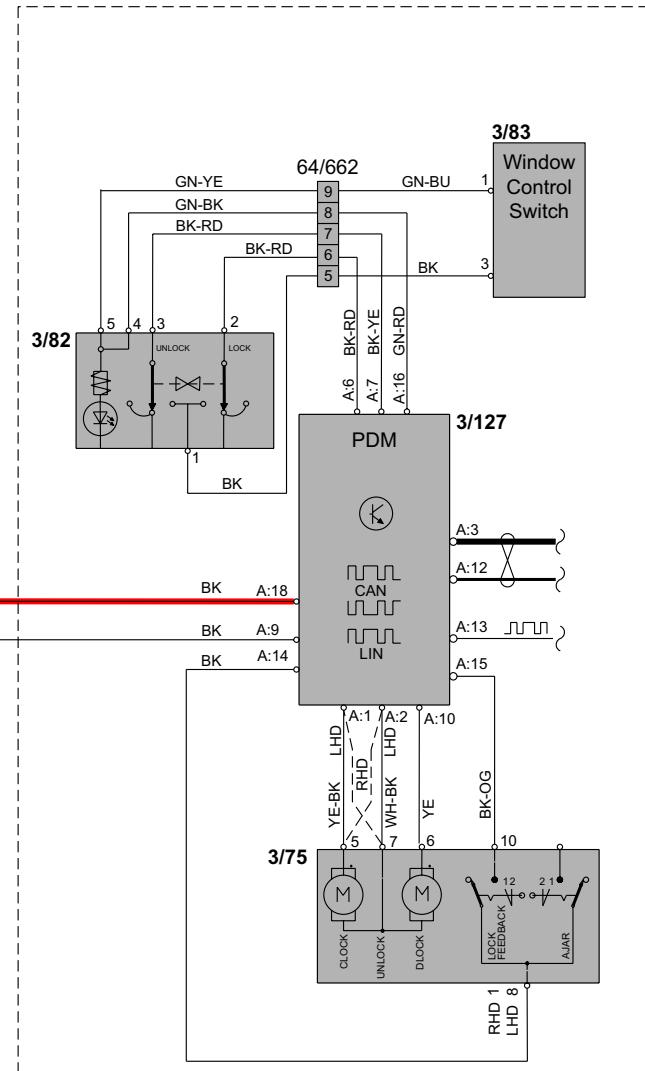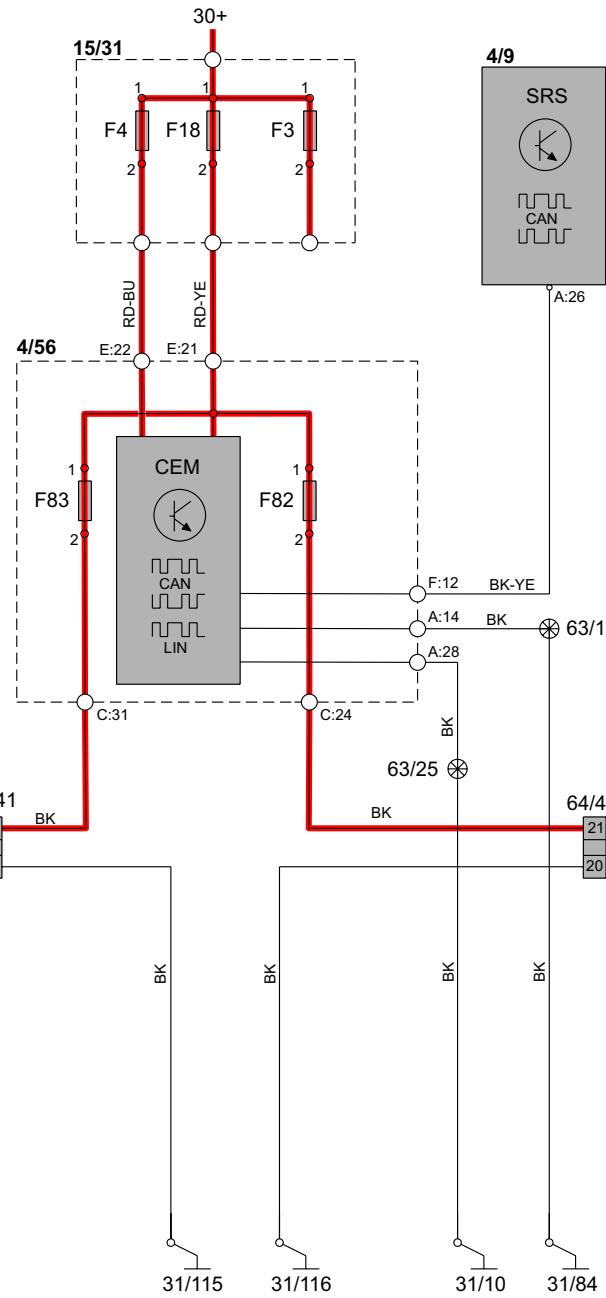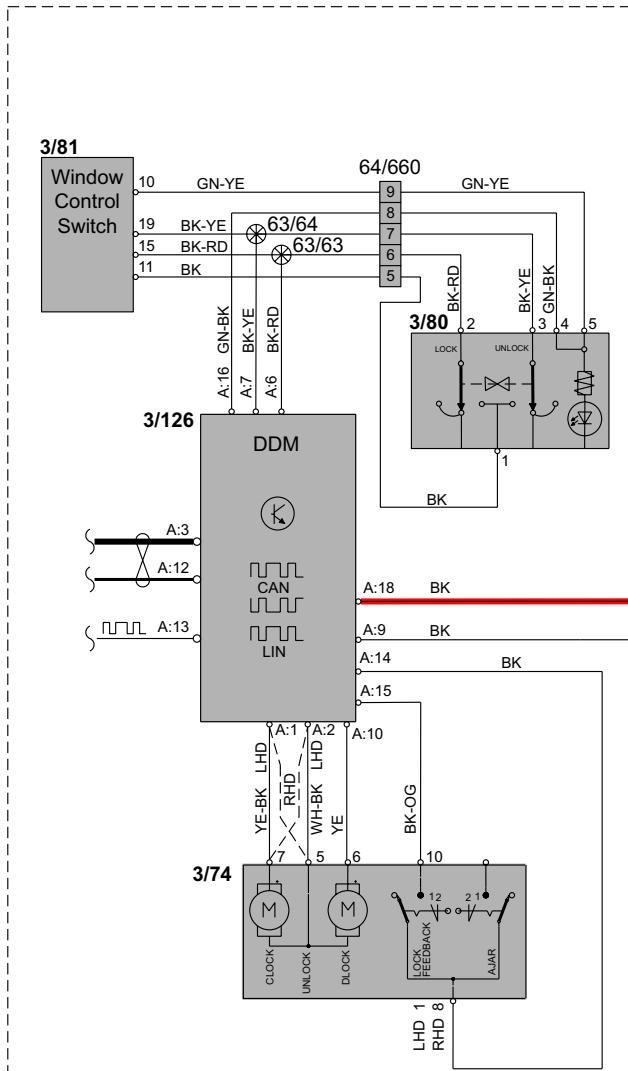


Group 83 Doors and openings Central locking, tailgate S40/V50

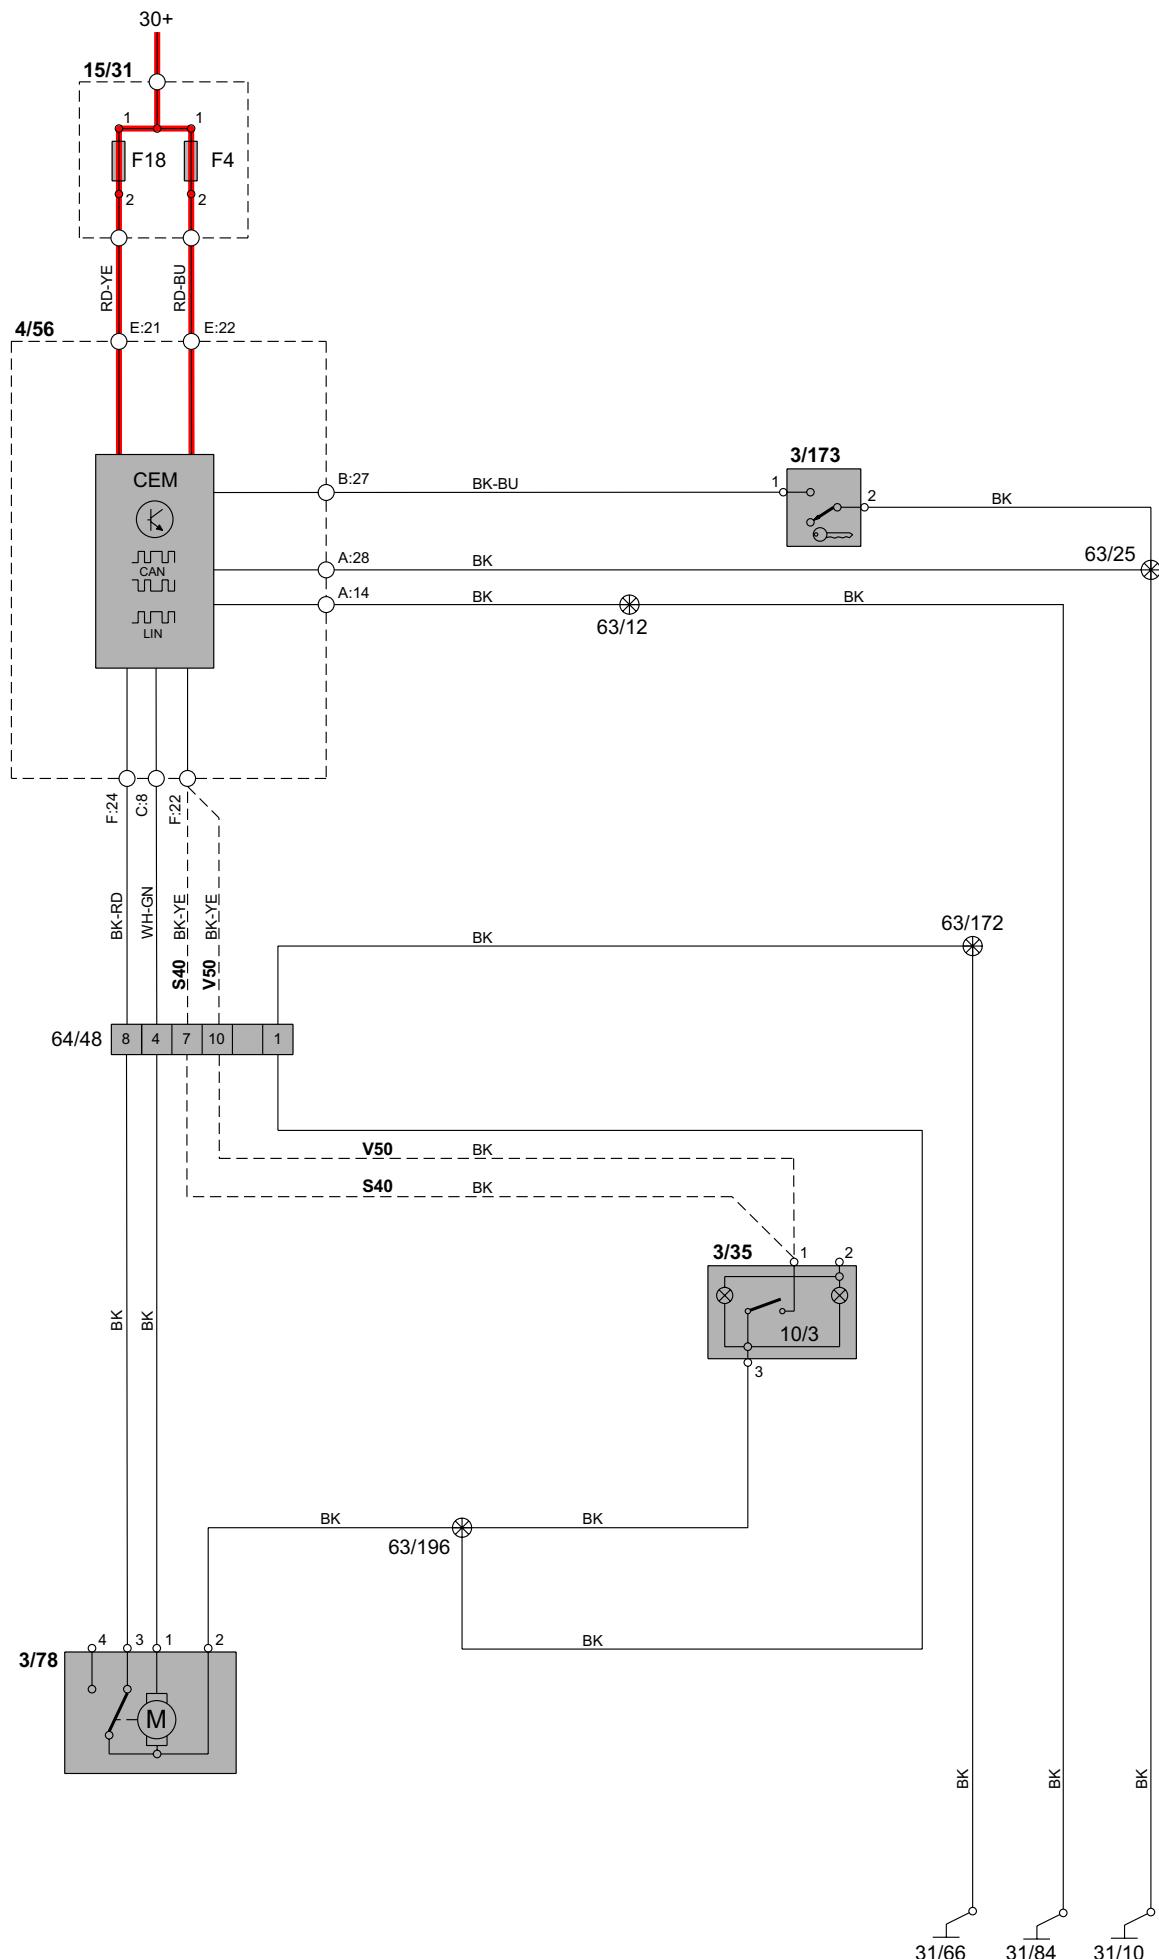


Group 83 Doors and openings

Central locking, tailgate C70

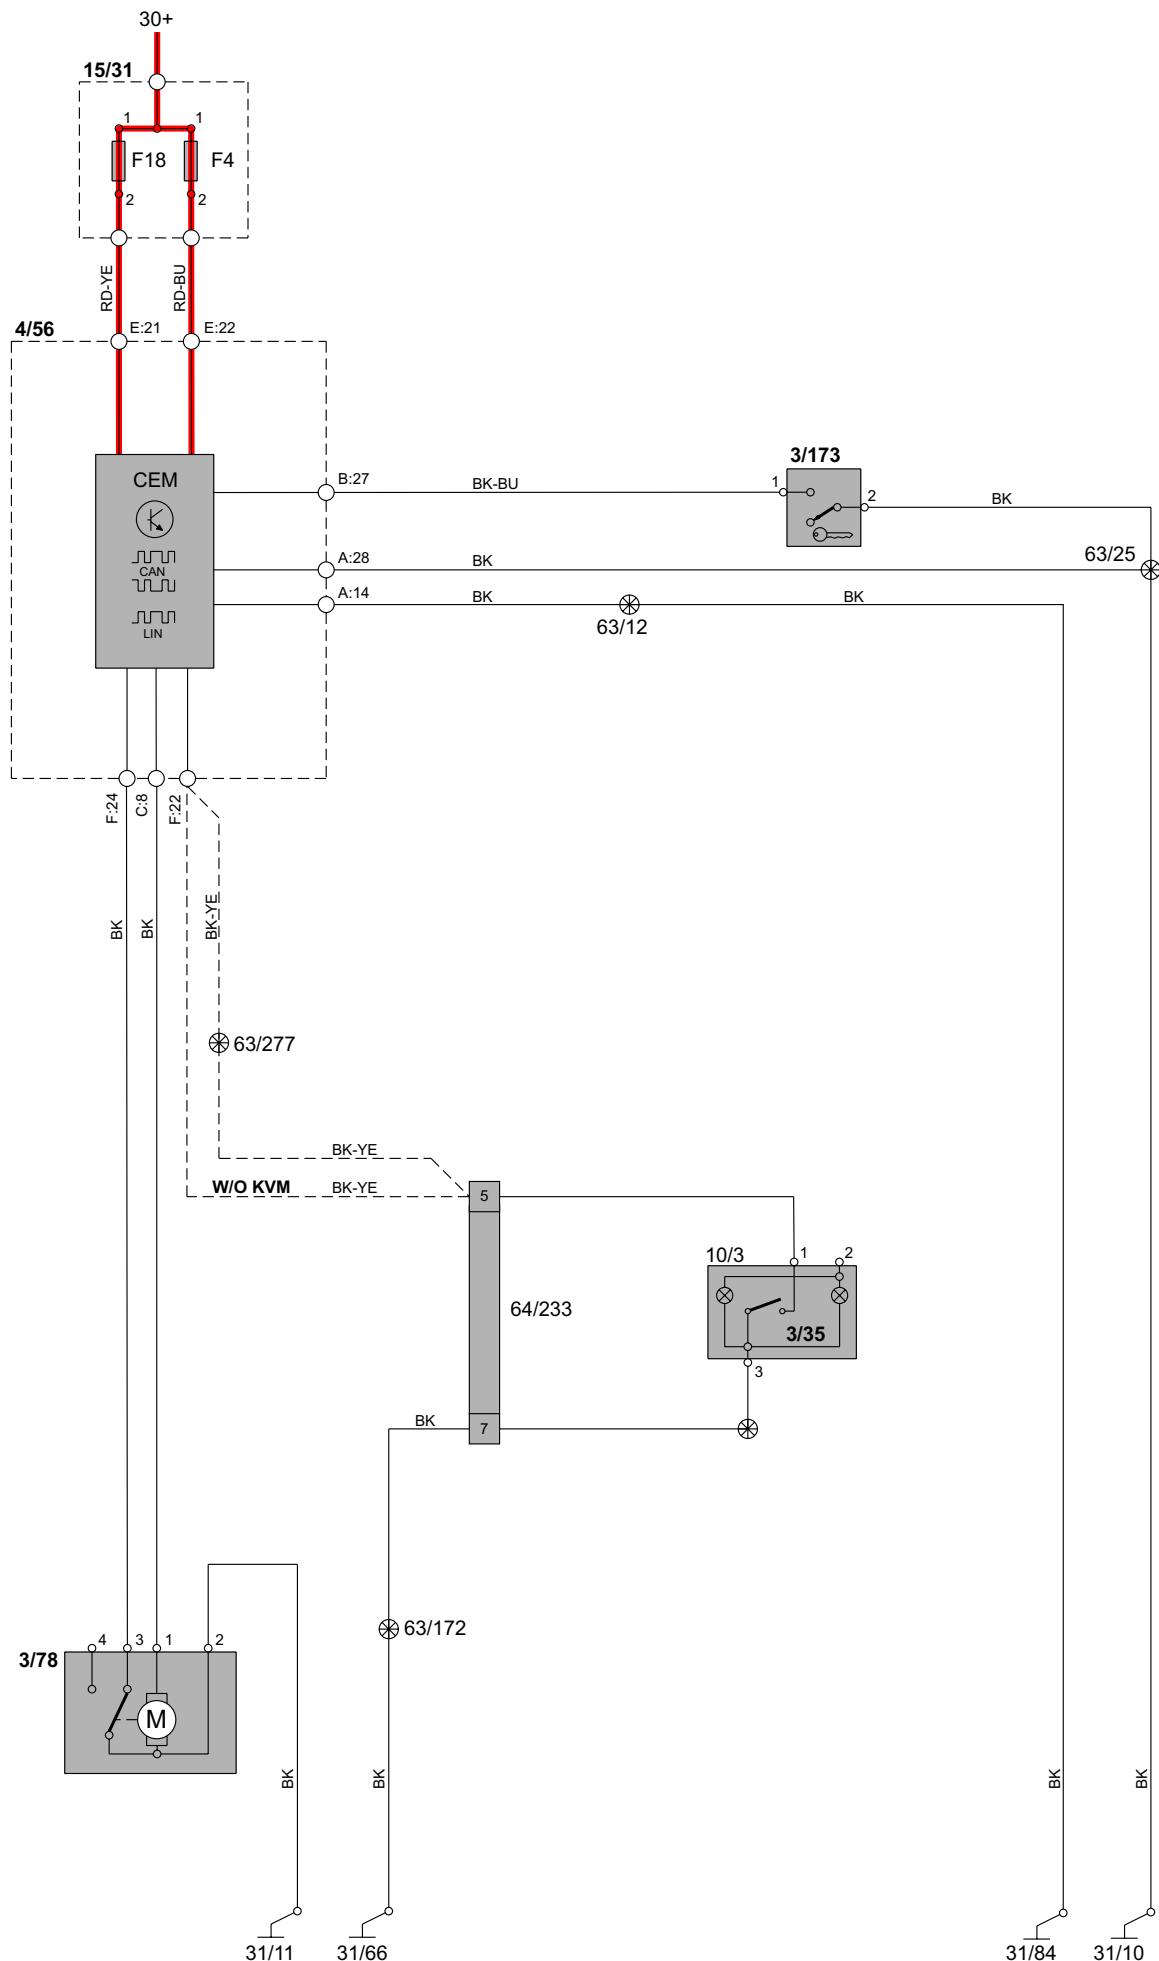


Group 83 Doors and openings

Central locking, storage compartment C70

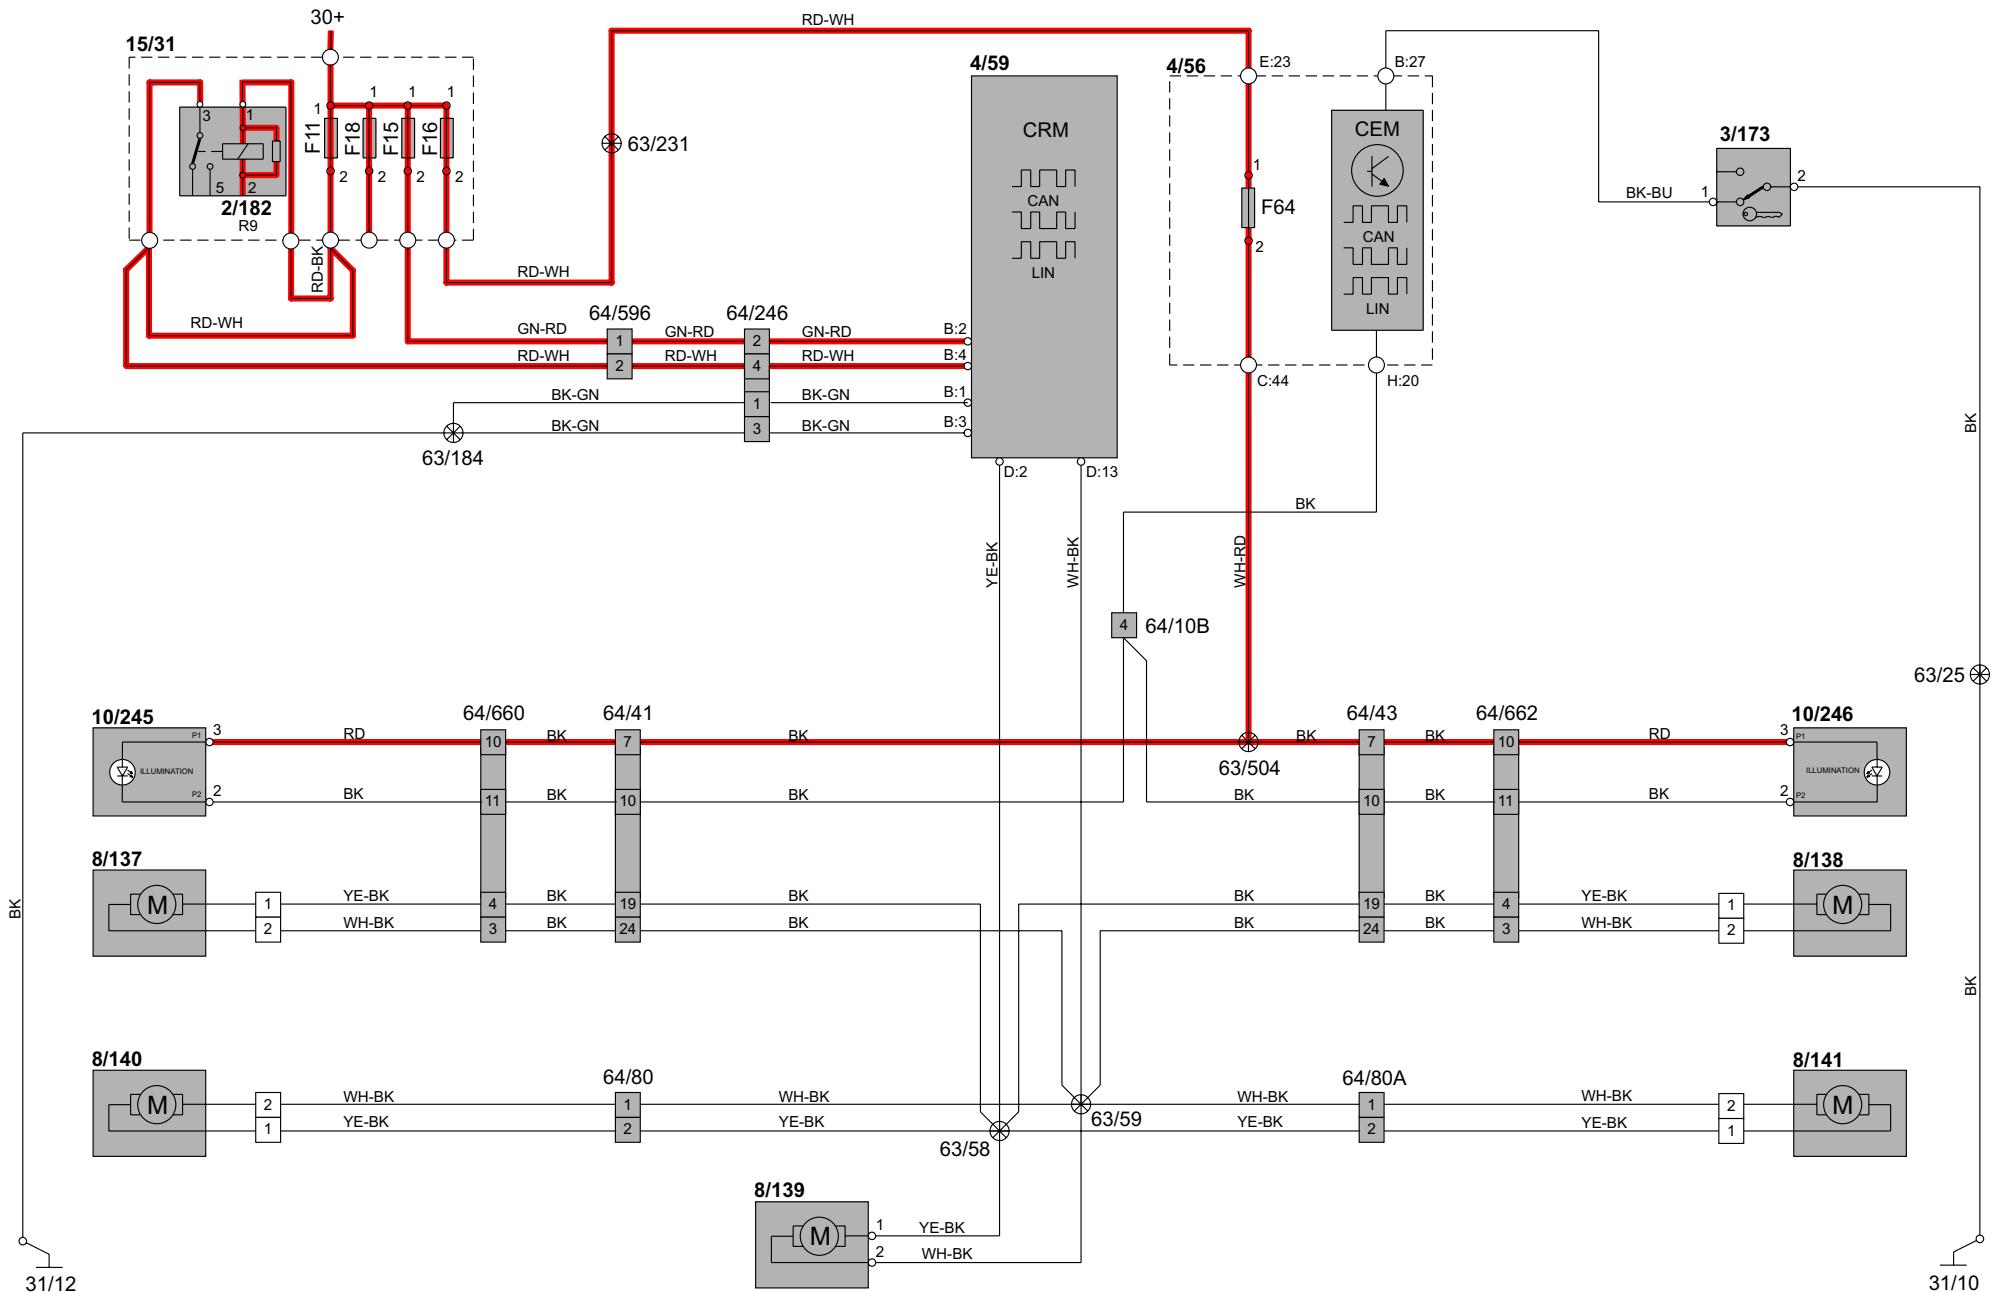


Group 83 Doors and openings

Child safety lock S40/V50

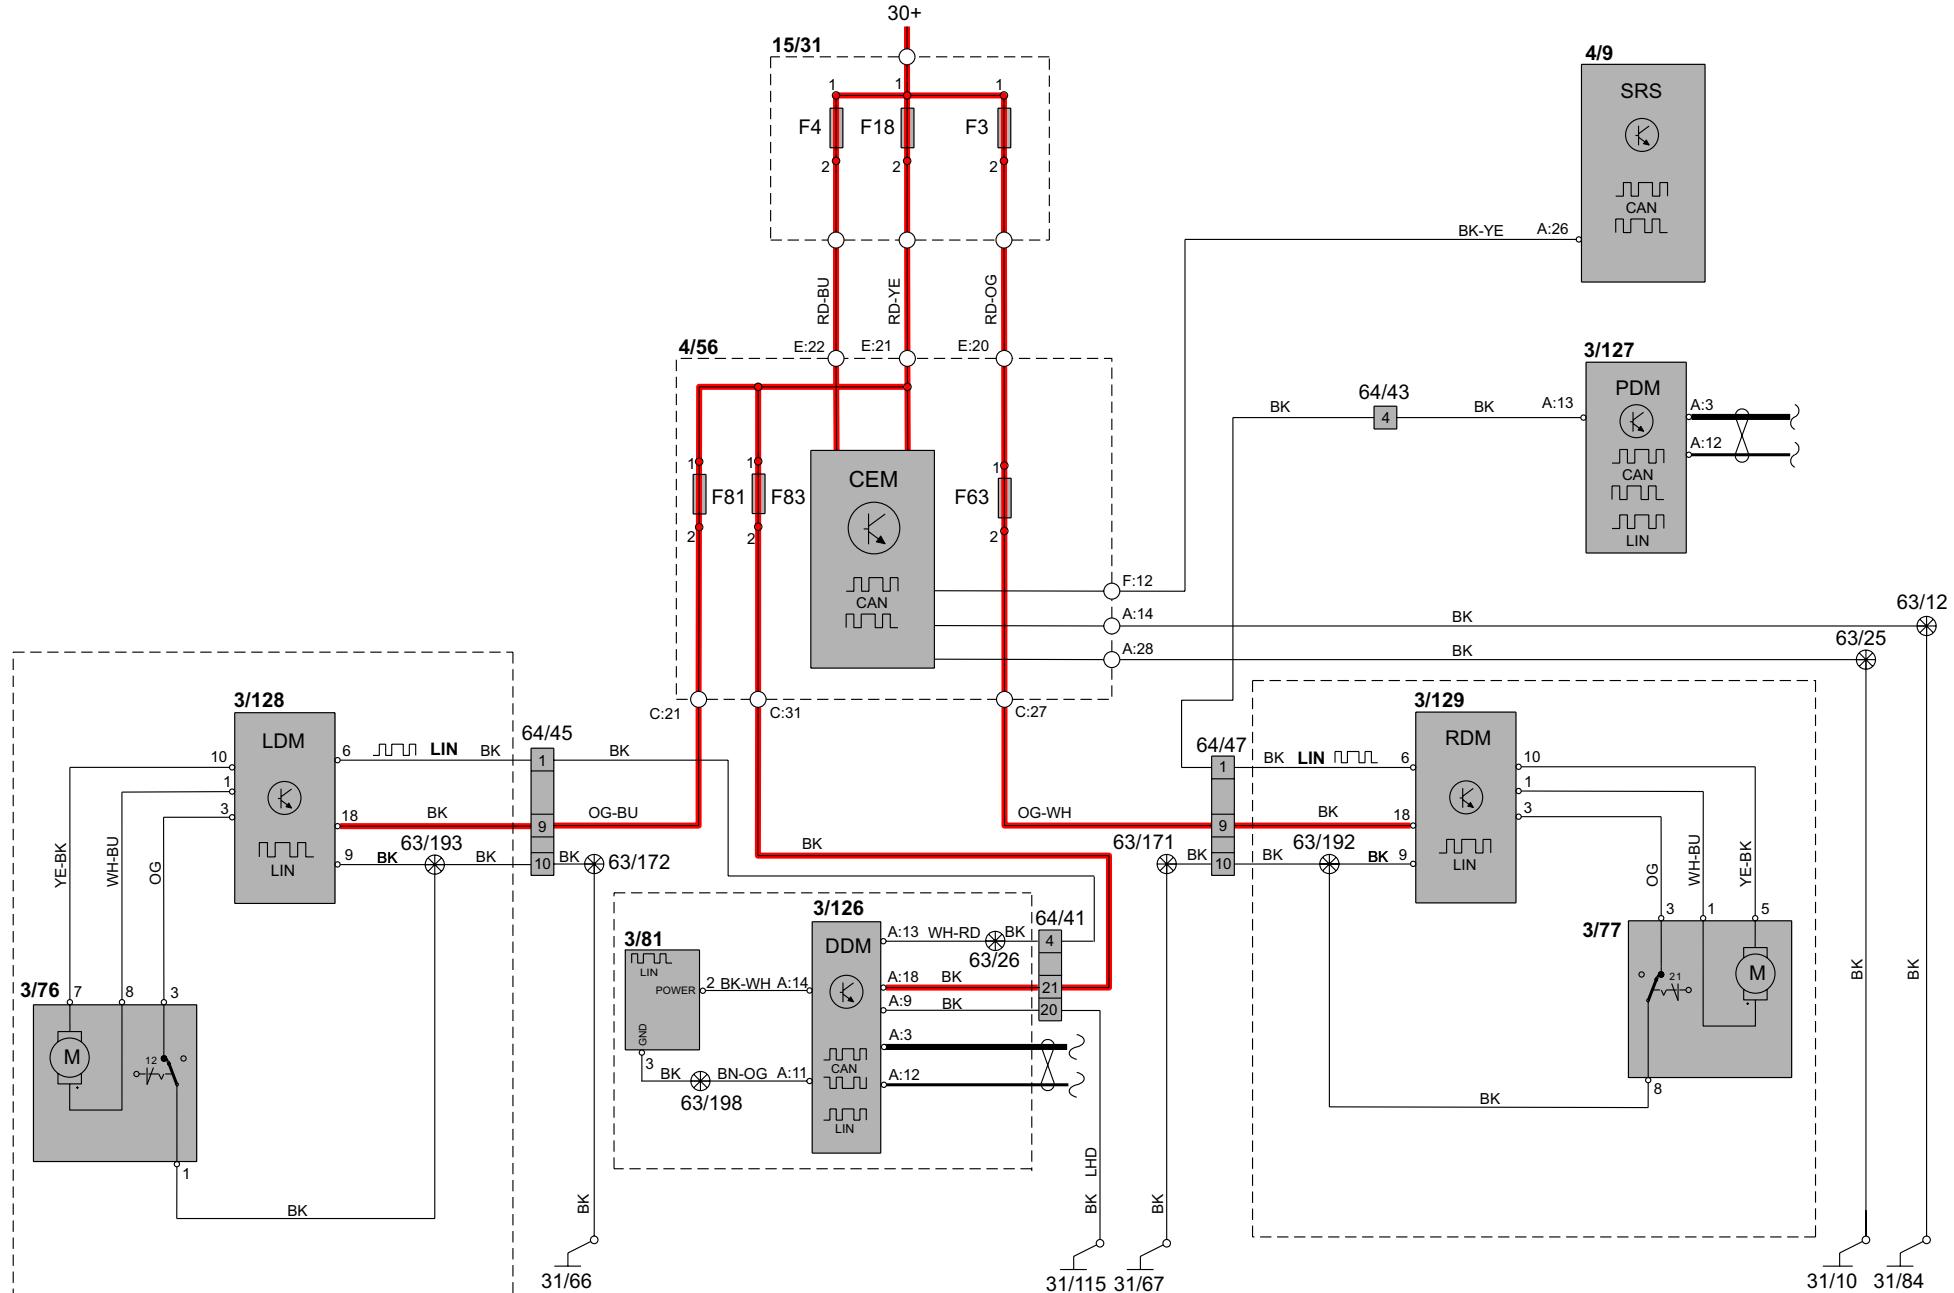


Group 83 Doors and openings

Central locking, fuel filler flap

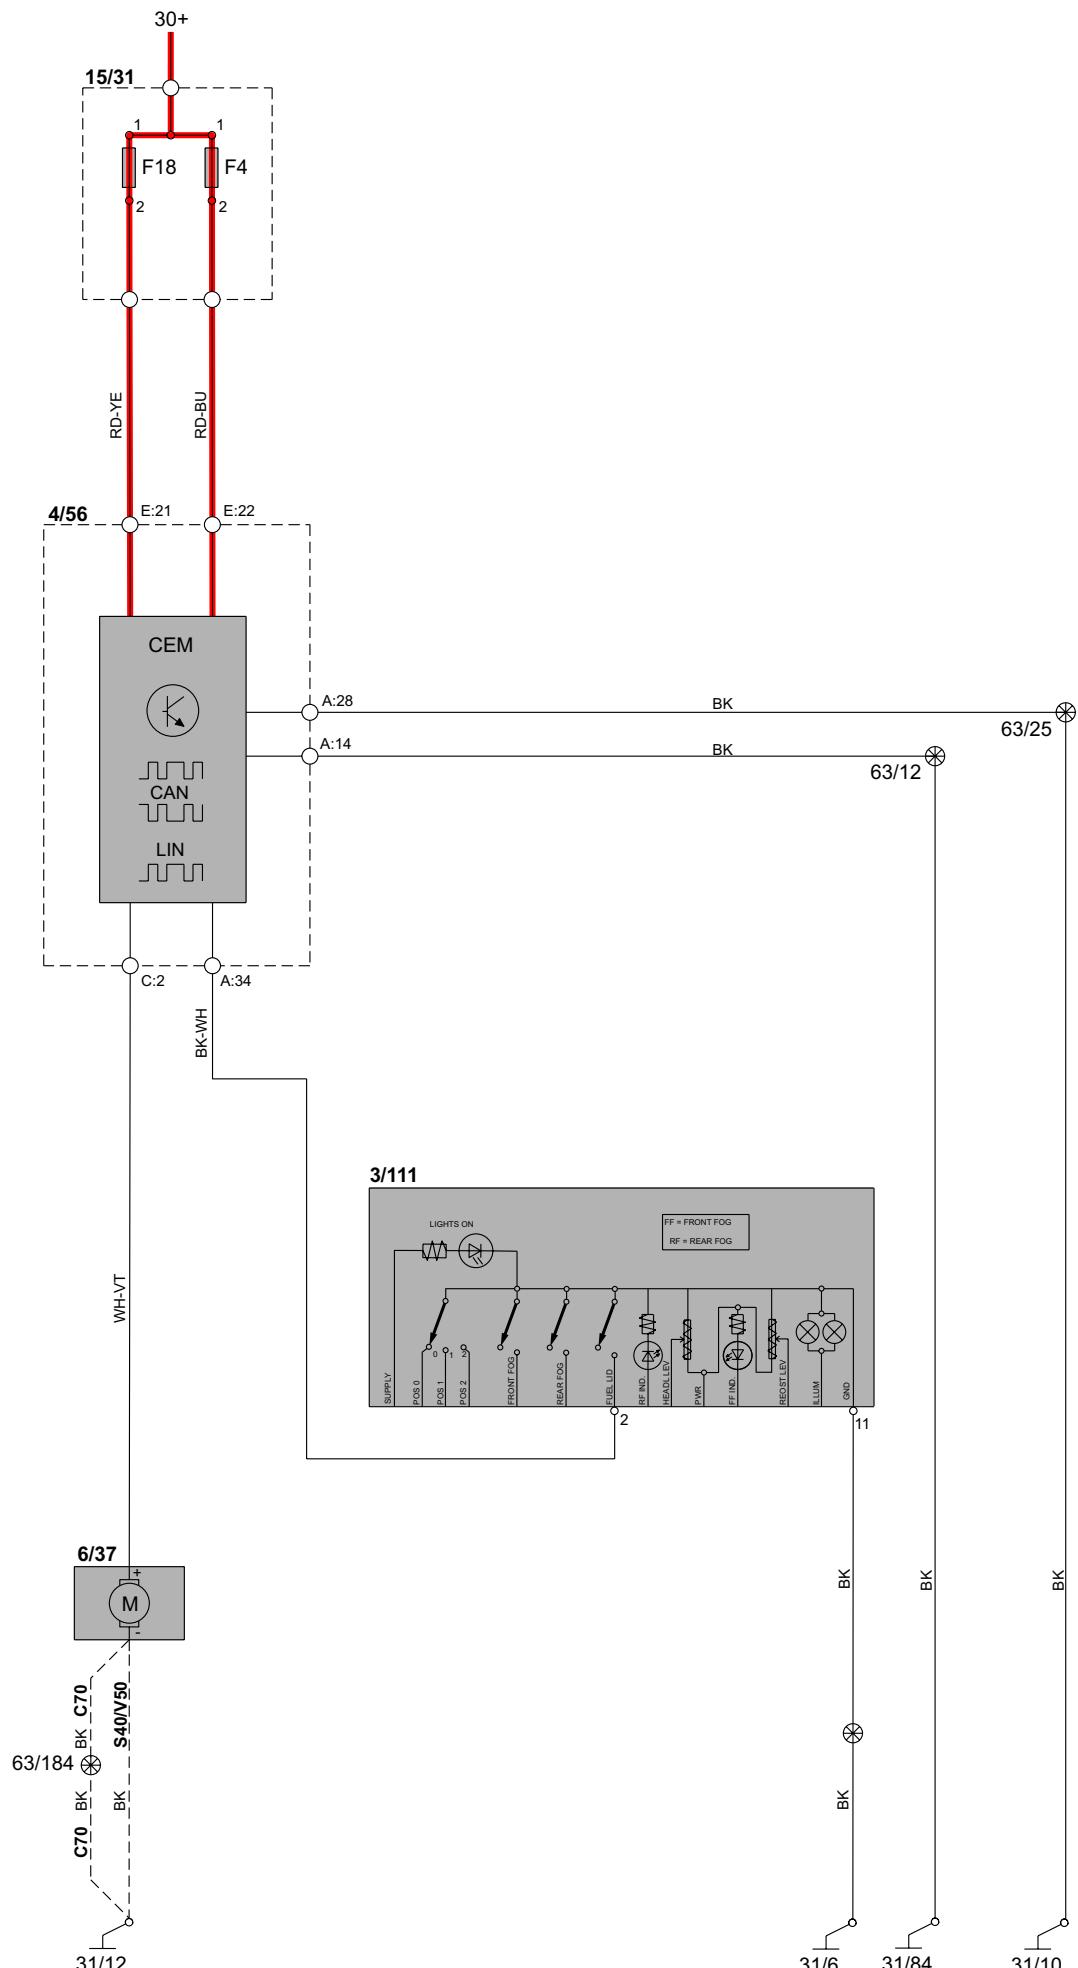


Group 83 Doors and openings

Signal receiver, remote-control, central locking

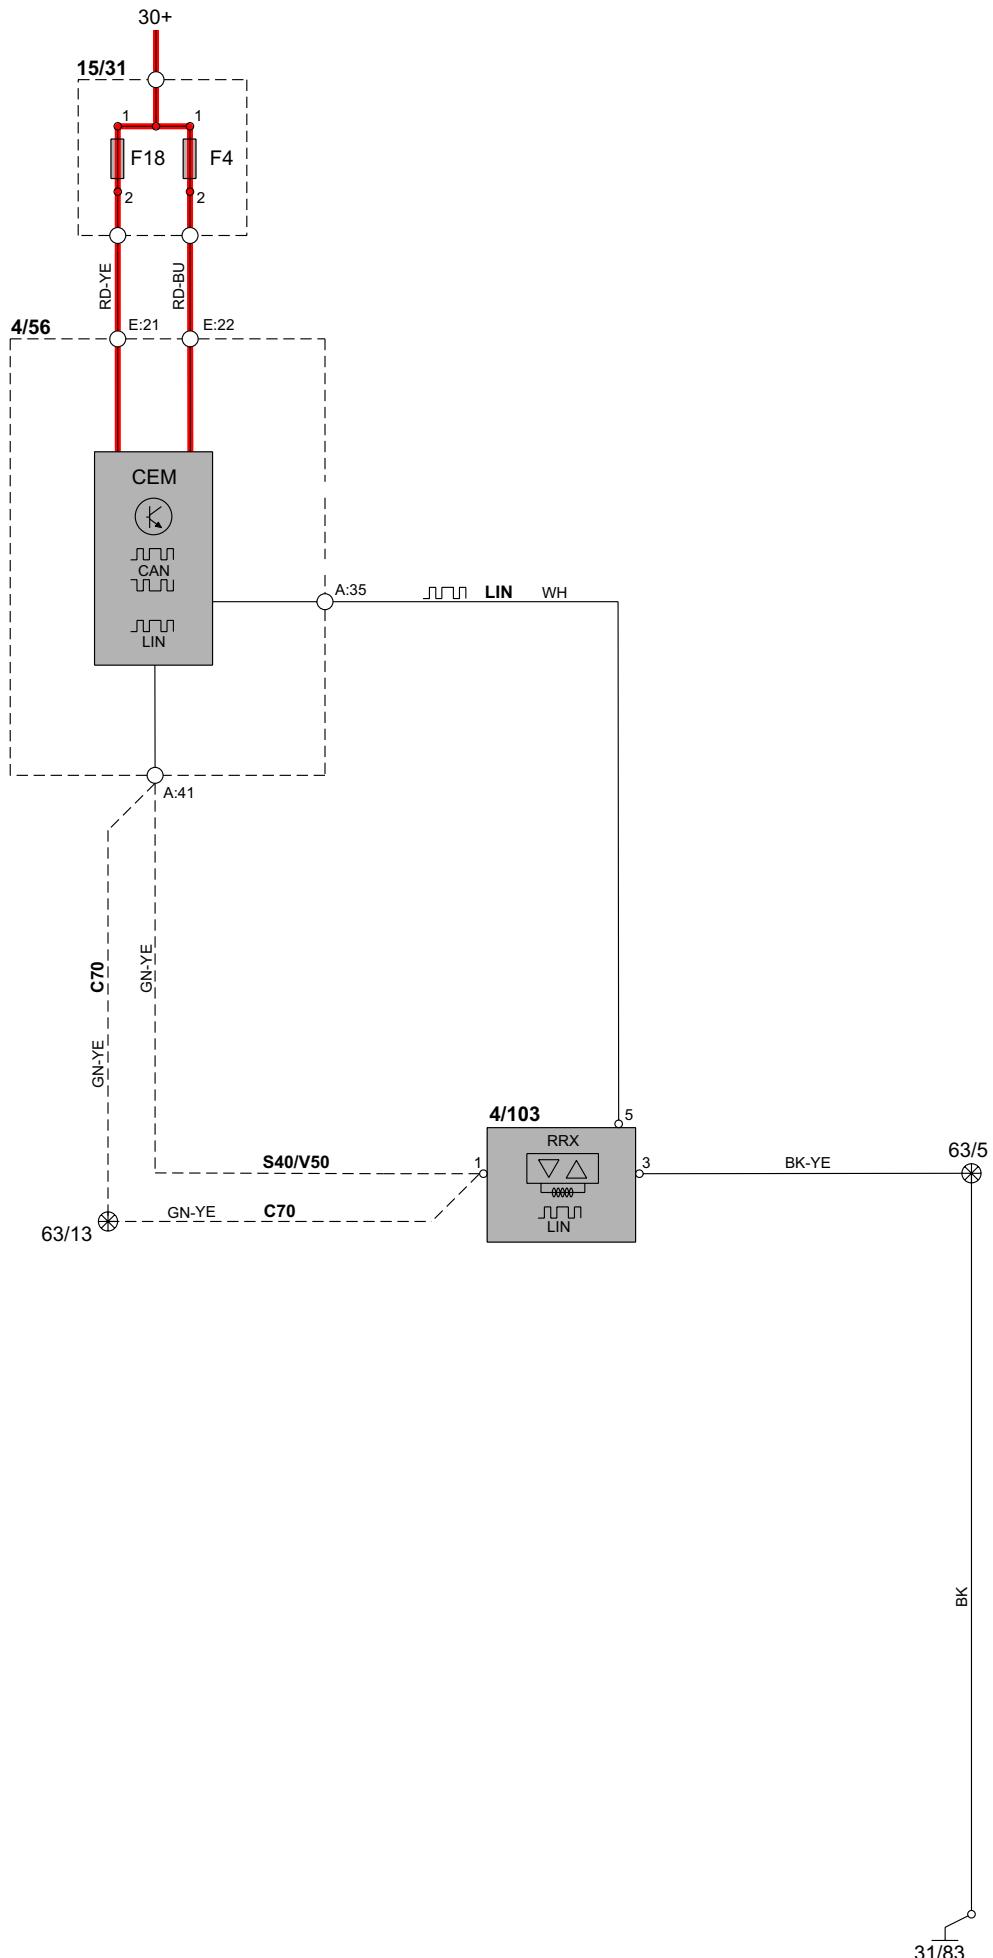


Group 83 Doors and openings

Power windows, front doors S40/V50

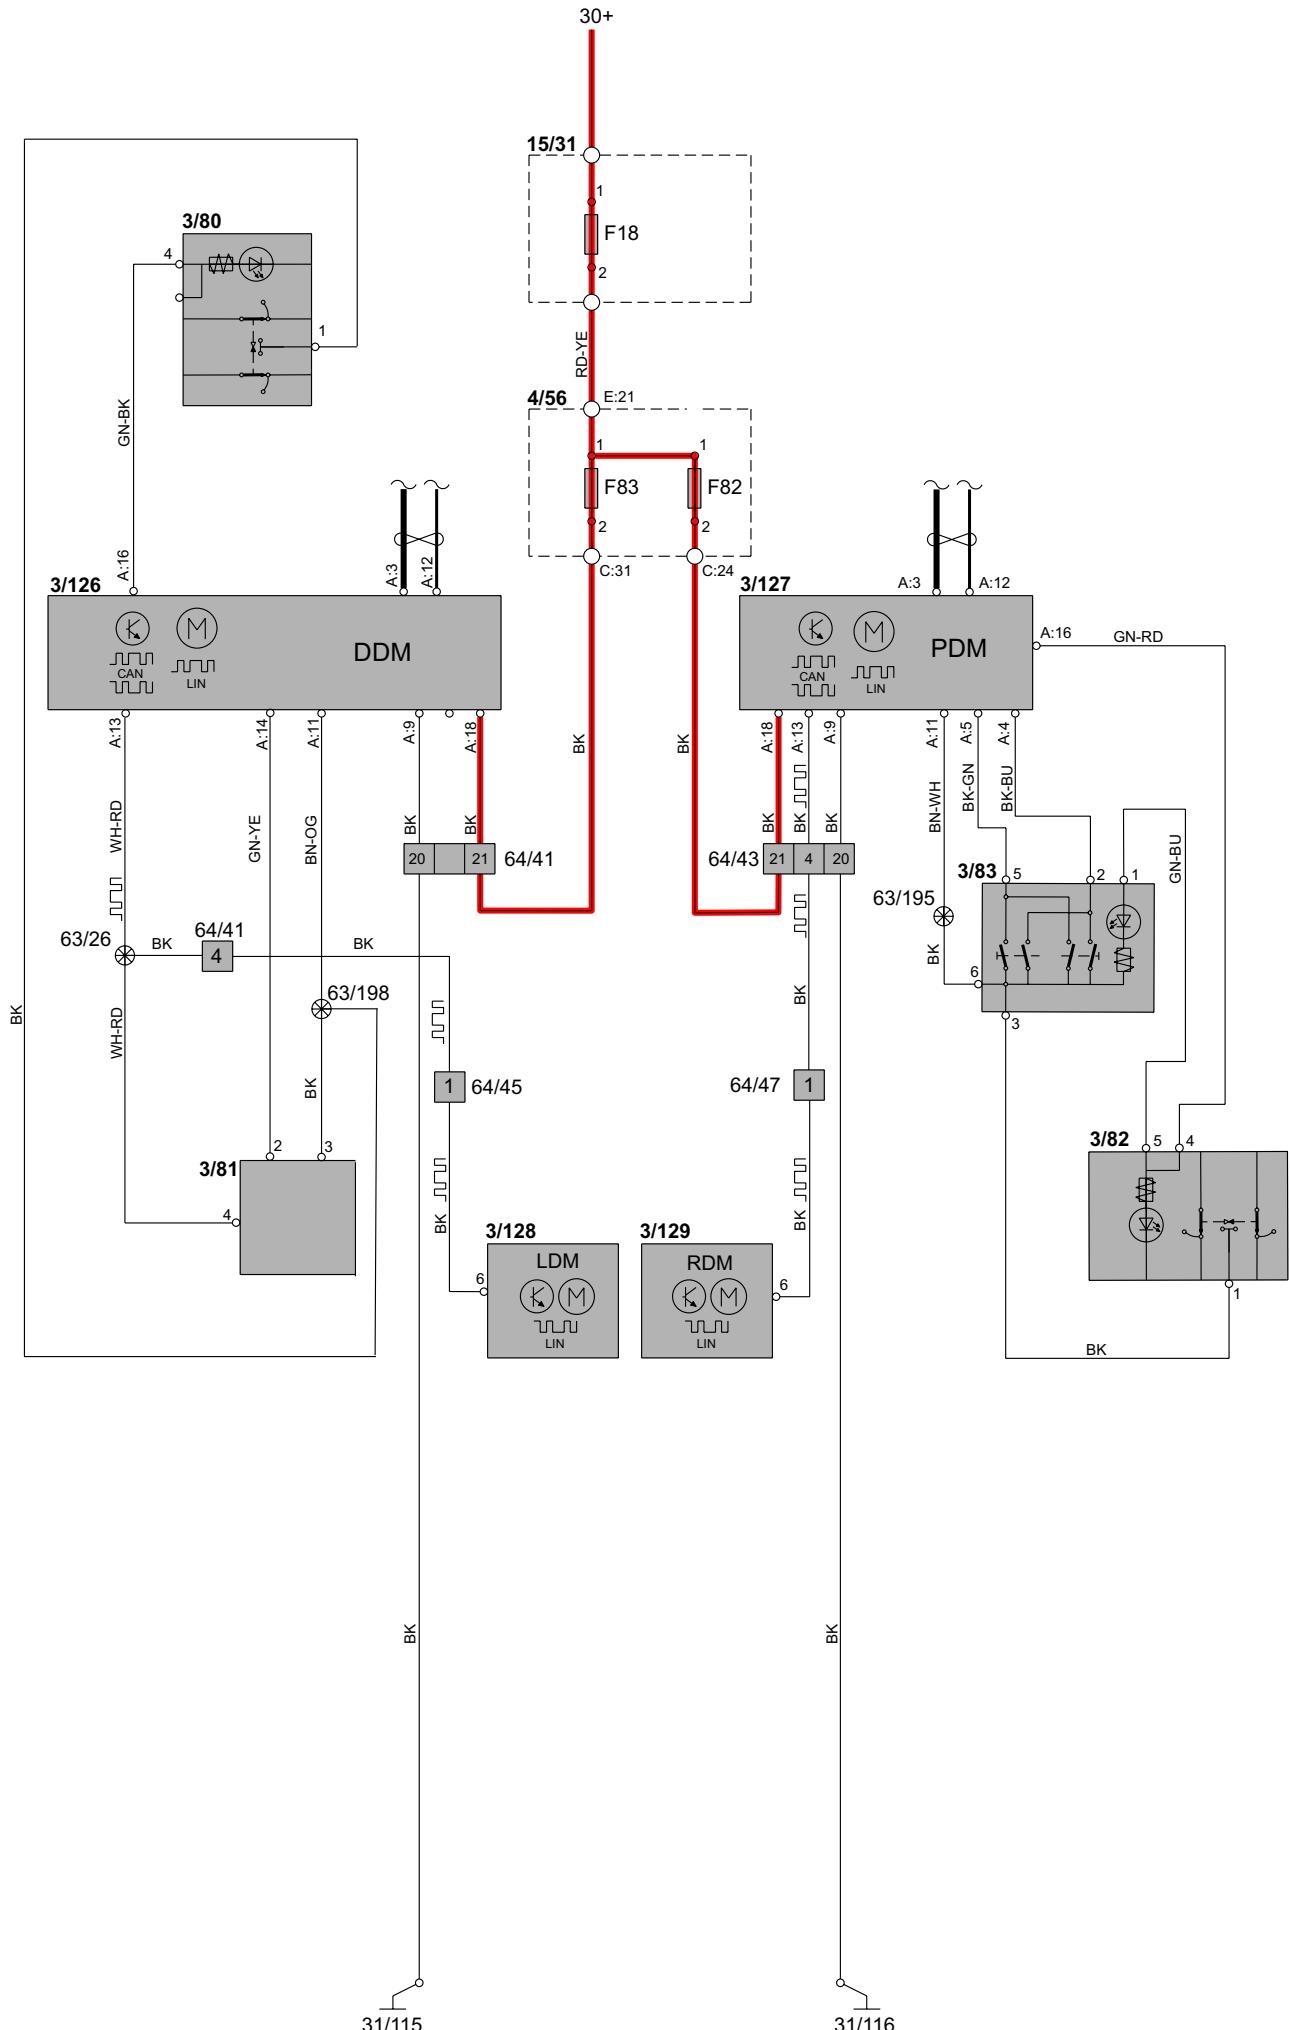


Group 83 Doors and openings

Power windows, front doors C70

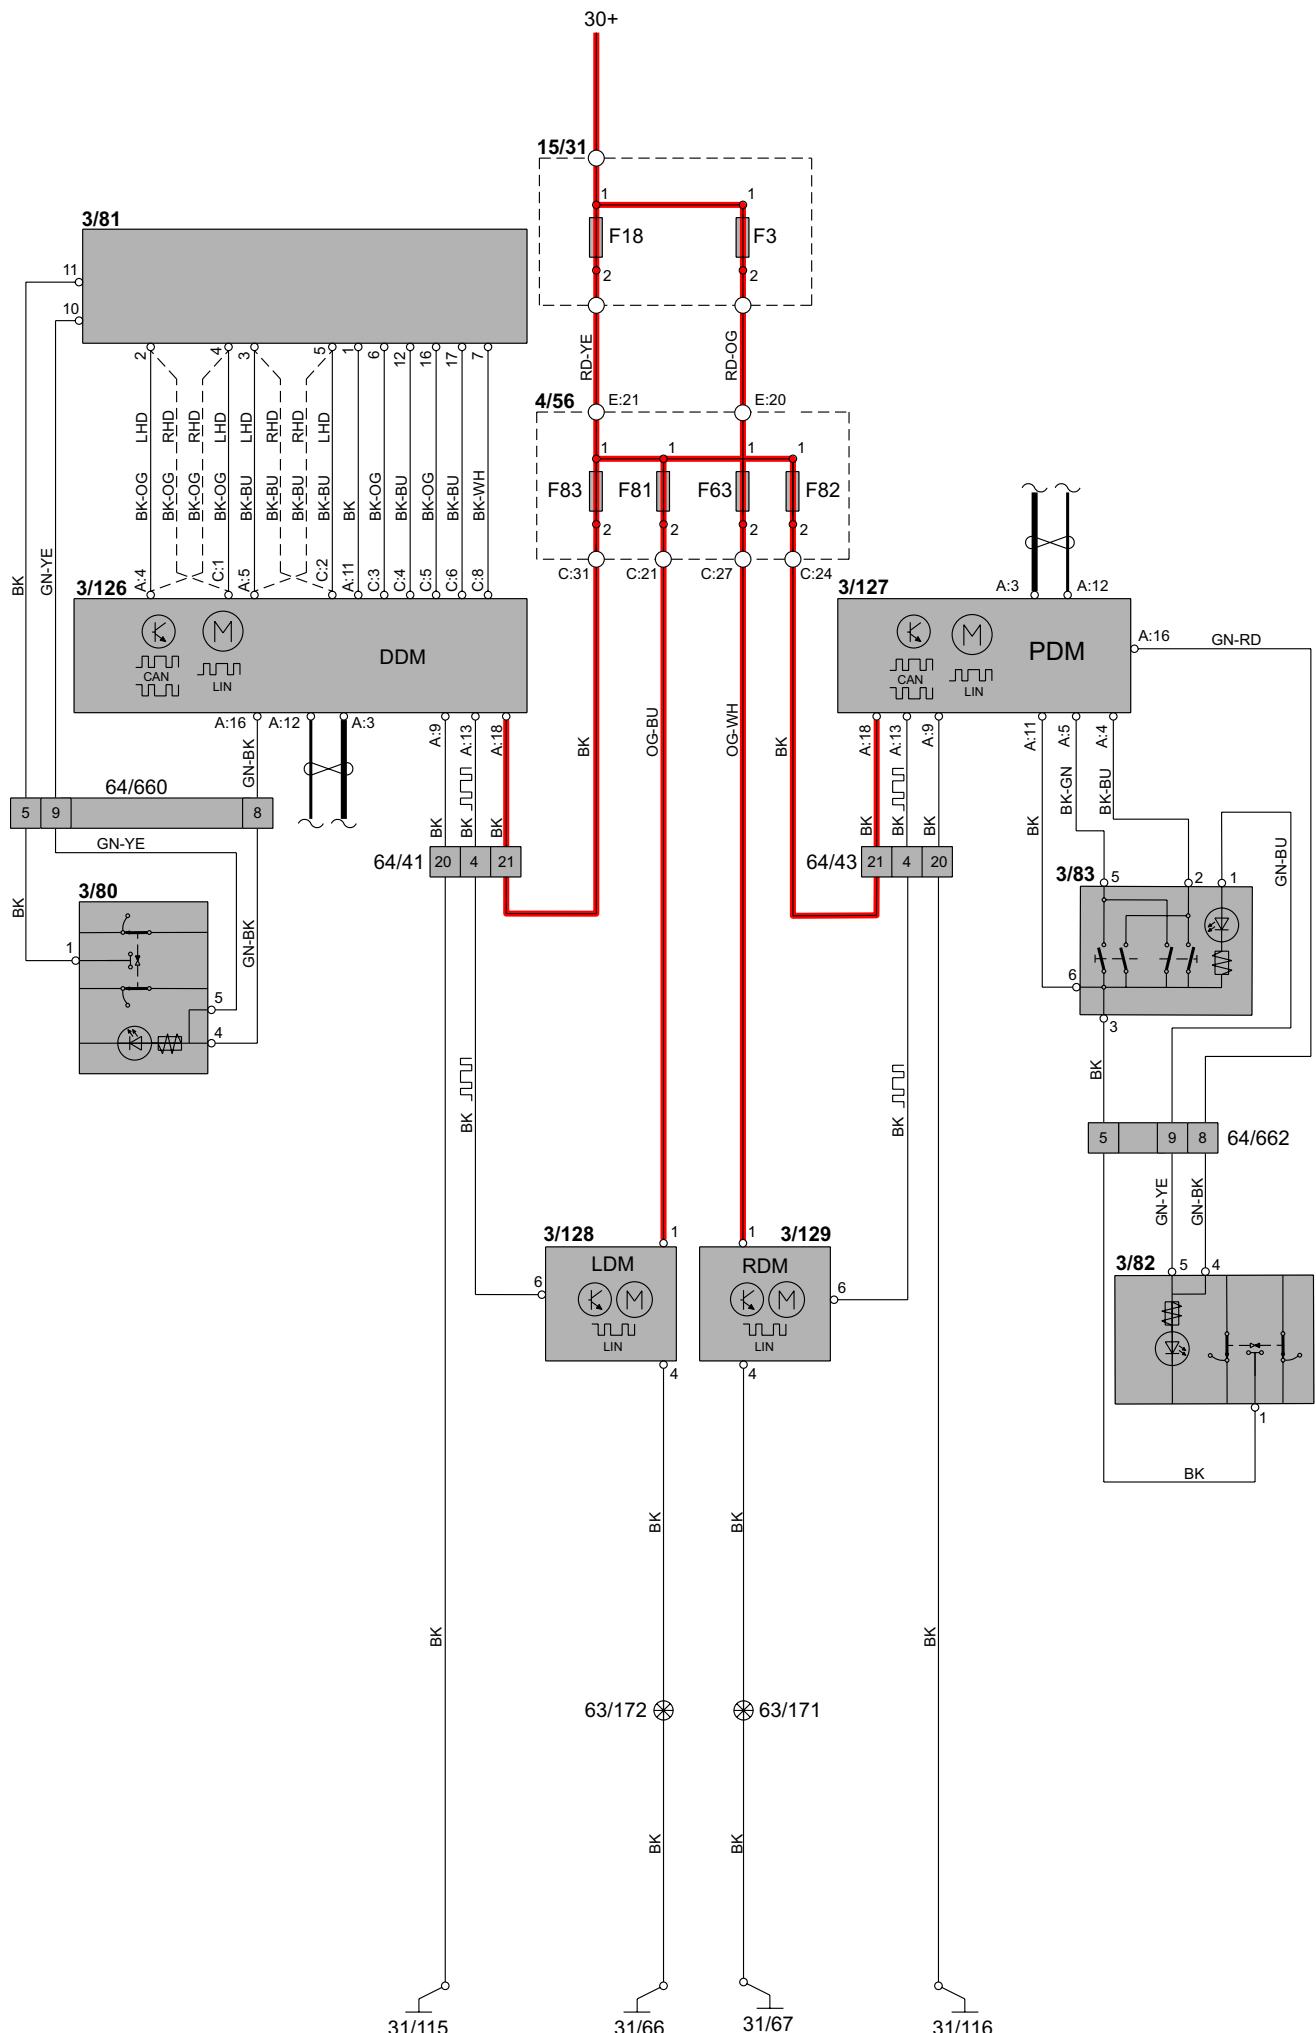


Group 83 Doors and openings

Power windows, rear doors S40/V50

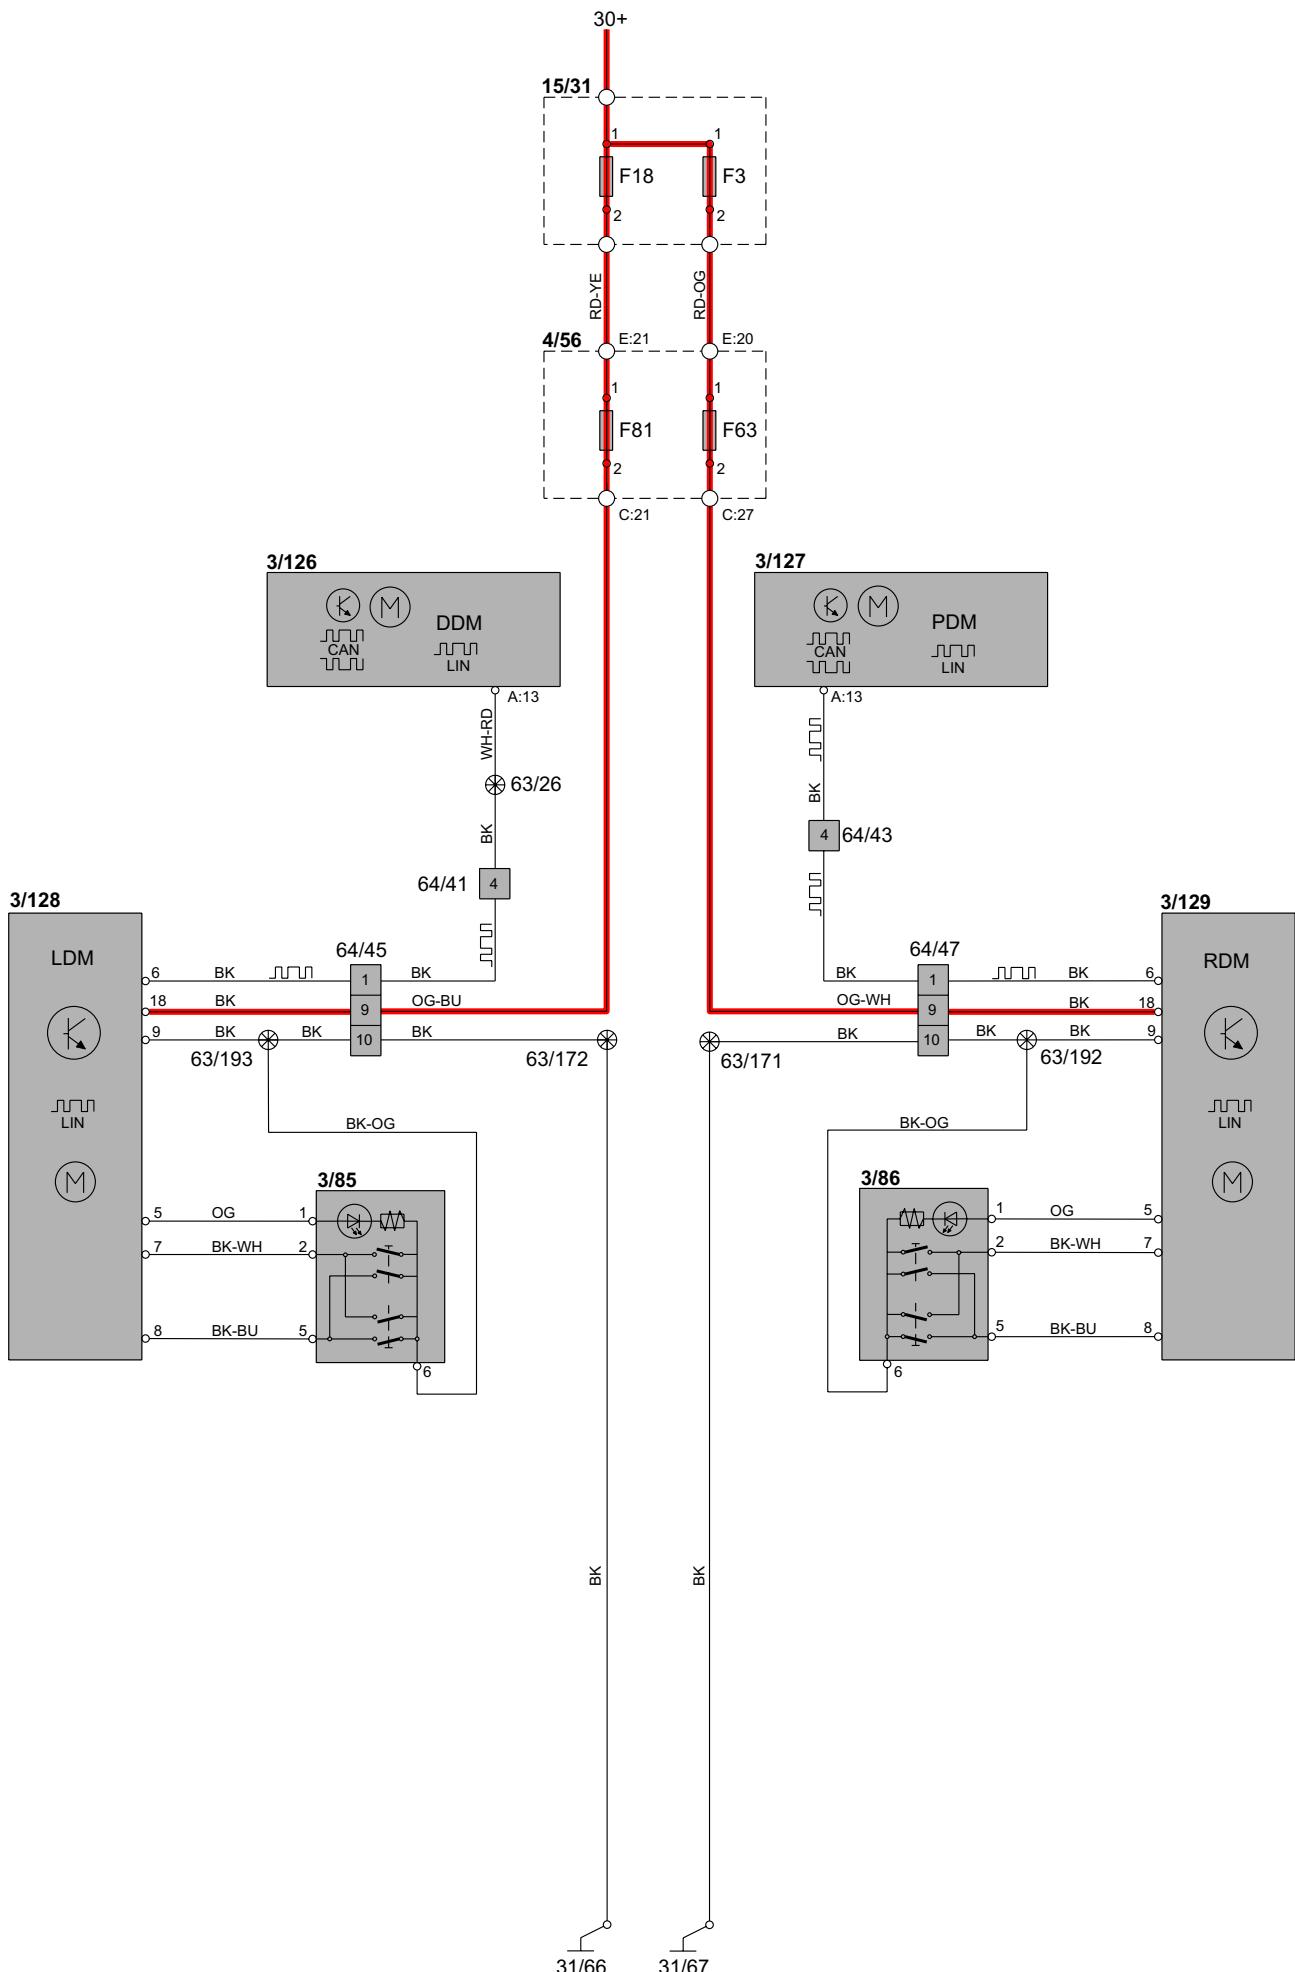


Group 83 Doors and openings

Power sunroof S40/V50

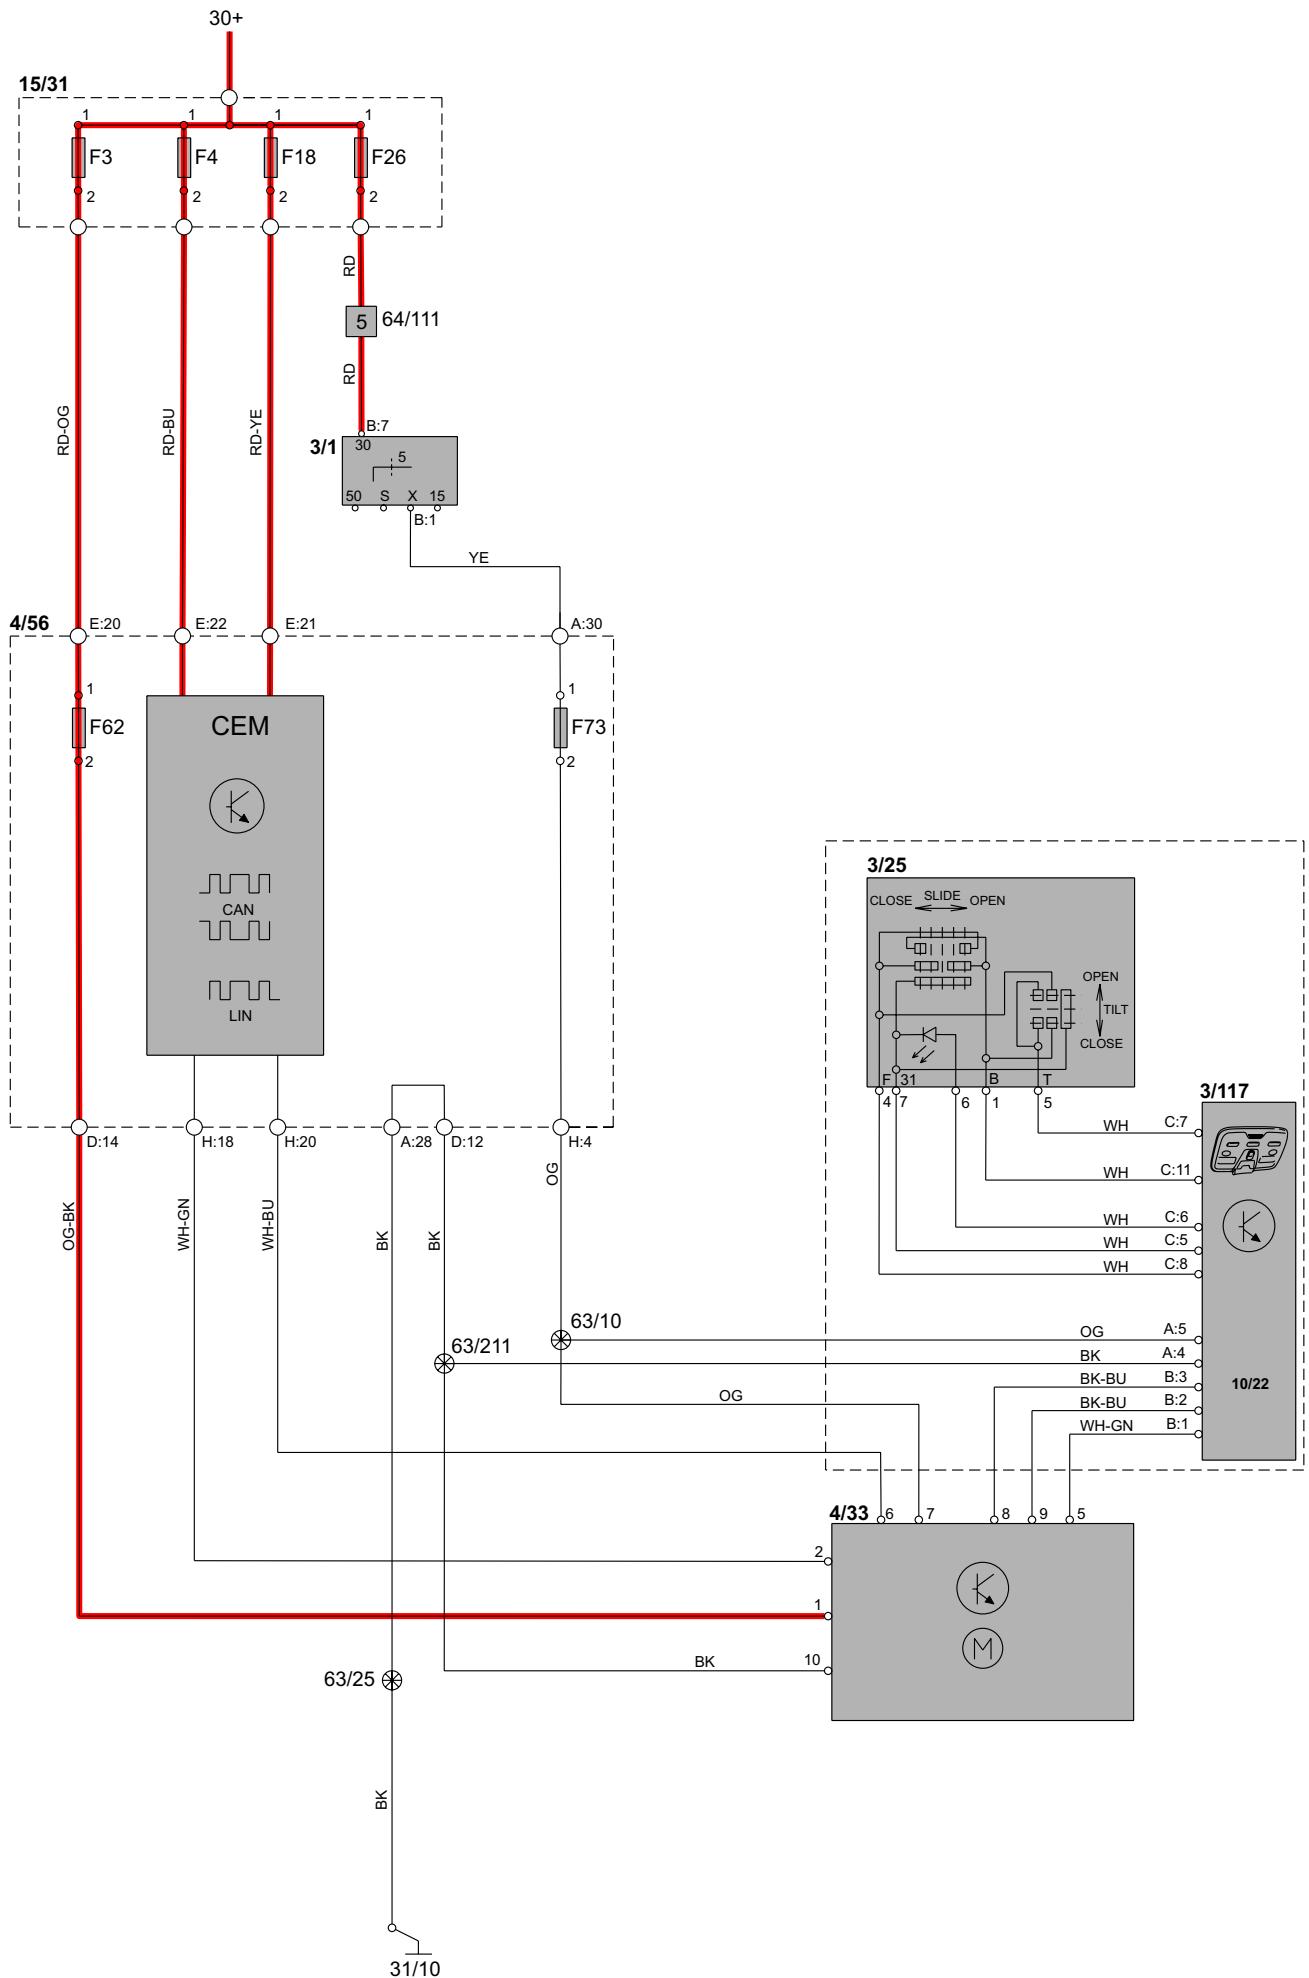


Group 83 Doors and openings

Power roof C70

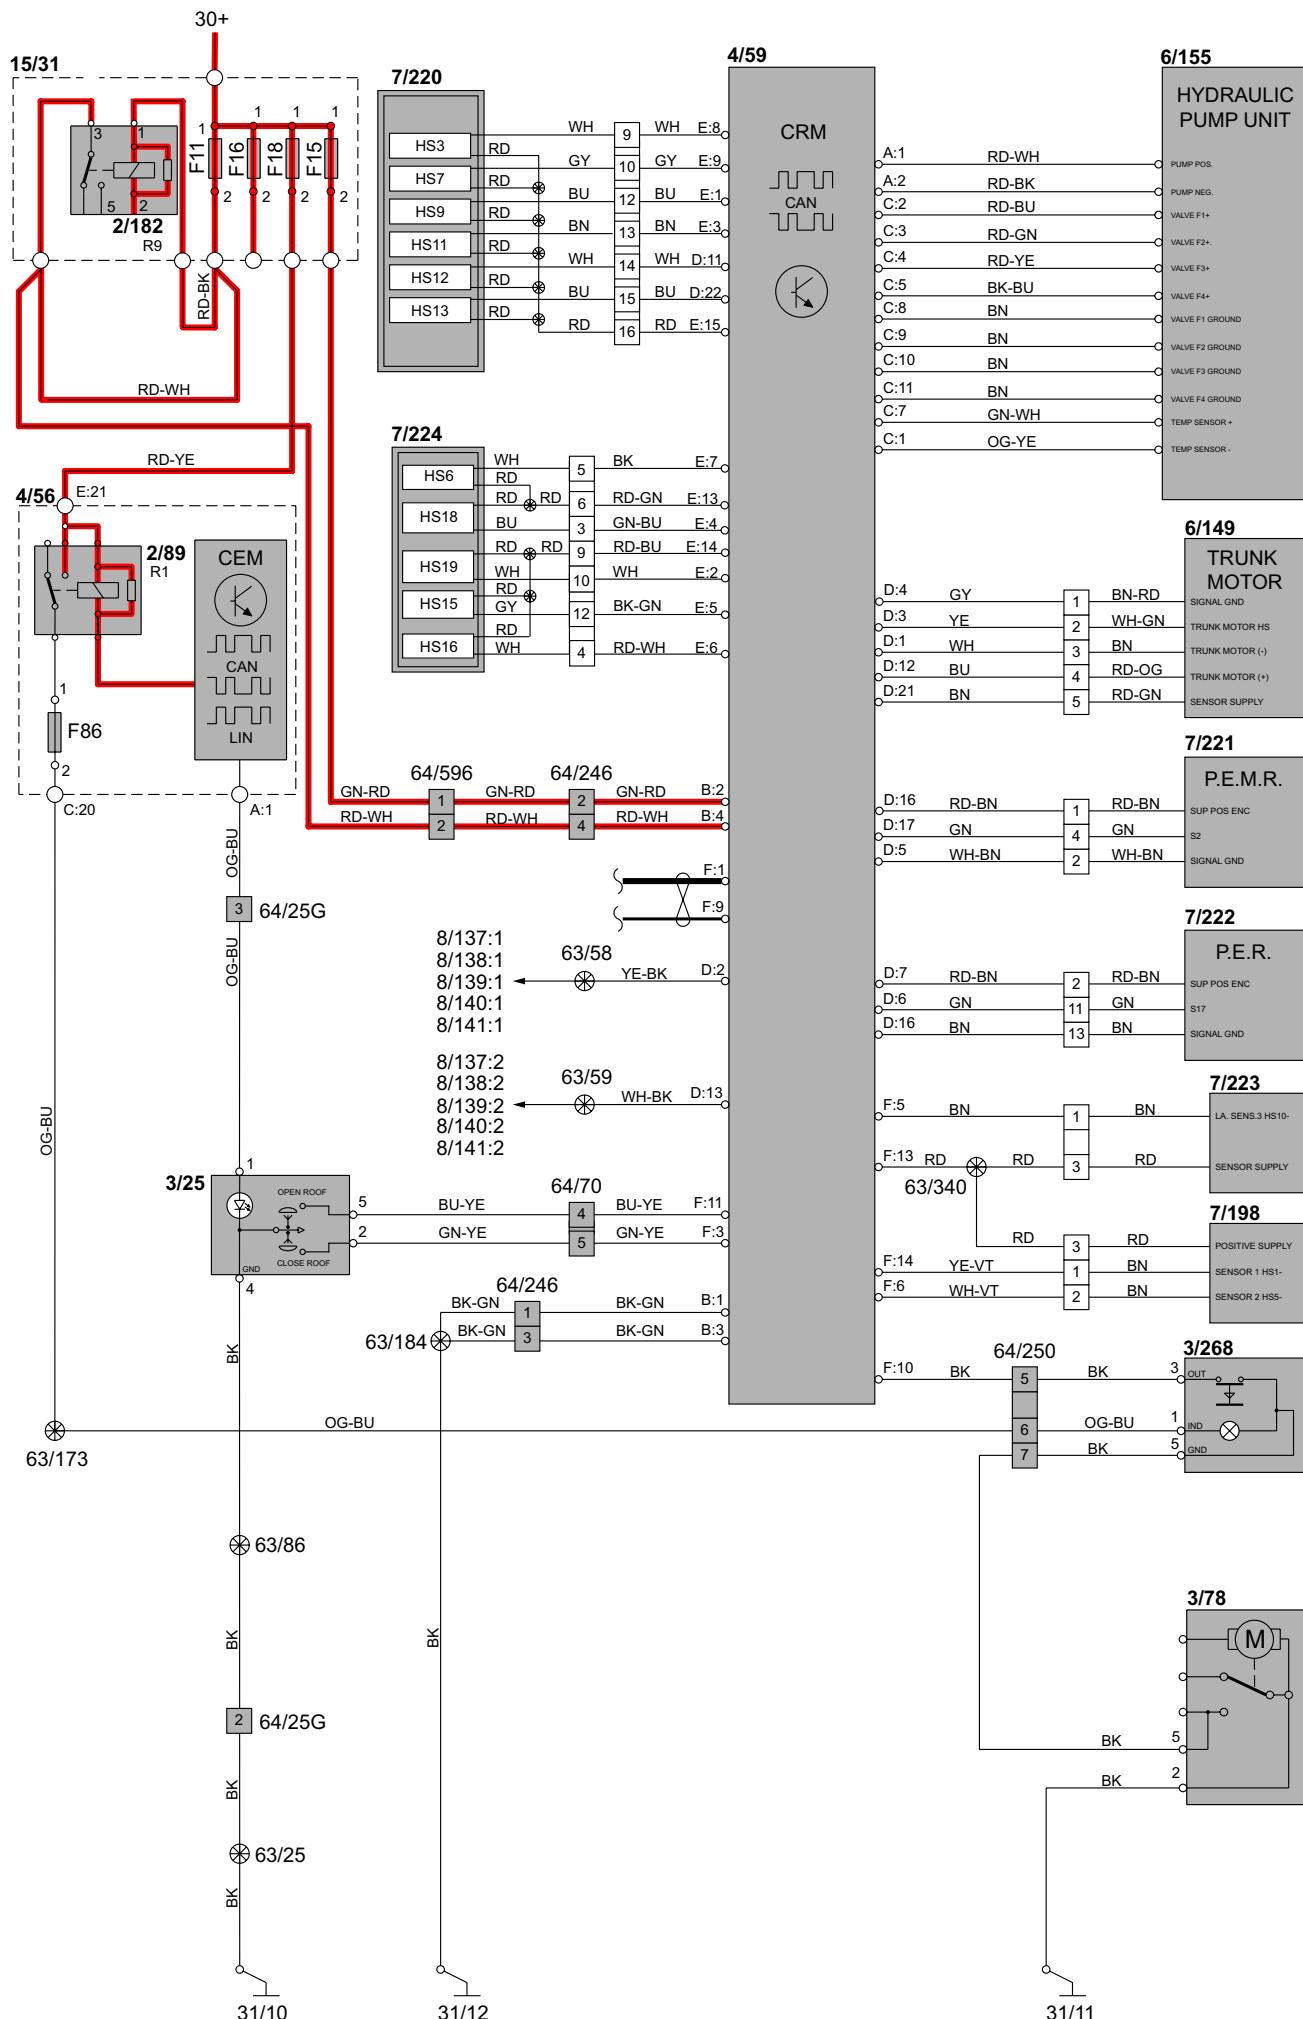


Group 84 Exterior decorative elements, etc.

Power door mirrors S40/V50

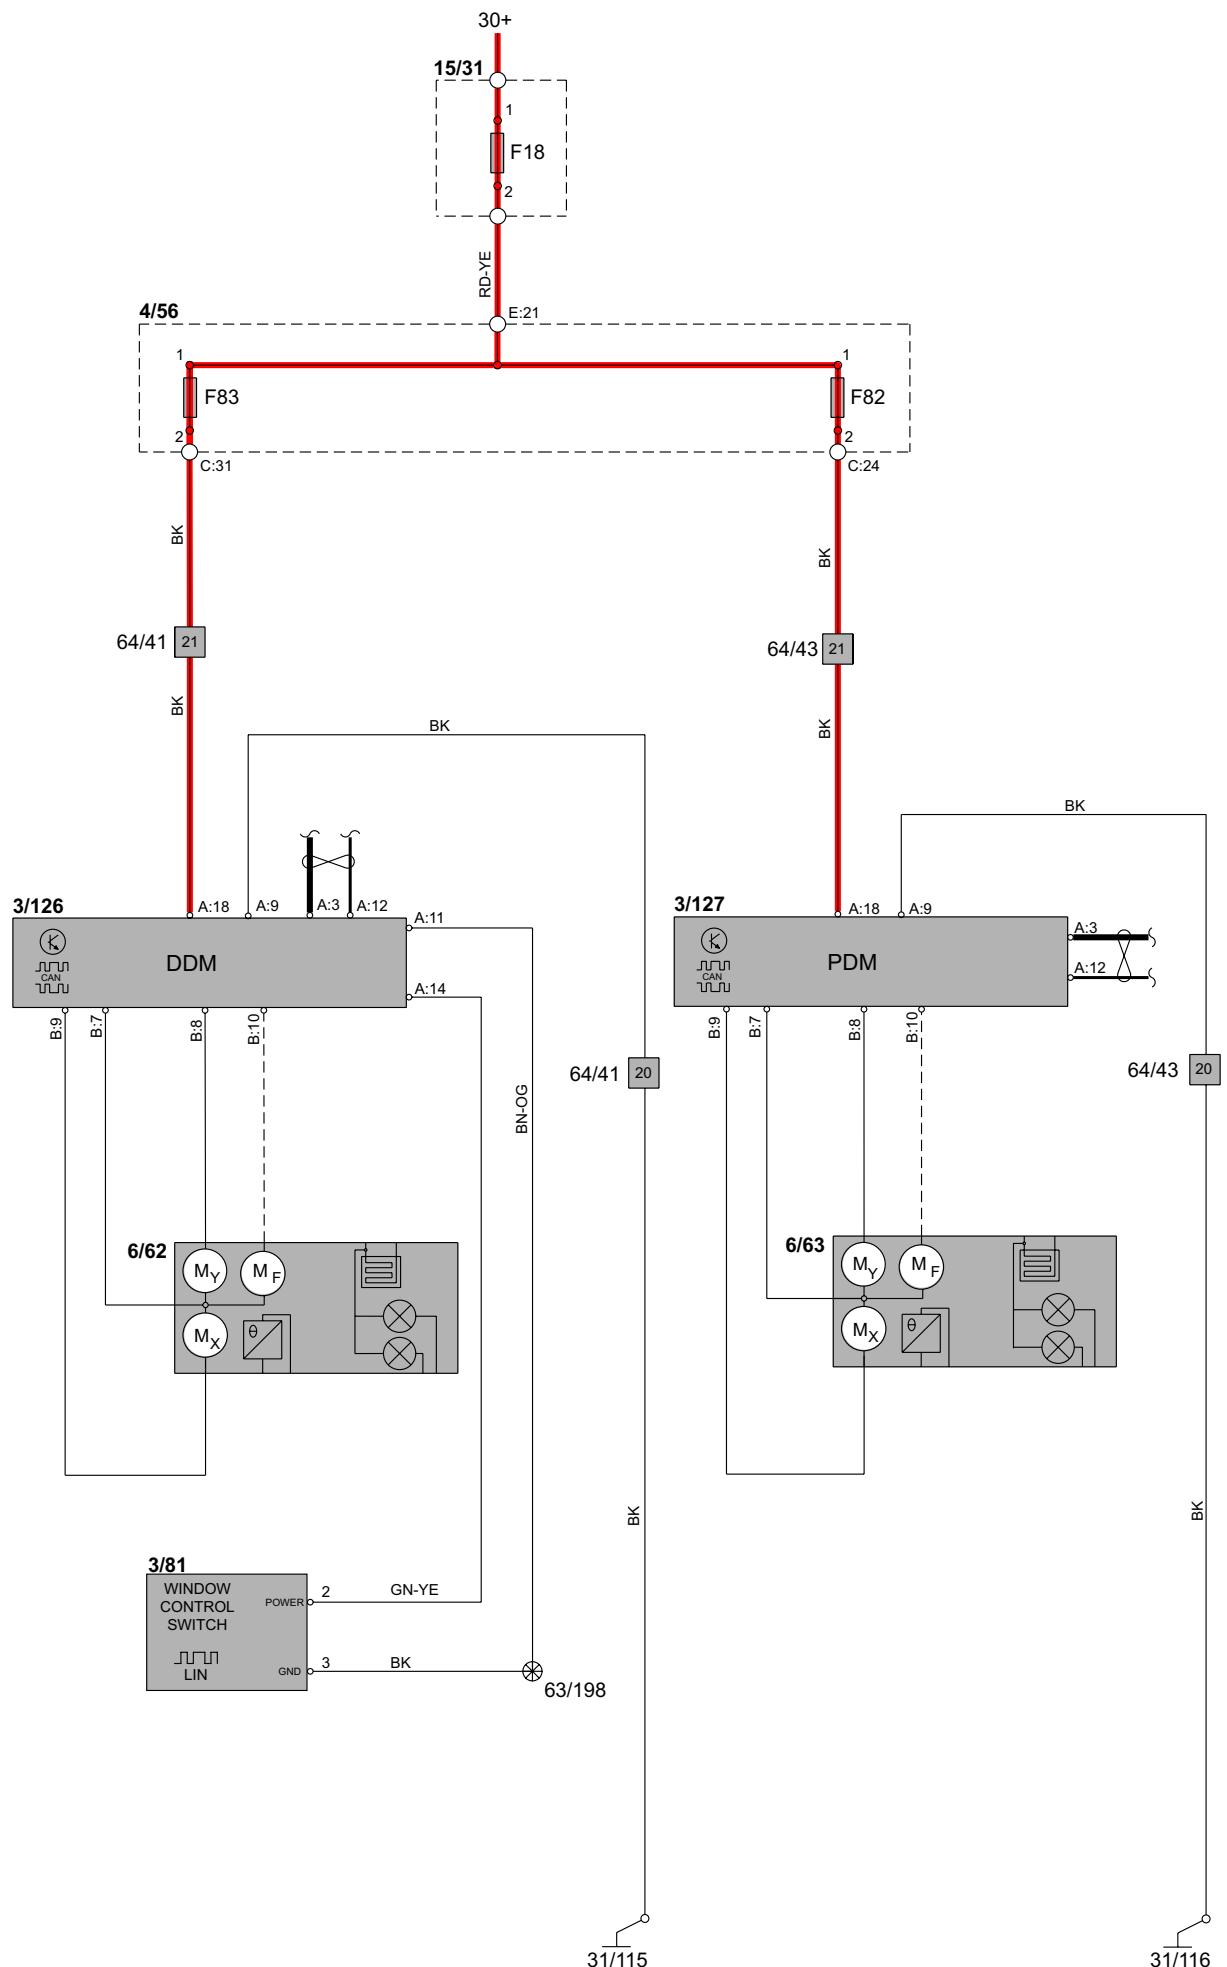


Group 84 Exterior decorative elements, etc.

Power door mirrors C70

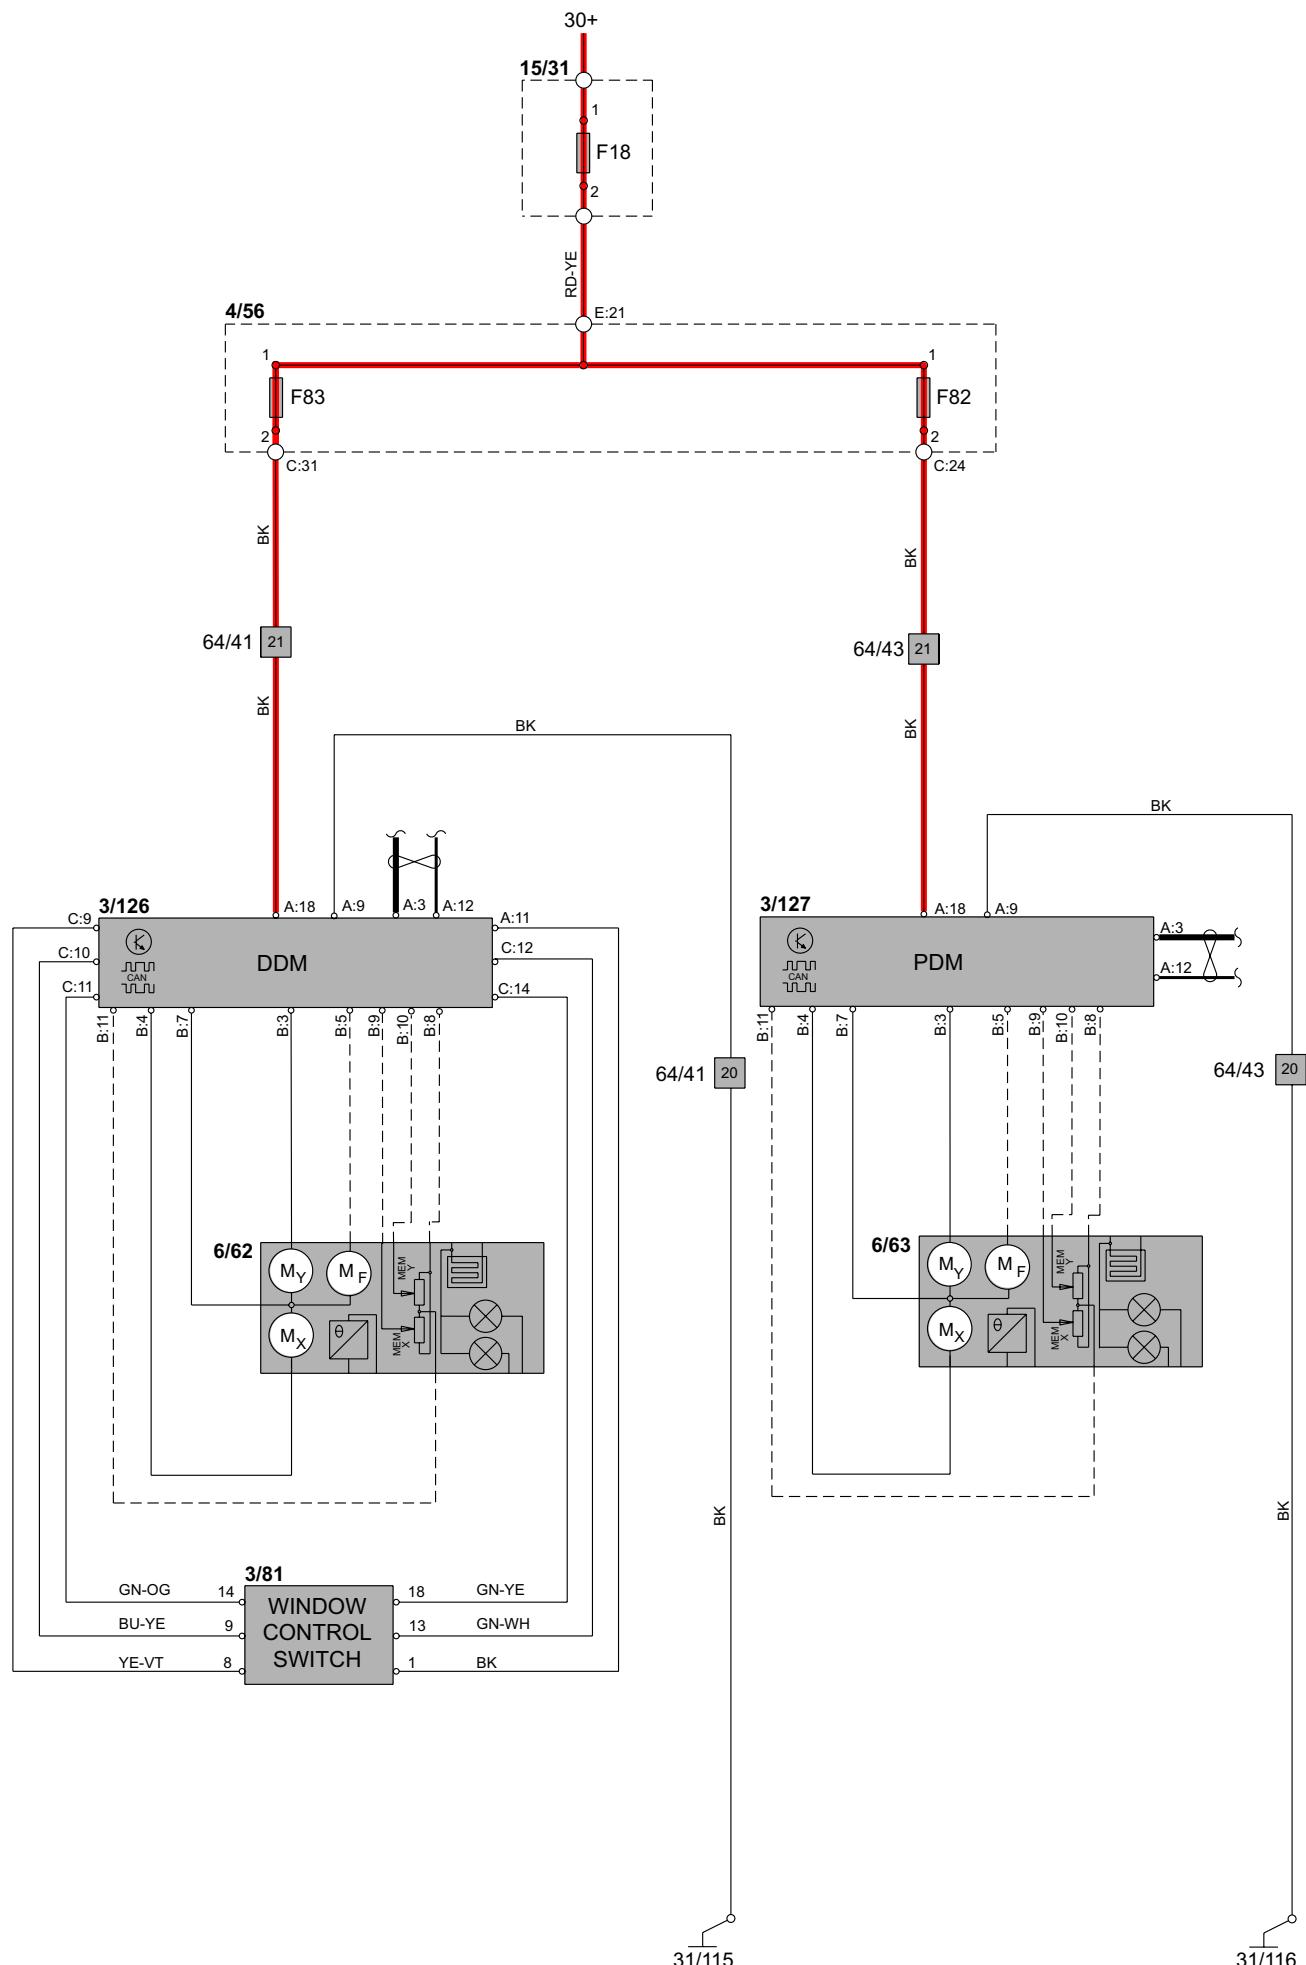


Group 84 Exterior decorative elements, etc.

Heated door mirrors

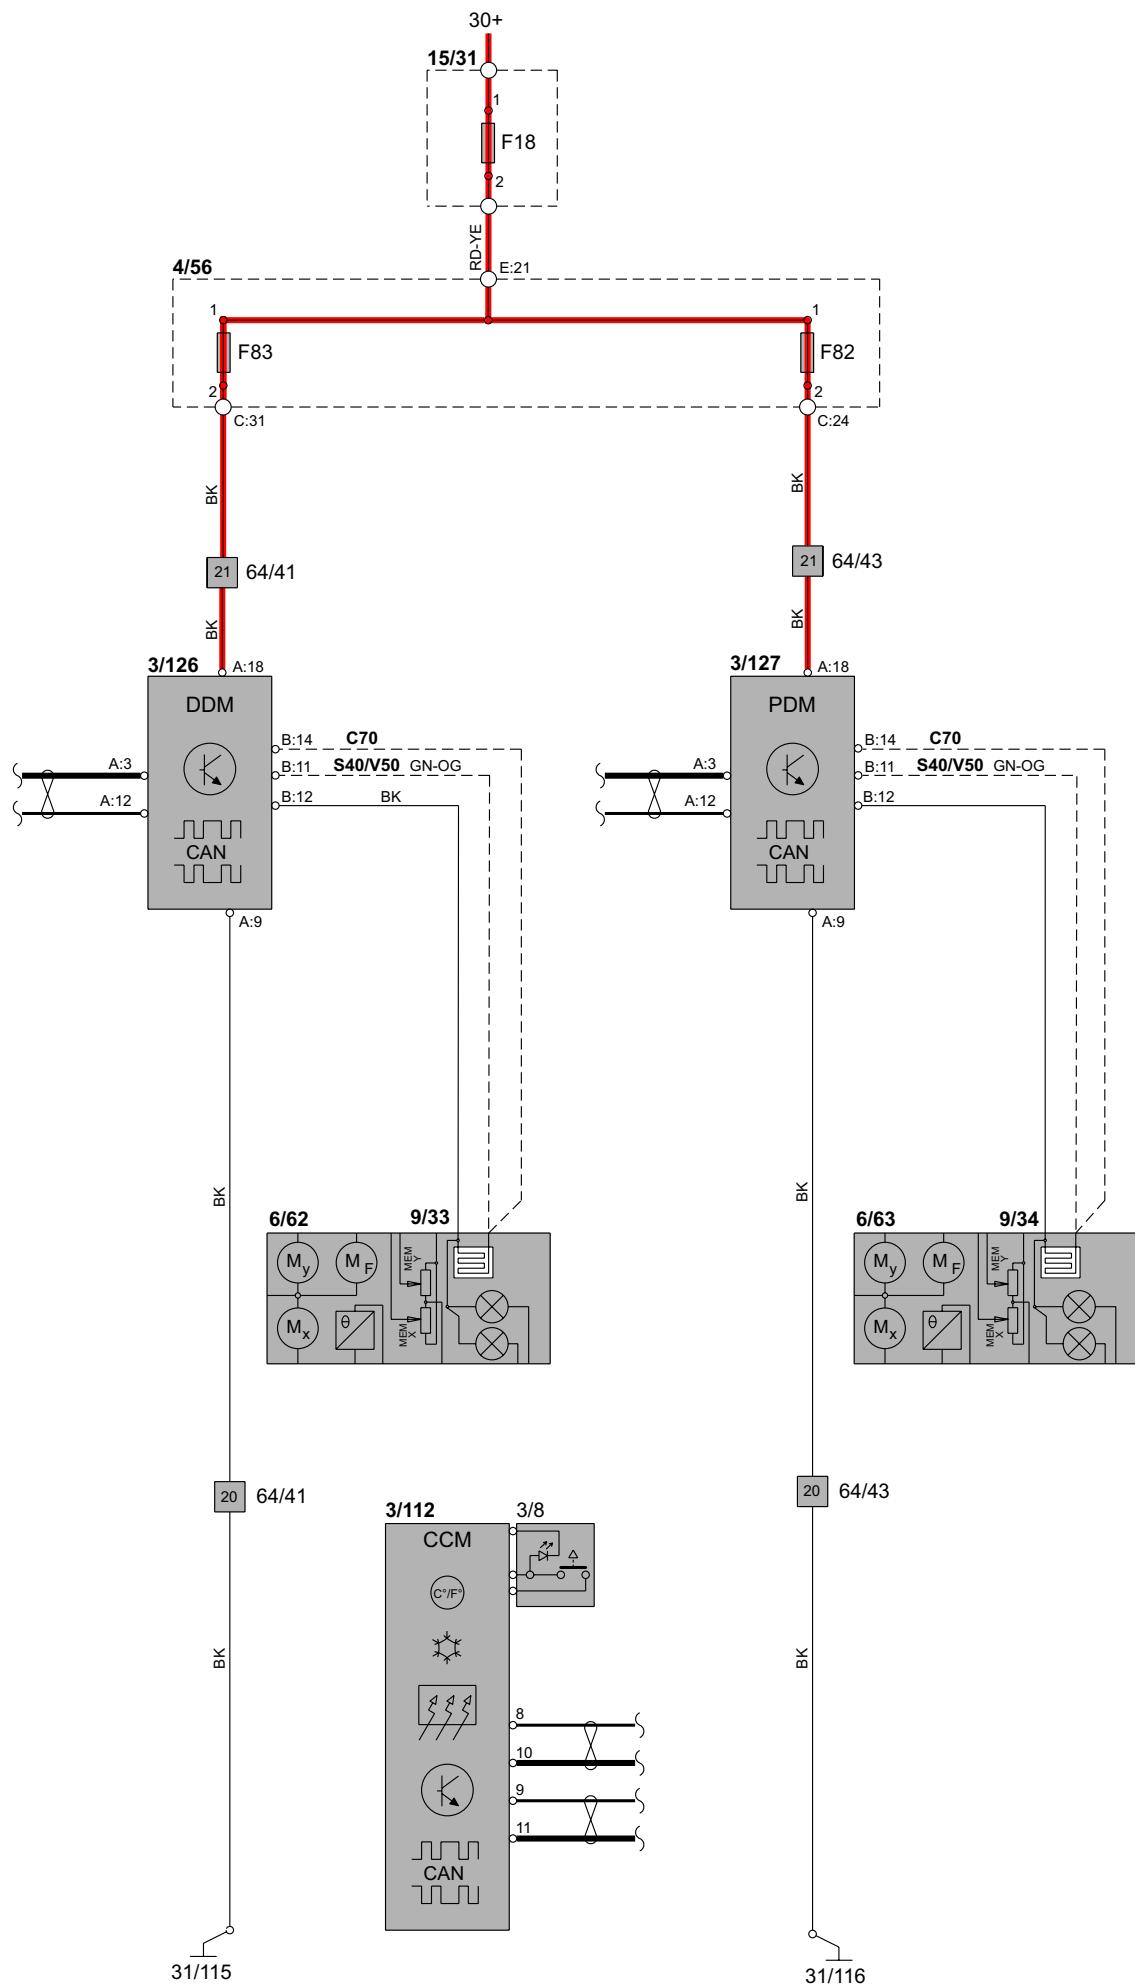


Group 84 Exterior decorative elements, etc.

Heated rear window

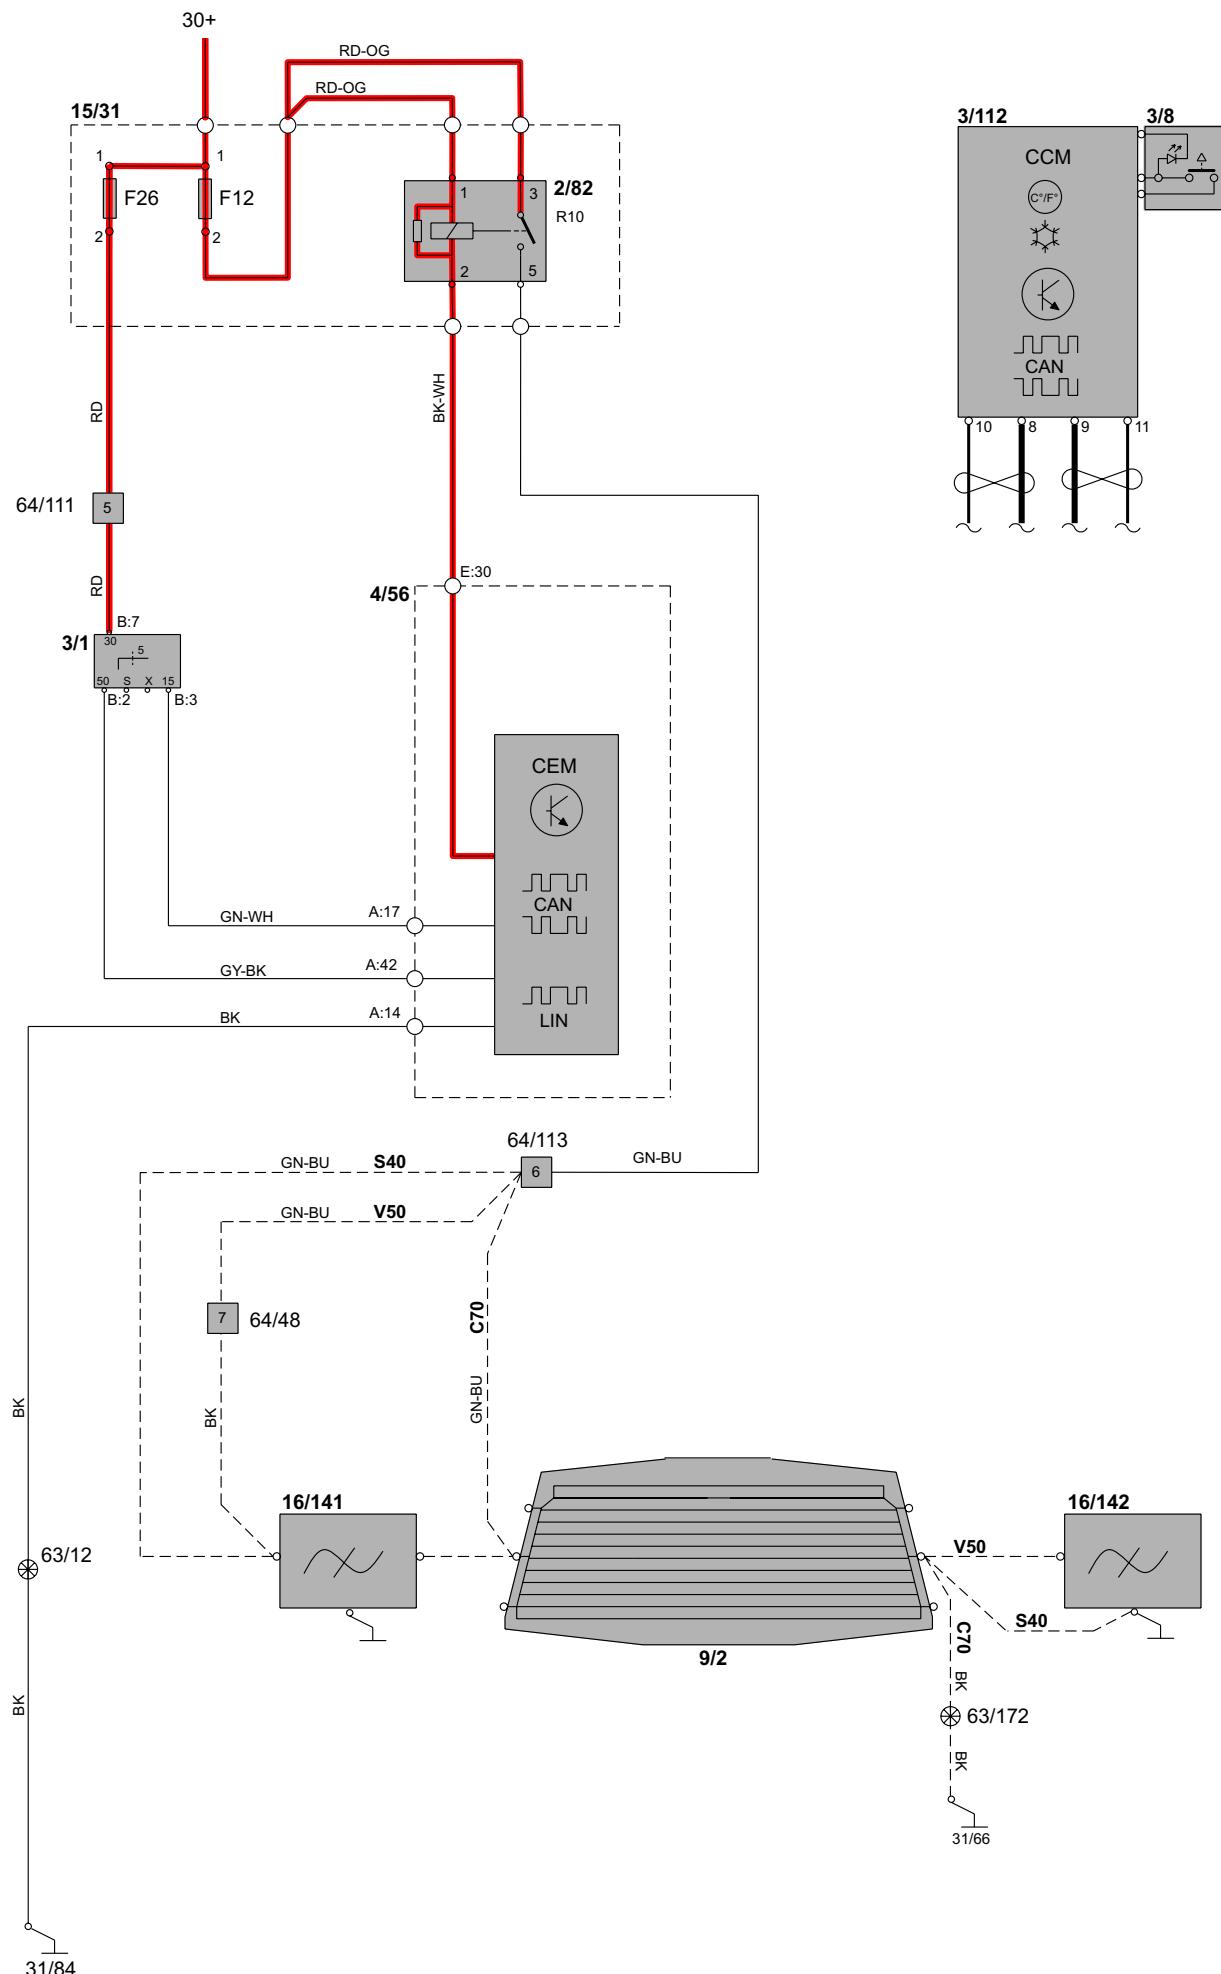


Group 84 Exterior decorative elements, etc.

Blind Spot Information System

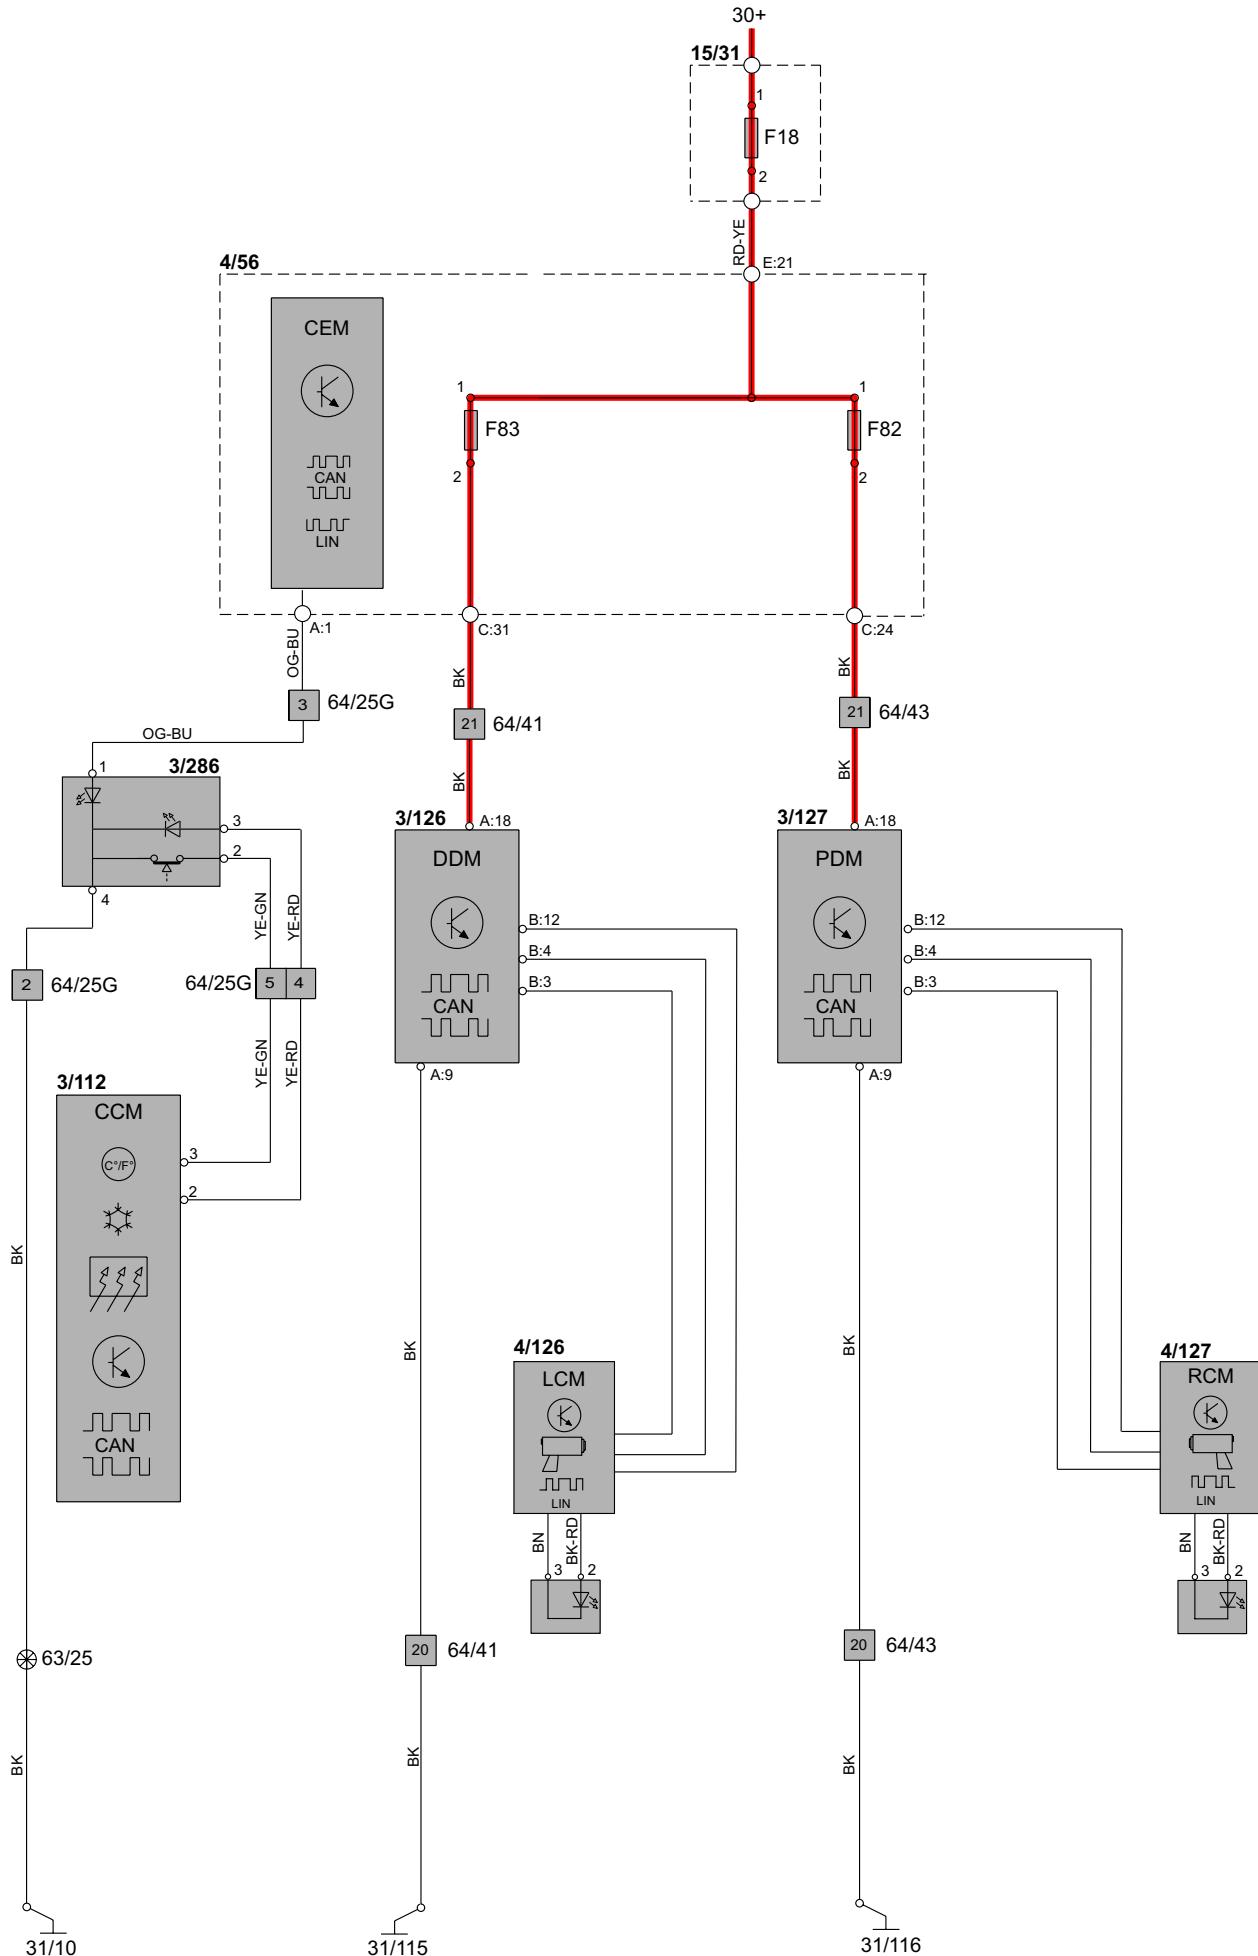


Group 85 Interior equipment

Power driver's seat with memory function LHD S40/V50

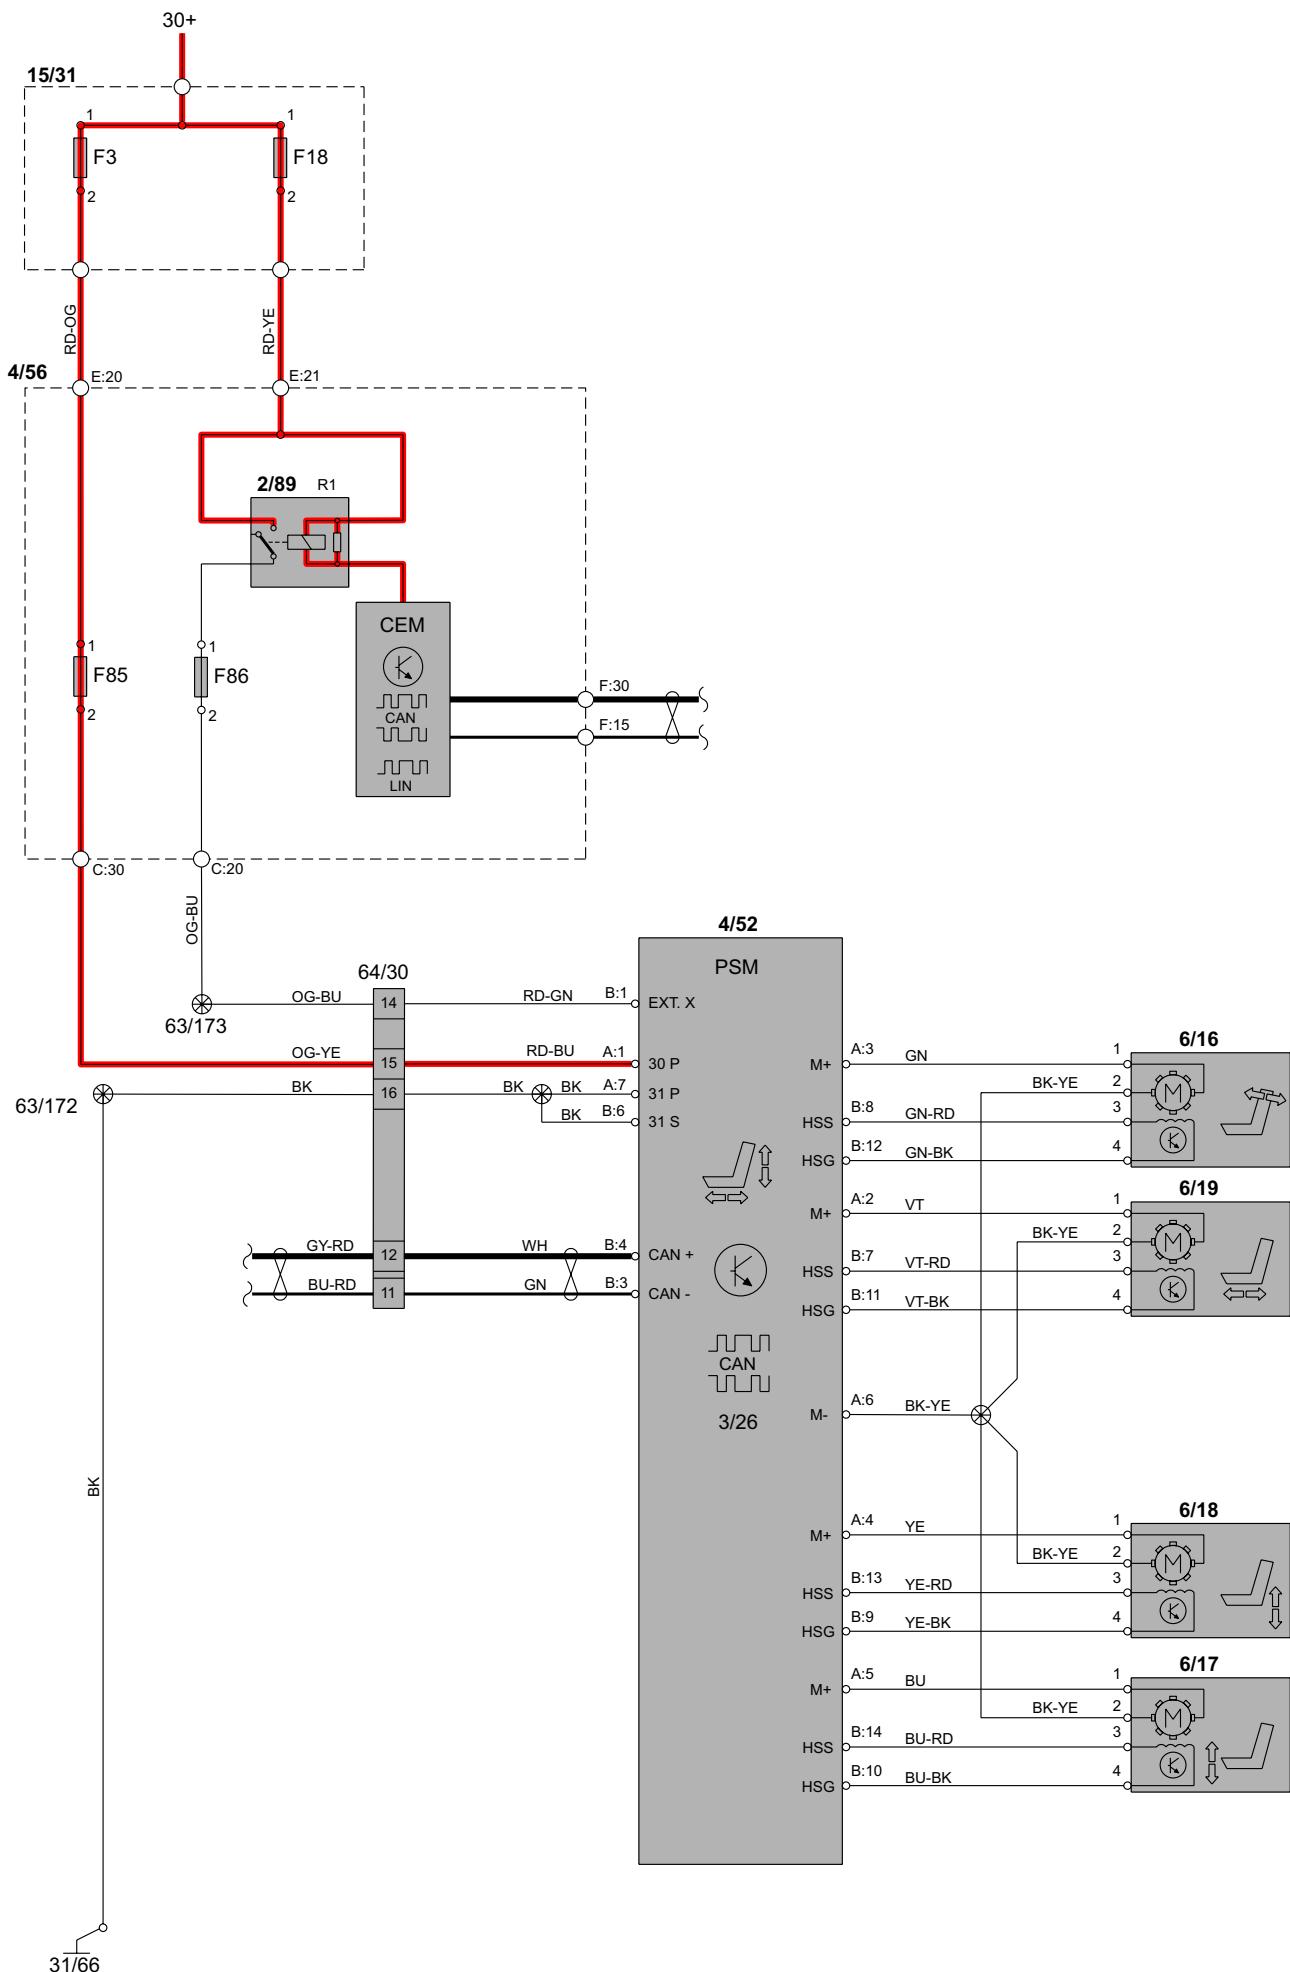


Group 85 Interior equipment

Power driver's seat with memory function RHD S40/V50

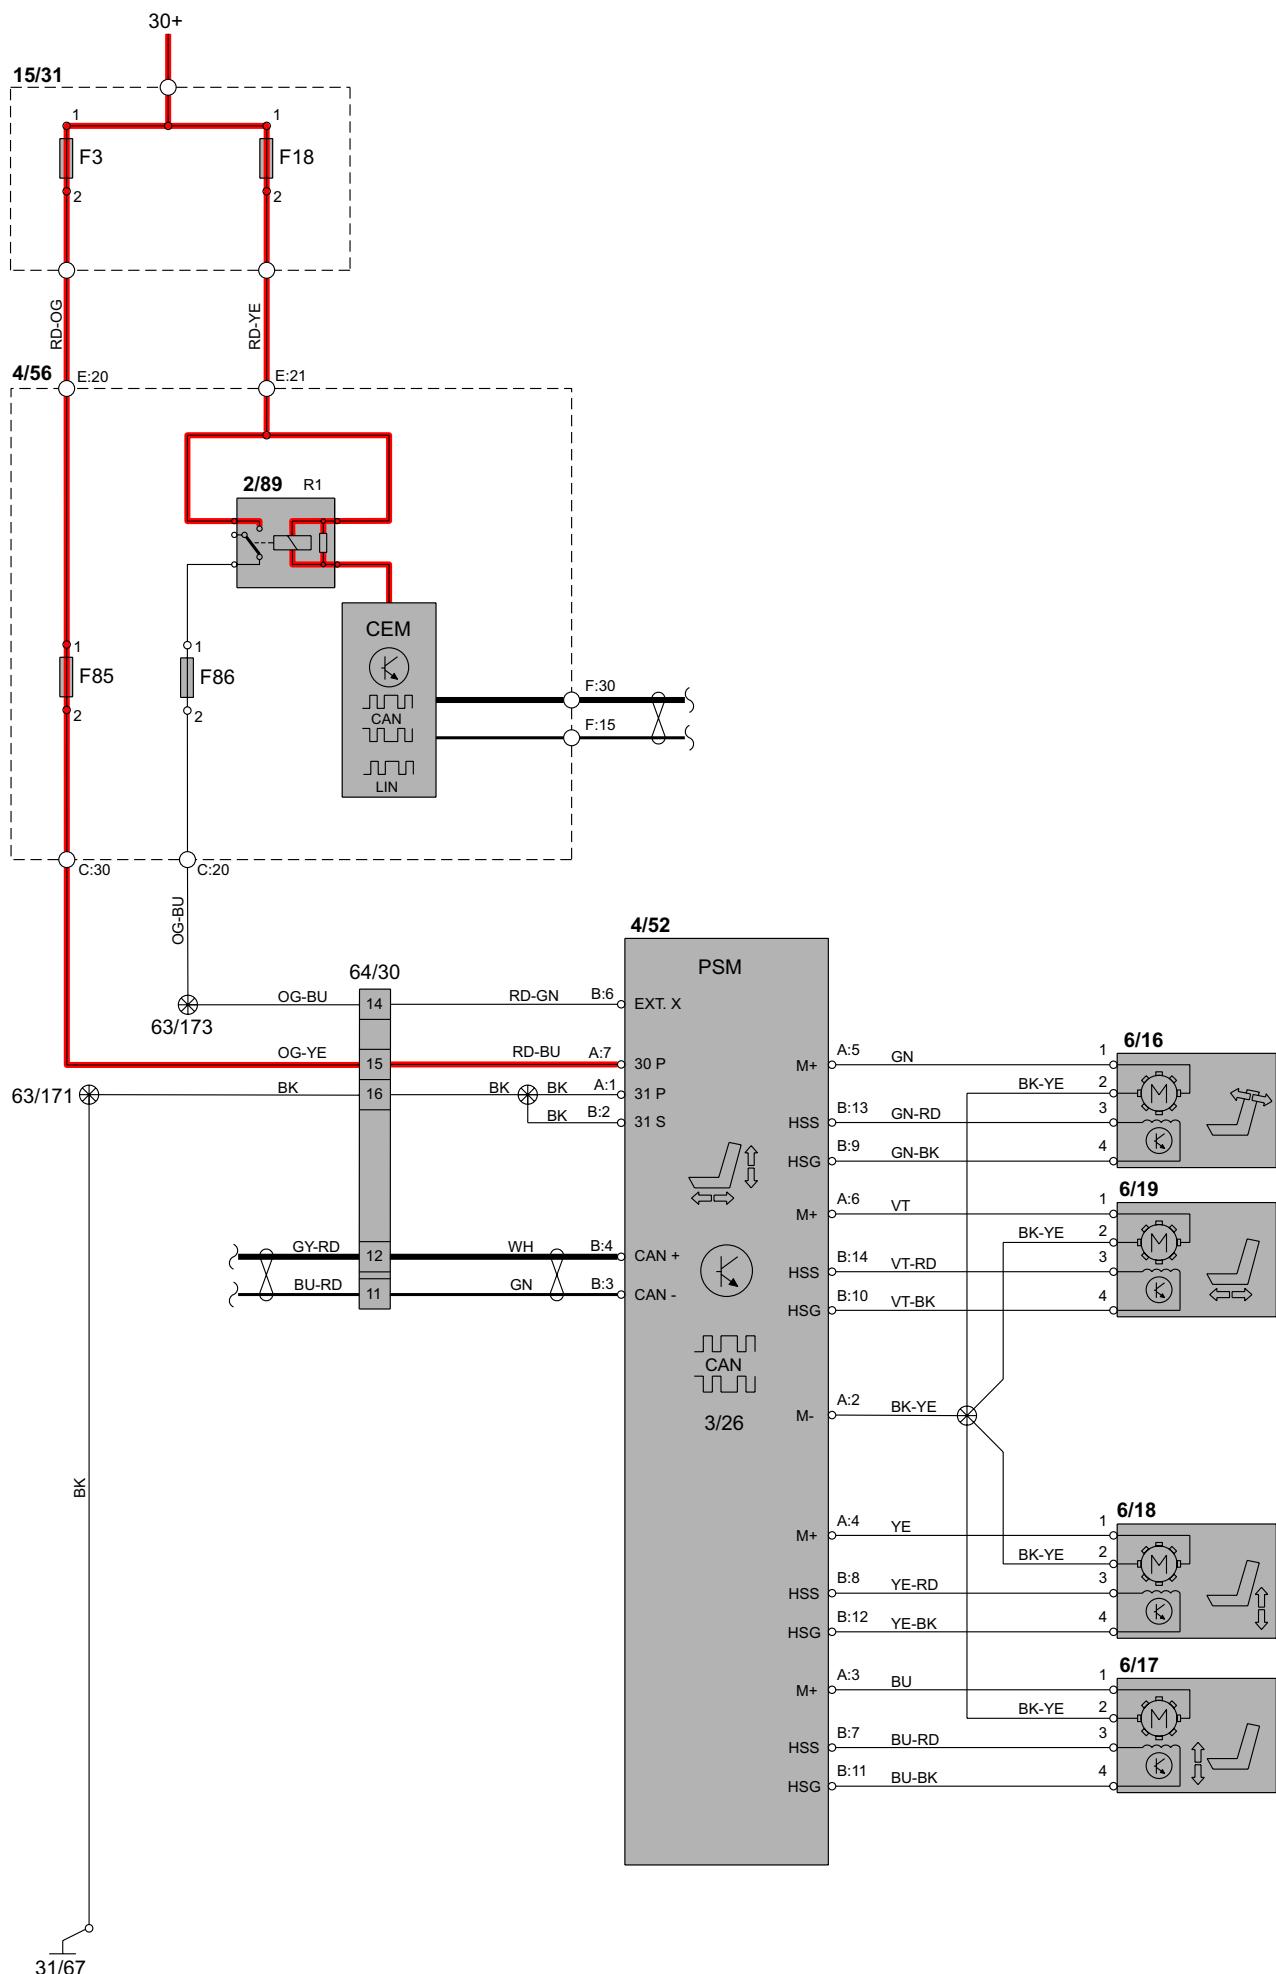


Group 85 Interior equipment

Power driver's seat with memory function LHD C70

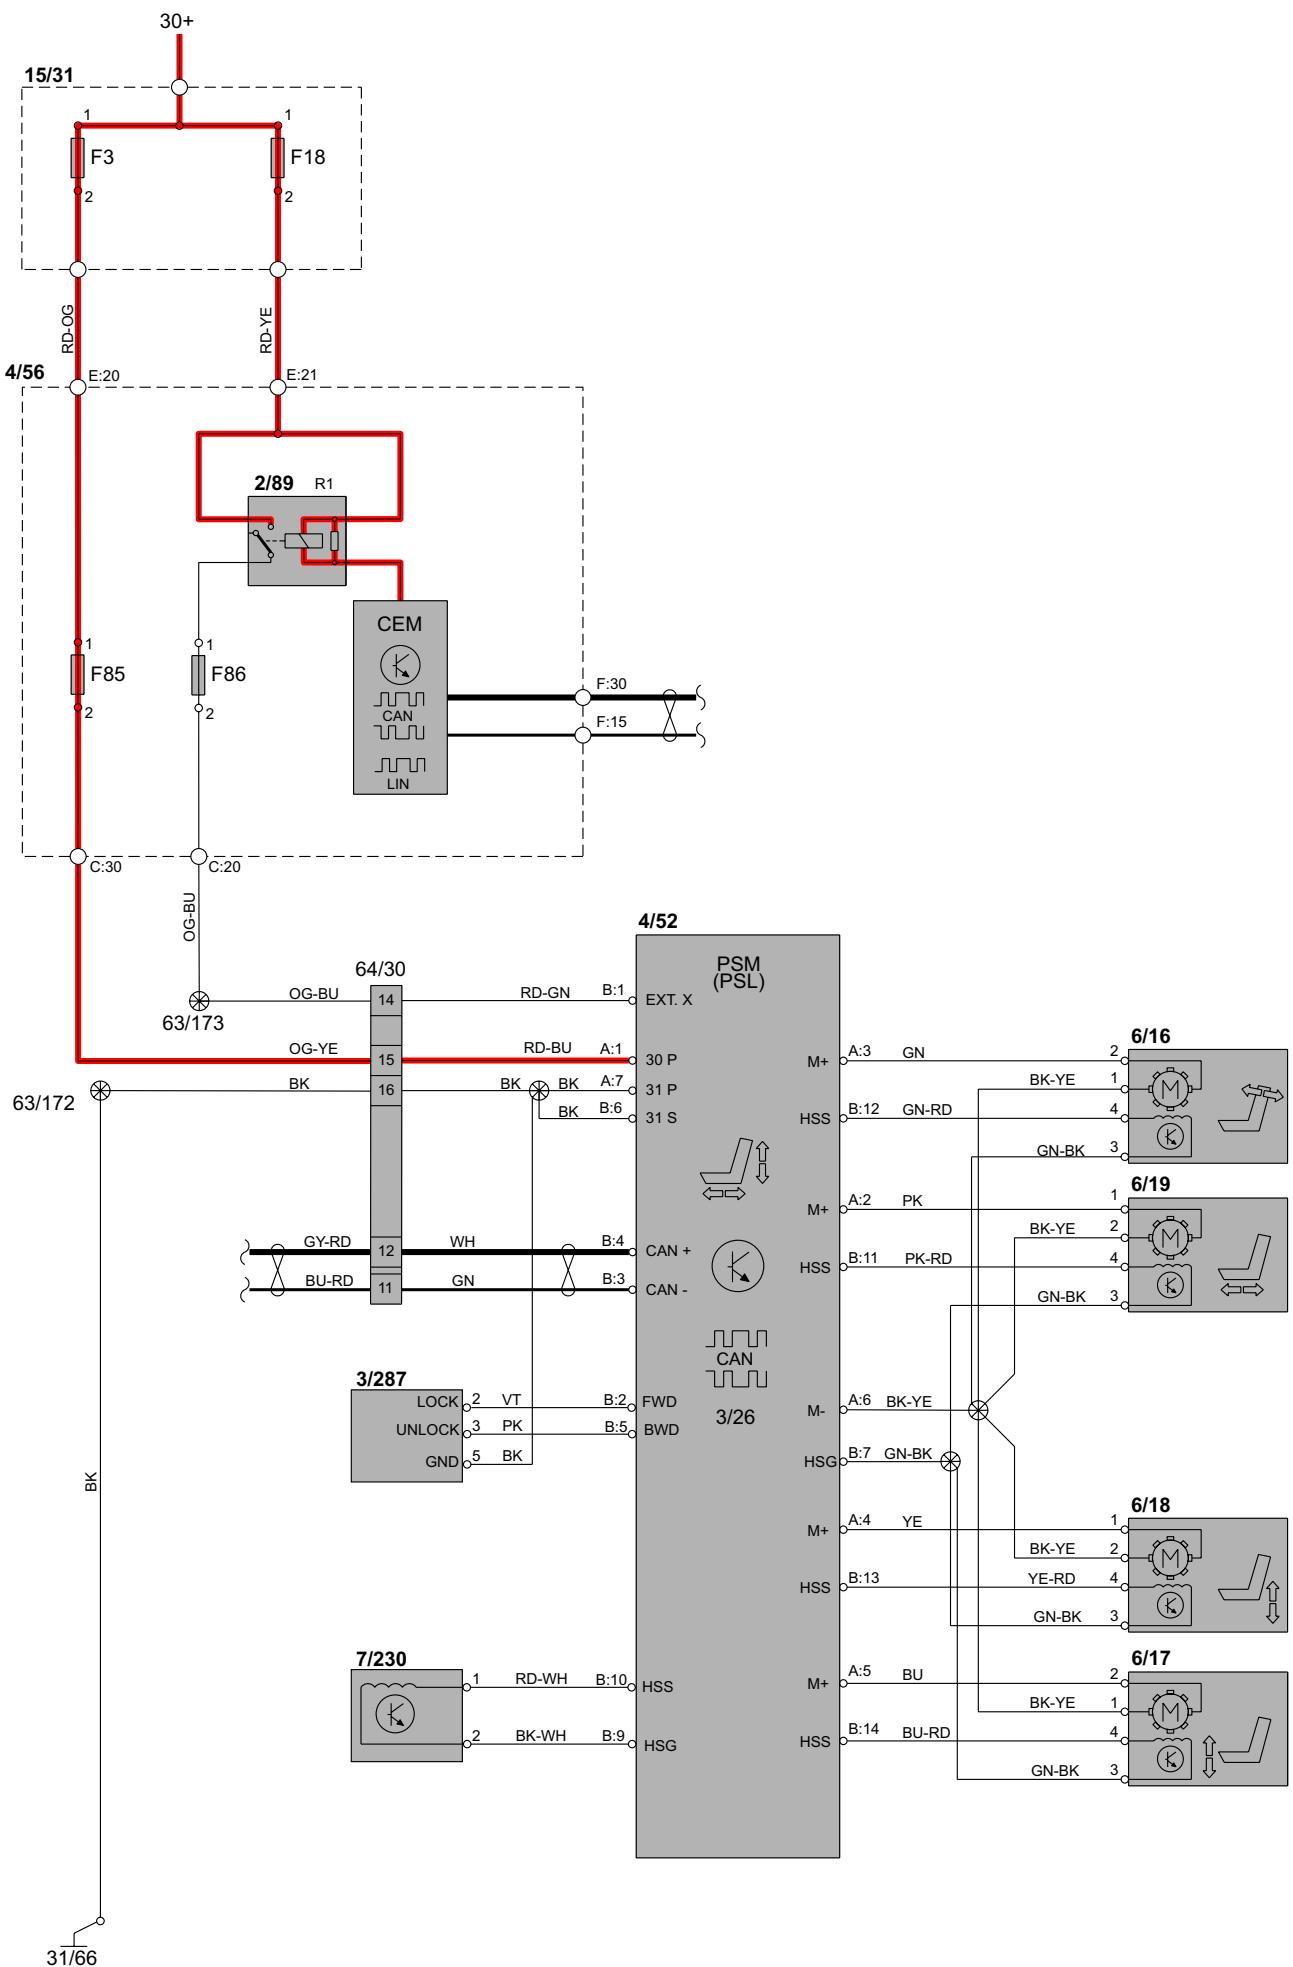


Group 85 Interior equipment

Power driver's seat with memory function RHD C70

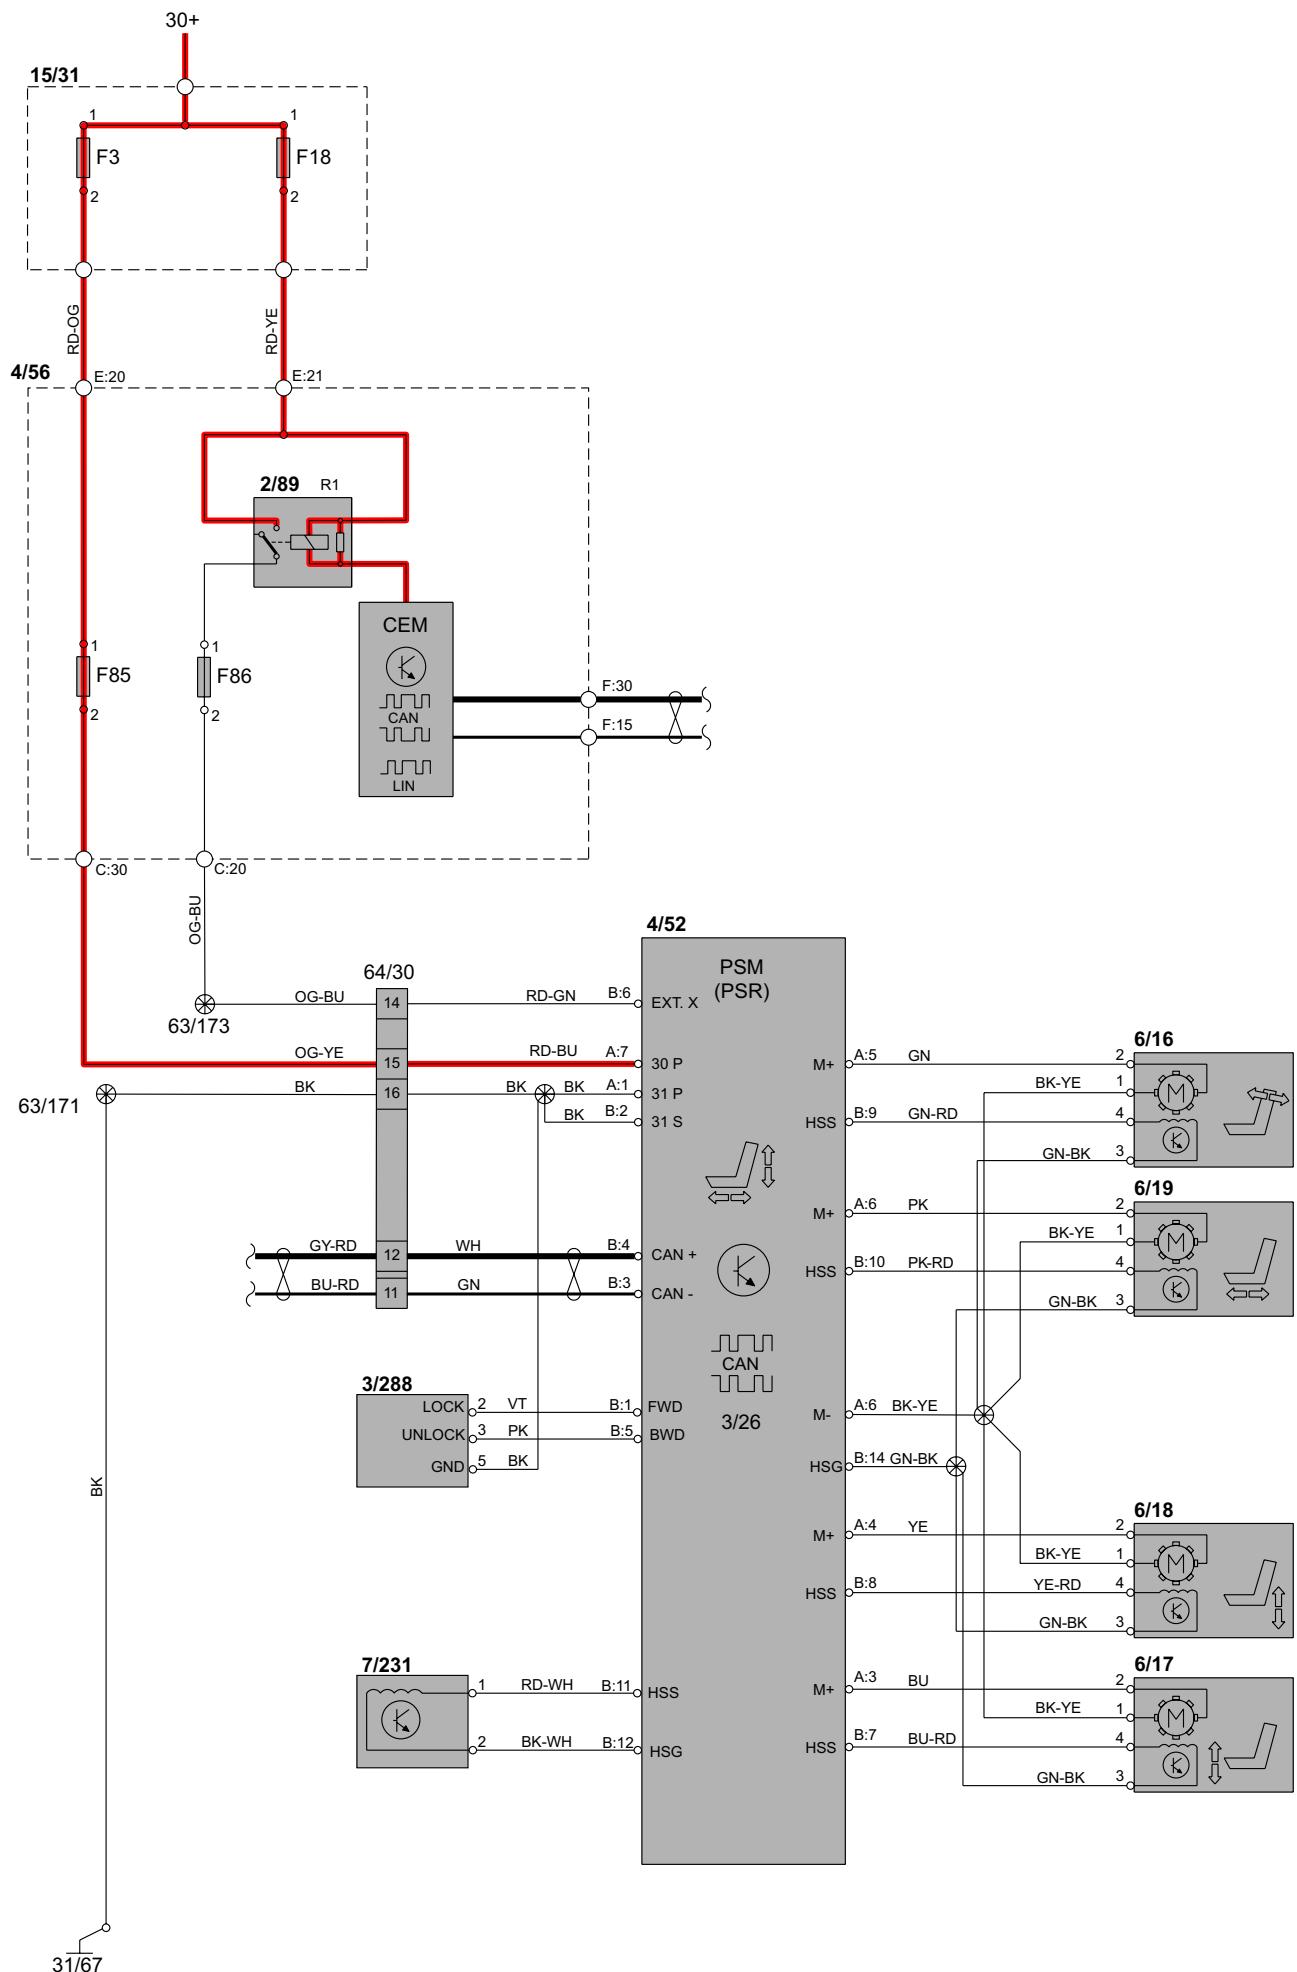


Group 85 Interior equipment

Power passenger seat with memory function LHD C70

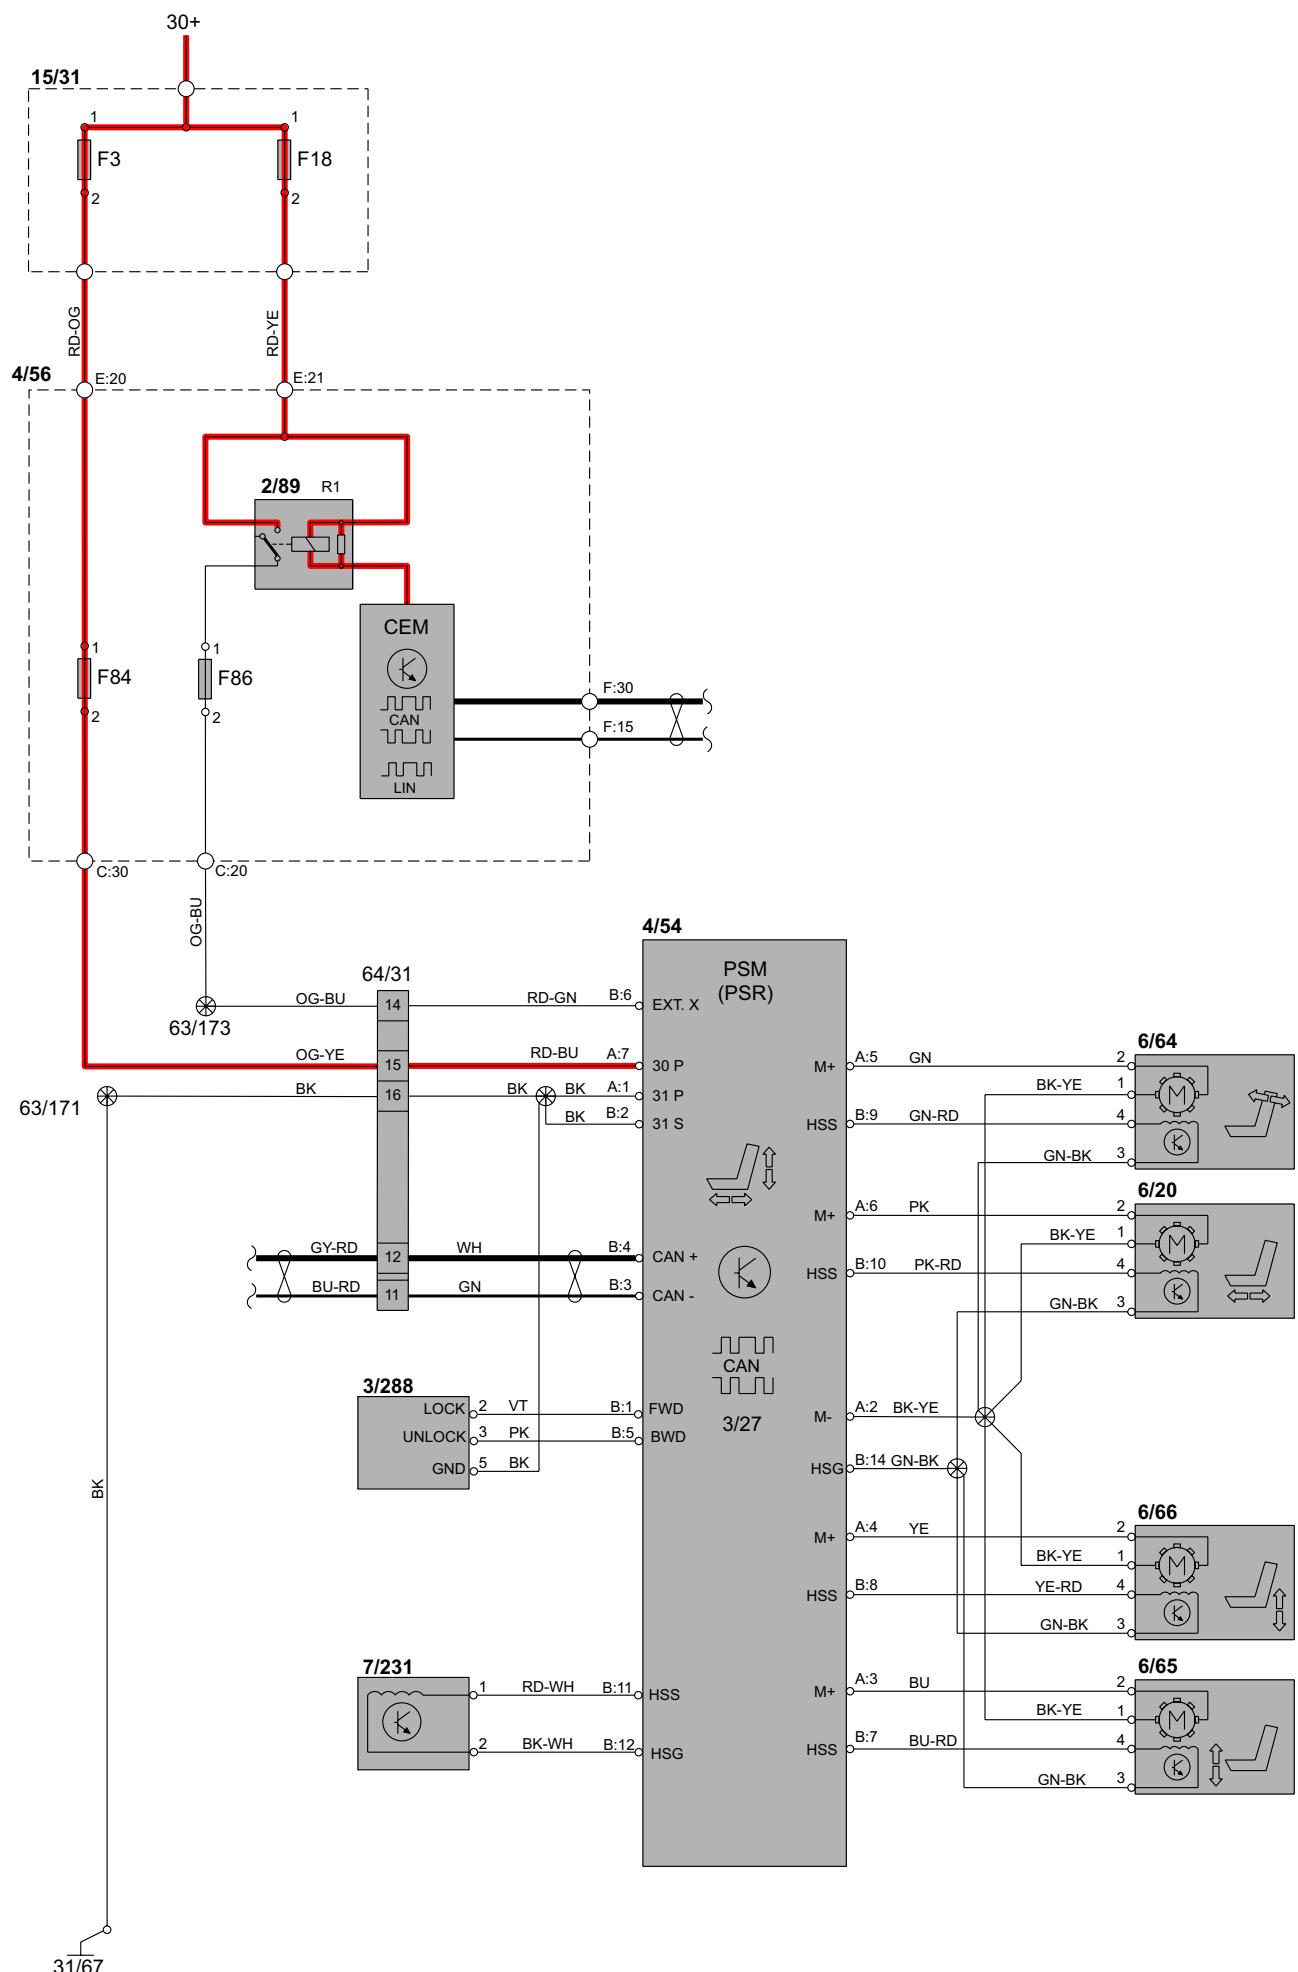


Group 85 Interior equipment

Power passenger seat with memory function RHD C70

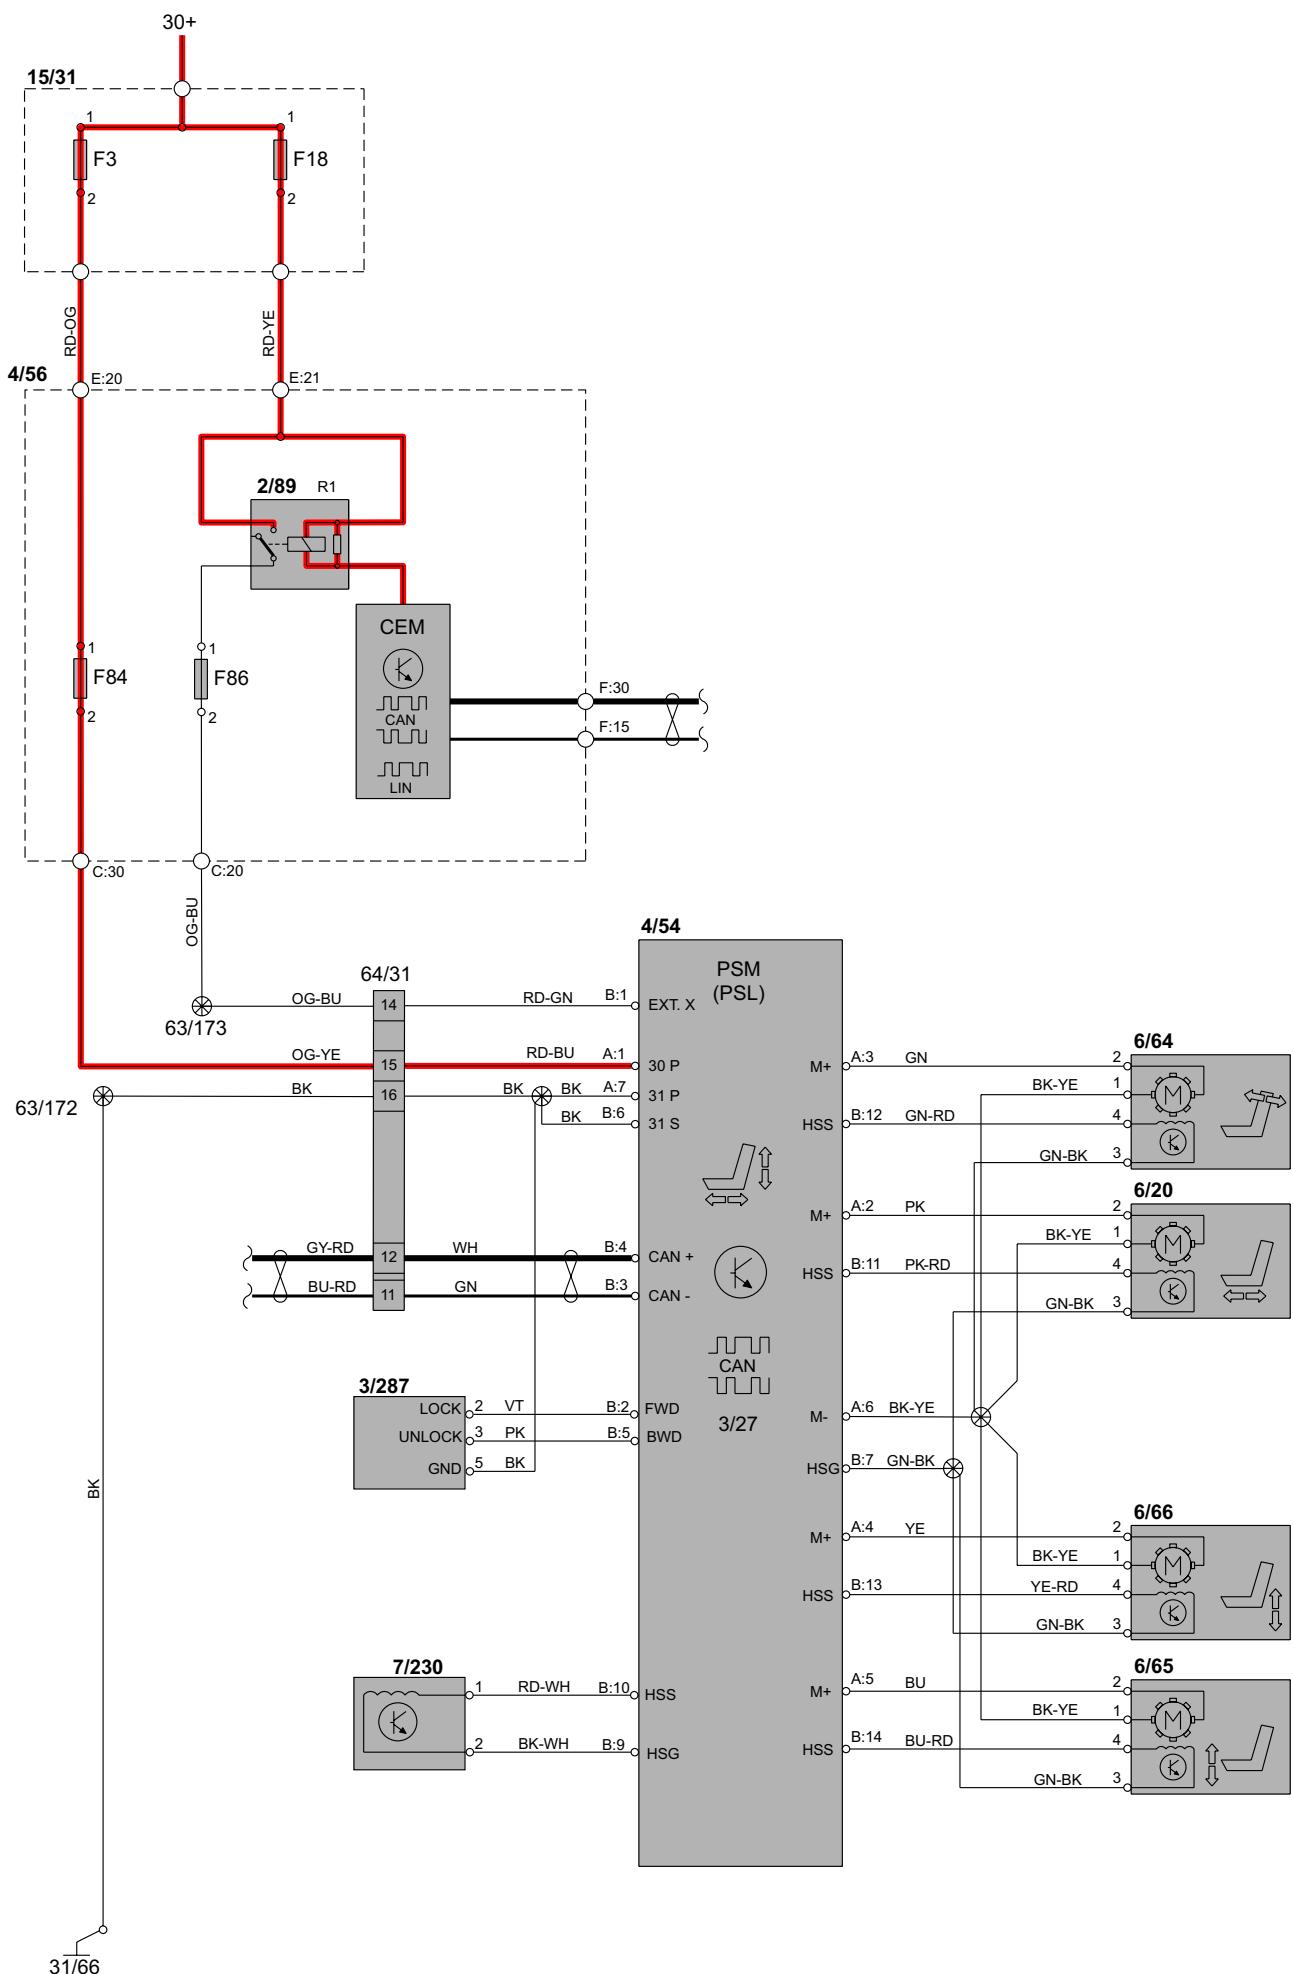


Group 85 Interior equipment

Power driver's seat LHD

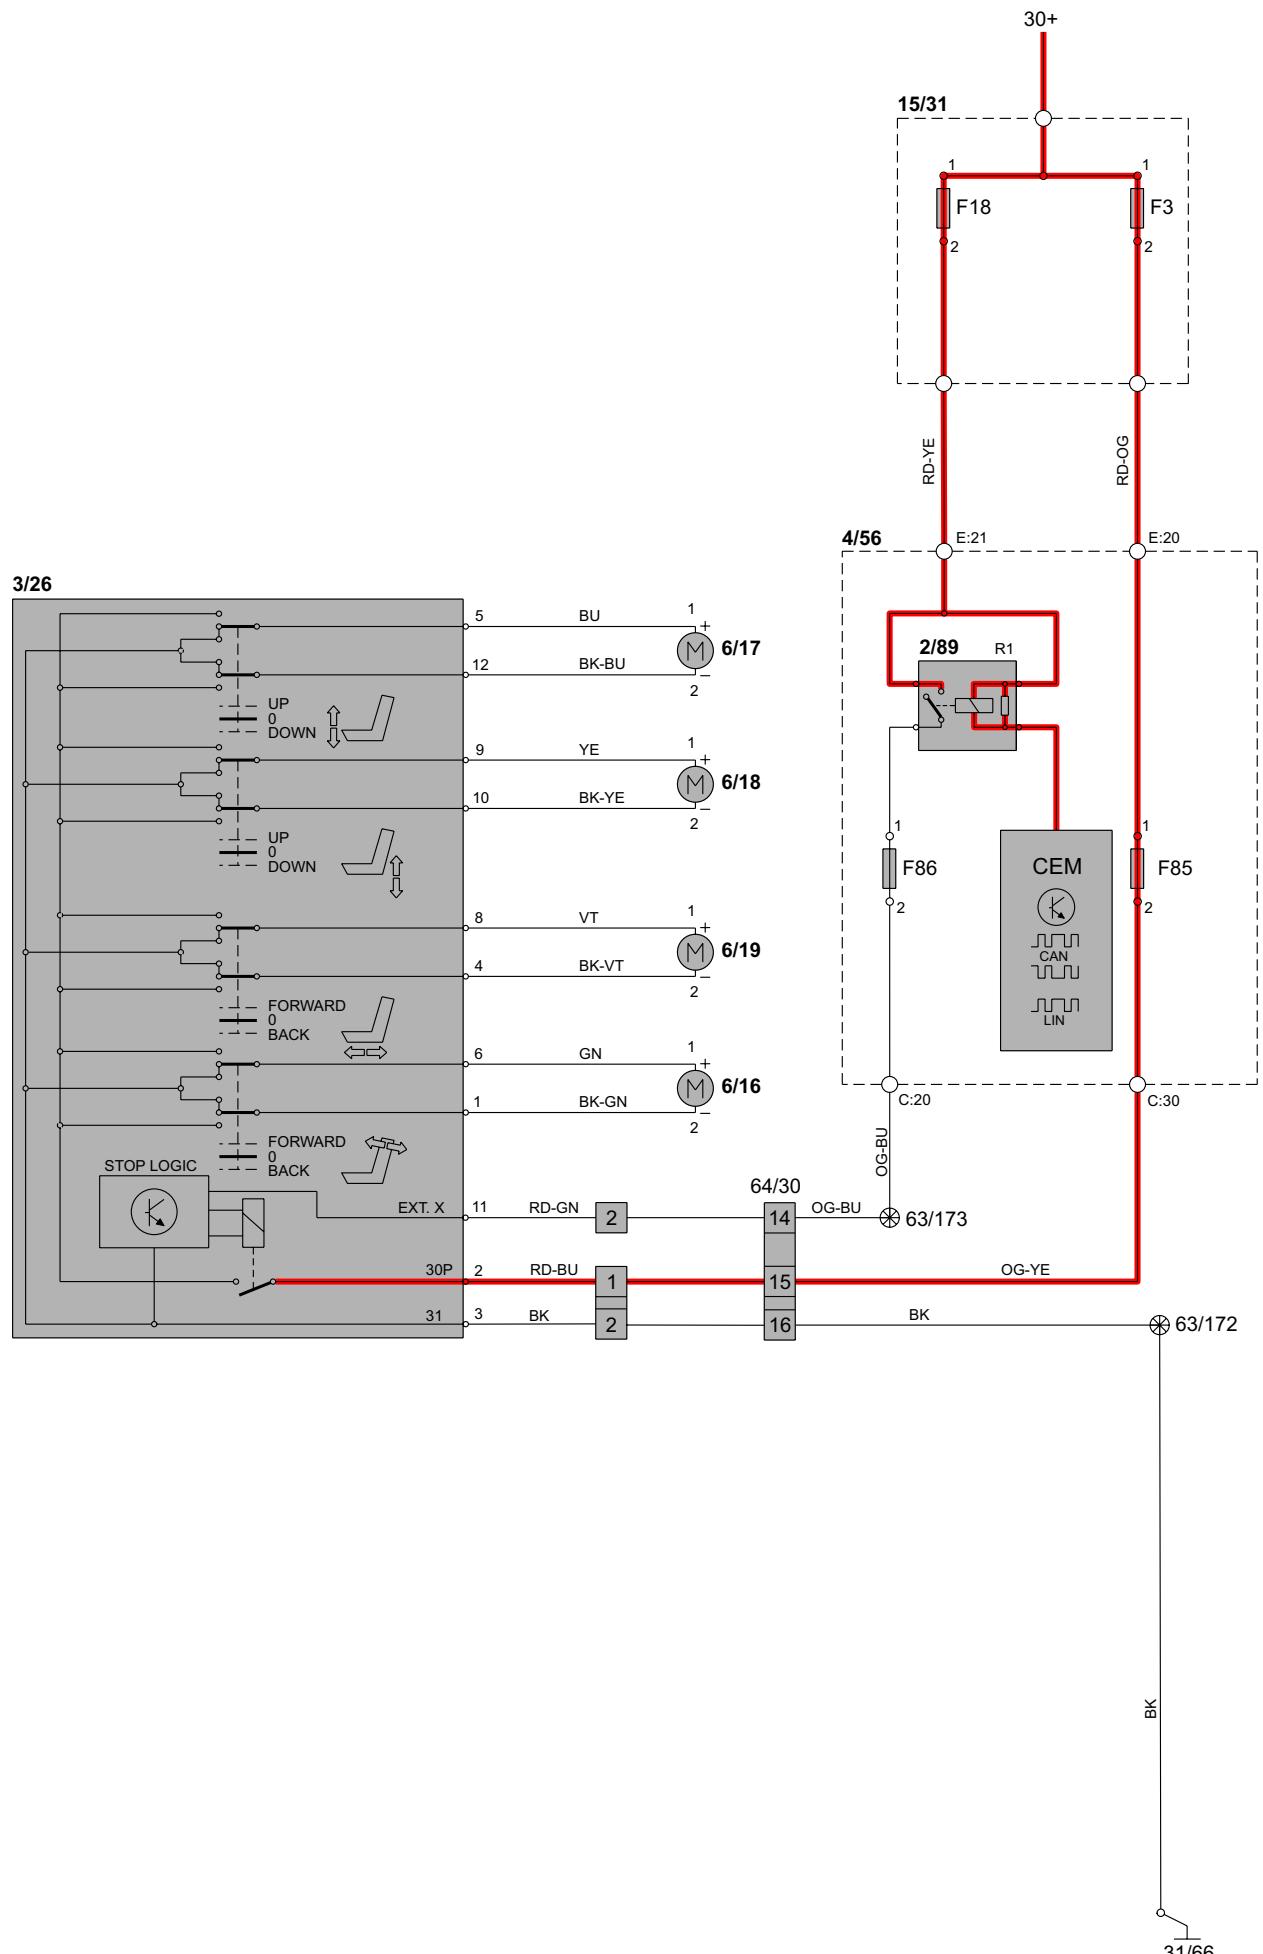

Group 85 Interior equipment



Power driver's seat RHD

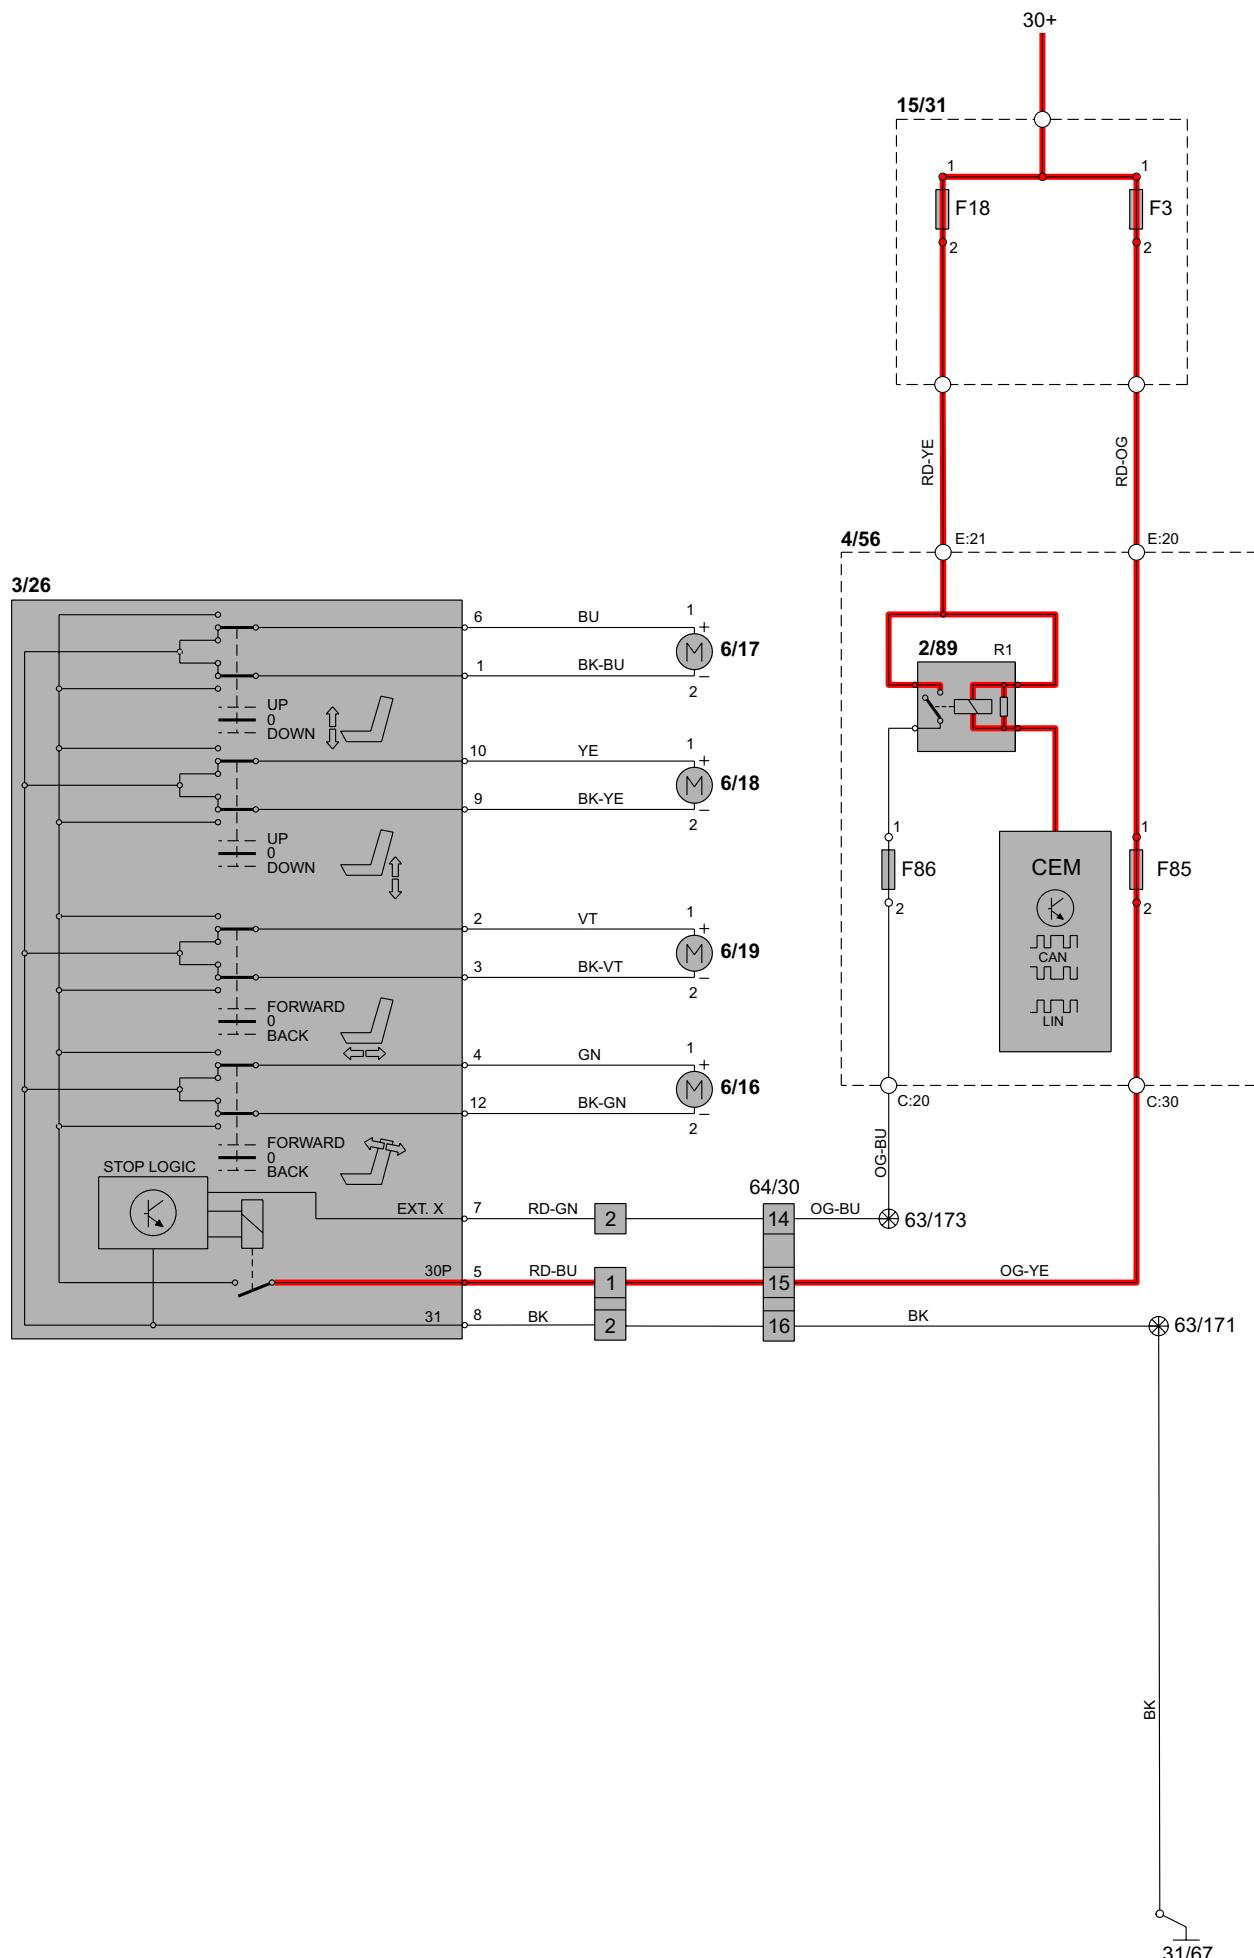

Group 85 Interior equipment

Power passenger seat LHD



3/27

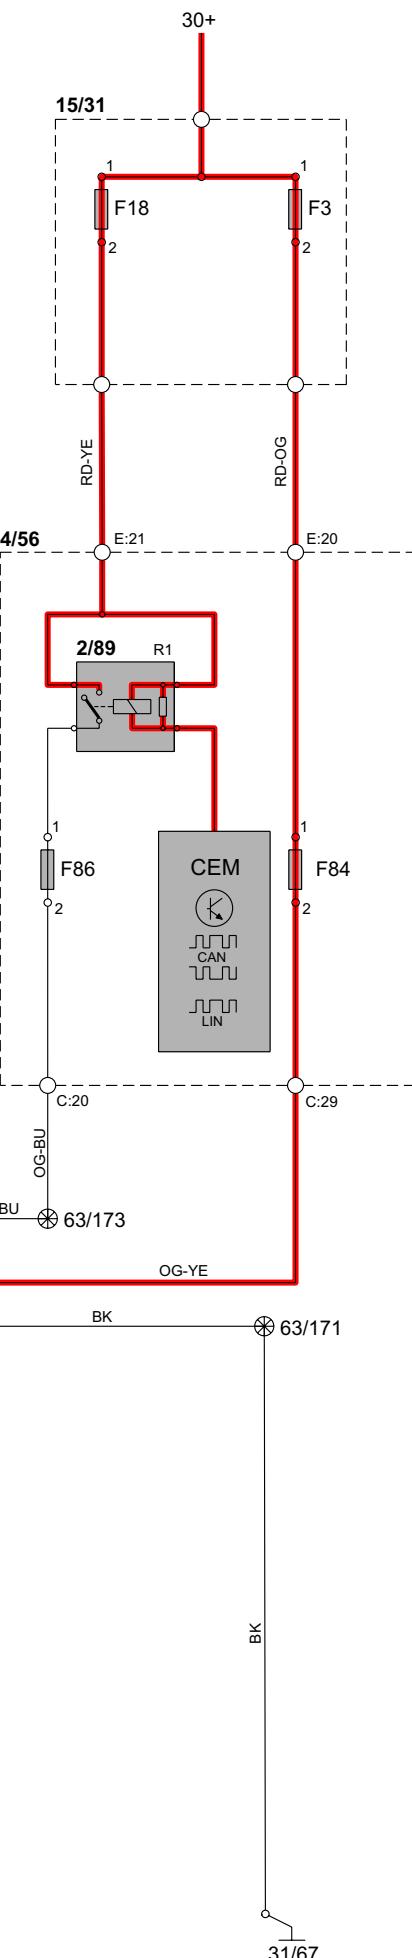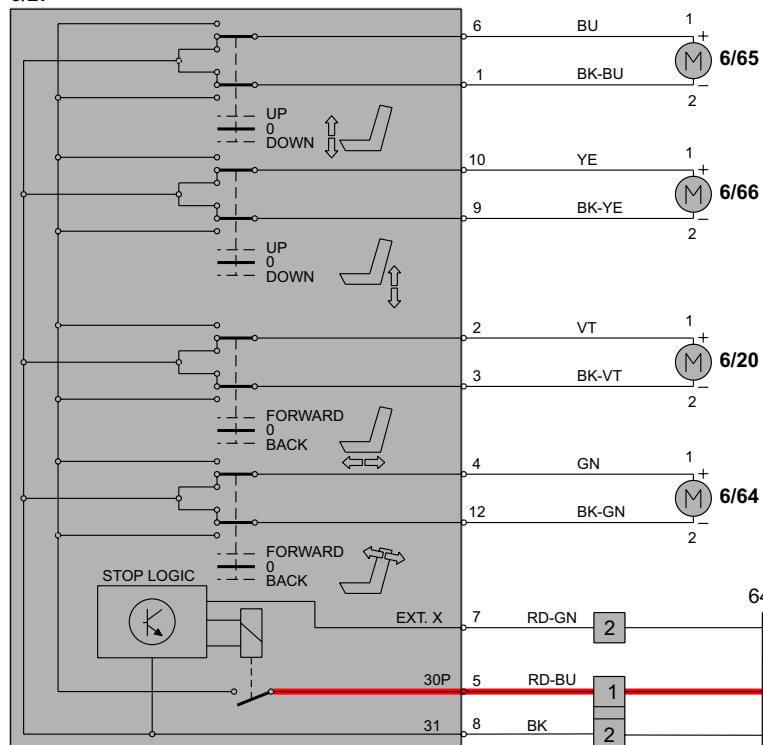

Group 85 Interior equipment


Power passenger seat RHD

3/27

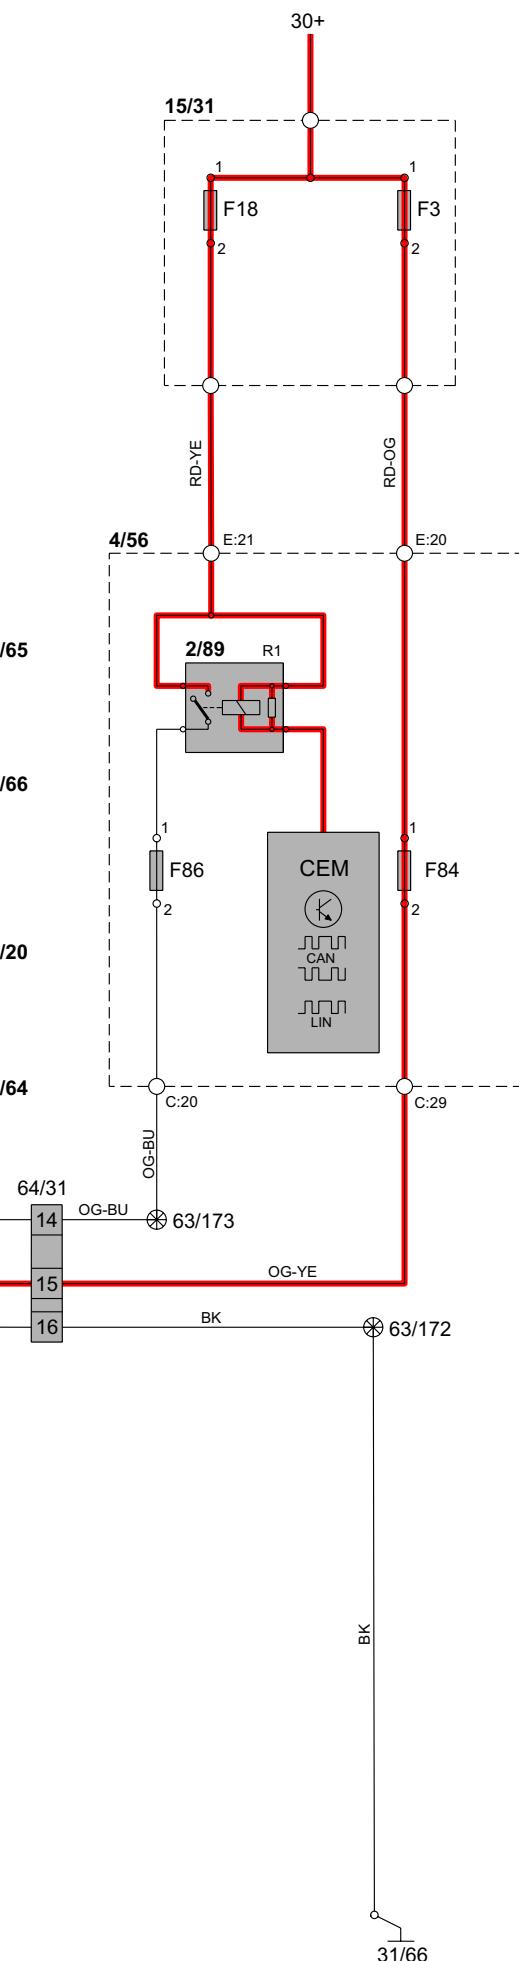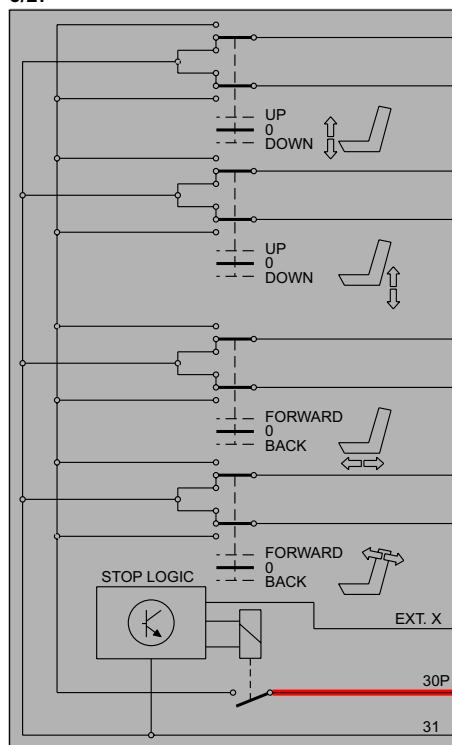


Group 85 Interior equipment

Heated seats

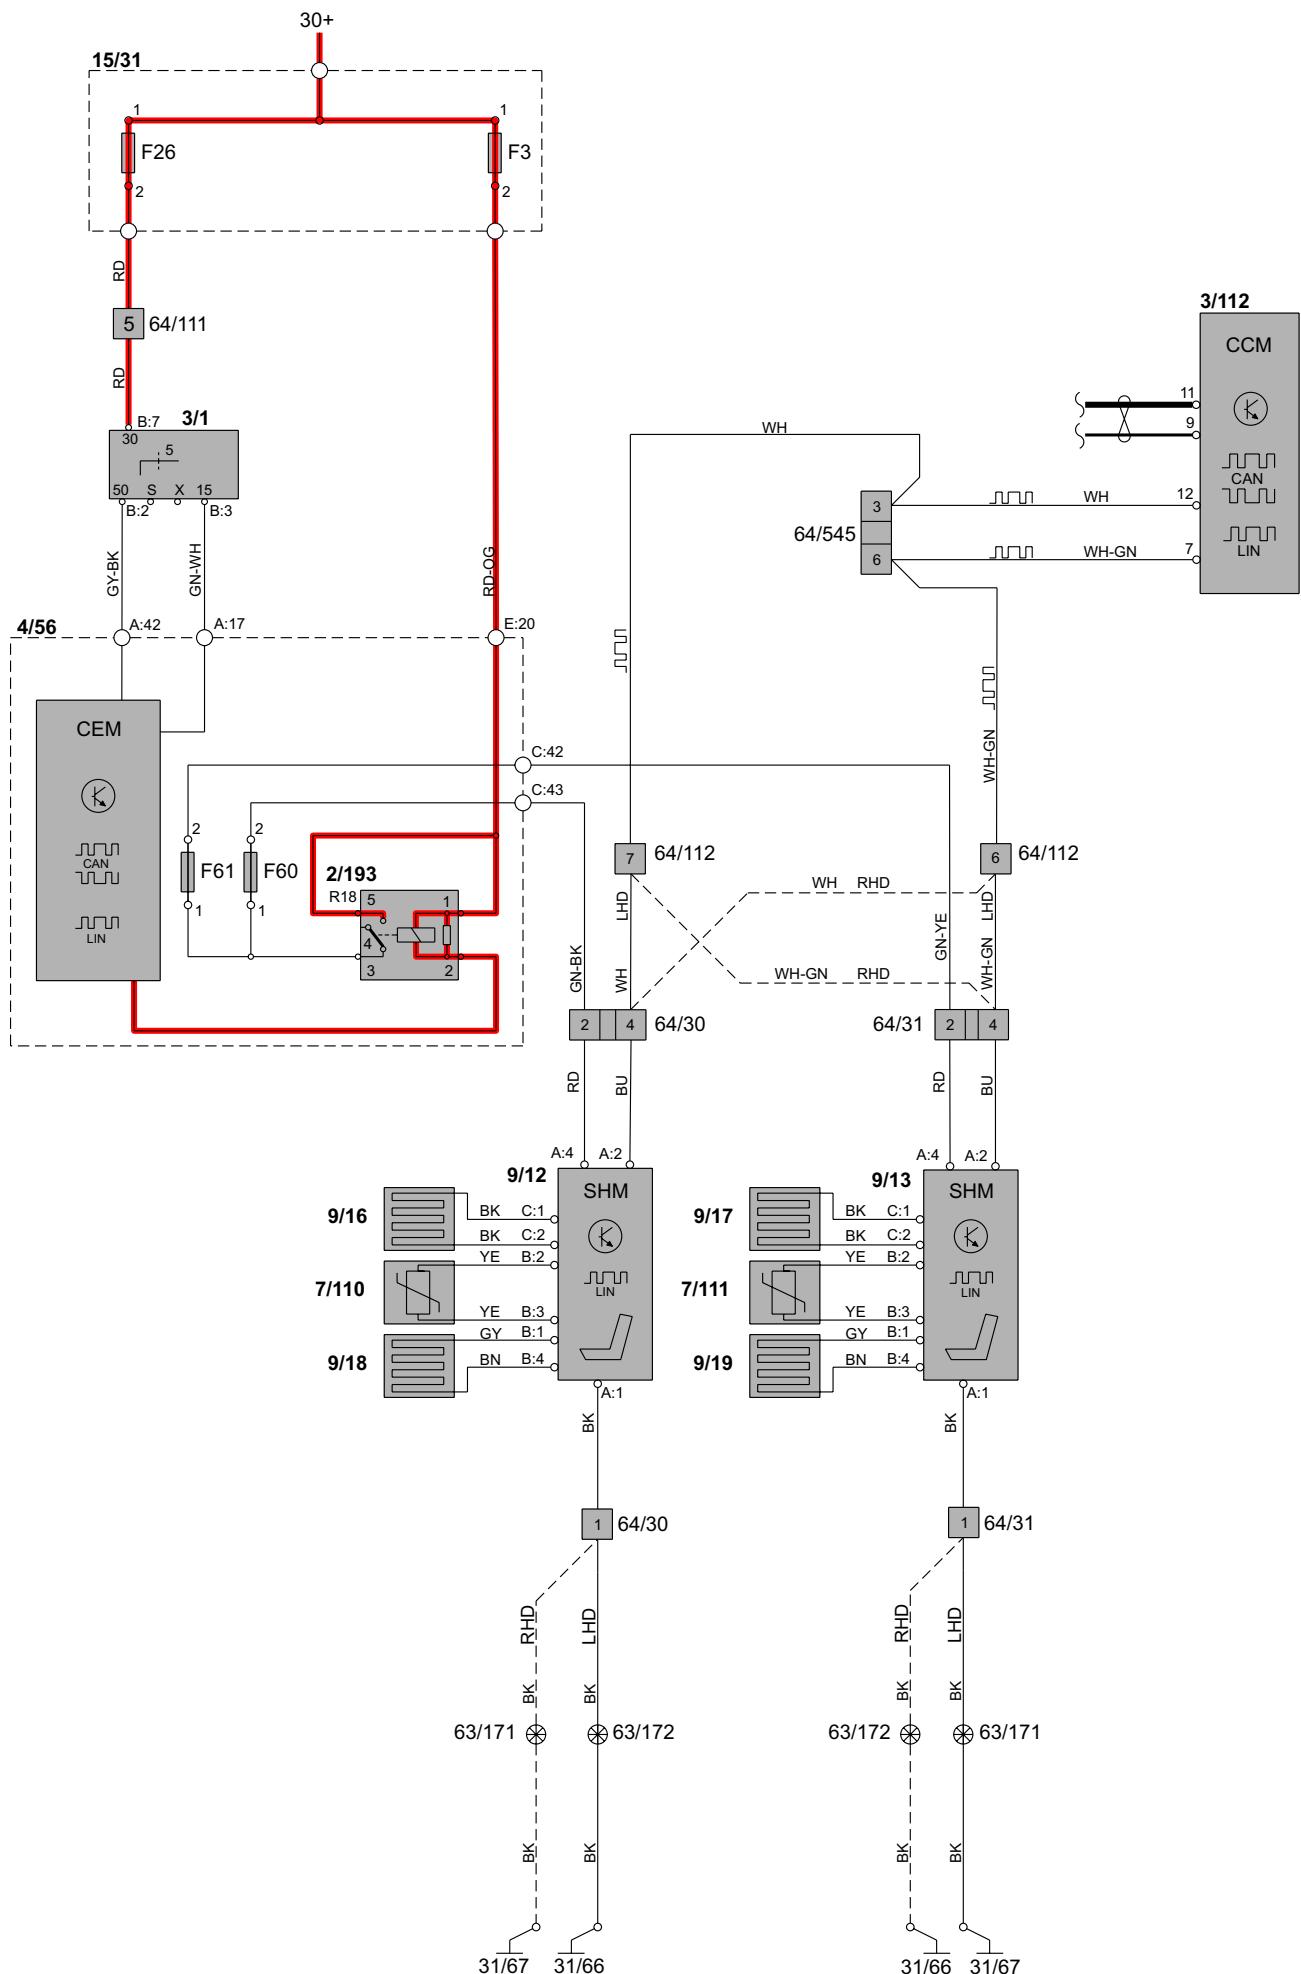


Group 87 Climate control system

Climate control system PTC element

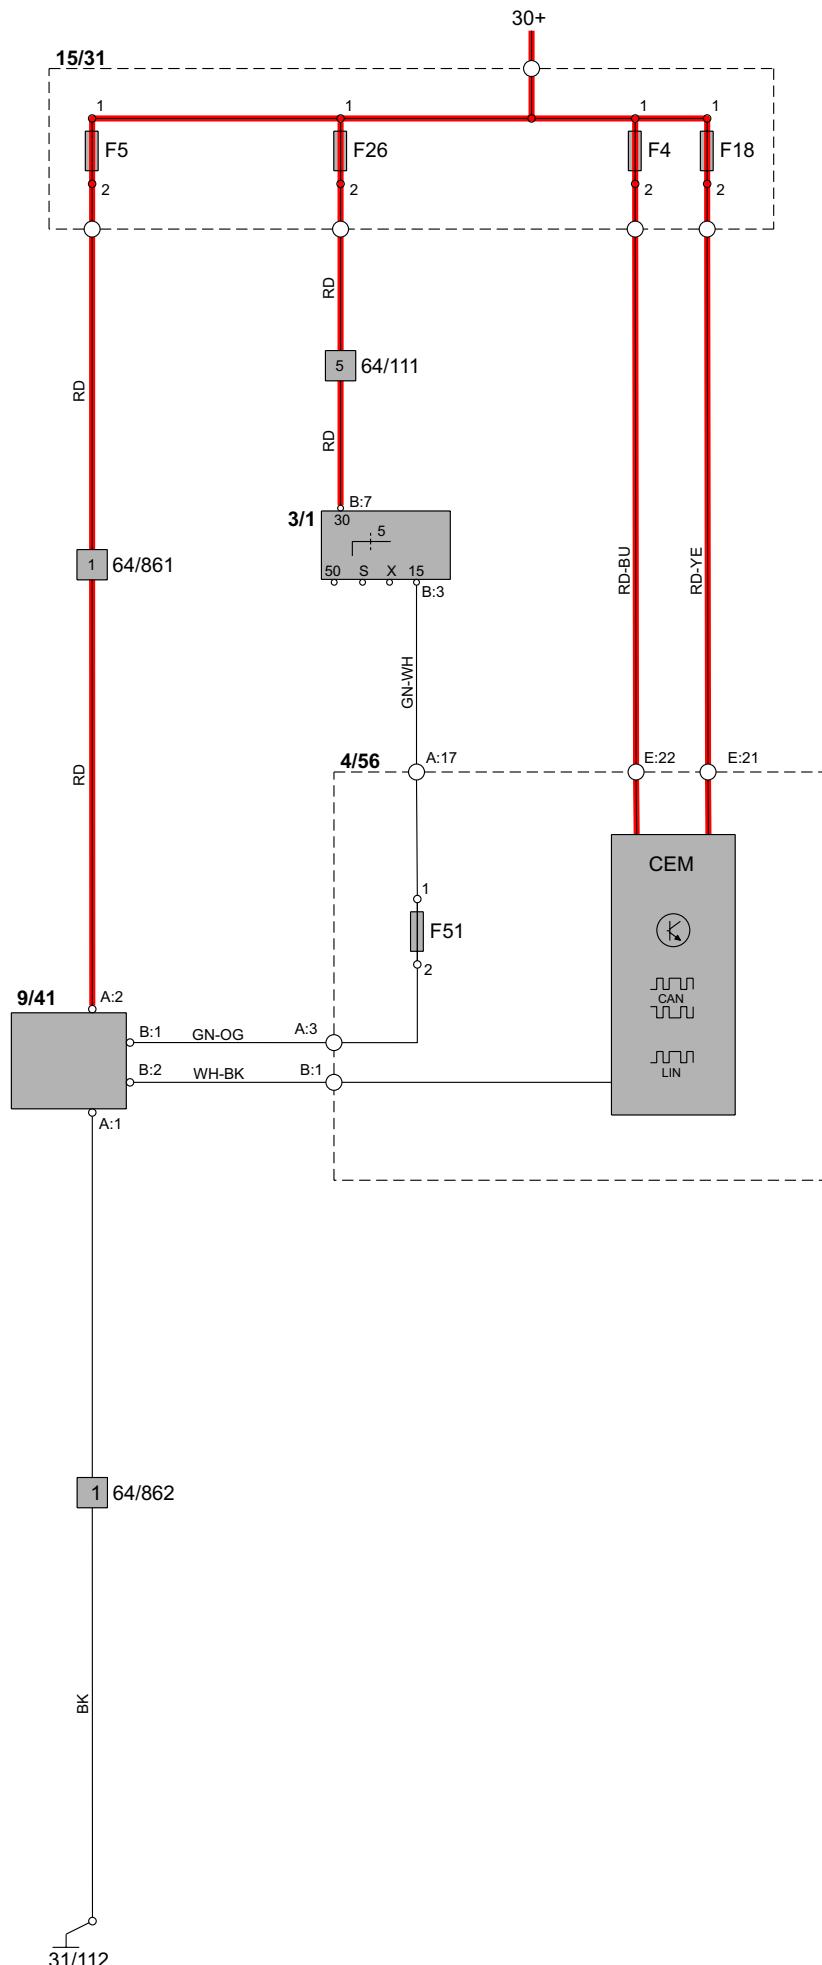


Group 87 Climate control system

Climate control system, 4-cyl. Gasoline 1:2

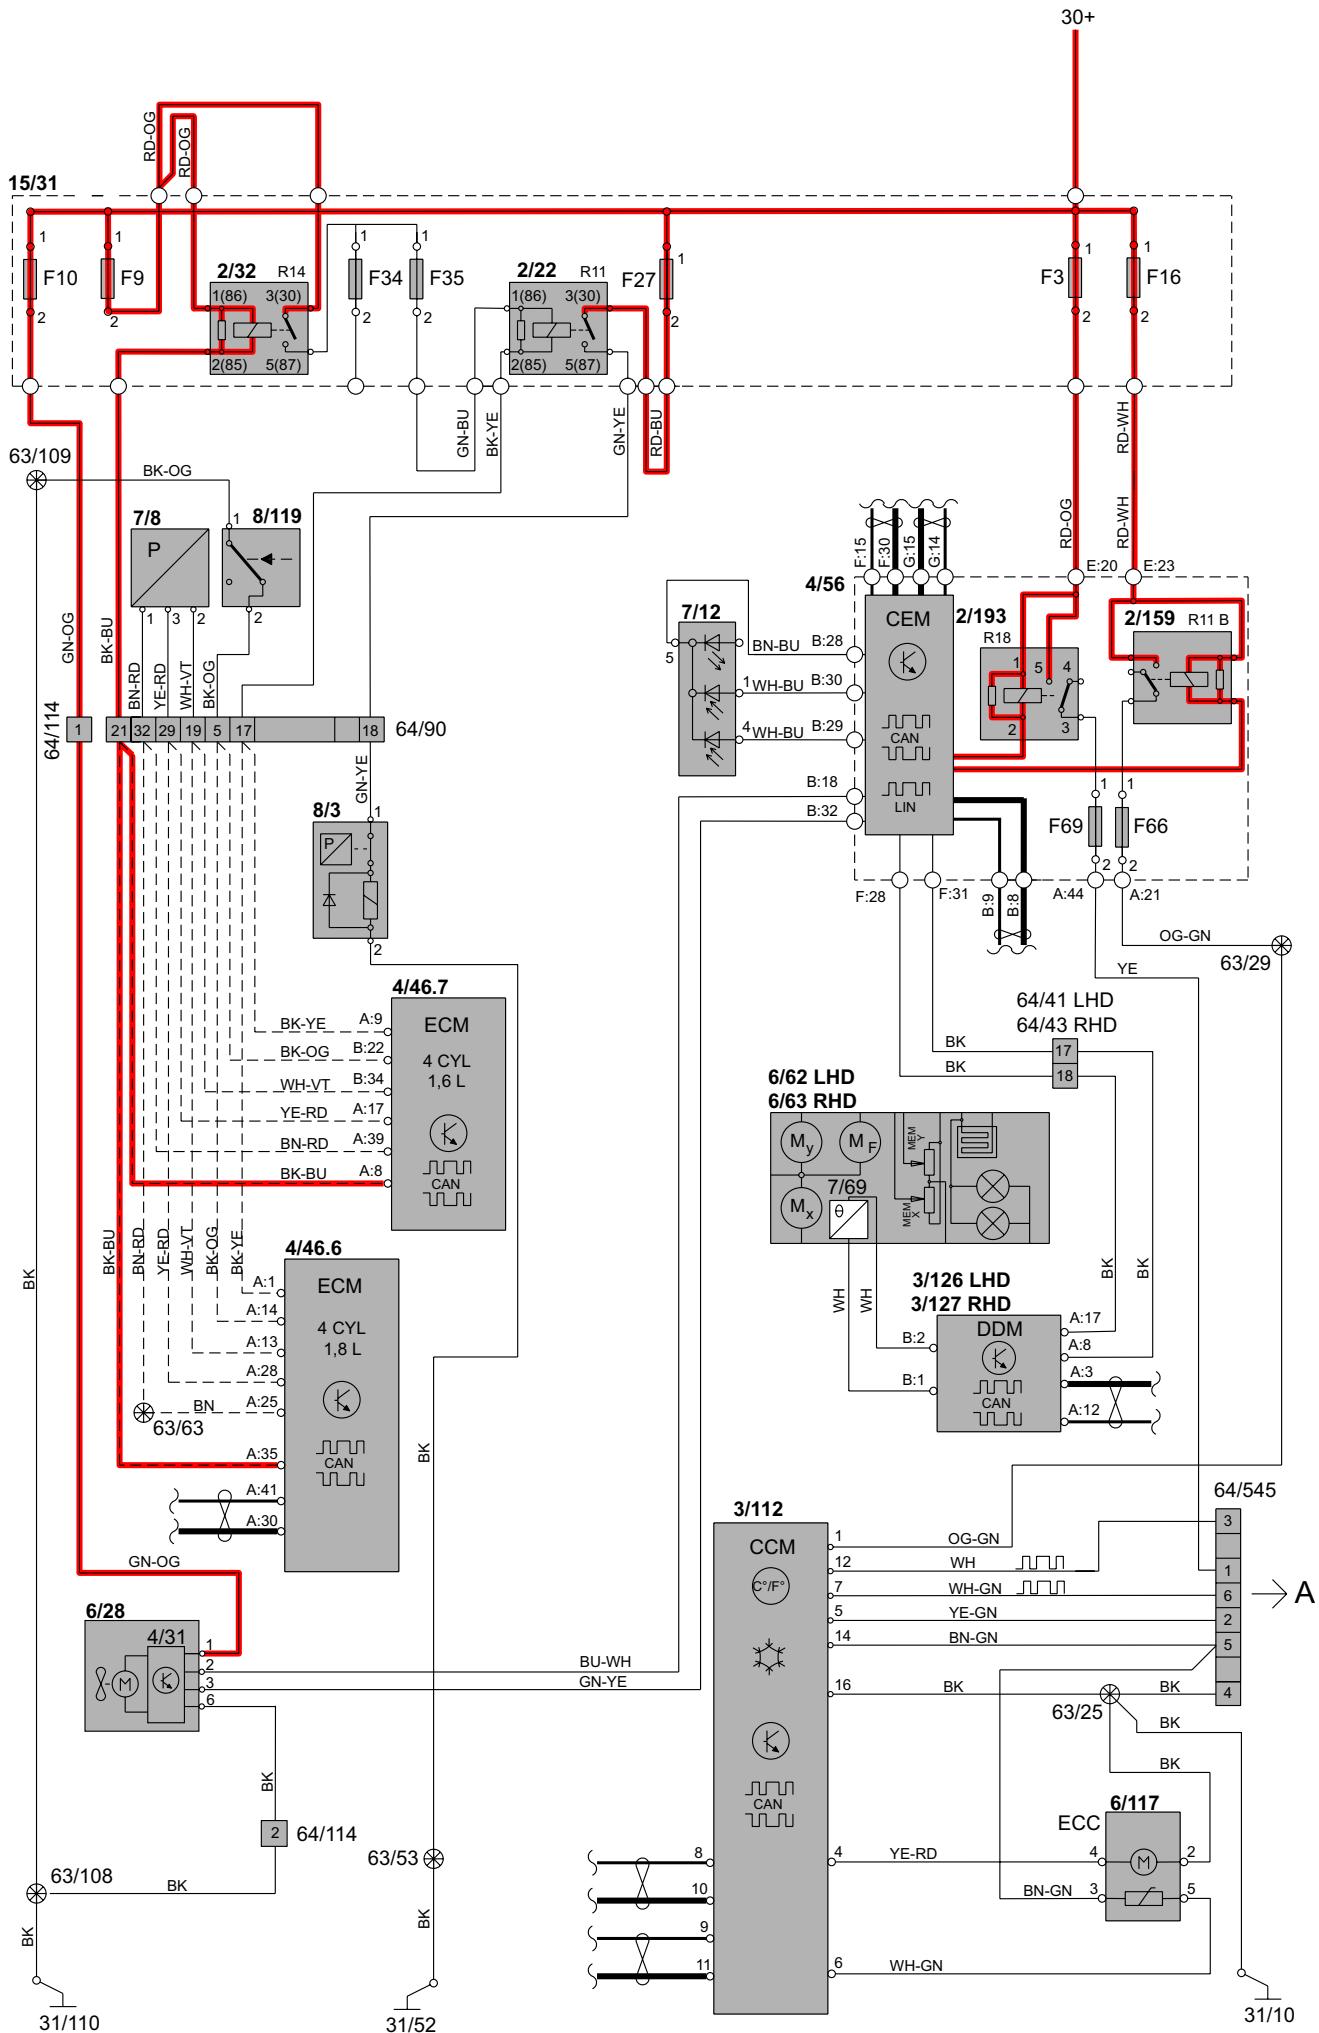


Group 87 Climate control system
Climate control system, 4-cyl. Gasoline 2:2

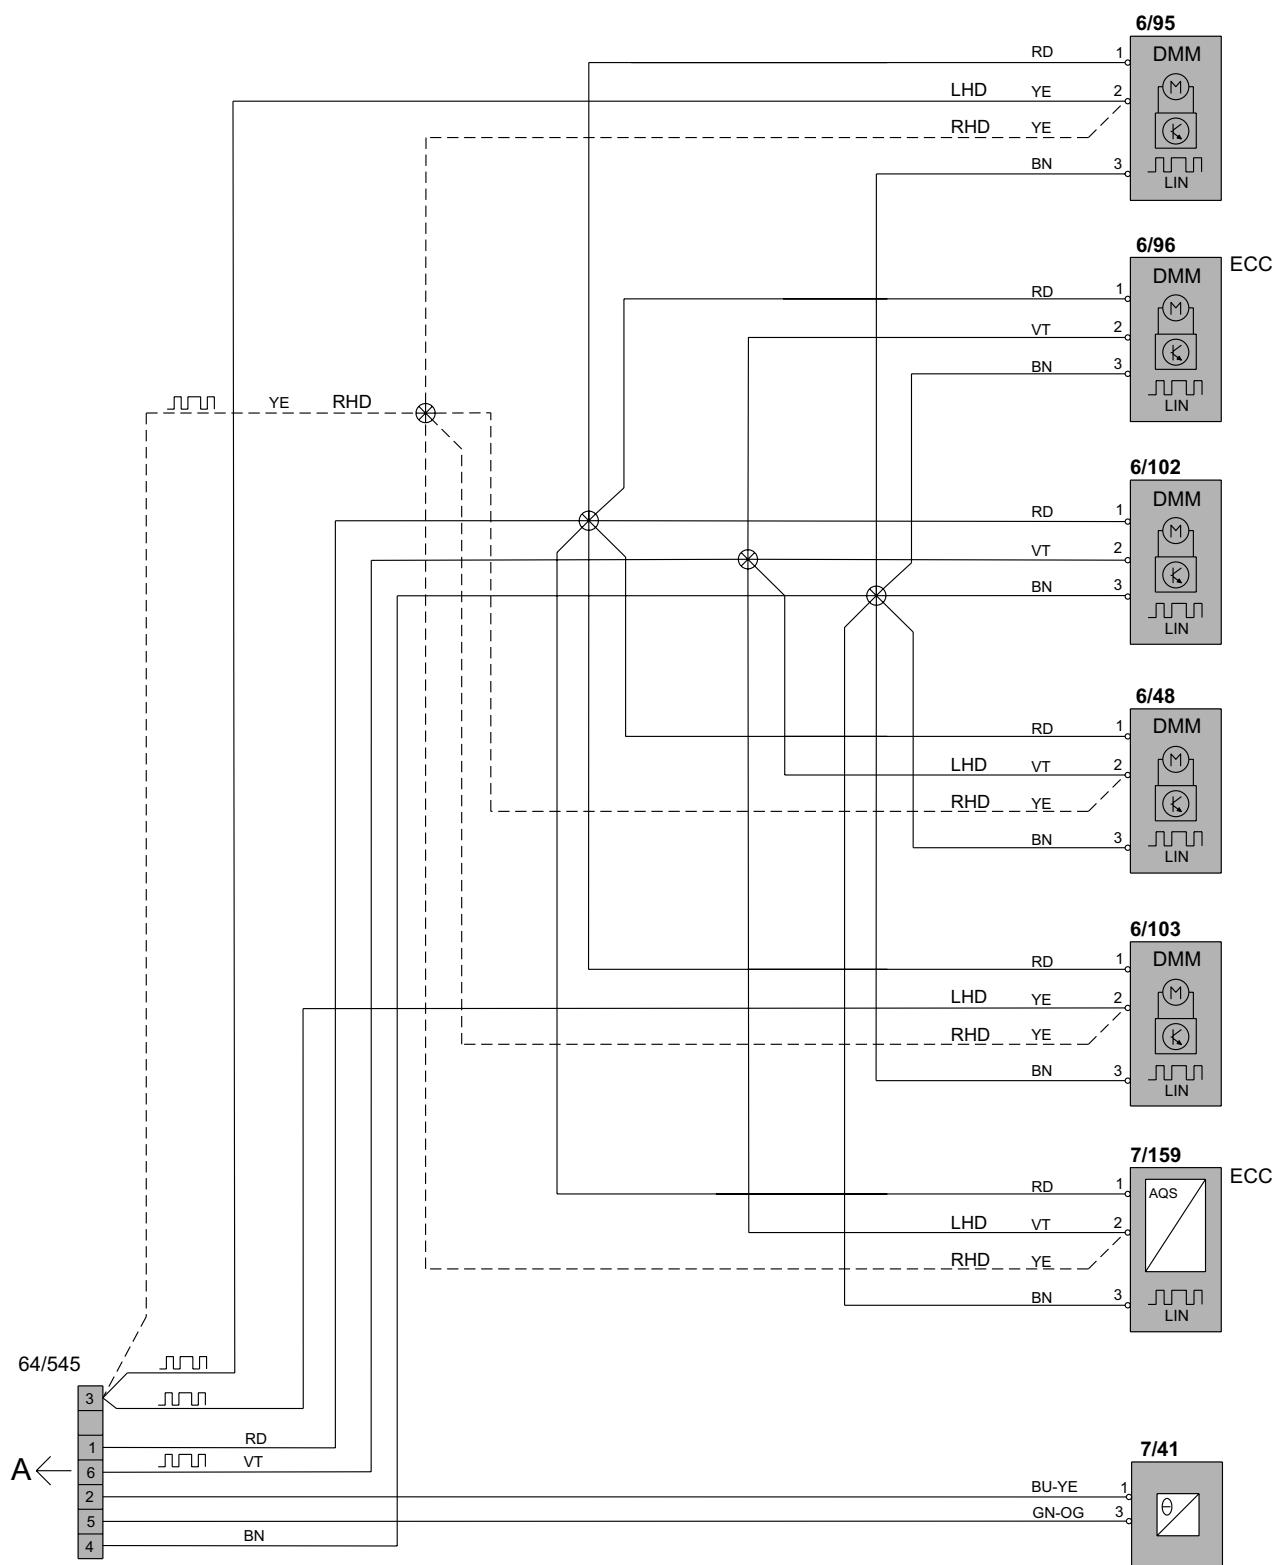


Group 87 Climate control system

Climate control system, 5-cyl. 1:2

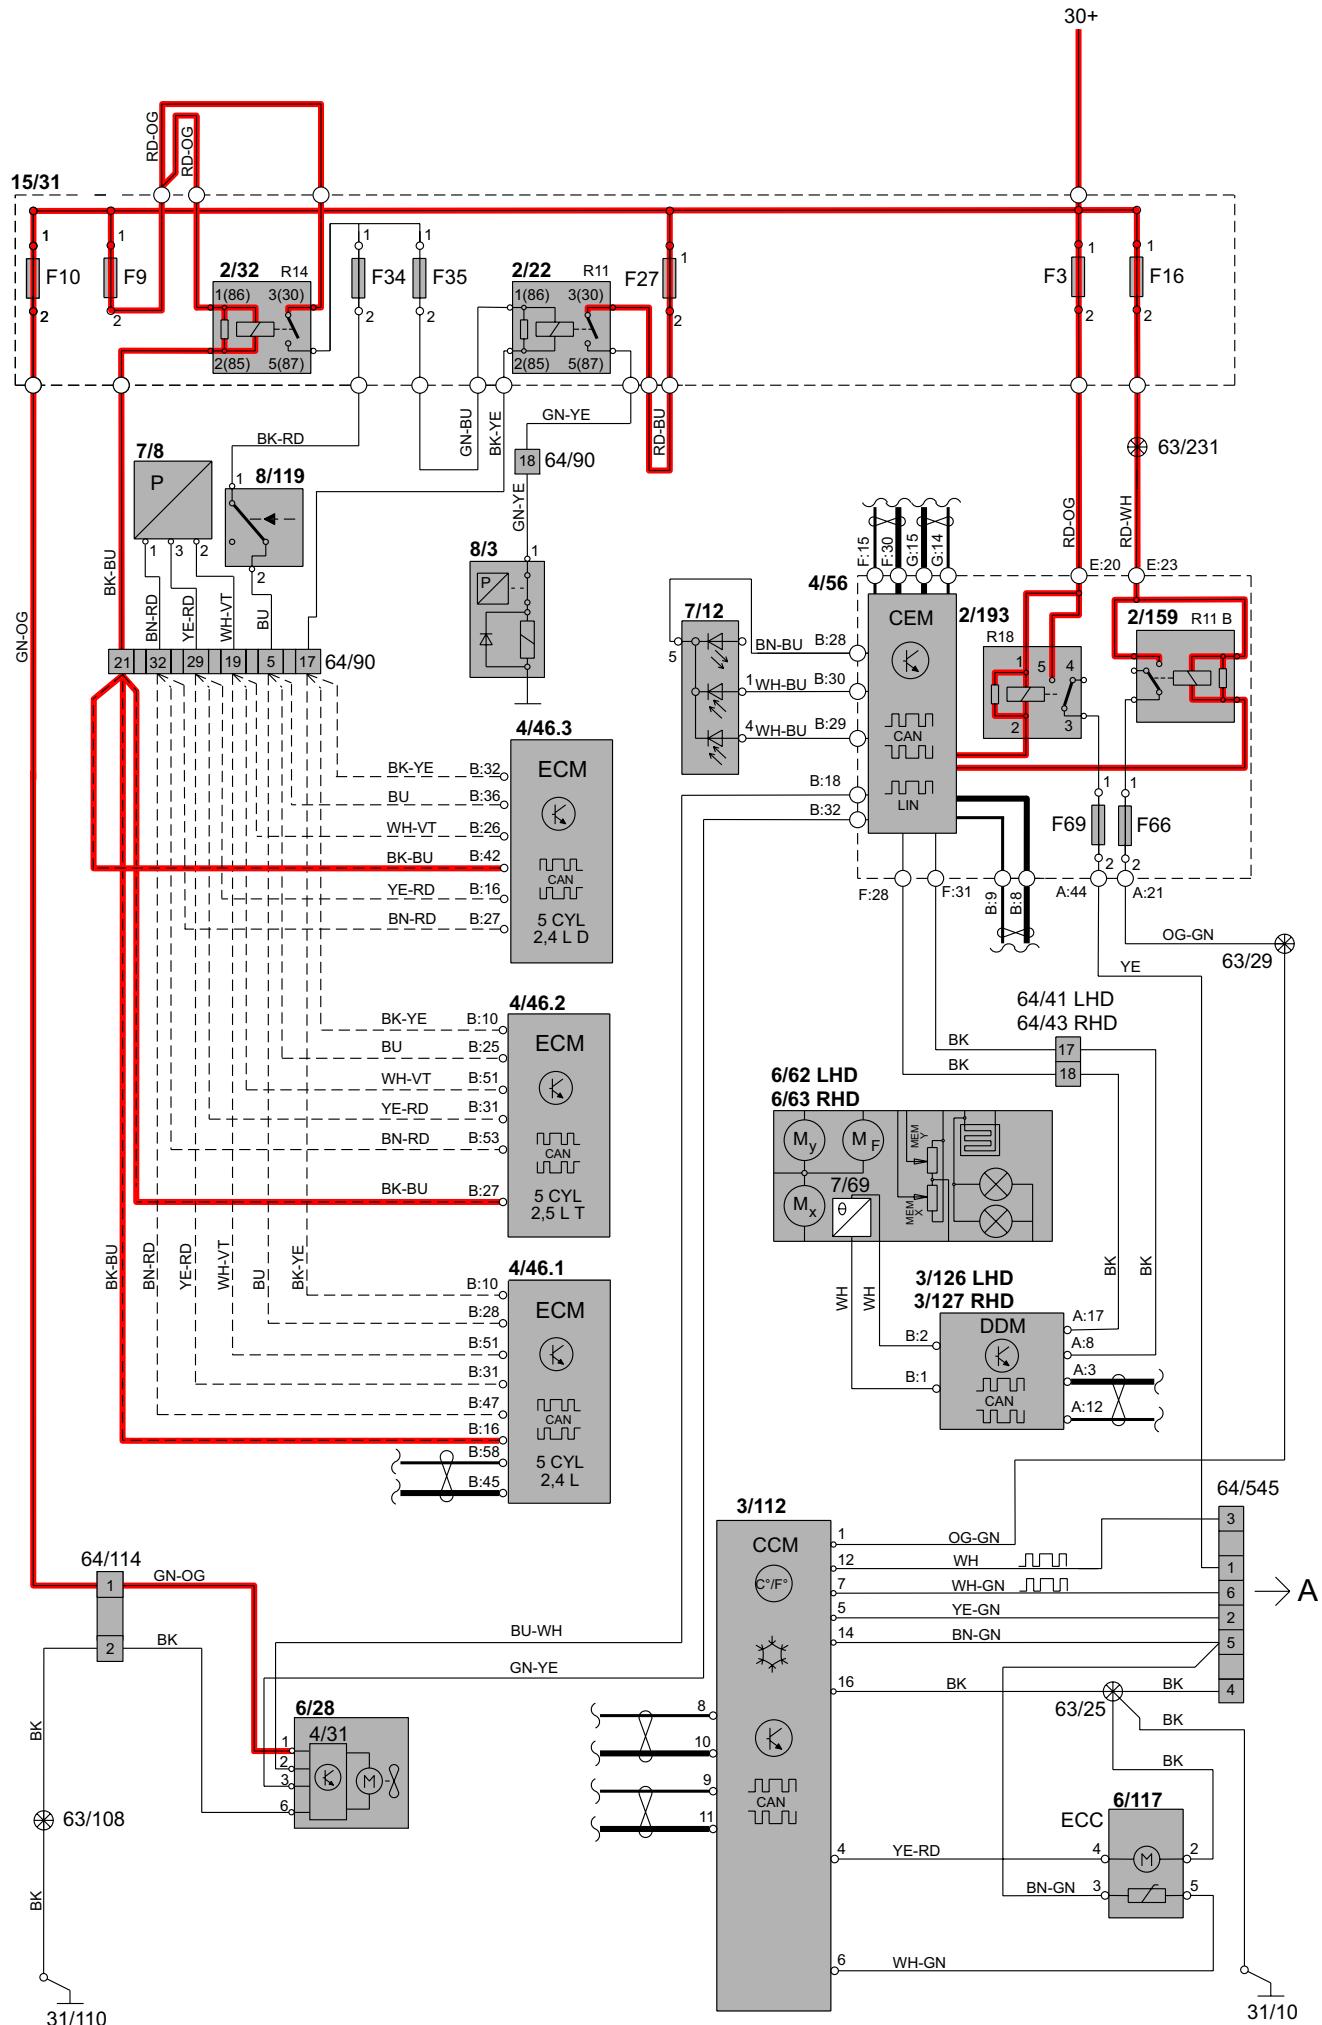


Group 87 Climate control system

Climate control system, 5-cyl. 2:2

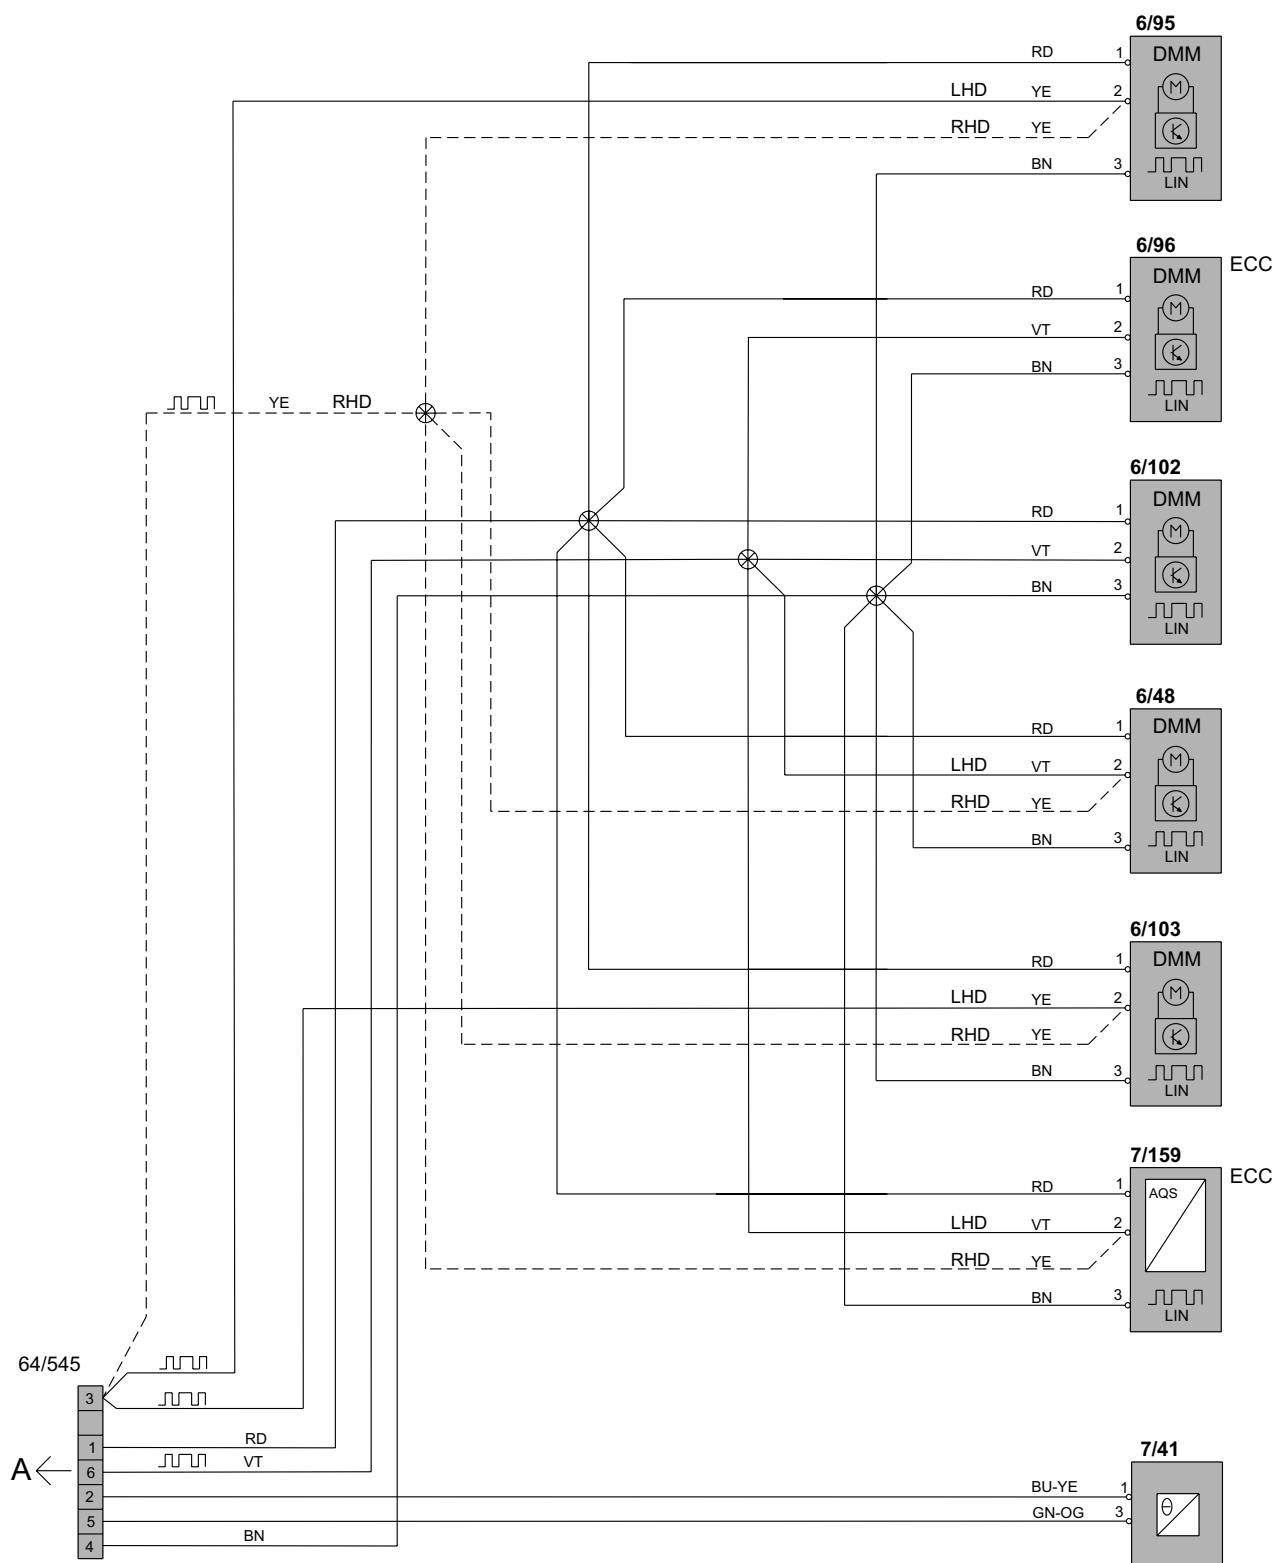


Group 87 Climate control system

Climate control system, Diesel 1.6l & 2.0l 1:2

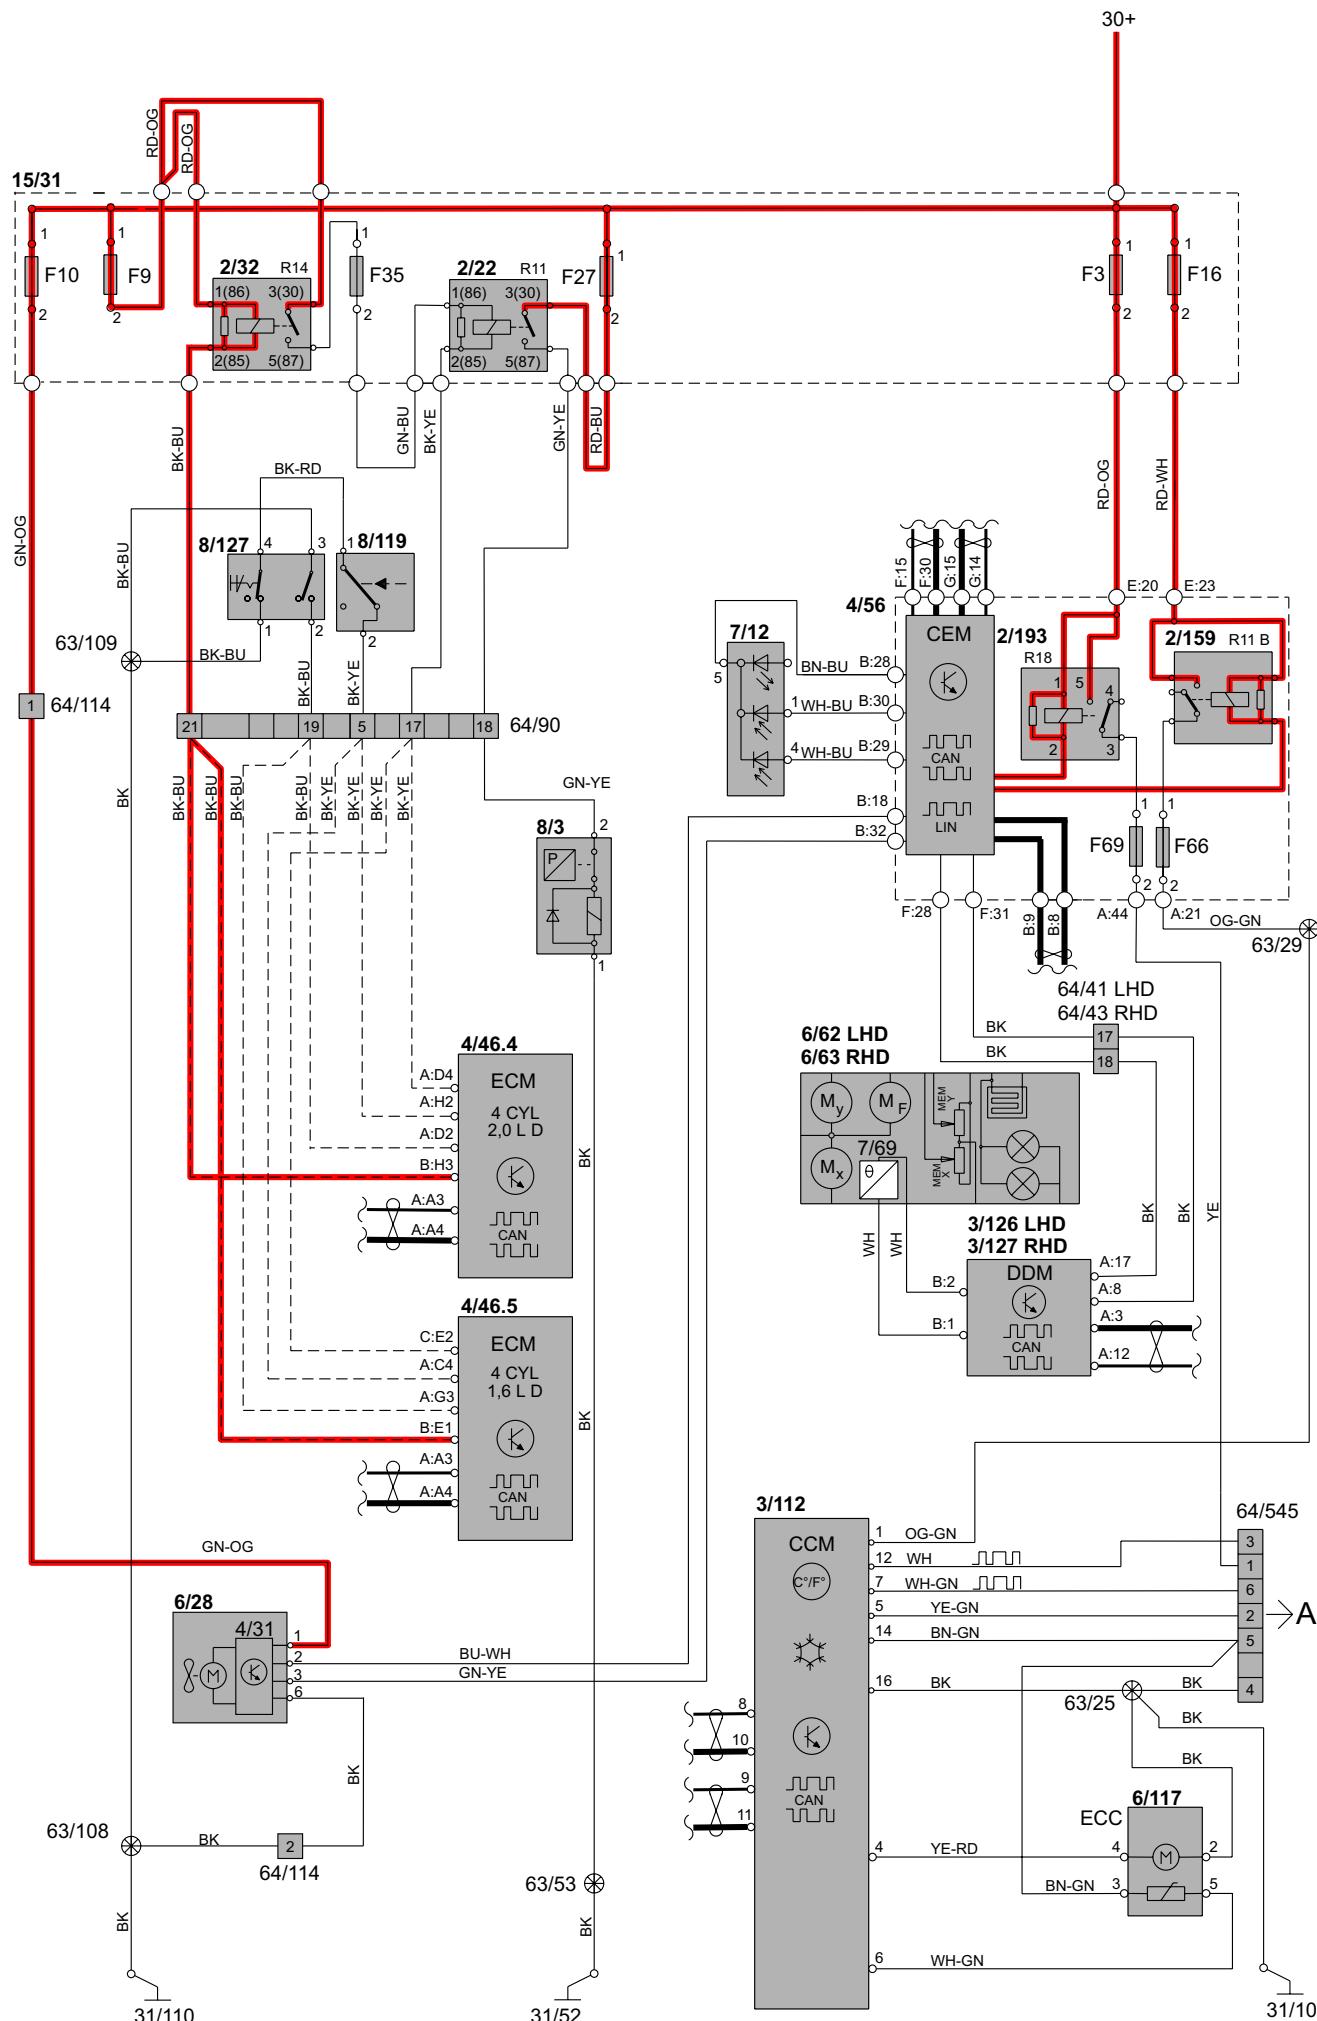


Group 87 Climate control system
Climate control system, Diesel 1.6l & 2.0l 2:2

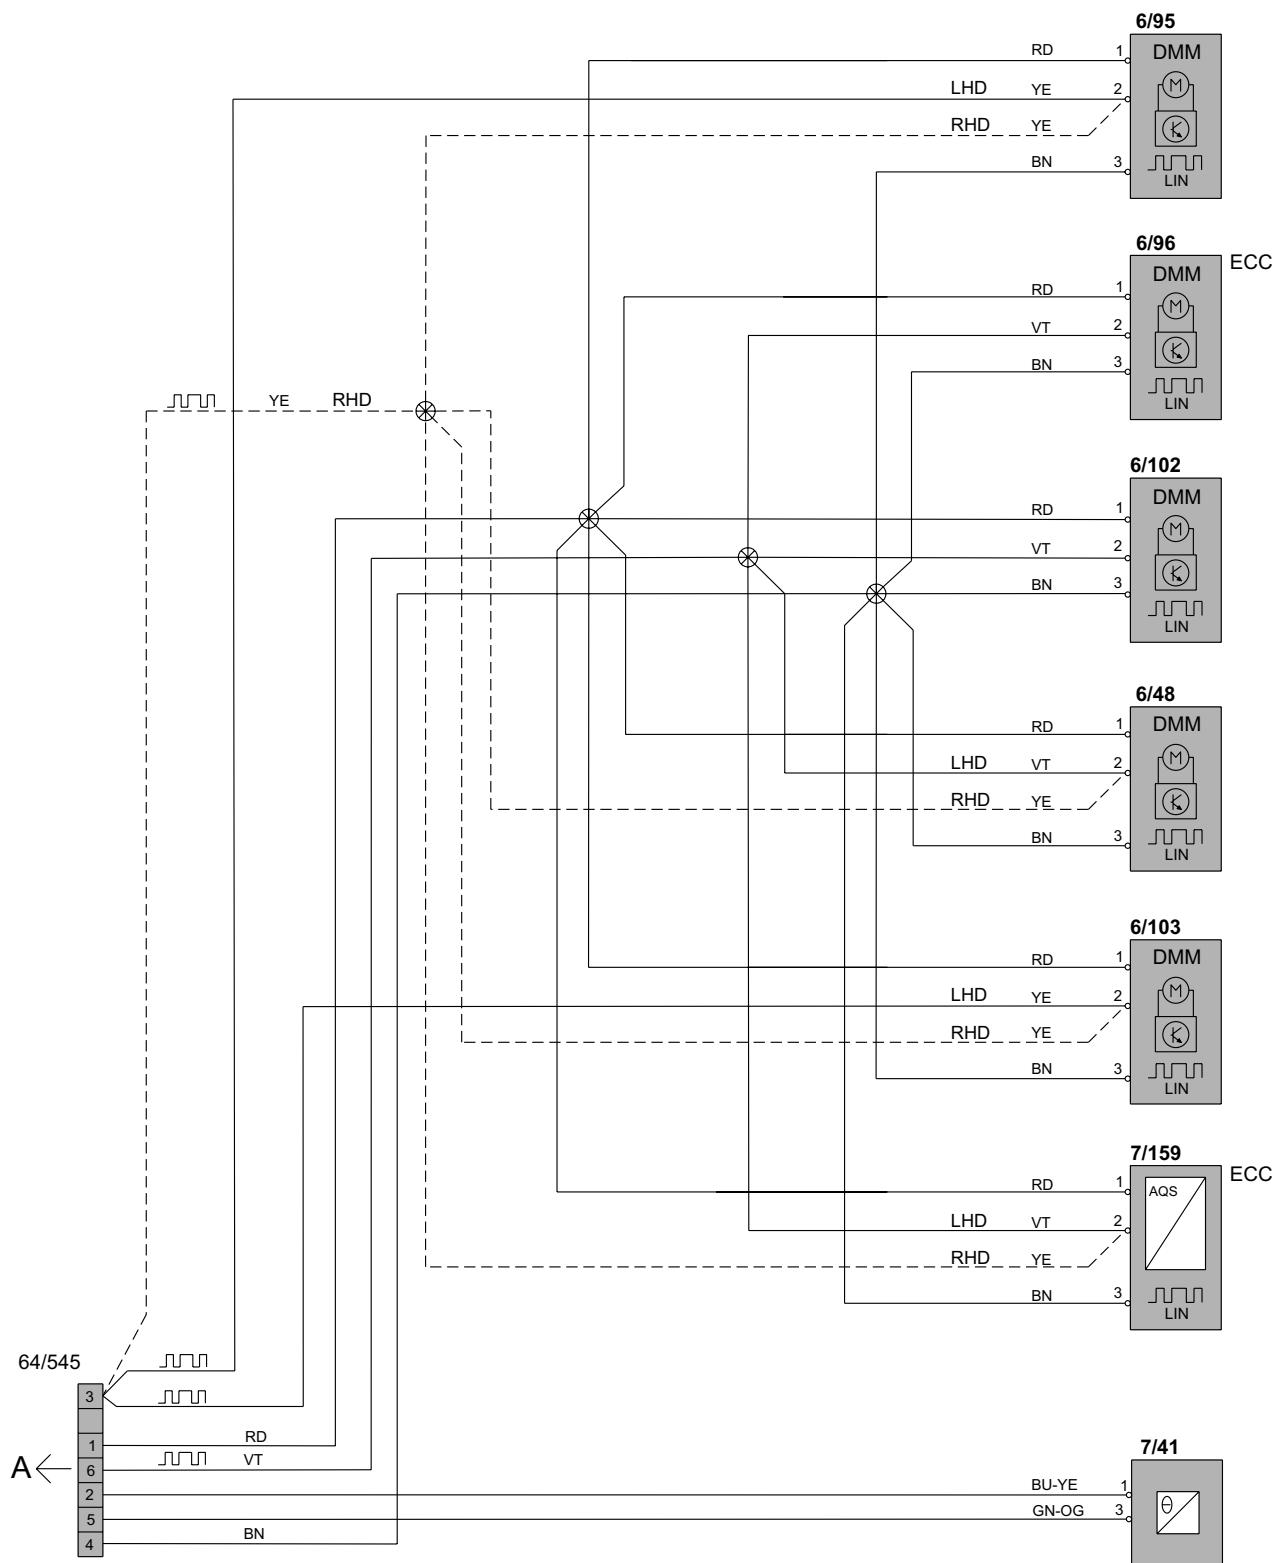


Group 87 Climate control system

Parking heater, auxiliary heater

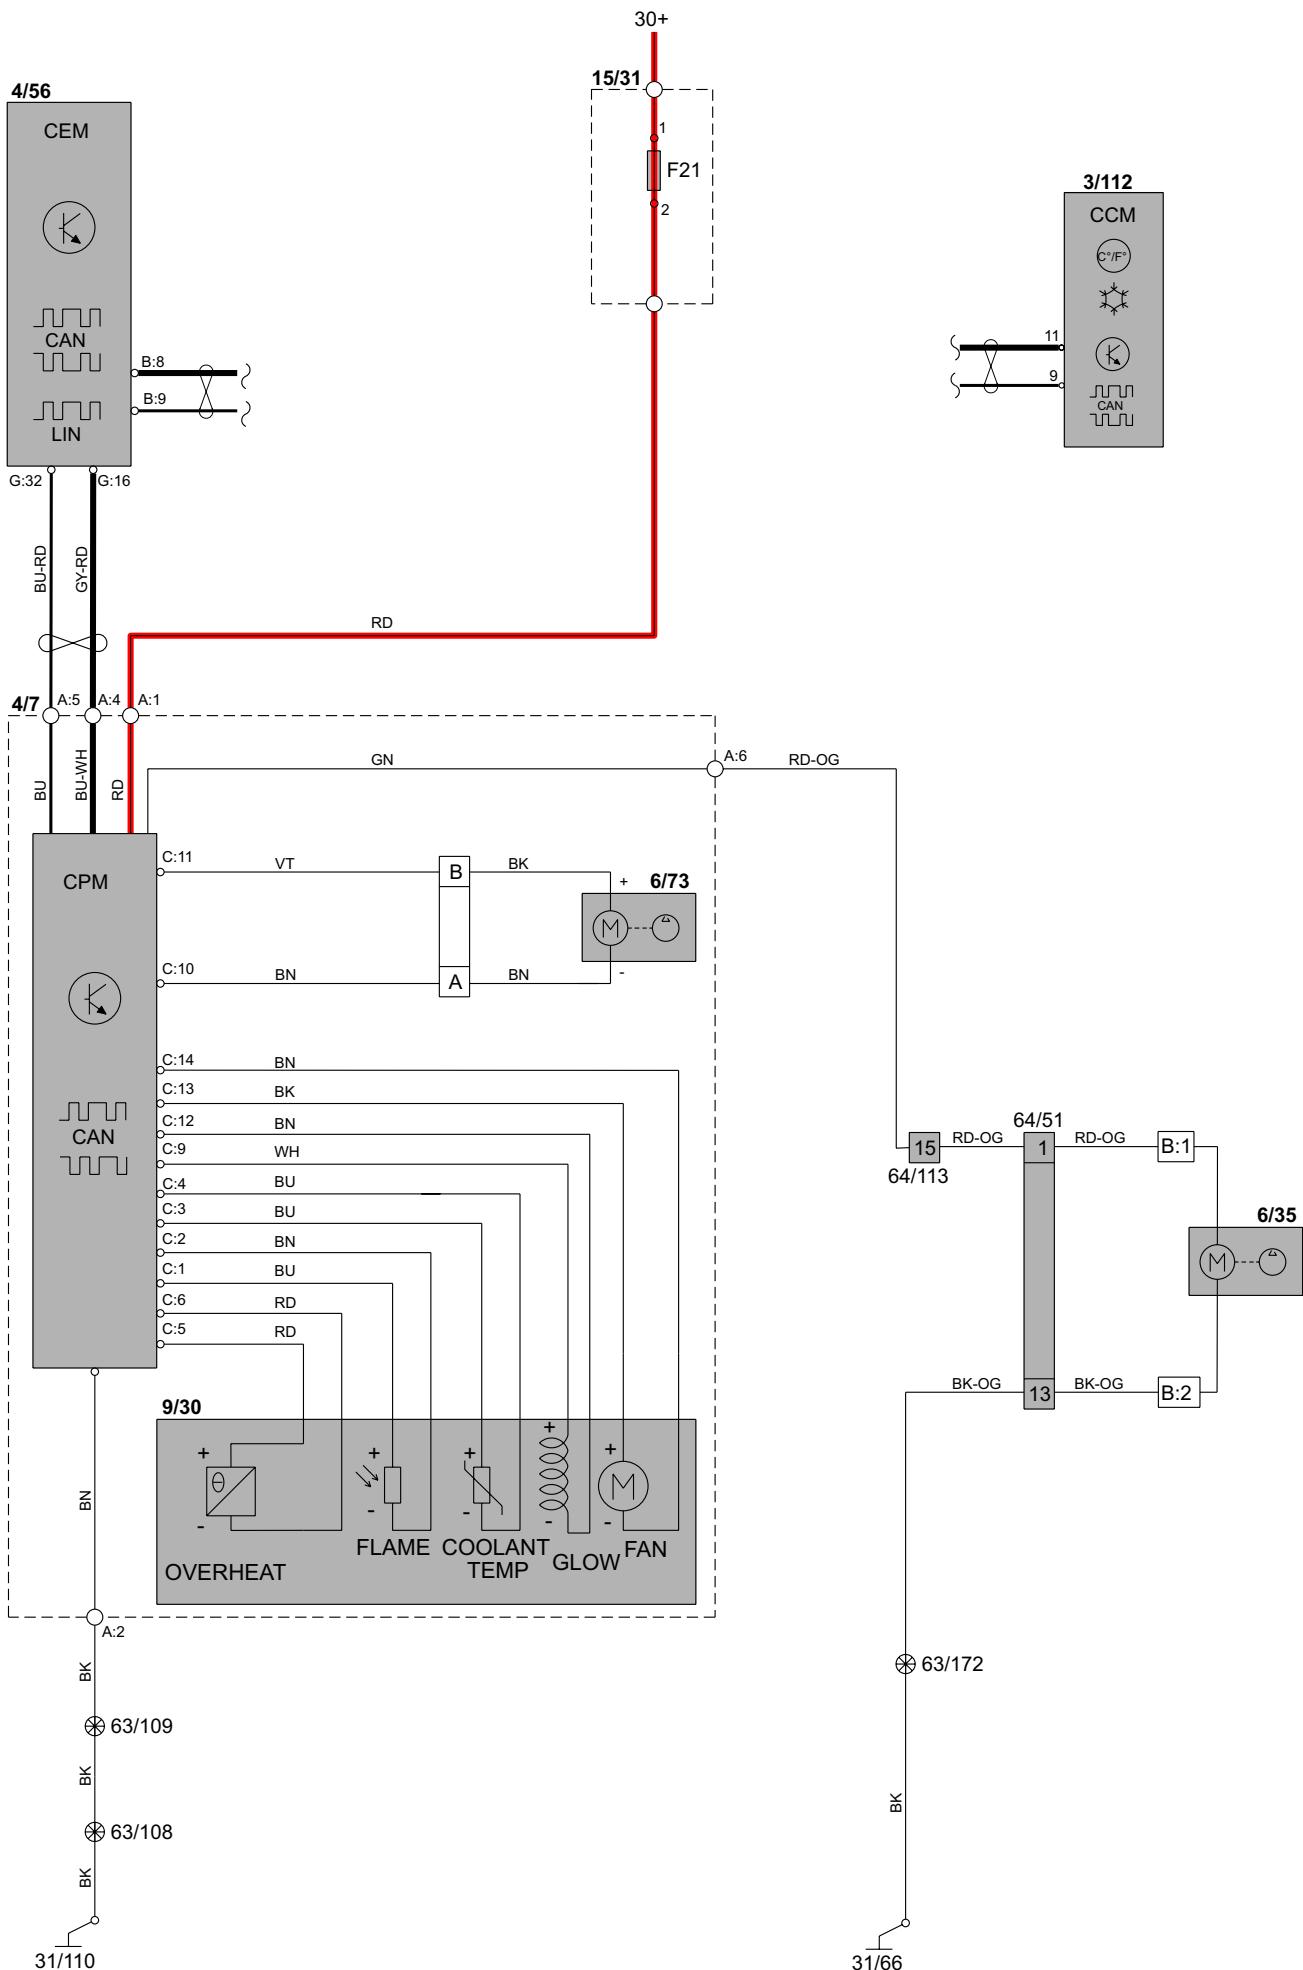


Group 87 Climate control system, Accessories

Relay, electric engine heater

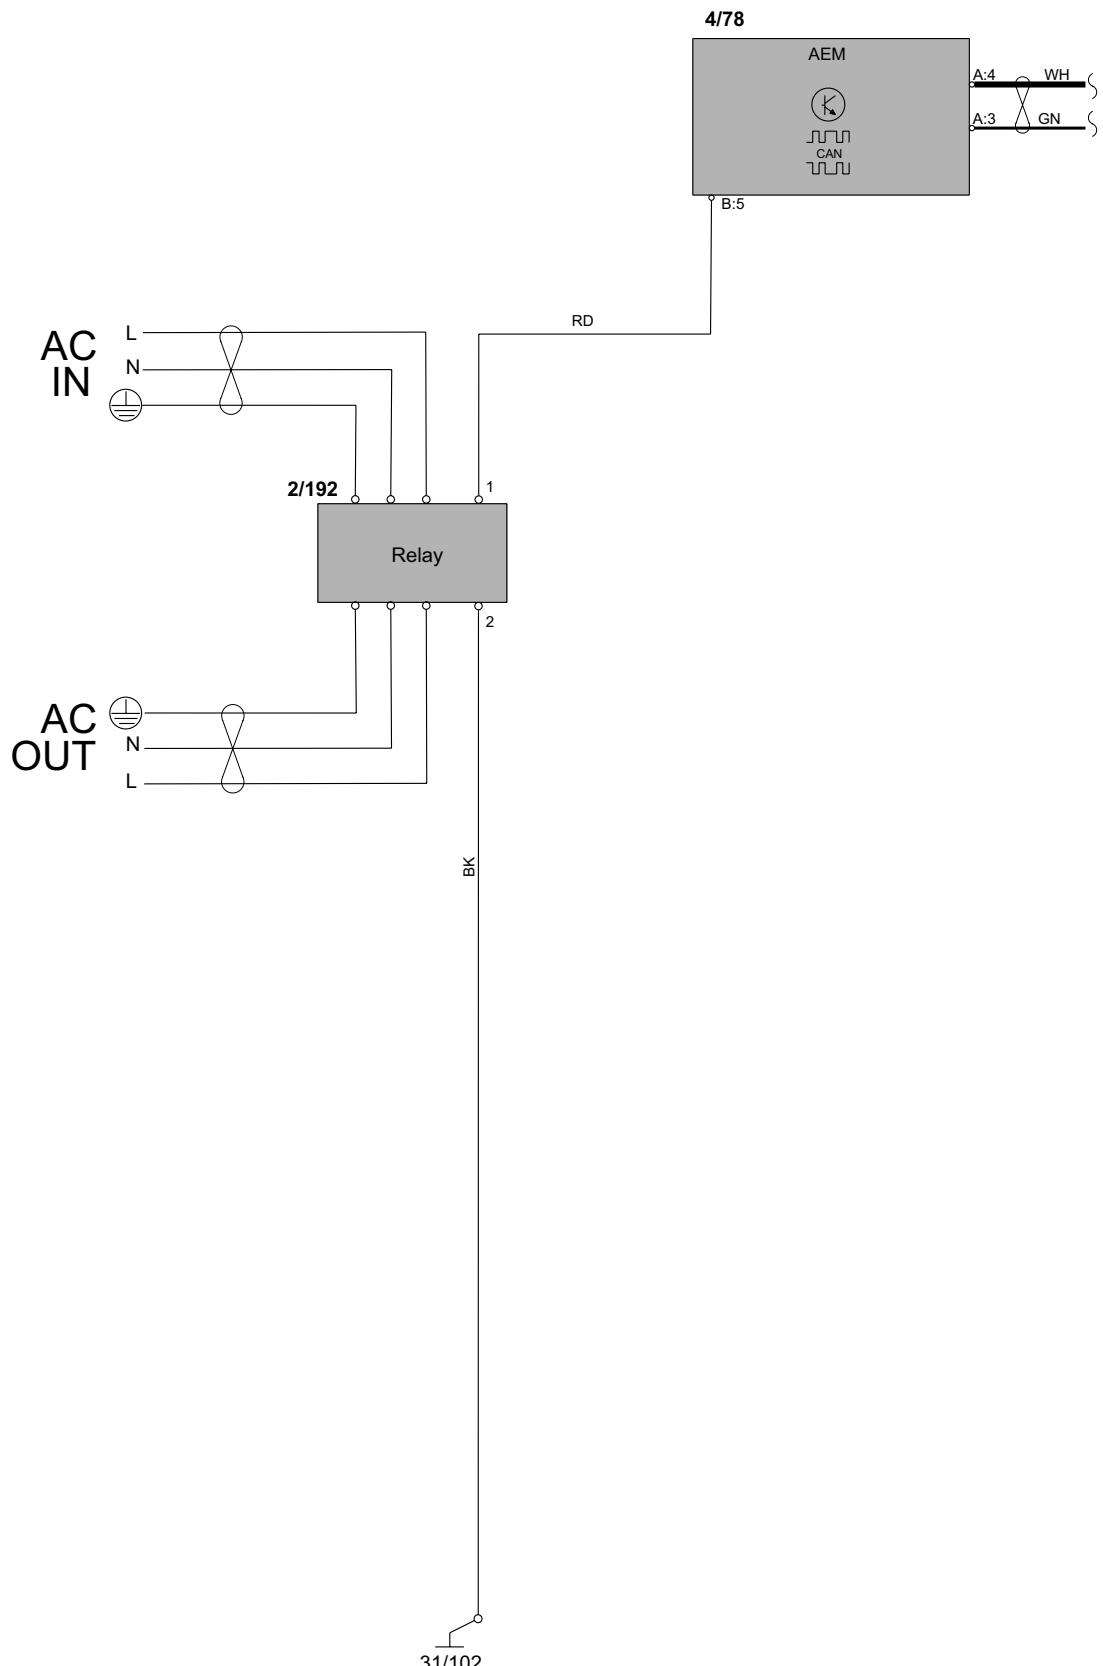


**Group 87 Climate control system, Accessories
Electric engine heater Flexifuel**

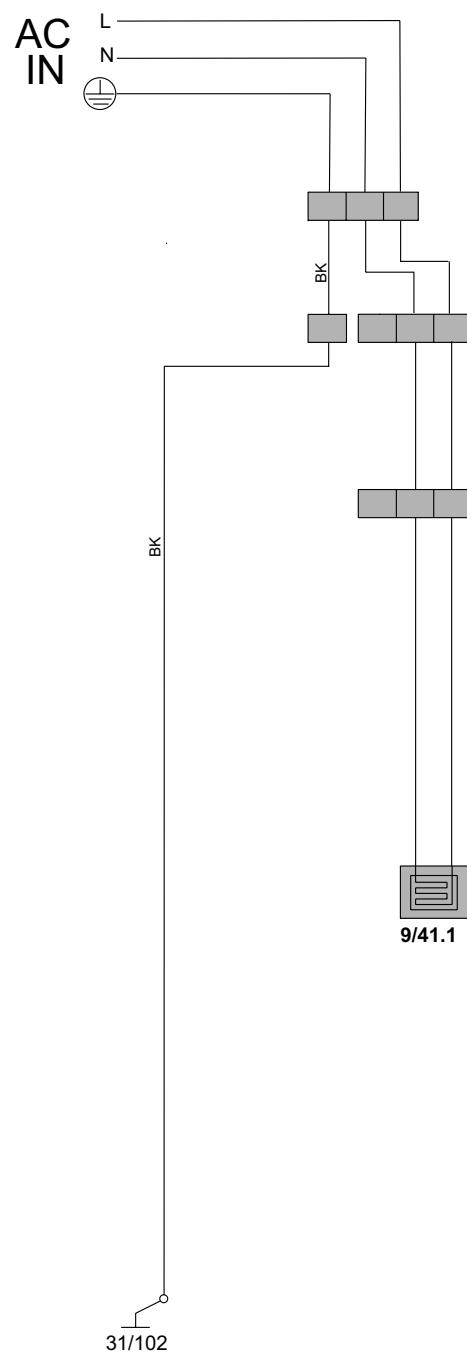


Group 88 Internal equipment

Auto-dimming rearview mirror

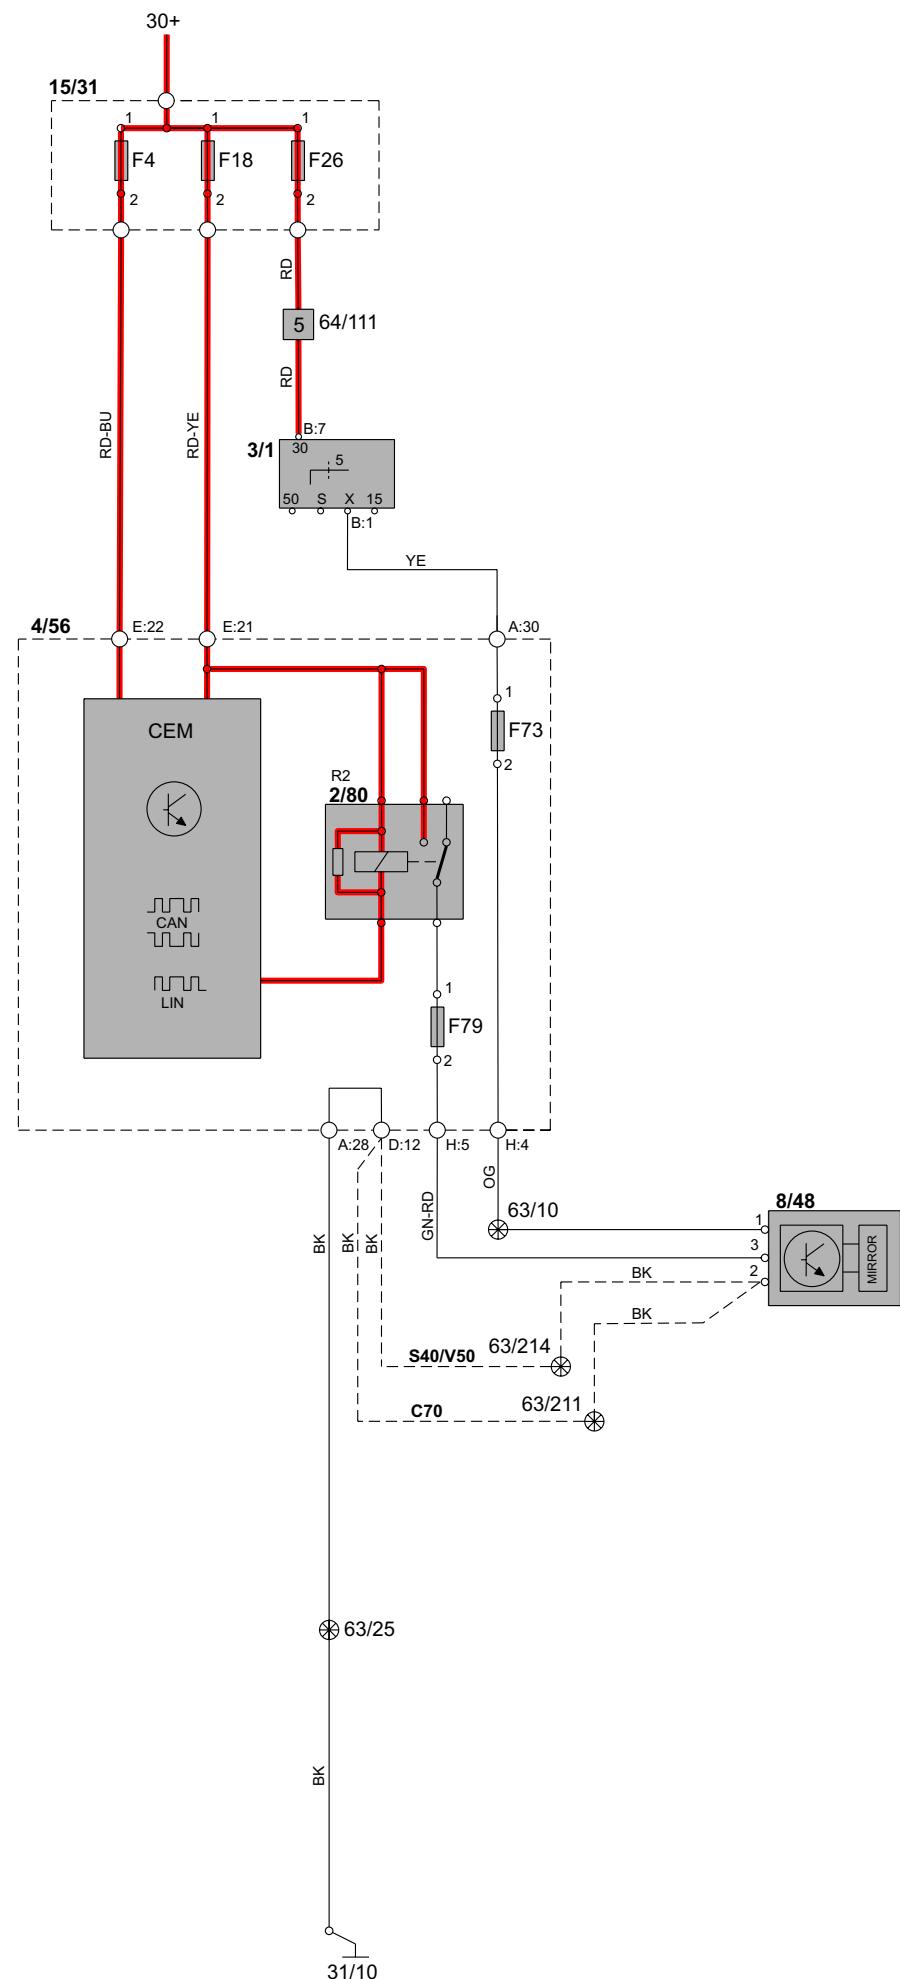


Group 88 Internal equipment Supplemental Restraint System Module (SRS) S40/V50 1:2

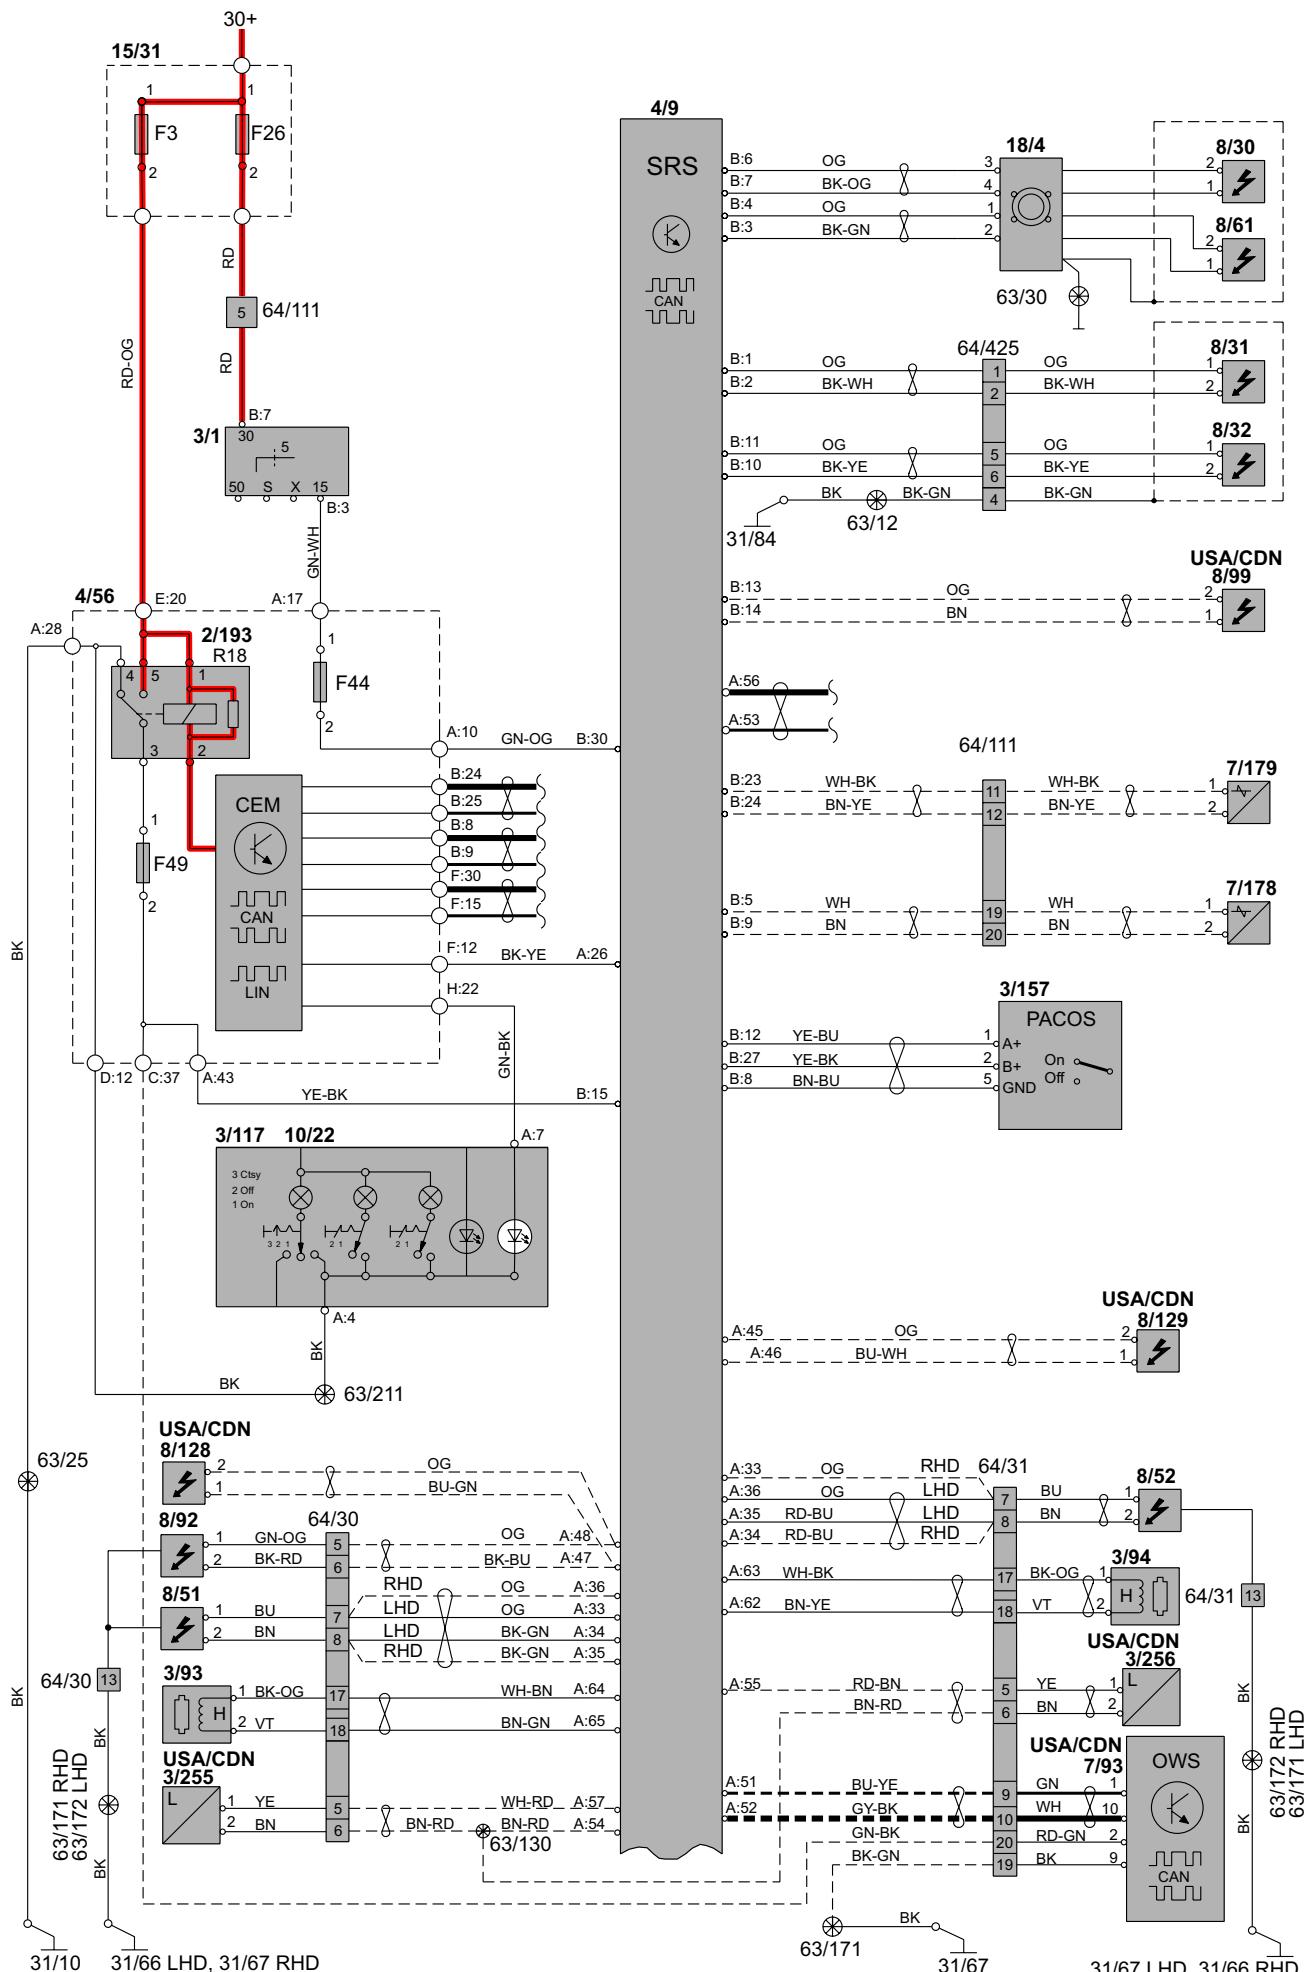




Group 88 Internal equipment

Supplemental Restraint System Module (SRS) C70 1:2

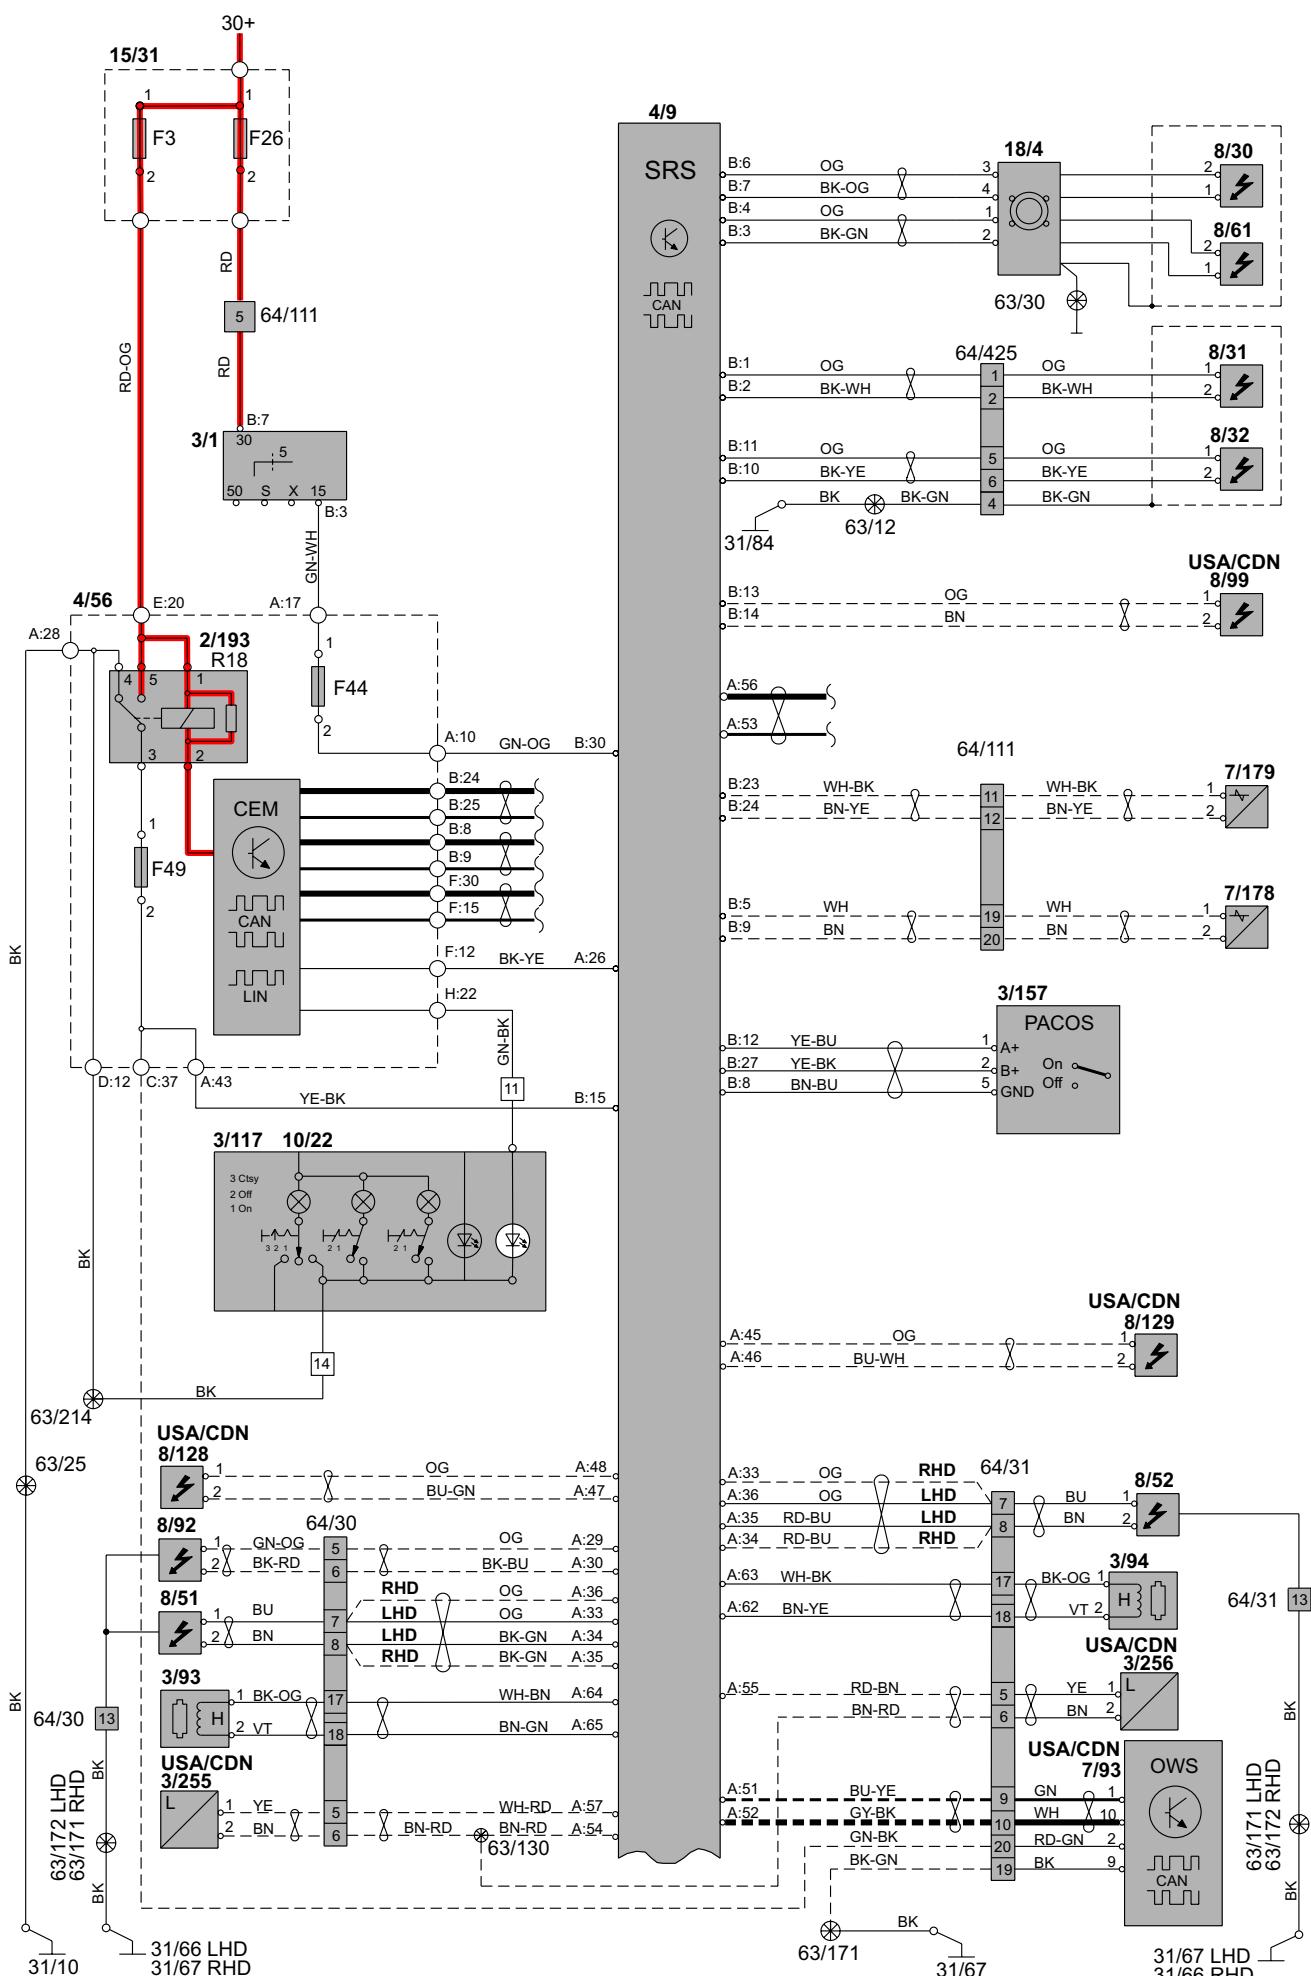

Group 88 Internal equipment

Supplemental Restraint System Module (SRS) S40/V50/C70 2:2

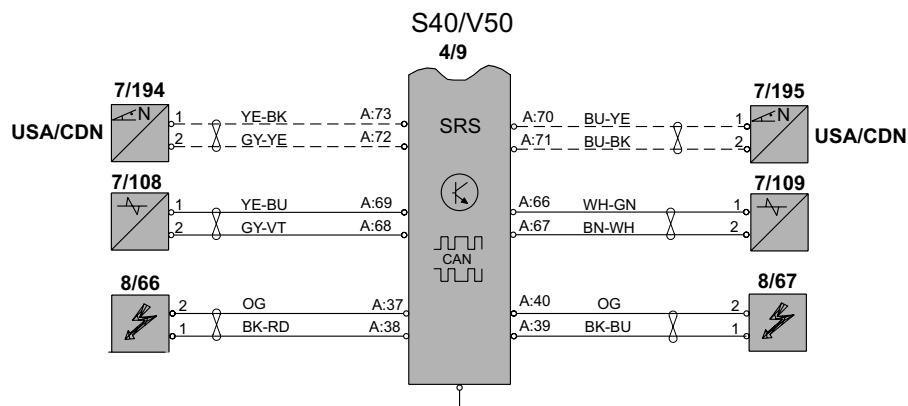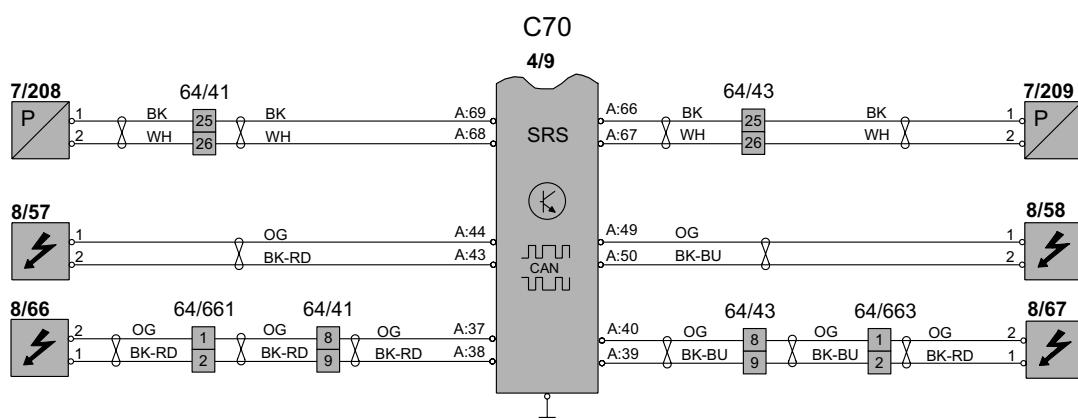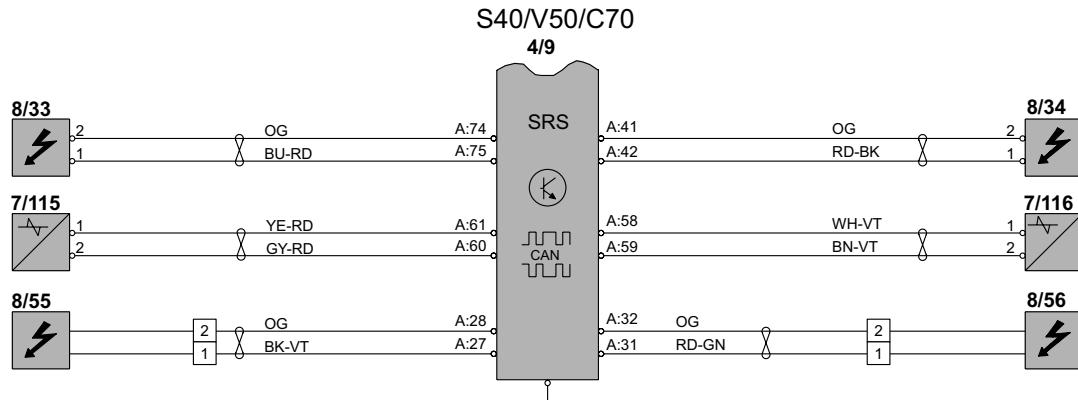

Connectors

64/10B - 64/25G

64/10B, C70 6-pin gray

No.	Roof harness			Floor harness		
1	4/56H:21	Central Electronic Module (CEM)	OG-YE	63/218	Branching point	OG-YE
2	4/56H:17	Central Electronic Module (CEM)	WH-RD	63/217	Branching point	WH-RD
3	3/117:9	Switch unit, ceiling light	BK-YE	63/212	Branching point	BK-YE
4	4/56H:20	Central Electronic Module (CEM)	BK	64/41:10 64/43:10	Connector Connector	BK
5	-		-	-		
6	-		-	-		

64/25G 6-pin gray

No.	Dashboard harness			Tunnel harness		
1	4/56A:23	Central Electronic Module (CEM)	GY	9/1:2	Front 12V outlet	GY
2	63/25	Branching point	BK	3/286:4 63/25 63/86	BLIS switch S40/V50 Branching point Branching point C70	BK
3	4/56A:1	Central Electronic Module (CEM)	OG-BU	3/25:1 3/286:1	Power roof switch C70 BLIS switch S40/V50	OG-BU
4	3/112:2	Climate Control Module (CCM)	YE-RD	3/286:3	BLIS switch S40/V50	YE-RD
5	3/112:3	Climate Control Module (CCM)	YE-GN	3/286:2	BLIS switch S40/V50	YE-GN
6	-		-	-		-

Connectors

64/30:1-10

64/30

20-pin black

No.	Floor harness			Driver's seat harness		
1	63/172 63/171	Branching point Branching point, RHD	BK	9/12A:1	Seat Heating Module (SHM), driver's side	BK
2	4/56C:43	Central Electronic Module (CEM)	GN-BK	9/12A:4	Seat Heating Module (SHM), driver's side	RD
3	-		-	-		-
4	64/112:6 64/112:7	Connector, RHD Connector	WH	9/12A:2	Seat Heating Module (SHM), driver's side	BU
5	4/9A:29	Supplemental Restraint System module (SRS)	OG	8/92:1	Lap belt tensioner, driver	GN-OG
	4/9A:48	Supplemental Restraint System module (SRS)	WH-RD	3/255:1	Driver's seat position sensor, USA/CDN	BK-YE
	4/9A:57	Supplemental Restraint System Module (SRS), USA/CDN				
6	4/9A:30	Supplemental Restraint System module (SRS)	BK-BU	8/92:2	Lap belt tensioner, driver	BK-RD
	4/9A:47	Supplemental Restraint System module (SRS)	BN-RD	3/255:2	Driver's seat position sensor, USA/CDN	BN
	63/130	Branching point, USA/CDN				
7	4/9A:33 4/9A:36	Supplemental Restraint System module (SRS) Supplemental Restraint System module (SRS), RHD	OG	8/51:1	Igniter side airbag, driver's side	OG
8	4/9A:34 4/9A:35	Supplemental Restraint System module (SRS) Supplemental Restraint System module (SRS), RHD	BK-GN	8/51:2	Igniter side airbag, driver's side	BN
9	-		-	-		-
10	-		-	-		-
continues						

Connectors
64/30:11-20

64/30
20-pin black

No.	Floor harness			Driver's seat harness		
11	63/221	Branching point	BU-RD	4/52B:3	Power Seat Module (PSM)	GN
12	63/220	Branching point	GY-RD	4/52B:4	Power Seat Module (PSM)	WH
13	63/171 63/172	Branching point, RHD Branching point	BK	8/92 8/51	Driver's lap belt tensioner Igniter side airbag, driver's side	-
14	63/173	Branching point	OG-BU	3/26:7 3/26:11 4/52B:1 4/52B:6	Switch unit, power driver's seat, RHD Switch unit, power driver's seat, LHD Power Seat Module (PSM), memory, LHD Power Seat Module (PSM), memory, RHD	RD-GN
15	4/56C:30	Central Electronic Module (CEM)	OG-YE	3/26:2 3/26:5 4/52A:1 4/52A:7	Switch unit, power driver's seat, LHD Switch unit, power driver's seat, RHD Power Seat Module (PSM), memory, LHD Power Seat Module (PSM), memory, RHD	RD-BU
16	63/171 63/172	Branching point, RHD Branching point, LHD	BK	3/26:3 3/26:8 3/287:5 3/288:5 4/52A:1 4/52A:7 4/52B:2 4/52B:6	Switch unit, power driver's seat, LHD Switch unit, power driver's seat, RHD Rear seat entry switch, left Rear seat entry switch, right Power Seat Module (PSM), memory, RHD Power Seat Module (PSM), memory, LHD Power Seat Module (PSM), memory, RHD Power Seat Module (PSM), memory, LHD	BK
17	4/9A:64	Supplemental Restraint System module (SRS)	WH-BN	3/93:1	Belt buckle contact, driver's seat	BK-OG
18	4/9A:65	Supplemental Restraint System module (SRS)	BN-GN	3/93:2	Belt buckle contact, driver's seat	VT
19	-		-	-		-
20	-		-	-		-

Connectors

64/31:1-14

64/31

20-pin black

No.	Floor harness			Passenger seat harness		
1	63/171 63/172	Branching point Branching point, RHD	BK	9/13A:1	Seat Heating Module (SHM), passenger side	BK
2	4/56C:42	Central Electronic Module (CEM)	GN-YE	9/13A:4	Seat Heating Module (SHM), passenger side	RD
3	-	-	-	-	-	-
4	64/112:6 64/112:7	Connector Connector, RHD	WH-GN	9/13A:2	Seat Heating Module (SHM), passenger side	BU
5	4/9A:55	Supplemental Restraint System Module (SRS), USA/CDN	RD-BN	3/256:1	Passenger seat position sensor, USA/CDN	YE
6	63/130	Branching point	BN-RD	3/256:2	Passenger seat position sensor, USA/CDN	BN
7	4/9A:33 4/9A:36	Supplemental Restraint System module (SRS), RHD Supplemental Restraint System module (SRS)	OG	8/52:1	Side airbag igniter, passenger side	BU
8	4/9A:34 4/9A:35	Supplemental Restraint System module (SRS), RHD Supplemental Restraint System module (SRS)	RD-BU	8/52:2	Side airbag igniter, passenger side	BN
9	4/9A:51	Supplemental Restraint System Module (SRS), USA/CDN	BU-YE	7/93:1	Occupant Weight Sensor (OWS), USA/CDN C70	GN
10	4/9A:52	Supplemental Restraint System Module (SRS), USA/CDN	GY-BK	7/93:10	Occupant Weight Sensor (OWS), USA/CDN	WH
11	4/56F:17 63/221	Central Electronic Module (CEM) Branching point C70	YE-RD BU-RD	3/46:1 4/54B:3	Seat contact, passenger seat Power Seat Module (PSM) C70	WH GN
12	4/56F:13 63/220	Central Electronic Module (CEM) Branching point C70	BN-RD GY-RD	3/46:2 4/54B:4	Seat contact, passenger seat Power Seat Module (PSM) C70	WH
13	63/171 63/172	Branching point Branching point, RHD	BK	8/52	Igniter side airbag, passenger side	-
14	63/173	Branching point	OG-BU	3/27:7 3/27:11 4/54B:6	Switch unit, power passenger seat, LHD Switch unit, power passenger seat, RHD Power Seat Module (PSM) C70	RD-GN

continues

Connectors

64/31:15-20 - 64/40

64/31

20-pin black

No.	Floor harness			Passenger seat harness		
15	4/56C:29 Central Electronic Module (CEM)	OG-YE	3/27:2	Switch unit, power passenger seat, RHD	RD-BU	
	4/46C:30 Engine Control Module (ECM)		3/27:5	Switch unit, power passenger seat, LHD		
			4/54A:7	Power Seat Module (PSM) C70		
16	63/171 Branching point	BK	3/27:3	Switch unit, power passenger seat, RHD	BK	
	63/172 Branching point, RHD		3/27:8	Switch unit, power passenger seat, LHD		
			3/287:5	Rear seat entry switch, left		
			3/288:5	Rear seat entry switch, right		
			4/54A:1	Power Seat Module (PSM) C70		
			4/54B:2	Power Seat Module (PSM) C70		
			4/54A:7	Power Seat Module (PSM) C70		
			4/54B:6	Power Seat Module (PSM) C70		
17	4/9A:63 Supplemental Restraint System module (SRS)	WH-BK	3/94:1	Belt buckle contact, passenger seat	BK-OG	
18	4/9A:62 Supplemental Restraint System module (SRS)	BN-YE	3/94:2	Belt buckle contact, passenger seat	VT	
19	63/171 Branching point	BK-GN	7/93:9	Occupant Weight Sensor (OWS)	BK	
20	4/56C:37 Central Electronic Module (CEM)	GN-BK	7/93:2	Occupant Weight Sensor (OWS)	RD-GN	

64/40

1-pin violet

No.	Dashboard harness			Floor harness		
1	16/60C:1 Phone Module (PHM)	BK	16/47:1	GSM/GPS/RDAR antenna	BK	

Connectors

64/41

64/41

26-pin black

No.	Driver's door harness			Floor harness		
1	3/126A:3	Driver Door Module (DDM)	GY-RD	63/220 63/232	Branching point, LHD Branching point, RHD	GY-RD
2	3/126A:12	Driver Door Module (DDM)	BU-RD	63/221 63/233	Branching point, LHD Branching point, RHD	BU-RD
3	3/74A:4	Lock unit, driver's door	BK	4/56F:18 4/56F:19	Central Electronic Module, RHD Central Electronic Module, LHD	BK
4	3/126A:13 63/26	Driver Door Module (DDM) C70 Branching point S40/V50	BK	3/128:6 64/45:1	Rear Left Door Module (LDM) C70 Connector	BK
5	16/128:5	Antenna, front left door lock	WH	4/93D:20	Keyless Vehicle Module (KVM)	WH
6	16/128:4	Antenna, front left door lock	BK	4/93D:2	Keyless Vehicle Module (KVM)	BK
7	64/660:10	Connector C70	BK	63/504	Branching point C70	BK
8	64/661:1	Connector C70	OG	4/9A:37	Supplemental Restraint System Module (SRS) C70	OG
9	64/661:2	Connector C70	BK-RD	4/9A:38	Supplemental Restraint System Module (SRS) C70	BK-RD
10	64/660:11	Connector C70	BK	64/10B	Connector C70	BK
11	3/258:1	Contact, locking front left	BK	4/93A:15	Keyless Vehicle Module (KVM)	BK
12	3/262:3	Contact, unlocking, front left	BK	4/93A:14	Keyless Vehicle Module (KVM)	BK
13	3/74:2 3/74:3	Lock unit, driver's door, RHD Lock unit, driver's door, LHD	BK	4/93D:11	Keyless Vehicle Module (KVM)	BK
14	3/74:1 3/74:4	Lock unit, driver's door, LHD Lock unit, driver's door, RHD	BK	4/93A:2	Keyless Vehicle Module (KVM)	BK
15	3/74:2 3/74:3	Lock unit, driver's door, LHD Lock unit, driver's door, RHD	BK	4/93A:3	Keyless Vehicle Module (KVM)	BK
16	-	-	-	-	-	-
17	3/126A:8 3/127A:8	Driver Door Module (DDM) Passenger Door Module (PDM), RHD	BK	4/56F:31	Central Electronic Module (CEM)	BK
18	3/126A:17 3/127A:17	Driver Door Module (DDM) Passenger Door Module (PDM), RHD	BK	4/56F:28	Central Electronic Module (CEM)	BK
19	64/660:4	Connector C70	BK	63/58	Branching point C70	BK
20	3/126A:9	Driver Door Module (DDM)	BK	31/115	Ground connection	BK
21	3/126A:18	Driver Door Module (DDM)	BK	4/56C:31	Central Electronic Module (CEM)	BK
22	16/4:2 63/42	Front door speaker, S40/V50 Branching point C70	BK	16/105 B:1 64/112:10	Audio module (AUD) C70 Connector	BK
23	16/4:1 63/43	Front door speaker, S40/V50 Branching point C70	WH	16/105 B:9 64/112:9	Audio module (AUD) C70 Connector	WH
24	64/660:3	Connector C70	BK	63/59	Branching point C70	BK
25	7/208:1	Side impact sensor, left door C70	BK	4/9A:69	Supplemental Restraint System Module (SRS) C70	BK
26	7/208:2	Side impact sensor, left door C70	WH	4/9A:68	Supplemental Restraint System Module (SRS) C70	WH

Connectors

64/43:1-20

64/43

26-pin black

No.	Passenger door harness			Floor harness		
1	3/127A:3	Passenger Door Module (PDM)	GY-RD	63/220 63/232	Branching point, RHD Branching point, LHD	GY-RD
2	3/127A:12	Passenger Door Module (PDM)	BU-RD	63/221 63/233	Branching point, RHD Branching point, LHD	BU-RD
3	3/75:4	Lock unit, passenger door	BK	4/56F:18 4/56F:19	Central Electronic Module (CEM), LHD Central Electronic Module (CEM), RHD	BK
4	3/127A:13	Passenger Door Module (PDM)	BK	3/129:6 64/47:1	Rear Right Door Module (RDM), C70 Connector	BK
5	16/129:5	Antenna, door lock, front right	WH	4/93D:22	Keyless Vehicle Module (KVM)	WH
6	16/129:4	Antenna, door lock, front right	BK	4/93D:4	Keyless Vehicle Module (KVM)	BK
7	64/662:10	Connector C70	BK	63/504	Branching point C70	BK
8	64/663:1	Connector C70	OG	4/9A:40	Supplemental Restraint System Module (SRS), C70	OG
9	64/633:2	Connector C70	BK-BU	4/9A:39	Supplemental Restraint System Module (SRS), C70	BK-BU
10	64/662:11	Connector	BK	64/10B:4	Connector C70	BK
11	3/259:1	Contact, locking, front right	BK	4/93D:9	Keyless Vehicle Module (KVM)	BK
12	3/263:3	Contact, unlocking, front right	BK	4/93D:8	Keyless Vehicle Module (KVM)	BK
13	3/75:2 3/75:3	Lock unit, passenger door, LHD Lock unit, passenger door, RHD	BK	4/93D:10	Keyless Vehicle Module (KVM)	BK
14	3/75:1 3/75:4	Lock unit, passenger door, RHD Lock unit, passenger door, LHD	BK	4/93A:5	Keyless Vehicle Module (KVM)	BK
15	3/75:2 3/75:3	Lock unit, passenger door, RHD Lock unit, passenger door, LHD	BK	4/93A:4	Keyless Vehicle Module (KVM)	BK
16	-	-	-	-	-	-
17	3/127A:8	Passenger Door Module (PDM), RHD	BK	4/56F:31	Central Electronic Module (CEM)	BK
18	3/127A:17	Passenger Door Module (PDM), RHD	BK	4/56F:28	Central Electronic Module (CEM)	BK
19	64/662:4	Connector C70	BK	63/58	Branching point C70	BK
20	3/127A:9	Passenger Door Module (PDM)	BK	31/116	Ground connection	BK

continues

Connectors

64/43:21-26 - 64/45 S40/V50

64/43

26-pin black

No.	Passenger door harness			Floor harness		
21	3/127A:18	Passenger Door Module (PDM)	BK	4/56C:24	Central Electronic Module (CEM)	BK
22	16/3:2 63/40	Speaker, passenger door Branching point C70	BK	16/105B:3 64/112:12	Audio Module (AUD) Connector	BK
23	16/3:1 63/41	Speaker, passenger door Branching point C70	BK WH	16/105B:11 64/112:11	Audio Module (AUD) Connector	WH
24	64/662:3	Connector C70	BK	63/59	Branching point C70	BK
25	7/209:1	Side impact sensor, right door C70	BK	4/9A:66	Supplemental Restraint System Module (SRS) C70	BK
26	7/209:2	Side impact sensor, right door C70	WH	4/9A:67	Supplemental Restraint System Module (SRS) C70	WH

64/45 S40/V50

19-pin black

No.	Rear left door harness			Floor harness		
1	3/128:6	Rear Left Door Module (LDM)	BK	64/41:4	Connector	BK
2	3/76:4 6/117:4	Lock unit, rear left door Interior temperature sensor	BK	4/56F:21	Central Electronic Module (CEM)	BK-OG
3-8	-	-	-	-	-	-
9	3/128:18	Rear Left Door Module (LDM)	BK	4/56C:21	Central Electronic Module (CEM)	OG-BU
10	63/193	Branching point	BK	63/172	Branching point	BK
11	3/260:1	Contact, locking, rear left	BK	4/93A:21	Keyless Vehicle Module (KVM)	BN-GN
12	3/264:3	Contact, unlocking, rear left	BK	4/93A:16	Keyless Vehicle Module (KVM)	BN-YE
13	3/76:3	Lock unit, rear left door	BK	4/93D:13	Keyless Vehicle Module (KVM)	BN-WH
14	3/76:1	Lock unit, rear left door	BK	4/93B:2	Keyless Vehicle Module (KVM)	BN-BU
15	3/76:2	Lock unit, rear left door	BK	4/93B:1	Keyless Vehicle Module (KVM)	YE-BU
16	16/130:4	Antenna, rear left door lock	WH	4/93D:21	Keyless Vehicle Module (KVM)	WH-GN
17	16/130:5	Antenna, rear left door lock	BK	4/93D:3	Keyless Vehicle Module (KVM)	GY-OG
18	16/6:2	Speaker, rear left door	BK	16/105B:4 64/112:14	Audio Module (AUD) Connector	GY-WH
19	16/6:1	Speaker, rear left door	WH	16/105B:12 64/112:13	Audio Module (AUD) Connector	WH-VT

Connectors

64/47 - 64/48 S40

64/47 19-pin black

No.	Rear right door harness			Floor harness		
1	3/129:6	Rear Right Door Module (RDM)	BK	64/43:4	Connector	BK
2	3/77:4	Lock unit, rear right door	BK	4/56F:20	Central Electronic Module (CEM)	BK-BU
3-8	-	-	-	-	-	-
9	3/129:18	Rear Right Door Module (RDM)	BK	4/56C:27	Central Electronic Module (CEM)	OG-WH
10	63/192	Branching point	BK	63/171	Branching point	BK
11	3/261:1	Contact, locking, rear right	BK	4/93D:17	Keyless Vehicle Module (KVM)	BN-RD
12	3/265:3	Contact, unlocking, rear right	BK	4/93D:16	Keyless Vehicle Module (KVM)	BN-BU
13	3/77:2	Lock unit, rear right door	BK	4/93D:15	Keyless Vehicle Module (KVM)	BN-GN
14	3/77:4	Lock unit, rear right door	BK	4/93C:2	Keyless Vehicle Module (KVM)	BN
15	3/77:3	Lock unit, rear right door	BK	4/93C:1	Keyless Vehicle Module (KVM)	YE
16	16/131:4	Antenna, rear right door lock	WH	4/93D:23	Keyless Vehicle Module (KVM)	WH-RD
17	16/131:5	Antenna, rear right door lock	BK	4/93D:5	Keyless Vehicle Module (KVM)	GY-RD
18	16/5:2	Speaker, rear right door	BK	16/105B:5 64/112:16	Audio Module (AUD) Connector	GY
19	16/5:1	Speaker, rear right door	WH	16/105B:13 64/112:15	Audio Module (AUD) Connector	WH

64/48 S40 8-pin gray

No.	Trunk lid/tailgate harness			Floor harness		
1	63/196	Branching point	BK	63/172	Branching point	BK
2	-	-	-	-	-	-
3	-	-	-	-	-	-
4	3/78:1	Lock unit, trunk lid/tailgate	BK	4/56C:8	Central Electronic Module (CEM)	WH-GN
5	10/3:2	License plate lighting	OG-BK	4/56C:13	Central Electronic Module (CEM)	OG-BK
6	3/78:4	Lock unit, trunk lid/tailgate	BK-BU	10/24:4	Cargo compartment lighting	BK-BU
7	3/35:1 10/3:1	Switch, handle, tailgate S40 License plate lighting S40	BK	4/56F:22 4/93D:14	Central Electronic Module (CEM) Keyless Vehicle Module (KVM)	BK-YE
8	3/78:3	Lock unit, trunk lid/tailgate	BK-RD	4/56F:24	Central Electronic Module (CEM)	BK-RD

Connectors

64/48 V50 - 64/49

64/48 V50 14-pin gray

No.	Trunk lid/tailgate harness		Floor harness		
1	63/196	Branching point	BK	63/172	Branching point
2	10/19:1	Brake light extra	OG-YE	4/56C:7	Central Electronic Module (CEM)
3	6/32:1	Rear window wiper motor	BK	4/56C:33	Central Electronic Module (CEM)
4	3/78:1	Lock unit, trunk lid/tailgate	BK	4/56C:8	Central Electronic Module (CEM)
5	10/3:2	License plate lighting	OG-BK	4/56C:13	Central Electronic Module (CEM)
6	6/32:2	Rear window wiper motor	BK	4/56C:34	Central Electronic Module (CEM)
7	16/141	Interference filter, rear window, left	BK	64/113:6	Connector
8	3/78:3	Lock unit, trunk lid/tailgate	BK	4/56F:24	Central Electronic Module (CEM)
9	-		-	-	-
10	3/35:1 10/3:1	Switch, handle, trunk lid/ tailgate License plate lighting	BK	4/56F:22 4/93D:14	Central Electronic Module (CEM) Keyless Vehicle Module (KVM)
11	-		-	-	-
12	-		-	-	-
13	10/25:2	Ceiling light, cargo compartment	OG-BU	63/173	Branching point
14	-		-	-	-

64/49 2-pin gray

No.	Floor harness		Rear bumper harness		
1	4/93E:14	Keyless Vehicle Module (KVM)	WH-BK	16/132:1	Antenna, door lock, bumper
2	4/93E:15	Keyless Vehicle Module (KVM)	GY-BK	16/132:2	Antenna, door lock, bumper

Connectors

64/50 - 64/51:1-7

64/50 12-pin black

No.	Rear axle harness			Floor harness		
1	4/82:1	Differential Electronic Module (DEM)	GN-RD	4/56C:38	Central Electronic Module (CEM)	GN-RD
2	4/82:2	Differential Electronic Module (DEM)	BK-OG	63/171	Branching point	BK-OG
3	63/225 64/50:6	Branching point Connector	BU-RD	4/56F:14	Central Electronic Module (CEM)	BU-RD
4	63/224 64/50:5	Branching point Connector	GY-RD	4/56F:16	Central Electronic Module (CEM)	GY-RD
5	63/224 64/50:4	Branching point Connector	GY-RD	64/51:2	Connector	GY-RD
6	63/225 64/50:3	Branching point Connector	BU-RD	64/51:6	Connector	BU-RD
7	7/120:1	Angle sensor, Bi-Xenon rear	BN	64/113:27	Connector	BN
8	7/120:4	Angle sensor, Bi-Xenon rear	WH	64/113:19	Connector	WH
9	7/120:5	Angle sensor, Bi-Xenon rear	YE	64/113:20	Connector	YE
10	-	-	-	-	-	-
11	-	-	-	-	-	-
12	-	-	-	-	-	-

64/51 14-pin gray

No.	Fuel tank harness			Floor harness		
1	6/35B:1	Fuel pump, auxiliary heater	RD-OG	64/113:15	Connector	RD-OG
2	4/111:7	Additive Dosing Module (ADM)	GY-RD	4/56F:16 64/50:5 64/112:5	Central Electronic Module (CEM) Connector Connector	GY-RD
3	6/33:2 26/5	Fuel pump DC/AC converter, fuel tank FlexiFuel	WH-RD BK-OG	4/56F:5	Central Electronic Module (CEM)	WH-RD
4	6/33:3	Fuel pump, AWD	WH-GN	4/56F:25	Central Electronic Module (CEM)	WH-GN
5	6/33:4 26/5	Fuel pump DC/AC converter, fuel tank FlexiFuel	WH-BU RD	4/56F:7	Central Electronic Module (CEM)	WH-BU
6	4/111:6	Additive Dosing Module (ADM)	BU-RD	4/56F:14 64/50:6 64/112:4	Central Electronic Module (CEM), S40/V50 Connector, AWD S40/V50 Connector, S40/V50	BU-RD
7	4/83:2 4/111:1 6/33:1 26/5	Control module fuel pump Additive Dosing Module (ADM), S40/V50 Fuel pump DC/AC converter, fuel tank FlexiFuel	GN-WH RD	4/56C:16	Central Electronic Module (CEM)	GN-WH

continues

Connectors

64/51:8-14 - 64/53

64/51

14-pin gray

No.	Fuel tank harness			Floor harness		
8	4/83:3 4/111:8 6/33:5 63/33 26/5	Fuel pump control module, PZEV Additive Dosing Module (ADM) Fuel pump, S40/V50 Branching point DC/AC converter, fuel tank FlexiFuel	BK-OG BK	31/115 31/116	Ground connection, RHD Ground connection, LHD	BK-OG
9	6/67:3 26/5	Pump, fuel leakage control DC/AC converter, fuel tank FlexiFuel	YE-VT	64/113:10 63/173	Connector Branching point	YE-Vt GN-WH
10	6/67:2	Pump, fuel leakage control	WH-VT	64/113:11	Connector	WH-VT
11	6/67:1	Pump, fuel leakage control	BK-WH	64/113:12	Connector	BK-WH
12	6/67:4	Pump, fuel leakage control	GN-BU	64/113:13	Connector	GN-BU
13	6/35B:2	Fuel pump, auxiliary heater	BK-OG	63/172	Branching point	BK-OG
14	4/83:1 9/38:1	Control module fuel pump Heated fuel filter, 5-cyl. Diesel	WH-BK GN-RD	64/113:7	Connector	WH-BK

64/53

6-pin gray

No.	Rear bumper harness			Parking assistance harness		
1	4/86C:11	Parking Assistance Module (PAM)	YE-RD	63/415	Branching point	YE-RD
2	4/86C:4	Parking Assistance Module (PAM)	WH	7/134:2	Rear parking assistance sensor	WH
3	4/86C:2	Parking Assistance Module (PAM)	WH-RD	7/133:2	Rear parking assistance sensor	WH-RD
4	4/86C:3	Parking Assistance Module (PAM)	WH-BU	7/132:2	Rear parking assistance sensor	WH-BU
5	4/86C:5	Parking Assistance Module (PAM)	WH-GN	7/131:2	Rear parking assistance sensor	WH-GN
6	4/86C:8	Parking Assistance Module (PAM)	BN-RD	63/416	Connector	BN-RD

Connectors

64/60 - 64/70 C70

64/60 16-pin gray

No.	Engine compartment harness		Engine compartment harness	
1	6/120:5	Engine throttle body	YE	4/46.4-7A:22 Engine Control Module (ECM), 4-cyl.
2	6/120:3	Engine throttle body	WH-BU	4/46.4-7A:21 Engine Control Module (ECM), 4-cyl.
3	6/120:4	Engine throttle body	BN	4/46.4-7A:6 Engine Control Module (ECM), 4-cyl.
4	6/120:6	Engine throttle body	WH-RD	4/46.4-7A:48 Engine Control Module (ECM), 4-cyl.
5	63/52	Branching point	GN-WH	63/99 Branching point
6	-		-	-
7	6/120:2	Engine throttle body	YE-BU	4/46.4-7B:42 Engine Control Module (ECM), 4-cyl.
8	6/120:1	Engine throttle body	WH-BU	4/46.4-7B:41 Engine Control Module (ECM), 4-cyl.
9	7/16:1	Coolant temperature sensor	BN	4/46.7B:36 Engine Control Module (ECM), 4-cyl. 1.6l
10	7/16:2	Coolant temperature sensor	BN	4/46.7B:13 Engine Control Module (ECM), 4-cyl. 1.6l
11	7/163:1	Camshaft position sensor 2, 4-cyl. 1.6l	WH-VT	4/46.7B:38 Engine Control Module (ECM), 4-cyl. 1.6l
12	7/163:2	Camshaft position sensor 2, 4-cyl. 1.6l	BN-WH	4/46.7B:27 Engine Control Module (ECM), 4-cyl. 1.6l
13	8/6:2	Injection valves	BK-WH	4/46.7A:27 Engine Control Module (ECM), 4-cyl. 1.6l
14	8/7:2	Injection valves	BK-YE	4/46.7A:13 Engine Control Module (ECM), 4-cyl. 1.6l
15	8/8:2	Injection valves	BK-BU	4/46.7A:28 Engine Control Module (ECM), 4-cyl. 1.6l
16	8/9:2	Injection valves	BK-OG	4/46.7A:12 Engine Control Module (ECM), 4-cyl. 1.6l

64/70 C70 8-pin gray

No.	Tunnel harness		Floor harness	
1	16/134:2	Antenna door lock cabin 2	WH-VT	4/93E:20 Keyless Vehicle Module (KVM)
2	16/134:1	Antenna door lock cabin 2	GY-WH	4/93E:2 Keyless Vehicle Module (KVM)
3	-		-	-
4	3/25:5	Switch, power roof	BU-YE	4/59F:11 Convertible Roof Module (CRM)
5	3/25:2	Switch, power roof	GN-YE	4/59F:3 Convertible Roof Module (CRM)
6	7/122:1	Mass Movement Sensor Module (MMS), front	OG-YE	63/218 Branching point
7	7/122:3	Mass Movement Sensor Module (MMS), front	WH-RD	63/217 Branching point
8	-		-	-

Connectors

64/79V - 64/80A C70

64/79V

6-pin gray

No.	Engine compartment harness			Washer system harness		
1	4/56E:8	Central Electronic Module (CEM)	WH-BK	6/2:1	Washer pump	WH-BK
2	2/182:5	Relay, headlight washer motor	GN-YE	6/104:1	Pump, high pressure headlight washer	GN-YE
3	63/109	Branching point	BK-BU	7/5:1	Washer fluid level sensor	BK-BU
4	4/56E:12	Central Electronic Module (CEM)	YE-BK	6/2:2	Washer pump	YE-BK
5	63/108	Branching point	BK	6/104:2	Pump, high pressure headlight washer	BK
6	4/56G:28	Central Electronic Module (CEM)	BK-OG	7/5:2	Washer fluid level sensor	BK-OG

64/80 C70

8-pin gray

No.	Harness, rear side panel, left			Floor harness		
1	8/140:2	Lock motor, rear left seat compartment	WH-BK	63/59	Branching point	WH-BK
2	8/140:1	Lock motor, rear left seat compartment	YE-BK	63/58	Branching point	YE-BK
3	10/26:3	Reading light, rear left	BK-OG	63/173	Branching point	OG-YE
4	10/26:2	Reading light, rear left	RD-OG	63/212	Branching point	BK-YE
5	10/26:1	Reading light, rear left	BK-OG	63/172	Branching point	BK
6	-	-	-	-	-	-
7	-	-	-	-	-	-
8	-	-	-	-	-	-

64/80A C70

8-pin gray

No.	Harness, rear side panel, right			Floor harness		
1	8/141:2	Lock motor, rear right seat compartment	WH-BK	63/59	Branching point	WH-BK
2	8/141:1	Lock motor, rear right seat compartment	YE-BK	63/58	Branching point	YE-BK
3	10/27:3	Reading light, rear right	RD-BK	63/212	Branching point	BK-YE
4	10/27:2	Reading light, rear right	RD-OG	63/171	Branching point	BK
5	10/27:1	Reading light, rear right	BK-OG	63/173	Branching point	OG-YE
6	-	-	-	-	-	-
7	-	-	-	-	-	-
8	-	-	-	-	-	-

Connectors

64/90:1-5

64/90

41-pin black

No.	Engine harness		Engine compartment harness		
1	4/46.1B:45 4/46.2B:41 4/46.3B:23 4/46.4A:3A 4/46.5A:3A 4/46.6A:30 4/46.7B:19	Engine Control Module (ECM), 5-cyl. 2.4l Engine Control Module (ECM), 5-cyl. 2.5l T Engine control module (ECM), 5-cyl. 2.4l Diesel Engine control module (ECM), 4-cyl. 2.0l Diesel Engine control module (ECM), 4-cyl. 1.6l Diesel Engine Control Module (ECM), 4-cyl. 1.8l Engine Control Module (ECM), 4-cyl. 1.6l	BU-RD	63/223 Branching point	BU-RD
2	4/46.3A:37 4/46.4B:E1 4/46.5C:F2	Engine control module (ECM), 5-cyl. 2.4l Diesel Engine control module (ECM), 4-cyl. 2.0l Diesel Engine control module (ECM), 4-cyl. 1.6l Diesel	BK-YE	4/109:7 Glow plug control module, 5-cyl. Diesel 4/109:8 Glow plug control module, 4-cyl. Diesel	BK-YE
3	4/28A:11	Transmission Control Module (TCM), 5-cyl.	GN-YE	4/56E:3 Central Electronic Module (CEM)	GN-YE
4	4/46.1B:8 4/46.2B:9 4/46.3B:44 4/46.4A:1D 4/46.5C:1A 4/46.6A:4 4/46.7B:30	Engine Control Module (ECM), 5-cyl. 2.4l Engine Control Module (ECM), 5-cyl. 2.5l T Engine control module (ECM), 5-cyl. 2.4l Diesel Engine control module (ECM), 4-cyl. 2.0l Diesel Engine control module (ECM), 4-cyl. 1.6l Diesel Engine Control Module (ECM), 4-cyl. 1.8l Engine Control Module (ECM), 4-cyl. 1.6l	BK-RD	2/35:2 Relay, starter motor	BK-RD
5	4/46.1B:28 4/46.2B:25 4/56.3B:36 4/46.4A:H2 4/46.5A:C4 4/46.6A:14 4/46.7B:22	Engine Control Module (ECM), 5-cyl. Engine Control Module (ECM), 5-cyl. 2.5l T Engine control module (ECM), 5-cyl. 2.4l Diesel Engine control module (ECM), 4-cyl. 2.0l Diesel Engine control module (ECM), 4-cyl. 1.6l Diesel Engine Control Module (ECM), 4-cyl. 1.8l Engine Control Module (ECM), 4-cyl. 1.6l	BU BK-YE BK-OG	8/119:2 Pressure monitor, climate control system, 5-cyl. 8/119:2 Pressure monitor, climate control system , 4-cyl. Diesel 8/119:2 Pressure monitor, climate control system, 4-cyl.	BU BK-YE BK-OG

continues

Connectors

64/90:6-12

64/90

41-pin black

No.	Engine harness			Engine compartment harness		
6	9/38:1 63/86 4/46.1B:15 4/46.2B:13	Heated fuel filter, 4-cyl. Diesel Branching point Engine Control Module (ECM), 5-cyl. 2.4l Engine Control Module (ECM), 5-cyl. 2.5l T	GN-RD RD BN	F33:2 64/113:14	Fuse Connector	GN-RD BN
7	4/46.4A:E2 4/46.5C:B3	Engine control module (ECM), 4-cyl. 2.0l Diesel Engine control module (ECM), 4-cyl. 1.6l Diesel	WH-GN	4/56G:30	Central Electronic Module (CEM), Diesel	WH-GN
8	4/46.1B:41 4/46.2B:30 4/46.4A:E4 4/46.5A:A2 4/46.6A:39 4/46/7A:40 4/46.3B:48	Engine Control Module (ECM), 5-cyl. 2.4l Engine Control Module (ECM), 5-cyl. 2.5l T Engine control module (ECM), 4-cyl. 2.0l Diesel Engine control module (ECM), 4-cyl. 1.6l Diesel Engine Control Module (ECM), 4-cyl. 1.8l Engine Control Module (ECM), 4-cyl. 1.6l Engine control module (ECM), 5-cyl. 2.4l Diesel	GN-WH	4/56E:40 4/46E:10	Central Electronic Module (CEM)	GN-WH GN-BU
9	4/46.2B:17 4/46.3B:33	Engine Control Module (ECM), 5-cyl. Engine control module (ECM), 5-cyl. 2.4l Diesel	GN-BU	4/56 E:9	Central Electronic Module (CEM), 5-cyl	GN-BU
10	3/10:2 3/10:3	Reversing light contact Reversing light contact	GN-YE GN-WH	4/56E:14	Central Electronic Module (CEM)	GN-BU
11	64/120:1	Connector	GY	2/35:5	Relay, starter motor	GY
12	8/77:1 8/120:3 8/133:1 63/103 63/52 63/95 8/111:2 8/113:1	Control valve, fuel volume EGR valve, 5-cyl. Diesel Fuel pressure control valve, 4-cyl. 2.0l Diesel Branching point Branching point, 4-cyl. 1.6l Branching point, 4-cyl. 1.8l High-pressure solenoid valve, Diesel 4-cyl. 1.6l Bypass valve, EGR cooling, 5-cyl. Diesel	GN-BU GN-RD GN-YE GN-BK	F34:2	Fuse	GN-BU

continues

Connectors

64/90:13-17

64/90

41-pin black

No.	Engine harness			Engine compartment harness		
13	4/46.1B:30 Engine Control Module (ECM), 5-cyl. 2.4l 4/46.2B:15 Engine Control Module (ECM), 5-cyl. 2.5l T 4/46.4B:G4 Engine control module (ECM), 4-cyl. 2.0l Diesel 4/46.7B:9 Engine Control Module (ECM), 4-cyl. 1.6l	GN-YE RD	F54:2 2/142:5 F30:2	Fuse Relay, 5-cyl. 2.4l Diesel Fuse	GN-YE RD	
14	63/54 Branching point 63/65 Branching point, 5-cyl. Diesel 8/18:1 EVAP valve 8/65:2 Power steering pressure monitor	GN-BU GN-RD GN-WH	F35:2	Fuse	GN-BU	
15	4/46.1B:58 Engine Control Module (ECM), 5-cyl. 2.4l 4/46.2B:54 Engine Control Module (ECM), 5-cyl. 2.5l T 4/46.3B:22 Engine control module (ECM), 5-cyl. 2.4l Diesel 4/46.4A:4A Engine control module (ECM), 4-cyl. 2.0l Diesel 4/46.5A:4A Engine control module (ECM), 4-cyl. 1.6l Diesel 4/46.6A:41 Engine Control Module (ECM), 4-cyl. 1.8l 4/46.7B:31 Engine Control Module (ECM), 4-cyl. 1.6l	GY-RD	63/222	Branching point	GY-RD	
16	4/46.3A:90 Engine control module (ECM), 5-cyl. 2.4l Diesel 4/46.4B:D4 Engine control module (ECM), 4-cyl. 2.0l Diesel 4/46.5C:A4 Engine control module (ECM), 4-cyl. 1.6l Diesel	WH-BU	4/109:3 4/109:9	Glow plug control module, 4-cyl. Diesel Glow plug control module, 5-cyl. Diesel	WH-BU	
17	4/46.1B:10 Engine Control Module (ECM), 5-cyl. 2.4l 4/46.2B:10 Engine Control Module (ECM), 5-cyl. 2.5l T 4/46.3B:32 Engine control module (ECM), 5-cyl. 2.4l Diesel 4/46.4A:D4 Engine control module (ECM), 4-cyl. 2.0l Diesel 4/46.5C:E2 Engine control module (ECM), 4-cyl. 1.6l Diesel 4/46.6A:1 Engine Control Module (ECM), 4-cyl. 1.8l 4/46.7A:9 Engine Control Module (ECM), 4-cyl. 1.6l	BK-YE	2/22:2	Relay, climate control system	BK-YE	

continues

Connectors
64/90:18-24

64/90
41-pin black

No.	Engine harness			Engine compartment harness		
18	8/3:1 Electromagnetic clutch, climate control system, 4-cyl 8/3:2 Electromagnetic clutch, climate control system, 4-cyl. Diesel	GN-YE	2/22:5	Relay, climate control system	GN-YE	
19	4/46.1B:51 Engine Control Module (ECM), 5-cyl. 2.4l 4/46.3B:26 Engine control module (ECM), 5-cyl. 2.4l Diesel 4/46.4A:D2 Engine control module (ECM), 4-cyl. 2.0l Diesel 4/46.5A:G3 Engine control module (ECM), 4-cyl. 2.0l Diesel 4/46.6A:13 Engine Control Module (ECM), 4-cyl. 1.8l 4/46.7B:34 Engine Control Module (ECM), 4-cyl. 1.6l	WH-VT BK-BU WH-VT	7/8:2 8/127:2	Pressure sensor, climate control system Pressure switch, climate control system, Diesel	WH-VT BK-BU	
20	6/26A:3 Alternator, 4-cyl.	RD	F31:2 4/56E:1	Fuse, 4-cyl. Central Electronic Module (CEM)	GN-YE RD	
21	4/46.1B:16 Engine Control Module (ECM), 5-cyl. 2.4l 4/46.2B:27 Engine Control Module (ECM), 5-cyl. 2.5l T 4/46.3B:42 Engine control module (ECM), 5-cyl. 2.4l Diesel 4/46.4B:H3 Engine control module (ECM), 4-cyl. 2.0l Diesel 4/46.5B:E1 Engine control module (ECM), 4-cyl. 1.6l Diesel 4/46.6A:35 Engine Control Module (ECM), 4-cyl. 1.8l 4/46.7A:8 Engine Control Module (ECM), 4-cyl. 1.6l	BK-BU	2/32:2	Main relay, engine management system	BK-BU	
22	4/28A:16 Transmission Control Module (TCM)	RD-YE	64/111:3	Connector	RD-YE	
23	63/56 Branching point 4/46.1B:54 Engine Control Module (ECM), 5-cyl. 2.4l 4/46.2B:16 Engine Control Module (ECM), 5-cyl. 2.5l T	RD	F23:2	Fuse	RD	
24	4/46.1B:20 Engine Control Module (ECM), 5-cyl. 4/46.2B:21 Engine Control Module (ECM), 5-cyl. 2.5l T 64/600:1 Connector, 4-cyl. Diesel 20/26:1 Glow plug	WH-BK WH-RD GN-OG	64/113:7 4/109:1	Connector Glow plug control module, Diesel	WH-BK GN-OG	

continues

Connectors
64/90:25-29

64/90
41-pin black

No.	Engine harness			Engine compartment harness		
25	4/46.1B:33	Engine Control Module (ECM), 5-cyl. 2.4l	BN-WH GN-OG WH-RD	64/113:12	Connector	BK-WH
	4/46.2B:23	Engine Control Module (ECM), 5-cyl. 2.5l T				
	64/600:2	Connector, 4-cyl. Diesel		4/109:2	Glow plug control module, 4-cyl. Diesel	GN-OG
	20/25:1	Glow plug, 5-cyl. Diesel		4/109:2	Glow plug control module, 5-cyl. Diesel	GN-WH
26	4/46.1B:23	Engine Control Module (ECM), 5-cyl. 2.4l	WH-VT WH-RD GN-OG	64/113:11	Connector	WH-VT
	4/46.2B:45	Engine Control Module (ECM), 5-cyl. 2.5l T				
	20/24:1	Glow plug, 5-cyl.		4/109:3	Glow plug control module, 5-cyl. Diesel	GN-BU
	64/600:3	Connector, Diesel		4/109:6	Glow plug control module, 4-cyl. Diesel	GN-OG
27	4/46.1B:46	Engine Control Module (ECM), 5-cyl. 2.4l	YE-VT GN-OG	64/113:10	Connector	YE-VT
	4/46.2B:46	Engine Control Module (ECM), 5-cyl. 2.5l T				
	64/600:4	Connector, Diesel		4/109:7	Glow plug control module, 4-cyl. Diesel	GN-OG
				4/109:4	Glow plug control module, 5-cyl. Diesel	GN-RD
28	4/46.1B:26	Engine Control Module (ECM), 5-cyl. 2.4l	GY	7/51:5	Accelerator pedal sensor	GY
	4/46.2B:26	Engine Control Module (ECM), 5-cyl. 2.5l T				
	4/46.3B:47	Engine control module (ECM), 5-cyl. 2.4l Diesel				
	4/46.4A:F3	Engine control module (ECM), 4-cyl. 2.0l Diesel				
	4/46.5A:B3	Engine control module (ECM), 4-cyl. 1.6l Diesel				
	4/46.6A:32	Engine Control Module (ECM), 4-cyl. 1.8l				
	4/46.7A:47	Engine Control Module (ECM), 4-cyl. 1.6l				
29	4/46.1B:31	Engine Control Module (ECM), 5-cyl. 2.4l	YE-RD	7/8:3	Pressure sensor, climate control system	YE-RD
	4/46.2B:31	Engine Control Module (ECM), 5-cyl. 2.5l T				
	4/46.3B:16	Engine control module (ECM), 5-cyl. 2.4l Diesel				
	4/46.6A:28	Engine Control Module (ECM), 4-cyl. 1.8l				
	4/46.7A:17	Engine Control Module (ECM), 4-cyl. 1.6l				

continues

Connectors

64/90:30-36

64/90 41-pin black

No.	Engine harness			Engine compartment harness		
30	4/28A:13 Transmission Control Module (TCM), 5-cyl.	GY-OG	64/111:1 Connector		GY-OG	
31	4/46.1B:11 Engine Control Module (ECM), 5-cyl. 2.4l 4/46.2B:11 Engine Control Module (ECM), 5-cyl. 2.5l T Auto 4/46.3B:29 Engine control module (ECM), 5-cyl. 2.4l Diesel	GN-BU	2/35:1 Relay, starter motor		GN-BU	
32	4/46.1B:47 Engine Control Module (ECM), 5-cyl. 2.4l 4/46.2B:53 Engine Control Module (ECM), 5-cyl. 2.5l T 4/46.3B:27 Engine control module (ECM), 5-cyl. 2.4l Diesel 4/46.7A:39 Engine Control Module (ECM), 4-cyl. 1.6l 63/63 Branching point, 4-cyl. 1.8l	BN-RD	7/8:1 Pressure sensor, climate control system		BN-RD	
33	4/28A:7 Transmission Control Module (TCM), 5-cyl.	RD	64/111:2 Connector		RD	
34	4/46.1B:7 Engine Control Module (ECM), 5-cyl. 2.4l 4/46.2B:8 Engine Control Module (ECM), 5-cyl. 2.5l T 4/46.3A:58 Engine control module (ECM), 5-cyl. 2.4l Diesel 4/46.4A:B2 Engine control module (ECM), 4-cyl. 2.0l Diesel 4/46.5A:B2 Engine control module (ECM), 4-cyl. 1.6l Diesel 4/46.6A:12 Engine Control Module (ECM), 4-cyl. 1.8l 4/46.7A:10 Engine Control Module (ECM), 4-cyl. 1.6l	WH-RD	4/71:4 Cooling fan control module		WH	
35	4/46.3A:32 Engine control module (ECM), 5-cyl. 2.4l Diesel 7/82:1 Rear heated oxygen sensor, Turbo	GN-BU GN-YE	4/109:10 Glow plug control module, Diesel 63/13 Branching point, Turbo		YE-GN GN-YE	
36	-	-	-		-	
continues						

Connectors
64/90:37-41

64/90
41-pin black

No.	Engine harness			Engine compartment harness		
37	4/46.1B:14	Engine Control Module (ECM), 5-cyl. 2.4l	GN-YE	4/56E:10	Central Electronic Module (CEM)	GN-GY
	4/46.2B:14	Engine Control Module (ECM), 5-cyl. 2.5l T		4/56E:40	Central Electronic Module (CEM)	GN-WH
	4/46.3B:38	Engine control module (ECM), 5-cyl. 2.4l Diesel		4/56E:10	Central Electronic Module (CEM)	GN-BU
	4/46.5A:C3	Engine control module (ECM), 4-cyl. 1.6l Diesel				
	4/46.6A:46	Engine Control Module (ECM), 4-cyl. 1.8l				
	4/46.4A:C3	Engine control module (ECM), 4-cyl. 2.0l Diesel				
	4/46.7B:21	Engine Control Module (ECM), 4-cyl. 1.6l				
38	4/109:5	Glow plug control module, Diesel	GN-YE	-		-
39	7/15:1	Front heated oxygen sensor, 1.8l	GN-RD	F32:2	Fuse	GN-YE
	7/15:2	Front heated oxygen sensor, 1.6l				
	8/121:1	Coolant valve, Diesel				
	8/122:4	Bypass valve, intercooler				
	7/82:1	Rear heated oxygen sensor, 1.8l				
	7/82:2	Rear heated oxygen sensor, 1.6l				
	63/54	Branching point, 5-cyl. 2.4l Diesel				
	63/98	Branching point				
40	7/15:3	Front heated oxygen sensor, Turbo	GN-YE	F33:2	Fuse	GN-RD
	63/61	Branching point				
	4/46.3B:5	Engine control module (ECM), 5-cyl. 2.4l Diesel		63/13	Branching point, 5-cyl.	GN-YE
41	4/46.5A:G1	Engine control module (ECM), 4-cyl. 1.6l Diesel	GN-OG	F36:2	Fuse	GN-BU
	4/46.5B:M2	Engine control module (ECM), 4-cyl. 1.6l Diesel				
	4/46.6A:34	Engine Control Module (ECM), 4-cyl. 1.8l				
	4/46.7B:8	Engine Control Module (ECM), 4-cyl. 1.6l				
	63/65	Branching point				
	7/15:4	Side impact sensor, front left				

Connectors

64/97 - 64/111

64/97

2-pin black

No.	Floor harness			Dashboard harness		
1	64/978:1 64/979:1	Connector Connector C70	OG	16/1.2B:2 16/108C:2	Infotainment Control Module (ICM) Multimedia Module (MMM)	OG
2	64/978:2 64/979:2	Connector Connector C70	OG	16/1B:1 16/60D:1	Integrated Audio Module (IAM) Phone Module (PHM)	OG

64/111

27-pin gray

No.	Engine compartment harness			Dashboard harness		
1	64/90:30	Connector	GY-OG	3/156:3	Gear Selector Module (GSM)	GY-OG
2	64/90:33	Connector	RD	3/156:2 8/134:2	Gear Selector Module (GSM) Reverse interlock solenoid, manual S40/V50	RD
3	64/90:22	Connector	RD-YE	3/156:1	Gear Selector Module (GSM)	RD-YE
4	-	-	-	-	-	-
5	F26:2	Fuse	RD	3/1B:7	Start Control Module (SCU)	RD
6	-	-	-	-	-	-
7	7/51:4	Accelerator pedal sensor	BK-YE	63/12	Branching point	BK-YE
8	10/1:6 10/2:6	Lamp housing, front left Lamp housing, front right	BU	3/111:10	Switch unit, lights	BU
9	63/124	Branching point	BK	63/6	Branching point	BK
10	-	-	-	-	-	-
11	7/179:1	Front impact sensor, left	WH-BK	4/9B:23	Supplemental Restraint System module (SRS)	WH-BK
12	7/179:2	Front left impact sensor C70	BN-YE	4/9B:24	Supplemental Restraint System module (SRS)	BN-YE
13	-	-	-	-	-	-
14	-	-	-	-	-	-
15	-	-	-	-	-	-
16	-	-	-	-	-	-
17	-	-	-	-	-	-
18	10/1:12 10/2:12 10/1:12 10/2:12	Lamp housing, front left Lamp housing, front right Lamp housing, front left, C70 Lamp housing, front right, C70	OG GN-YE	63/139	Branching point	OG
19	7/178:1	Front impact sensor, right	WH	4/9B:5	Supplemental Restraint System module (SRS)	WH
20	7/178:2	Front impact sensor, right	BN	4/9B:9	Supplemental Restraint System module (SRS)	BN
21	-	-	-	-	-	-
22	-	-	-	-	-	-
23	-	-	-	-	-	-
24	-	-	-	-	-	-
25	-	-	-	-	-	-
26	-	-	-	-	-	-
27	-	-	-	-	-	-

Connectors

64/112

64/112

16-pin gray

No.	Floor harness		Dashboard harness		
1	16/105B:10	Audio Module (AUD)	WH-RD	16/26:1	Center dashboard speaker
2	16/105B:2	Audio Module (AUD)	GY-RD	16/26:2	Center dashboard speaker
3	-		-	-	-
4	4/56F:14 64/51:6	Central Electronic Module (CEM) W/O AWD Connector	BU-RD	3/254C:8	Steering Wheel Module (SWM)
5	4/56F:16 64/51:2	Central Electronic Module (CEM) W/O AWD Connector	GY-RD	3/254C:9	Steering Wheel Module (SWM)
6	64/31:4 64/30:4	Connector Connector, RHD	WH-GN WH	64/545:6	Connector, HVAC
7	64/30:4 64/31:4	Connector Connector, RHD	WH WH-GN	64/545:3	Connector, HVAC
8	4/93B:17	Keyless Vehicle Module (KVM)	RD-GN	63/88	Branching point
9	16/1A:5	Integrated Audio Module (IAM)	WH-BK	64/41:23	Connector
10	16/1A:12	Integrated Audio Module (IAM)	GY-BK	64/41:22	Connector
11	16/1A:4	Integrated Audio Module (IAM)	WH-RD	64/43:23	Connector
12	16/1A:11	Integrated Audio Module (IAM)	GY-RD	64/43:22	Connector
13	16/1A:6	Integrated Audio Module (IAM)	WH-VT	16/6:1 64/45:19	Speaker, rear left C70 Connector
14	16/1A:13	Integrated Audio Module (IAM)	GY-WH	16/6:2 64/45:18	Speaker, rear left C70 Connector
15	16/1A:3	Audio module (AUD)	WH	64/47:19	Connector
16	16/1A:10	Integrated Audio Module (IAM)	GY	16/5:2 64/47:18	Speaker, rear right C70 Connector

Connectors

64/113:1-20

64/113 29-pin black

No.	Floor harness			Engine compartment harness		
1	64/816:1	Connector	WH	4/16:36	Brake Control Module (BCM)	WH
2	64/816:2	Connector	BN	4/16:37	Brake Control Module (BCM)	BN
3	64/817:1 64/817:1	Connector Connector C70	YE-GN WH	4/16:43	Brake Control Module (BCM)	YE-GN
4	64/817:2 64/817:2	Connector Connector C70	WH-GN BN	4/16:42	Brake Control Module (BCM)	WH-GN
5	-		-	-		-
6	9/2 16/141 64/48:7	Heated rear window C70 Interference filter, rear window, left S40 Connector V50	GN-BU	2/82:5	Relay, heated rear window	GN-BU
7	64/51:14	Connector	WH-BK	2/142:5 64/90:24	Fuel filter preheater relay, 5-cyl. Diesel Connector	WH-BK
8	7/164:5	Body Sensor Cluster Stability Sensor (BSC)	BN-RD	4/16:5	Brake Control Module (BCM)	BN-RD
9	7/164:3	Body Sensor Cluster Stability Sensor (BSC)	YE-RD	4/16:7	Brake Control Module (BCM)	YE-RD
10	64/51:9	Connector	YE-VT	64/90:27	Connector	YE-VT
11	64/51:10	Connector	WH-VT	64/90:26	Connector	WH-VT
12	64/51:11	Connector	BK-WH	64/90:25	Connector	BK-WH
13	64/51:12	Connector	GN-BU	2/22:1	Relay, climate control system	GN-BU
14	4/93B:20	Keyless Vehicle Module (KVM)	WH-RD	3/271:1 64/90:6	Contact, immobilizer, clutch pedal Connector	WH-RD BN
15	64/51:1	Connector	RD-OG	4/7A:6	Combustion Preheater Module (CPM)	RD-OG
16	-		-	-		-
17	7/164:2	Body Sensor Cluster Stability Sensor (BSC)	GY	4/16:29	Brake Control Module (BCM)	GY
18	7/164:1	Body Sensor Cluster Stability Sensor (BSC)	BU	4/16:25	Brake Control Module (BCM)	BU
19	64/50:8	Connector	WH	4/112A:2	Gas Discharge Lamp Module (GDL), master, left	WH
20	64/50:9	Connector	YE	4/112A:3 7/121:5	Gas Discharge Lamp Module (GDL), master, left Angle sensor, Bi-Xenon front	YE

continues

Connectors

64/113:21-29 - 64/179G

64/113

29-pin black

No.	Floor harness		Engine compartment harness		
21	-	-	-	-	-
22	-	-	-	-	-
23	-	-	-	-	-
24	4/110C:2 Trailer Module (TRM)	RD	F14:2 Fuse		RD
25	-	-	-	-	-
26	-	-	-	-	-
27	64/50:7 Connector	BN	4/112A:4 Gas Discharge Lamp Module (GDL), master, left 7/121:1 Angle sensor, Bi-Xenon front		BN
28	-	-	-	-	-
29	-	-	-	-	-

64/114

2-pin gray

No.	Floor harness		Engine compartment harness		
1	4/31:1 Fan control module	GN-OG	F10:2 Fuse		GN-OG
2	4/31:6 Fan control module	BK	63/108 Branching point		BK

64/120

1-pin black

No.	Engine harness		Starter motor harness		
1	64/90:11 Connector	GY	6/25:A1 Starter motor		GY

64/179G

1-pin gray

No.	Floor harness		Microphone harness		
1	16/105B:1 Audio module (AUD), C70 16/105B:16 Audio Module (AUD)	WH	16/98 Microphone, pigtail		-

Connectors

64/233 C70 - 64/246 C70

64/233 C70

16-pin green

No.	Floor harness			Trunk lid/tailgate harness	
1	-	-	-	-	-
2	-	-	-	-	-
3	4/56C:7	Central Electronic Module (CEM)	OG-YE	10/19:1	Brake light extra
4	-	-	-	-	-
5	4/56F:22 63/277	Central Electronic Module (CEM), not 4/93 KVM Branching point	BK-YE	10/3:1	License plate lighting
6	4/56C:13	Central Electronic Module (CEM)	OG-BK	10/3:2	License plate lighting
7	63/172	Branching point	BK	10/3:3 10/19:5	License plate lighting Brake light extra
8-16	-	-	-	-	-

64/245 C70

3-pin green

No.	Floor harness		Checking the CRM	
1	63/228	Branching point	GY-RD	Low speed CAN high data signal
2	-	-	-	-
3	63/229	Branching point	BU-RD	Low speed CAN low data signal

64/246 C70

4-pin gray

No.	Floor harness			Floor harness	
1	63/184	Branching point	BK-GN	4/59B:1	Convertible Roof Module (CRM)
2	64/596:1	Connector	GN-RD	4/59B:2	Convertible Roof Module (CRM)
3	63/184	Branching point	BK-GN	4/59B:3	Convertible Roof Module (CRM)
4	64/596:2	Connector	RD-WH	4/59B:4	Convertible Roof Module (CRM)

Connectors

64/250 C70 - 64/425

64/250 C70

8-pin gray

No.	Trunk lid/tailgate harness			Floor harness		
1	10/24:2	Cargo compartment lighting	BK	63/173	Branching point	BK
2	10/24:4	Cargo compartment lighting	BK	3/78:4	Lock unit, trunk lid/tailgate	BK
3	17/19:2 17X/19:2	12V outlet, cargo compartment Connector	OG	4/56C:22	Central Electronic Module (CEM)	OG
4	17/19:1	12V outlet, cargo compartment	BK	31/11	Ground connection	BK
5	3/268:3	Load assistance switch	BK	4/59F:10	Convertible Roof Module (CRM)	BK
6	3/268:1	Load assistance switch	OG-BU	63/173	Branching point	OG-BU
7	3/268:5	Load assistance switch	BK	3/78:5	Lock unit, trunk lid/tailgate	BK
8	-		-	-		-

64/322

5-pin green

No.	Floor harness			Rear shock absorber harness		
1	63/228	Branching point	GY-RD	63/421	Branching point	GY-RD
2	63/229	Branching point	BU-RD	63/422	Branching point	BU-RD
3	10/17A:1 10/17A:2	Lamp housing, rear right S40 Lamp housing, rear right V50/C70	OG-BK	4/110B:3	Trailer Module (TRM)	BK
4	31/12	Ground connection	BK	63/420	Branching point	BK
5	4/56C:38	Central Electronic Module (CEM)	RD	4/86A:1	Parking Assistance Module (PAM)	RD

64/425

6-pin yellow

No.	Dashboard harness			SRS passenger side harness		
1	4/9B:1	Supplemental Restraint System module (SRS)	OG	8/31:1	Airbag igniter, passenger side	OG
2	4/9B:2	Supplemental Restraint System module (SRS)	BK-WH	8/31:2	Airbag igniter, passenger side	BK-WH
3	-		-	-		-
4	63/12	Branching point	BK-GN	8/31:4 8/32:4	Airbag igniter, passenger side S40/V50 Igniter, airbag stage 2, passenger side	BK-GN
5	4/9B:11	Supplemental Restraint System module (SRS)	OG	8/32:1	Igniter, airbag stage 2, passenger side	OG
6	4/9B:10	Supplemental Restraint System module (SRS)	BK-YE	8/32:2	Igniter, airbag stage 2, passenger side	BK-YE

Connectors

64/545

64/545

6-pin light gray

No.	Dashboard harness			Climate control system harness		
1	4/56A:44	Central Electronic Module (CEM)	YE	6/48:1 6/95:1 6/96:1 6/102:1 6/103:1 7/159:1	Damper Motor Module (DMM), recirculation Damper Motor Module (DMM), left-hand side§ Damper Motor Module (DMM), right-hand side Damper Motor Module (DMM), defroster Damper Motor Module (DMM), floor/ventilation Air Quality Sensor (AQS)	RD
2	3/112:5	Climate Control Module (CCM)	YE-GN	7/41:1	Temperature sensor evaporator	BU-YE
3	3/112:12 64/112:7	Climate Control Module (CCM) Connector	WH	6/48:2 6/95:2 6/103:2 7/159:2	Damper Motor Module (DMM), recirculation, RHD Damper Motor Module (DMM), left-hand side Damper Motor Module (DMM), floor/ventilation Air Quality Sensor (AQS)	YE
4	63/25	Branching point	BK	6/48:3 6/96:3 6/102:3 6/103:3 7/159:3	Damper Motor Module (DMM), recirculation Damper Motor Module (DMM), right-hand side Damper Motor Module (DMM), defroster Damper Motor Module (DMM), floor/ventilation Air Quality Sensor (AQS)	BN
5	3/112:14 6/117:3	Climate Control Module (CCM) Interior temperature sensor	BN-GN	7/41:3	Temperature sensor evaporator	GN-OG
6	3/112:7 64/112:6	Climate Control Module (CCM) Connector	WH-GN	6/48:2 6/96:2 6/102:2 7/159:2	Damper Motor Module (DMM), recirculation Damper Motor Module (DMM), right-hand side Damper Motor Module (DMM), defroster Air Quality Sensor (AQS)	VT

Connectors

64/596 C70 - 64/661 C70

64/596 C70

4-pin gray

No.	Engine harness			Floor harness		
1	F15:2	Fuse	GN-RD	64/246:2	Connector	GN-RD
2	2/182:3	Relay, headlight washer motor	RD-WH	64/246:4	Connector	RD-WH
3	F22:2	Fuse	OG-GN	16/79A:1	Subwoofer Module (SUB)	OG-GN
4	-		-	-		-

64/600

4-pin black

No.	Engine harness			Glow plug harness		
1	64/90:24	Connector	GN-OG	20/22:1	Glow plug	GN-OG
2	64/90:25	Connector	GN-OG	20/23:1	Glow plug	GN-OG
3	64/90:26	Connector	GN-OG	20/24:1	Glow plug	GN-OG
4	64/90:27	Connector	GN-OG	20/25:1	Glow plug	GN-OG

64/660 C70

12-pin gray

No.	Driver's door harness, addition			Driver's door harness		
1	16/4:1	Speaker, driver's door	WH-BU	16/151:6	Distribution filter, front left door	WH-BU
2	16/4:2	Speaker, driver's door	GY-BU	16/151:5	Distribution filter, front left door	GY-BU
3	8/137:2	Lock motor, left door compartment	WH-BK	64/41:24	Connector	BK
4	8/137:1	Lock motor, left door compartment	YE-BK	64/41:19	Connector	BK
5	3/80:1	Switch, central locking driver's door	BK	3/81:11	Power window switches, driver's door	BK
6	3/80:2	Switch, central locking driver's door	BK-RD	63/63	Branching point	BK-RD
7	3/80:3	Switch, central locking driver's door	BK-YE	63/64	Branching point	BK-YE
8	3/80:4	Switch, central locking driver's door	GN-BK	3/126A:16	Driver Door Module (DDM)	GN-BK
9	3/80:5	Switch, central locking driver's door	GN-YE	3/81:10	Power window switches, driver's door	GN-YE
10	10/245:3	Lock indicator, left door	RD	64/41:7	Connector	BK
11	10/245:2	Lock indicator, left door	RD	64/41:10	Connector	BK

64/661 C70

2-pin yellow/green

No.	Driver's door harness			Driver's door harness, addition		
1	64/41:8	Connector	OG	8/66:2	Igniter, left inflatable curtain	OG
2	64/41:9	Connector	BK-RD	8/66:1	Igniter, left inflatable curtain	BK-RD

Connectors

64/662 C70 - 64/707 C70

64/662 C70

12-pin gray

No.	Passenger door harness, addition		Passenger door harness		
1	16/3:1	Speaker, passenger door	WH-BU	16/152:6	Distribution filter, front right door
2	16/3:2	Speaker, passenger door	GY-BU	16/152:5	Distribution filter, front right door
3	8/138:2	Lock motor, right door compartment	WH-BK	64/43:24	Connector
4	8/138:1	Lock motor, right door compartment	YE-BK	64/43:19	Connector
5	3/82:1	Switch, central locking passenger door	BK	3/83:3	Switch, power window passenger door
6	3/82:2	Switch, central locking passenger door	BK-RD	3/127A:6	Passenger Door Module (PDM)
7	3/82:3	Switch, central locking passenger door	BK-RD	3/127A:7	Passenger Door Module (PDM)
8	3/82:4	Switch, central locking passenger door	GN-BK	3/127A:16	Passenger Door Module (PDM)
9	3/82:5	Switch, central locking passenger door	GN-YE	3/83:1	Switch, power window passenger door
10	10/246:3	Lock indicator, right door	RD	64/43:7	Connector
11	10/246:2	Lock indicator, right door	RD	64/43:10	Connector

64/663 C70

2-pin yellow/green

No.	Passenger door harness		Passenger door harness, addition		
1	64/43:8	Connector)	OG	8/67:2	Igniter, right inflatable curtain
2	64/43:9	Connector	BK-BU	8/67:1	Igniter, right inflatable curtain

64/707 C70

6-pin gray, option A

No.	Passenger door harness		-		
1	63/41	Branching point	WH	64/707:4	Connector
2	63/40	Branching point	BK	64/707:3	Connector
3	16/3:2	Speaker, passenger door	GY	64/707:2	Connector
4	16/3:1	Speaker, passenger door	WH	64/707:1	Connector
5	64/662:2	Connector	GY-BU	-	-
6	64/662:1	Connector	WH-BU	-	-

Connectors

64/707 C70 - 64/816

64/707 C70

6-pin gray, option B

No.	Passenger door harness			-		
1	63/41	Branching point	WH	16/152:1	Distribution filter, front right door	-
2	63/40	Branching point	BK	16/152:2	Distribution filter, front right door	-
3	16/3:2	Speaker, passenger door	GY	16/152:3	Distribution filter, front right door	-
4	16/3:1	Speaker, passenger door	WH	16/152:4	Distribution filter, front right door	-
5	64/662:2	Connector	GY-BU	16/152:5	Distribution filter, front right door	-
6	64/662:1	Connector	WH-BU	16/152:6	Distribution filter, front right door	-

64/708 C70

6-pin gray, option A

No.	Driver's door harness			-		
1	63/43	Branching point	WH	64/708:4	Connector	WH
2	63/42	Branching point	BK	64/708:3	Connector	GY
3	16/4:2	Speaker, driver's door	GY	64/708:2	Connector	GY
4	16/4:1	Speaker, driver's door	WH	64/708:1	Connector	WH
5	-	-	-	-	-	-
6	-	-	-	-	-	-

64/708 C70

6-pin gray, option B

No.	Driver's door harness			-		
1	63/43	Branching point	WH	16/151:1	Distribution filter, front left door	-
2	63/42	Branching point	BK	16/151:2	Distribution filter, front left door	-
3	16/4:2	Speaker, driver's door	GY	16/151:3	Distribution filter, front left door	-
4	16/4:1	Speaker, driver's door	WH	16/151:4	Distribution filter, front left door	-
5	64/660:2	Connector	GY-BU	16/151:5	Distribution filter, front left door	-
6	64/660:1	Connector	WH-BU	16/151:6	Distribution filter, front left door	-

64/816

2-pin black

No.	Floor harness			ABS harness, rear left		
1	64/113:1	Connector	WH	7/56:1	Sensor ABS, rear left	WH
2	64/113:2	Connector	BN	7/56:2	Sensor ABS, rear left	BN

Connectors

64/817 - 64/973 C70

64/817

2-pin black

No.	Floor harness			ABS harness, rear right		
1	64/113:3	Connector C70	WH YE-GN	7/57:1	Sensor ABS, rear right	WH
2	64/113:4	Connector C70	BN WH-GN	7/57:2	Sensor ABS, rear right	BN

64/861

1-pin black

No.	Climate control PTC element harness		Engine compartment harness		
1	9/41A:2	PTC-element	RD	F5:2	Fuse

64/862

1-pin white

No.	Climate control PTC element harness		Engine compartment harness		
1	9/41A:1	PTC-element	-	31/112	Ground connection

64/971 C70

2-pin black

No.	Floor harness			MOST amplifier harness		
1	64/97:1	Connector	OG	16/105D:1	Audio Module (AUD)	OG
2	64/97:2	Connector	OG	16/139C:2	Global Positioning System Module (GPS)	OG

64/973 C70

2-pin black

No.	Floor harness			MOST amplifier harness		
1	64/97:1	Connector	OG	16/105D:1	Audio Module (AUD)	OG
2	64/97:2	Connector	OG	16/145C:2	Remote Digital Audio Receiver (RDAR)	OG

Connectors

64/974 - 64/979 S40/V50

64/974 C70

2-pin black

No.	Floor harness		MOST amplifier harness		
1	64/97:1	Connector	OG	16/105D:1	Audio Module (AUD)
2	64/97:2	Connector	OG	16/139C:2	Global Positioning System Module (GPS)

64/978

2-pin black

No.	Floor harness		MOST amplifier harness		
1	64/97:1	Connector	OG	16/105D:1 16/145:1 64/97:1 64/979:1	Audio Module (AUD) Remote Digital Audio Receiver (RDAR) Connector Connector
2	64/97:2	Connector	OG	16/79C:2 16/105D:2 16/139C:2	Subwoofer Module (SUB), C70 Audio module (AUD) Global Positioning System Module (GPS)

64/979 C70

2-pin black

No.	Floor harness		MOST amplifier harness		
1	64/97:1	Connector	OG	16/105D:1	Audio Module (AUD)
2	64/97:2	Connector	OG	16/105D:2	Audio Module (AUD)

64/979 S40/V50

2-pin black

No.	Floor harness		MOST amplifier harness		
1	64/978:1	Connector	OG	16/49C:1	Traffic Message Channel Module (TMC)
2	-	-	-	16/49C:2 16/105D:1	Traffic Message Channel Module (TMC) Audio Module (AUD)

Connectors

64/1300 - 64/1400

64/1300 6-pin

No.	Front parking assistance harness		Engine compartment harness	
1	63/615	Branching point	BU	64/1400:1 Connector
2	7/207:2	Front parking assistance sensor	GN	64/1400:2 Connector
3	7/206:2	Front parking assistance sensor	VT	64/1400:3 Connector
4	7/205:2	Front parking assistance sensor	YE	64/1400:4 Connector
5	7/204:2	Front parking assistance sensor	WH	64/1400:5 Connector
6	63/616	Branching point	BK	64/1400:6 Connector


64/1400 6-pin gray

No.	Parking assistance harness, passenger compartment		Parking assistance harness, engine compartment	
1	4/86B:2	Parking Assistance Module (PAM)	BU	64/1300:1 Connector
2	4/86B:8	Parking Assistance Module (PAM)	GN	64/1300:2 Connector
3	4/86B:7	Parking Assistance Module (PAM)	VT	64/1300:3 Connector
4	4/86B:6	Parking Assistance Module (PAM)	YE	64/1300:4 Connector
5	4/86B:5	Parking Assistance Module (PAM)	WH	64/1300:5 Connector
6	4/86B:1	Parking Assistance Module (PAM)	BK	64/1300:6 Connector


Branching points

63/5 - 63/29


63/5

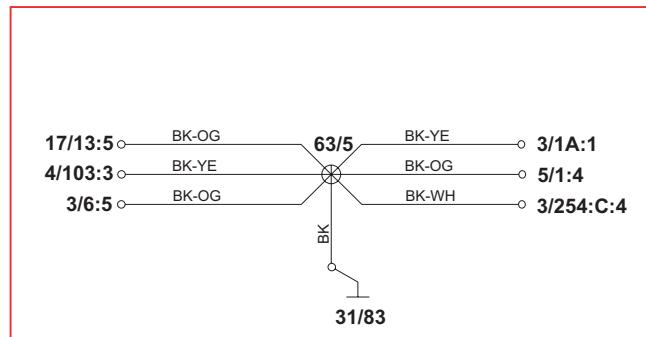


63/25

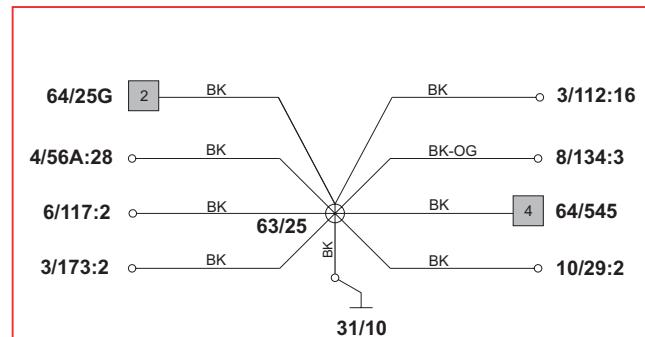


63/6

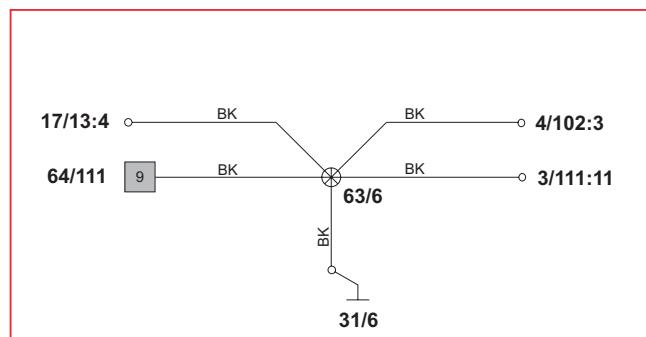


63/26 S40/V50

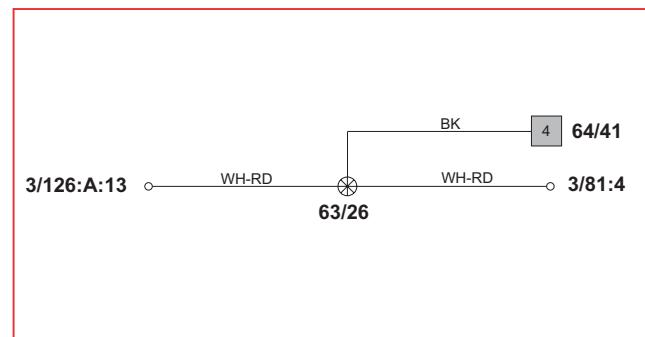


63/10

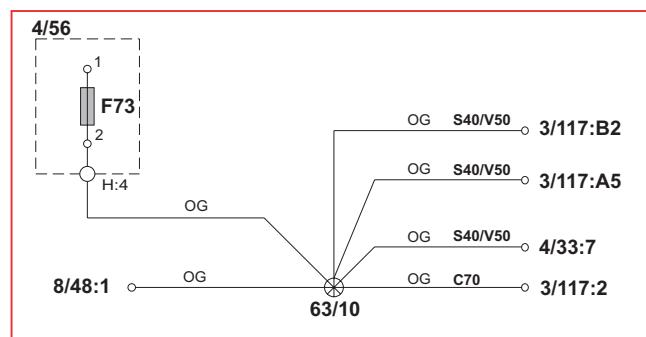


63/27

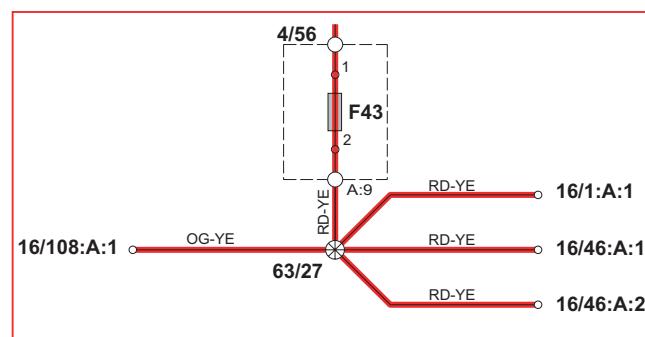


63/12

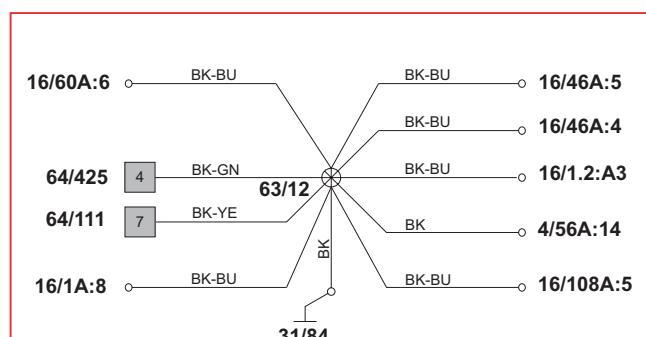


63/28

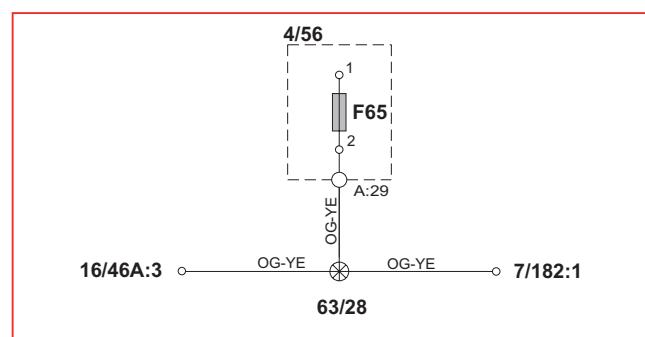

63/13 5-cyl.

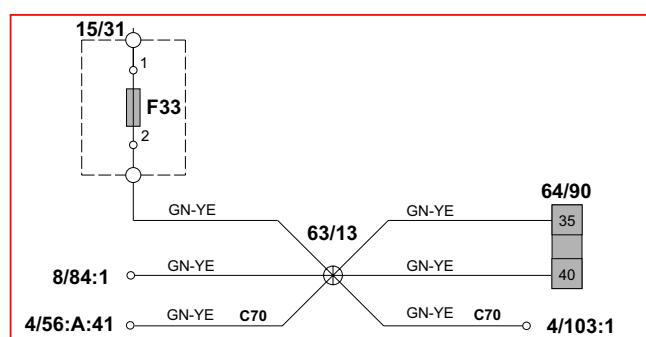


63/29

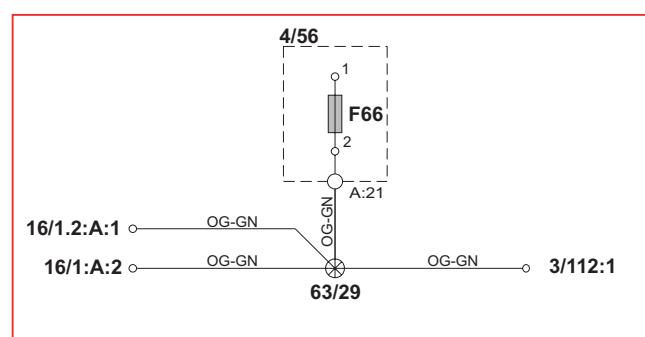


Branching points

63/30 - 63/41


63/30

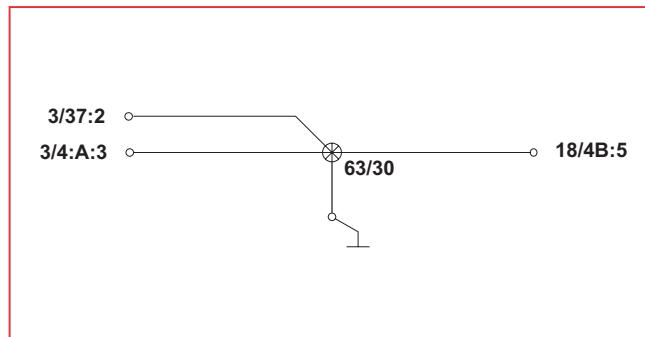


63/36

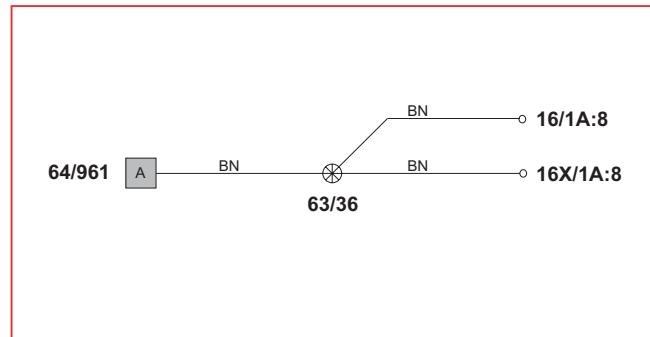


63/31 S40/V50

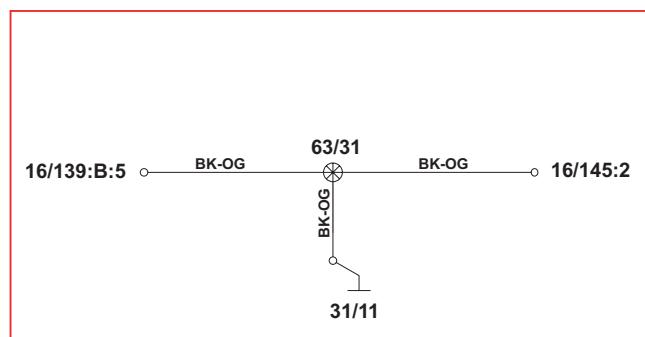


63/37

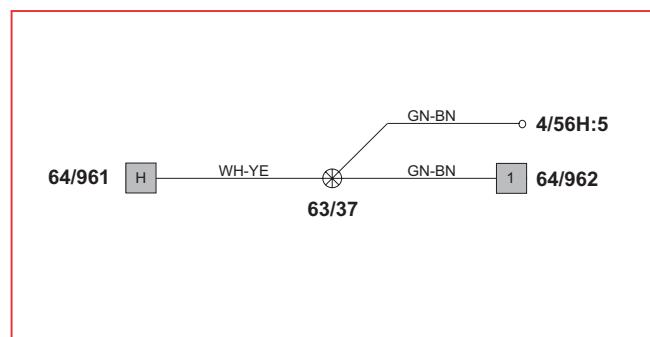


63/33 5-cyl.

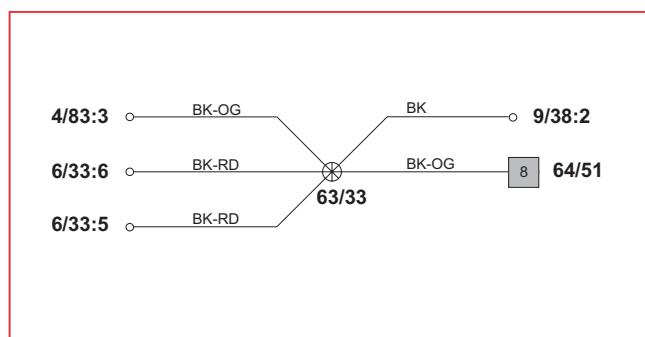


63/38

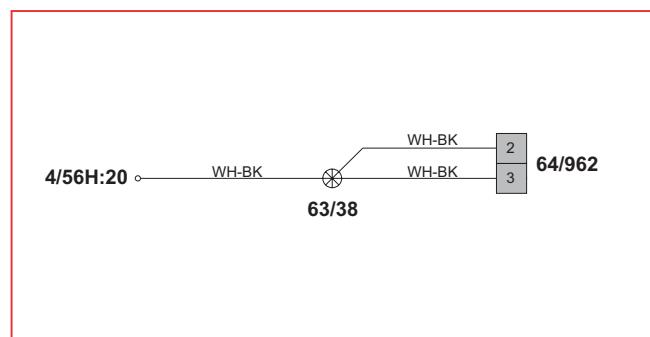


63/34

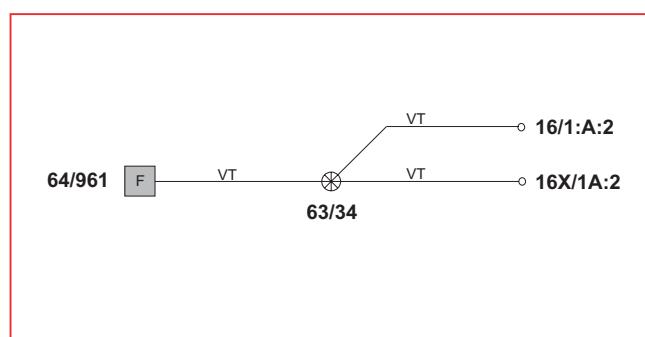


63/40

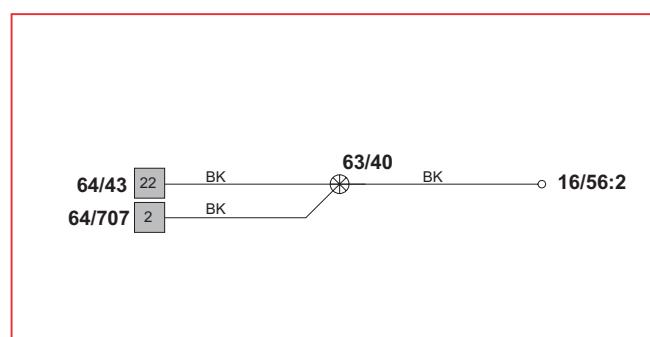

63/35

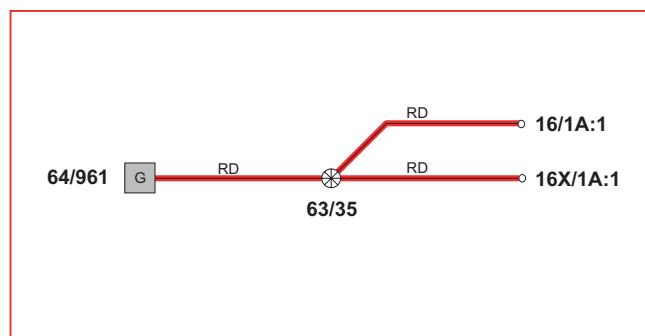


63/41

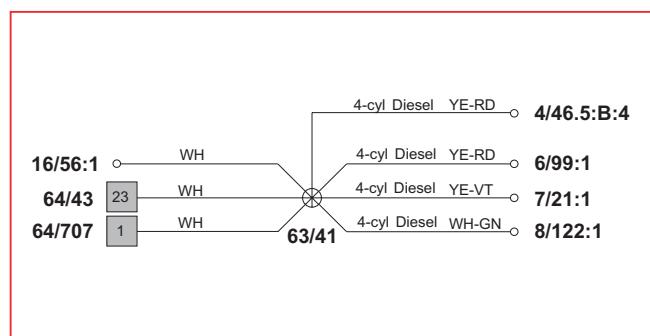


Branching points

63/42 - 63/54 5-cyl. Diesel


63/42

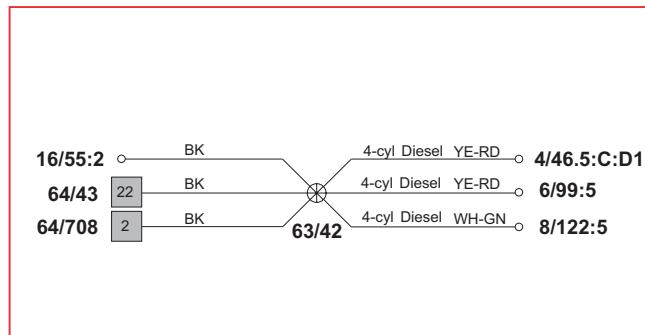


63/53 5-cyl.

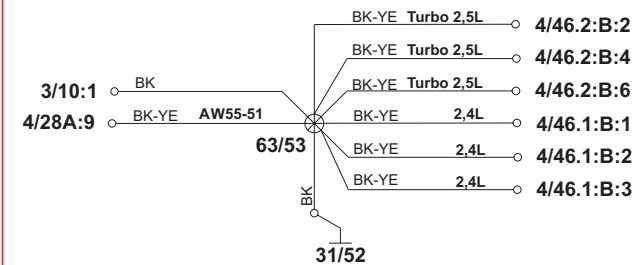


63/43

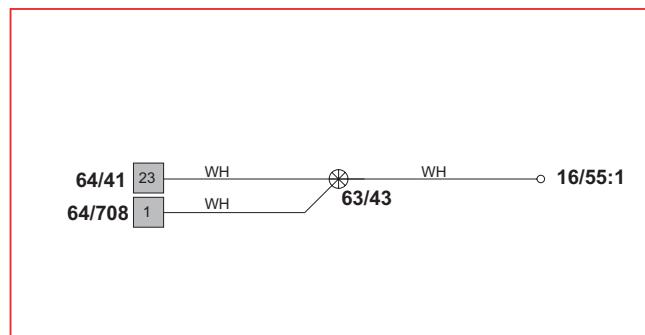


63/53 5-cyl. Diesel

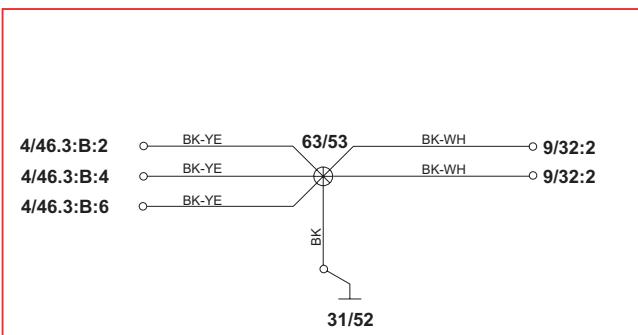


63/52 4-cyl. 1.6l

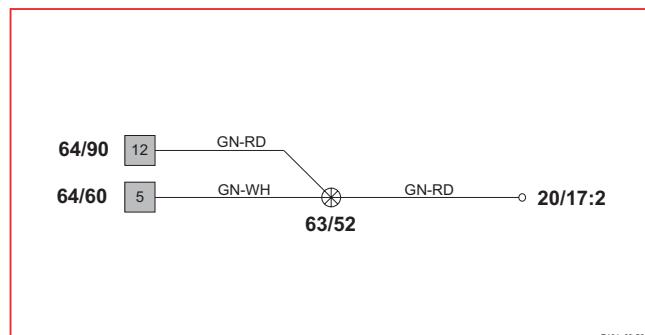


63/54 Gasoline

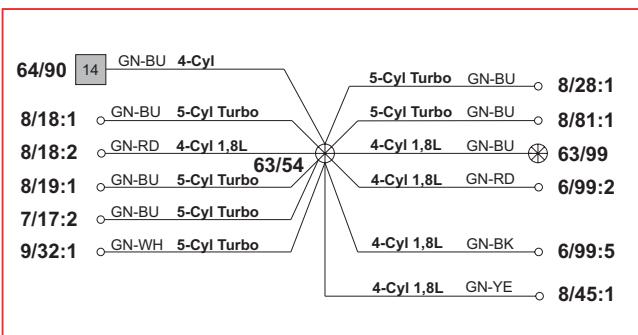


63/53 4-cyl.

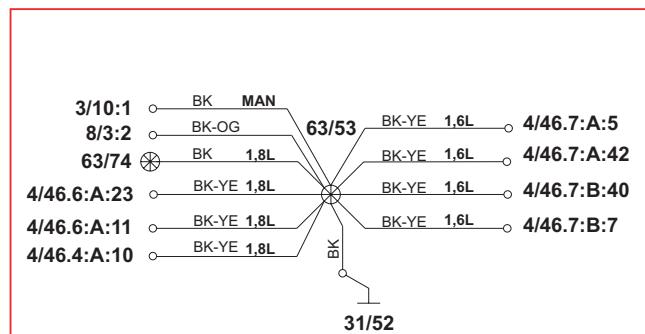


63/54 4-cyl. Diesel

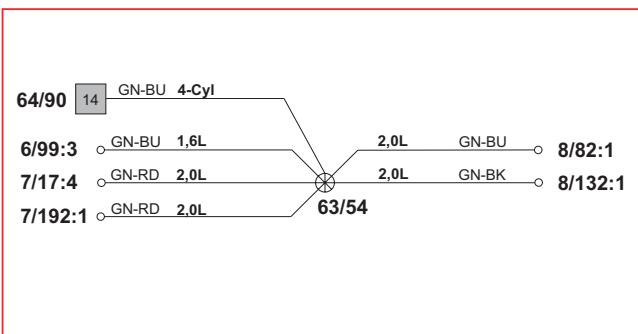

63/53 4-cyl. Diesel

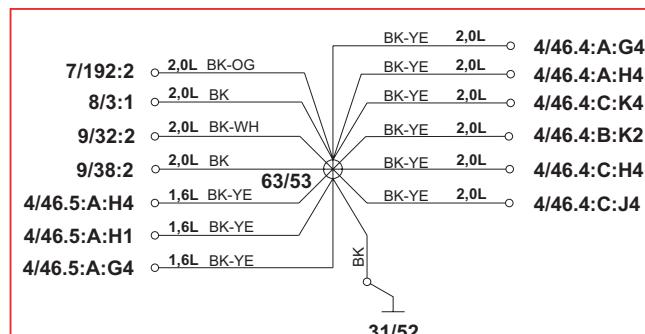


63/54 5-cyl. Diesel

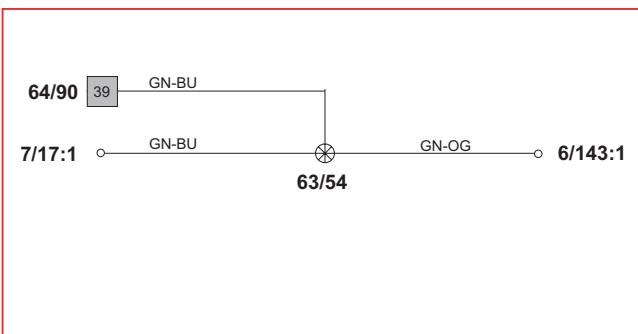


Branching points

63/56 - 63/74 4-cyl. Gasoline


63/56

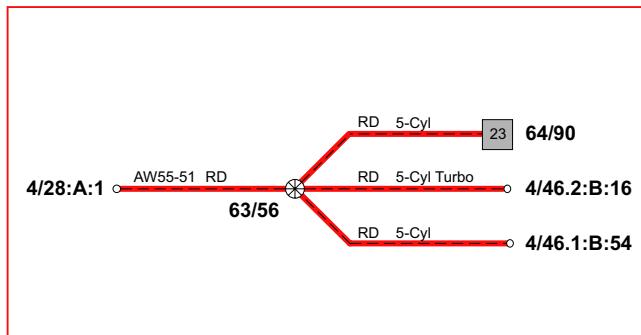


63/64

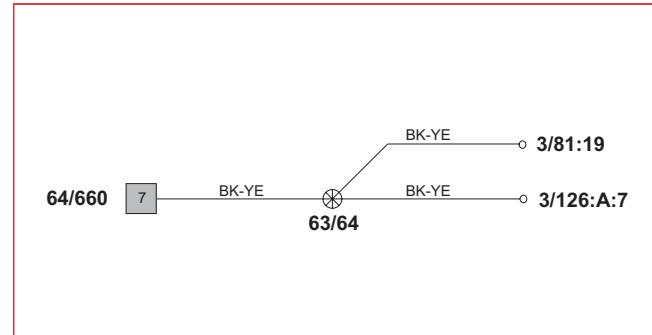


63/58 C70

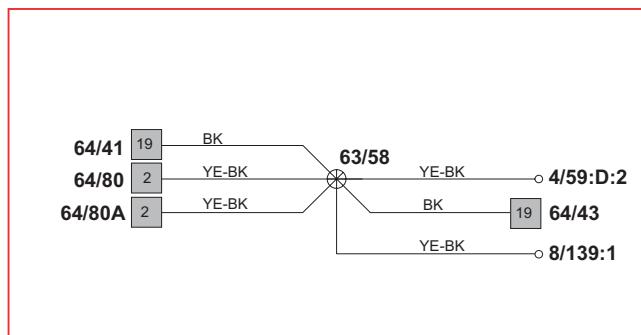


63/65 4-cyl. 2.0l Diesel

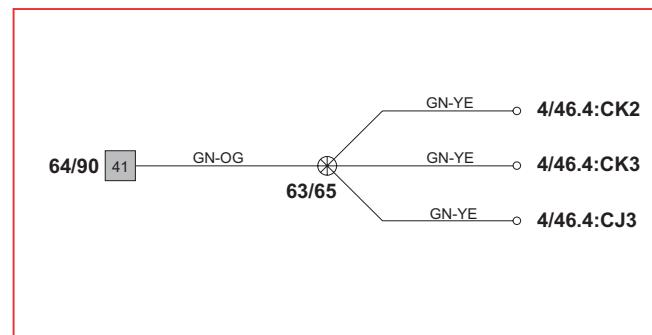


63/59 C70

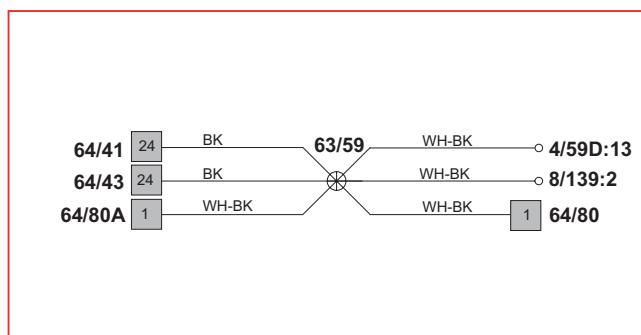


63/65 5-cyl.

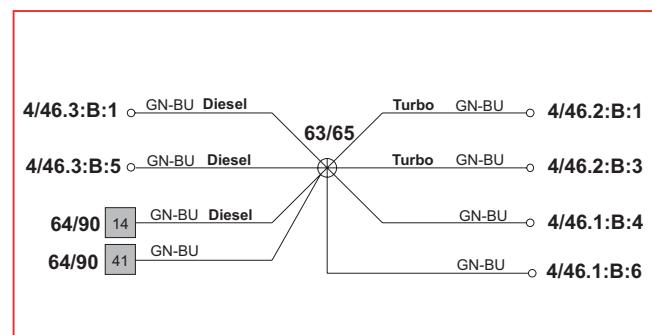


63/61 5-cyl.

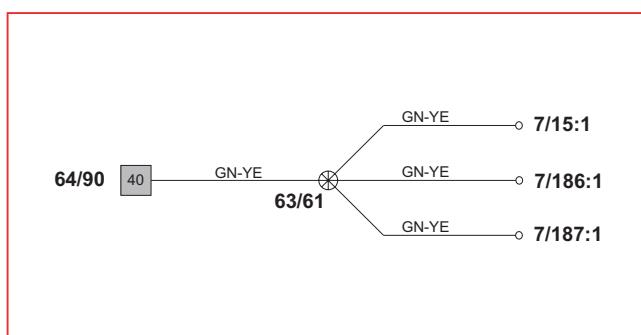


63/67

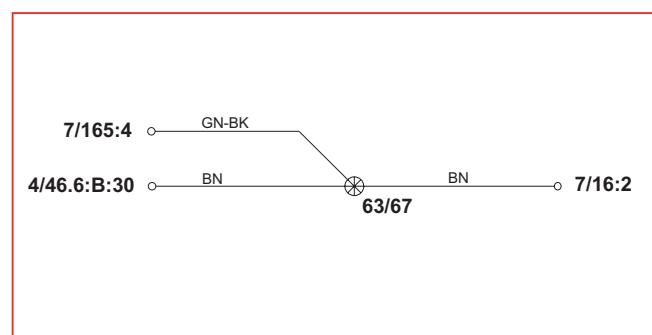

63/63

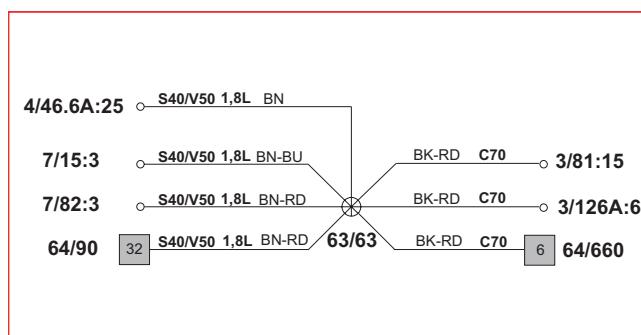


63/74 4-cyl. Gasoline

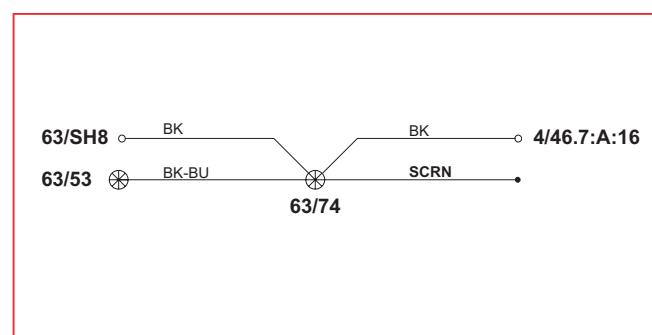


Branching points

63/85 - 63/98 5-cyl.


63/85

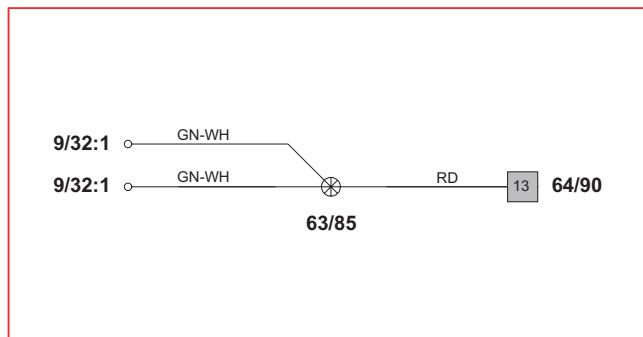


63/93

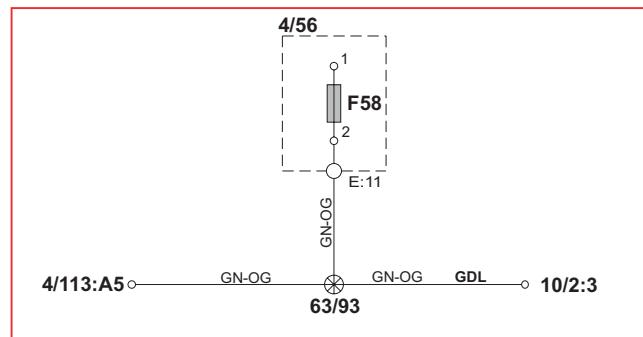


63/86

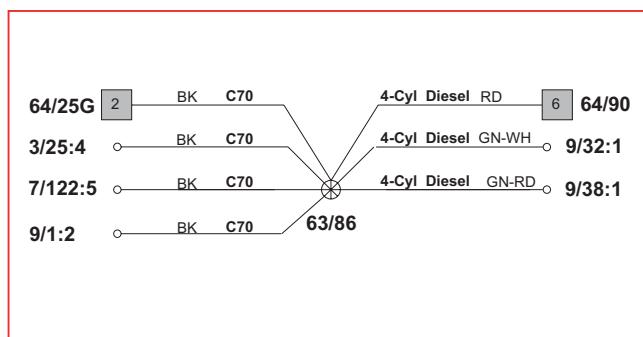


63/94

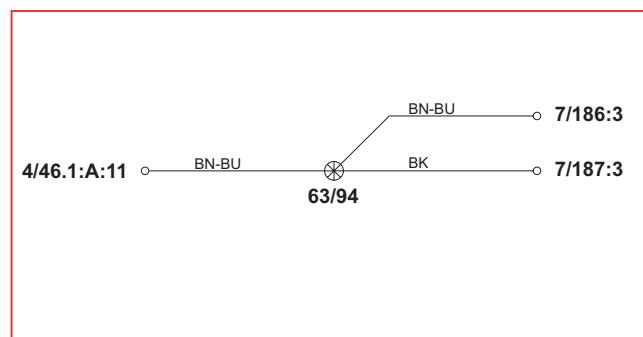


63/88

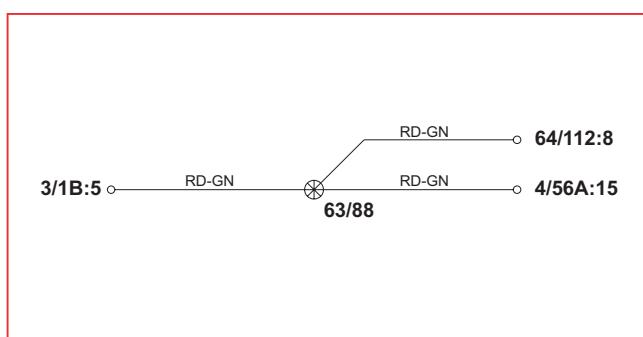


63/95 4-cyl. 1.8l

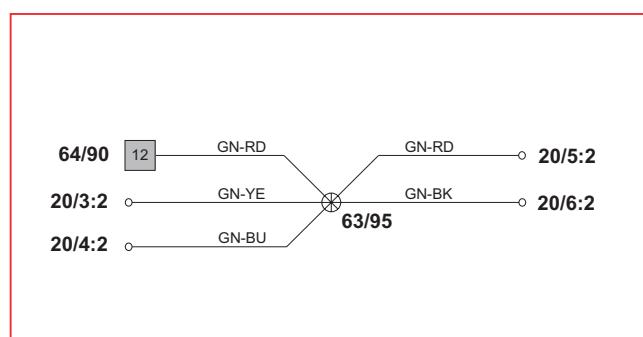


63/91G

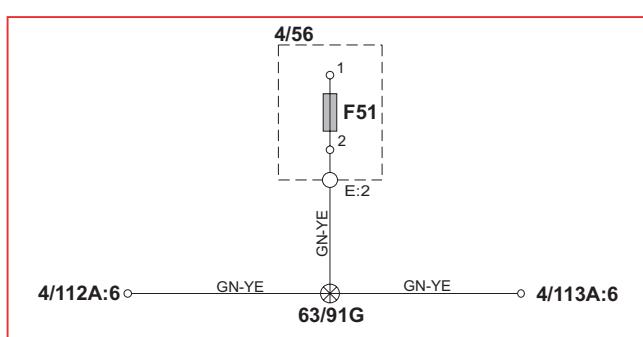


63/97 5-cyl.

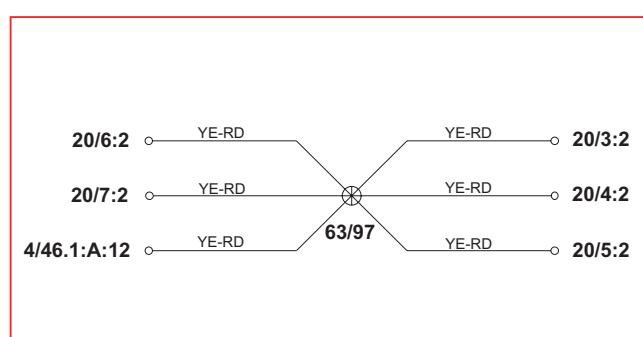

63/92

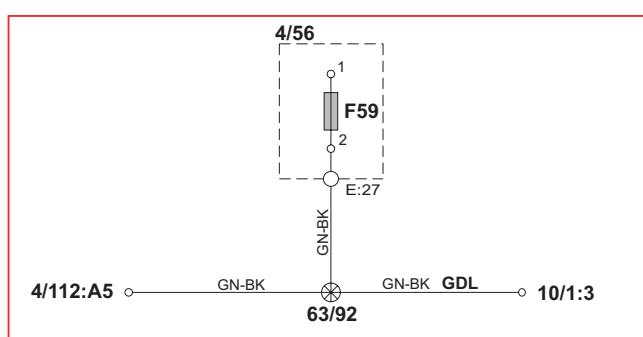


63/98 5-cyl.

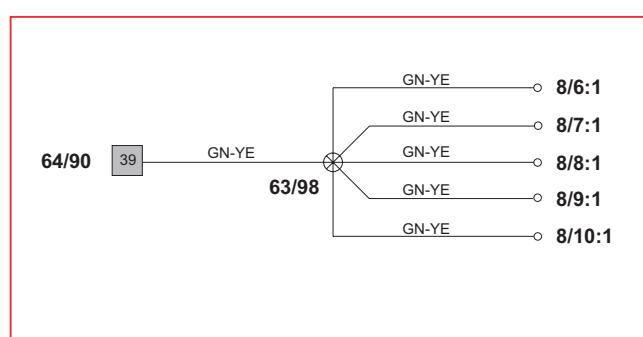


Branching points

63/99 4-cyl. Gasoline - 63/139


63/99 4-cyl. Gasoline

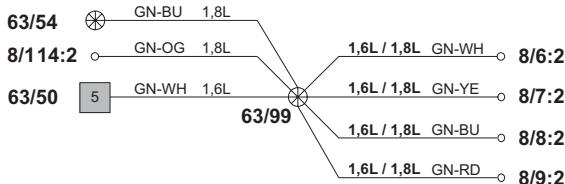


63/121

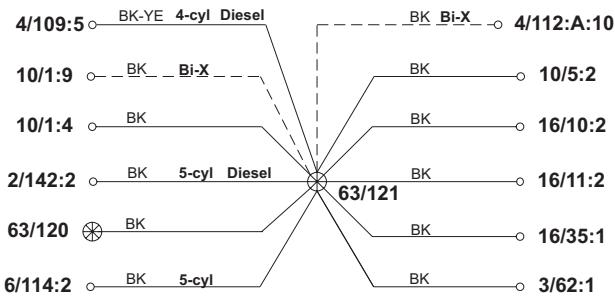


63/103 5-cyl.

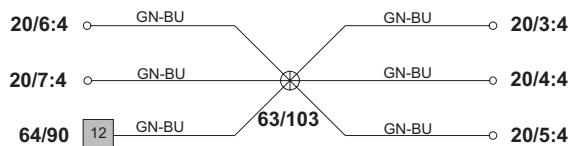


63/124

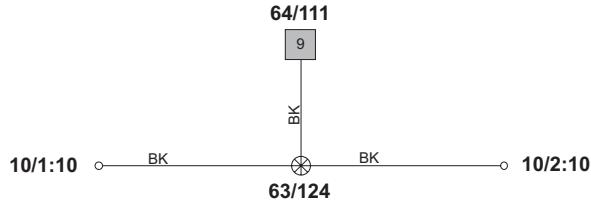


63/108

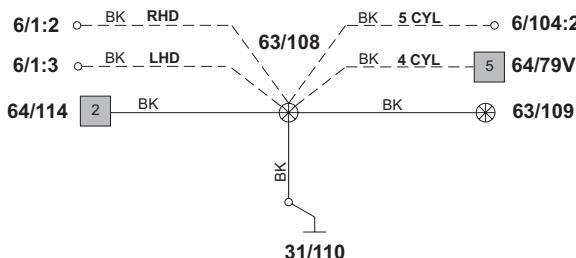


63/130

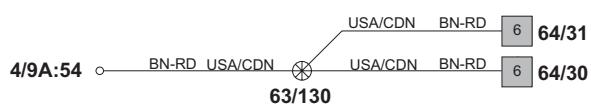 


63/109

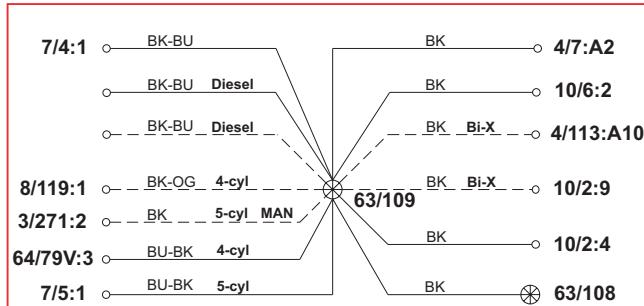


63/135 C70

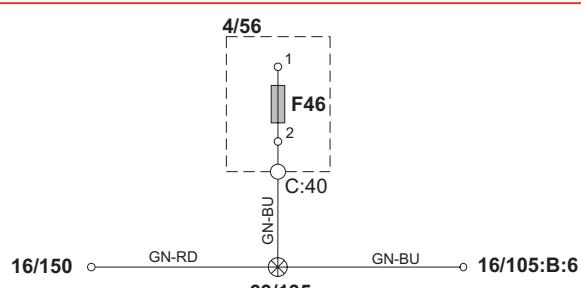

63/120

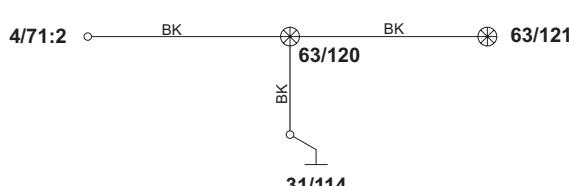


63/139

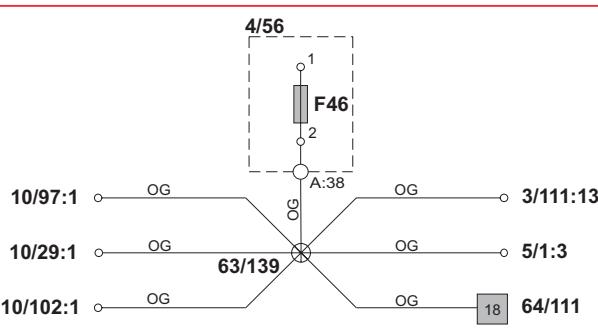


Branching points

63/170 - 63/195


63/170

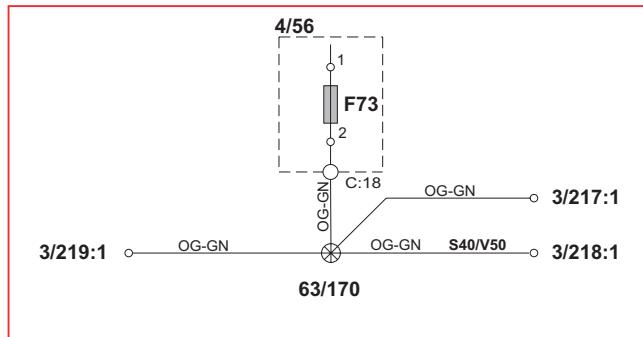


63/184 C70

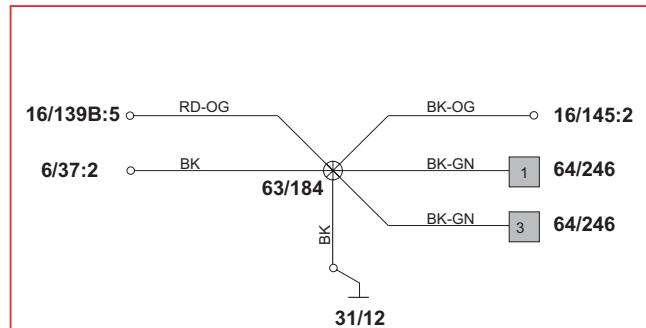


63/171

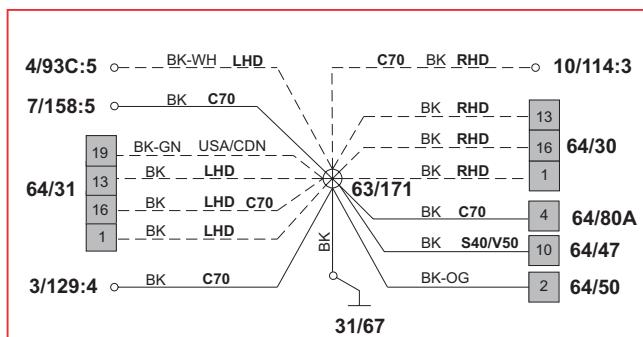


63/192 S40/V50

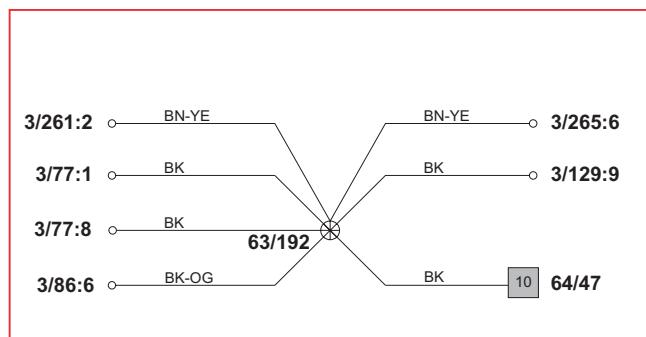


63/172 S40/V50

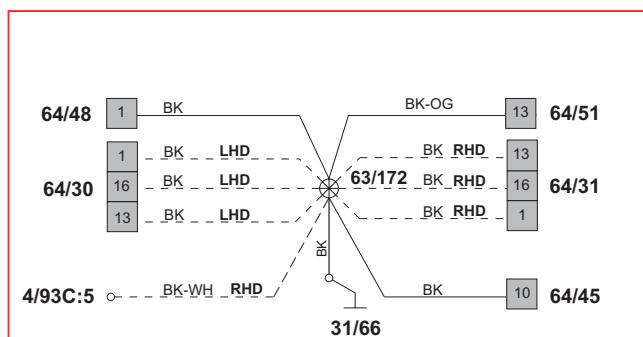


63/192A S40/V50

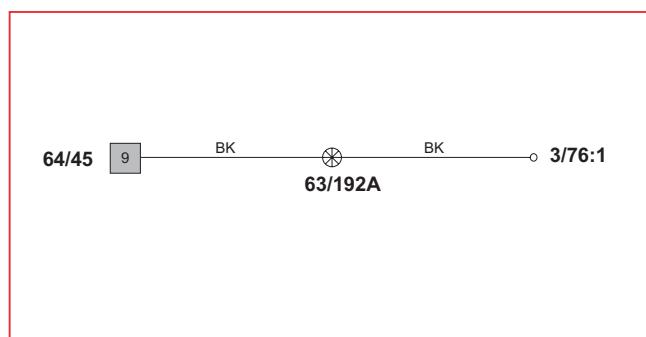


63/172 C70

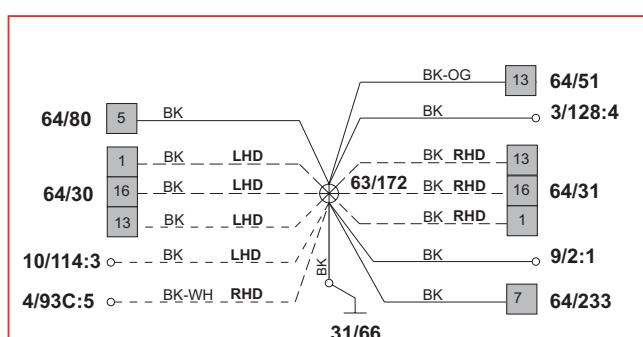


63/193 S40/V50

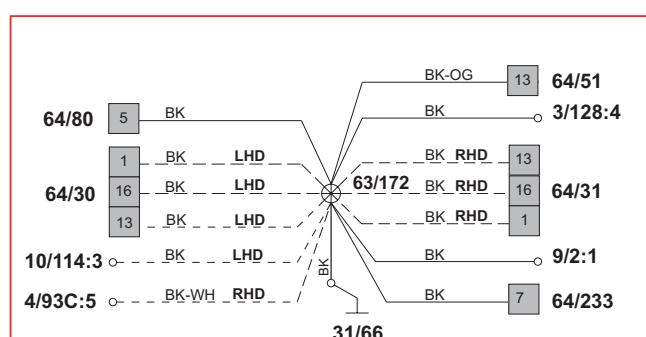

63/173

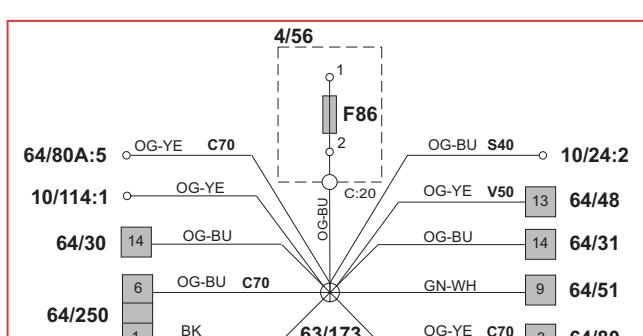


63/195

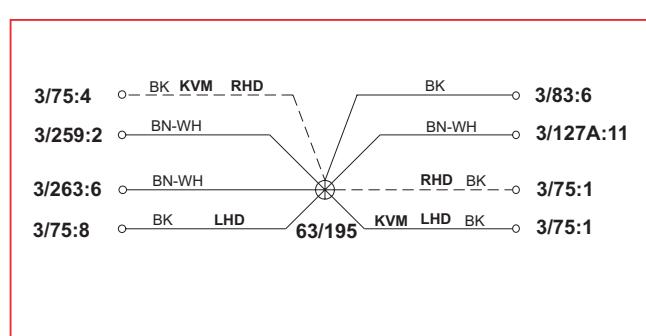


Branching points

63/196 - 63/215


63/196 S40/V50

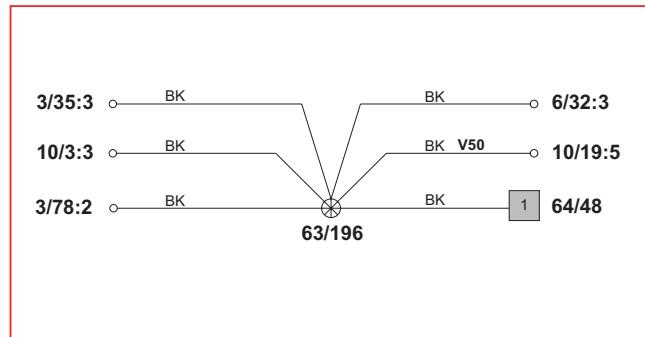


63/212

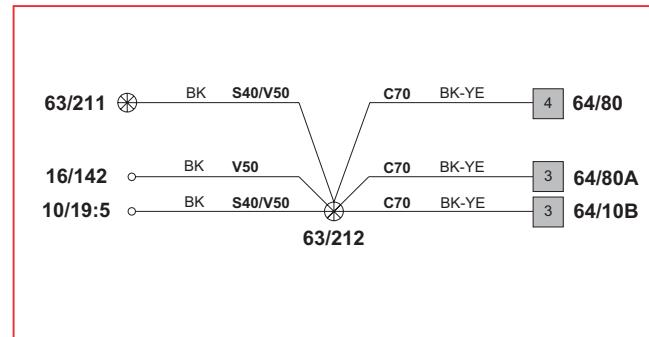


63/198

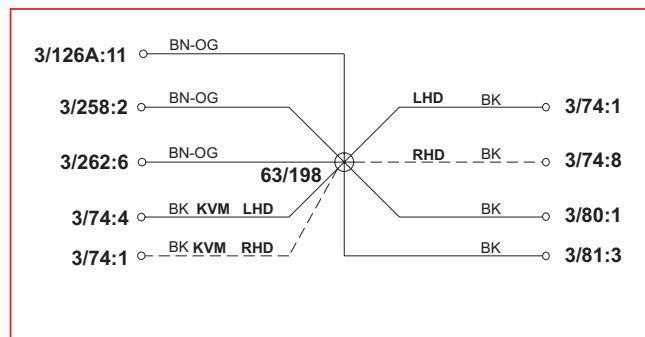


63/213

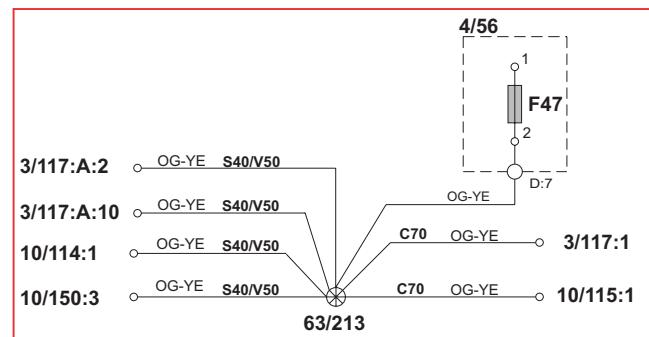


63/199 S40/V50

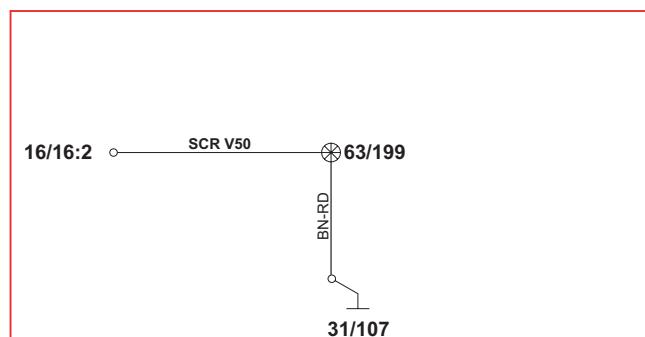


63/214 S40/V50

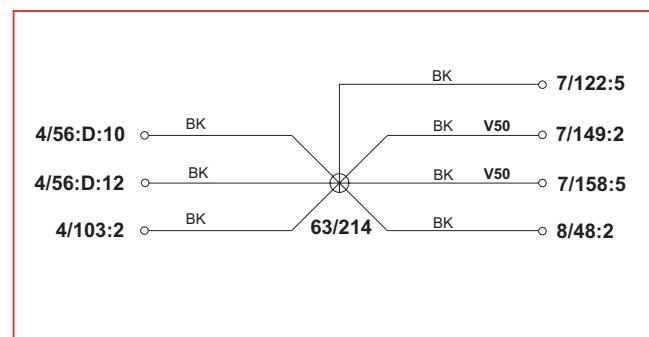


63/211 S40/V50

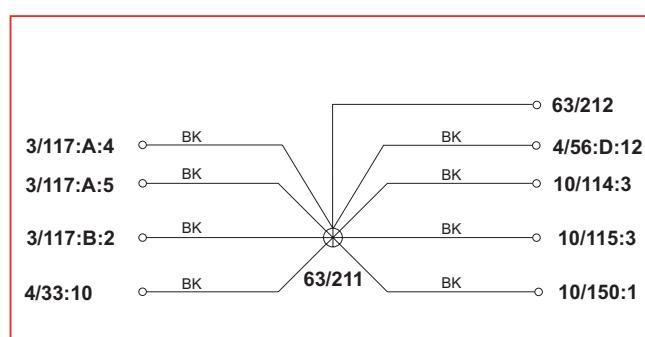


63/214 C70

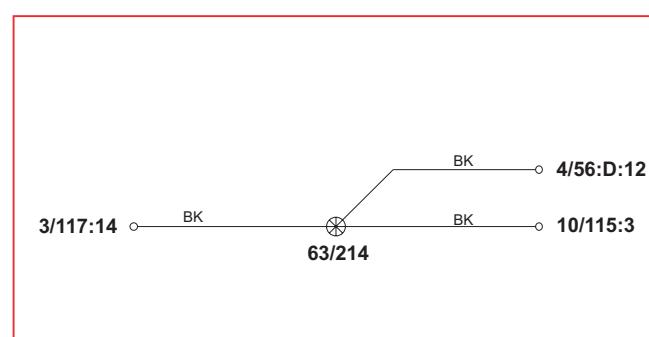

63/211 C70

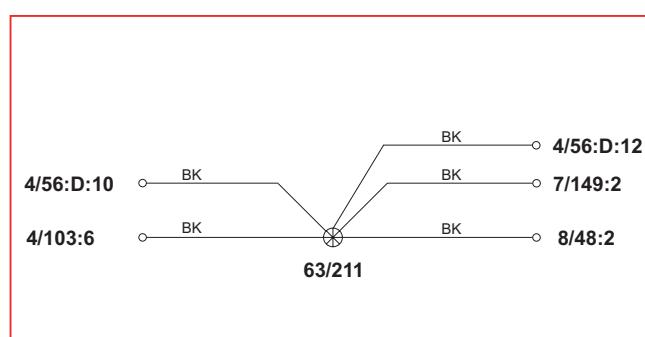


63/215

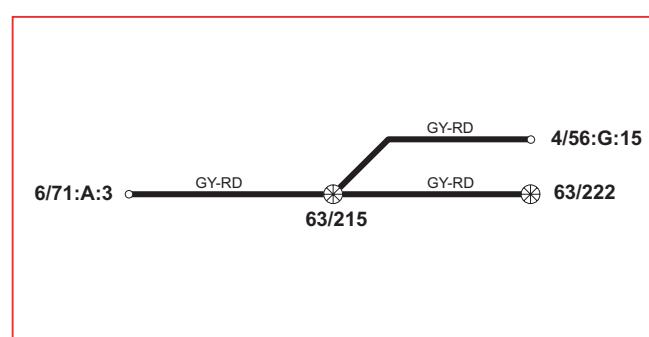


Branching points

63/216 - 63/228


63/216

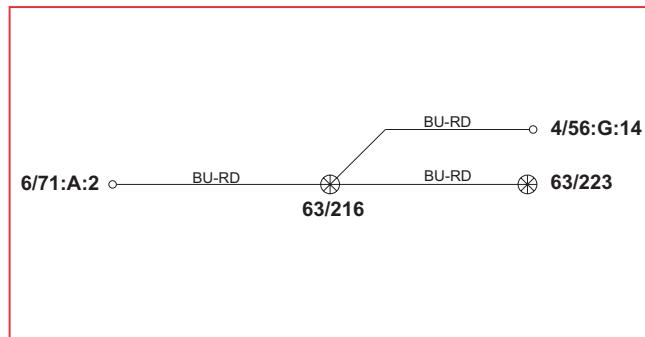


63/222

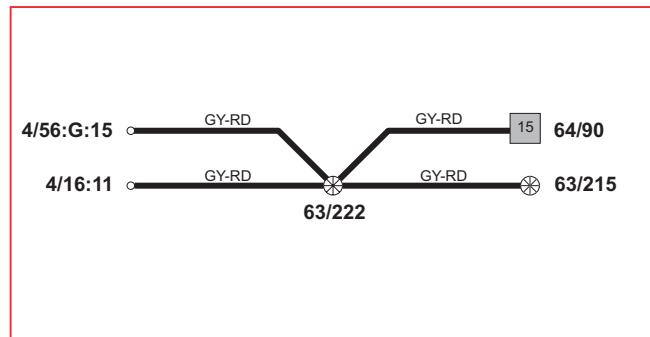


63/217 V50

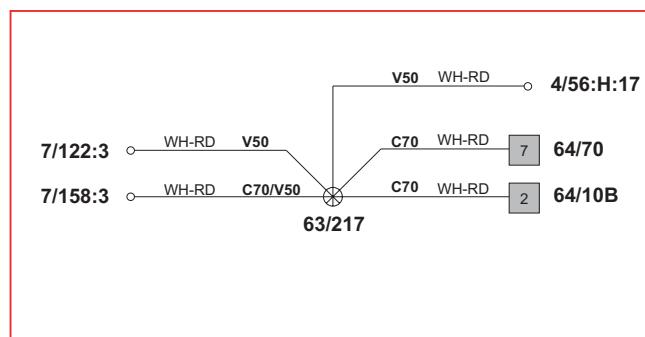


63/223

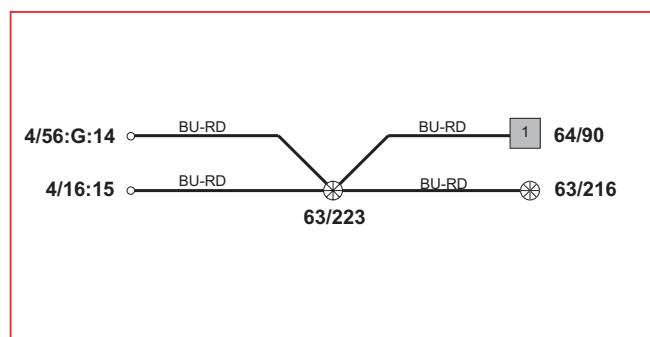


63/218 V50

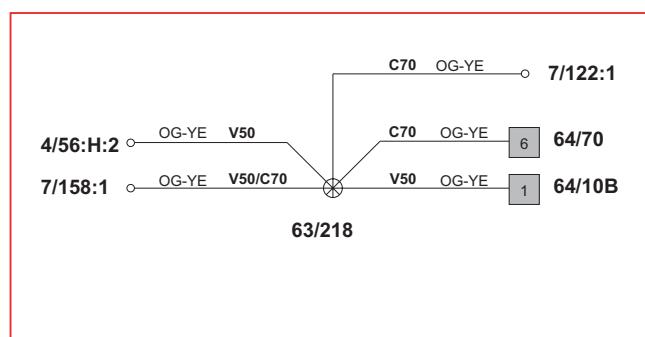


63/224

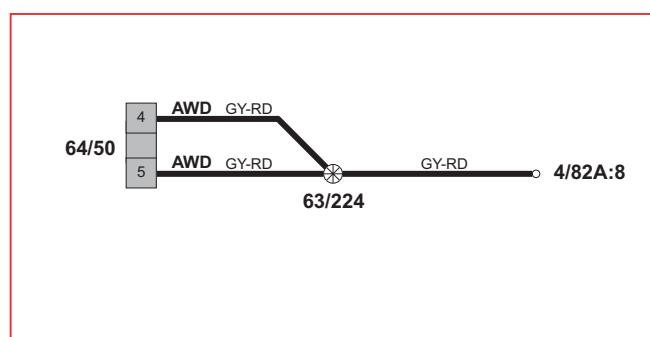


63/220

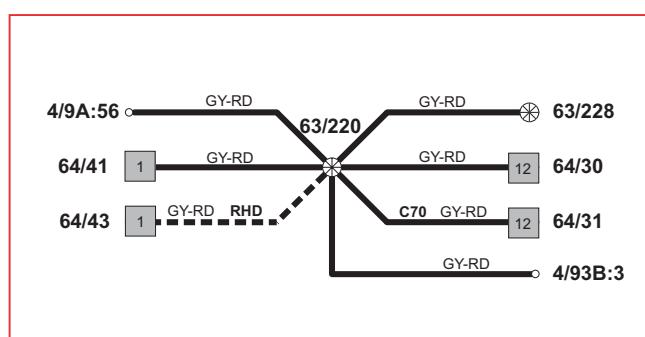


63/225

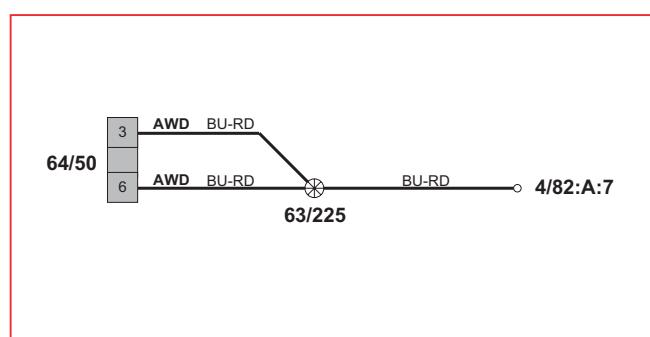

63/221

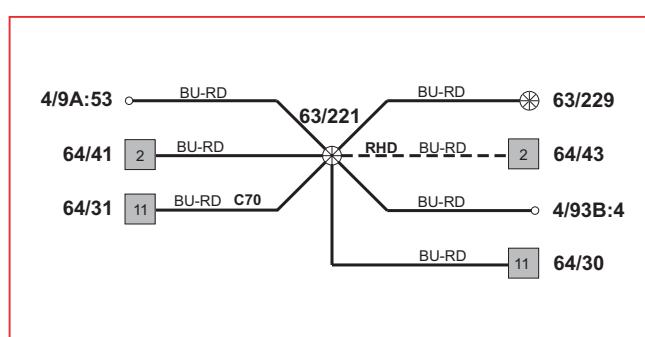


63/228

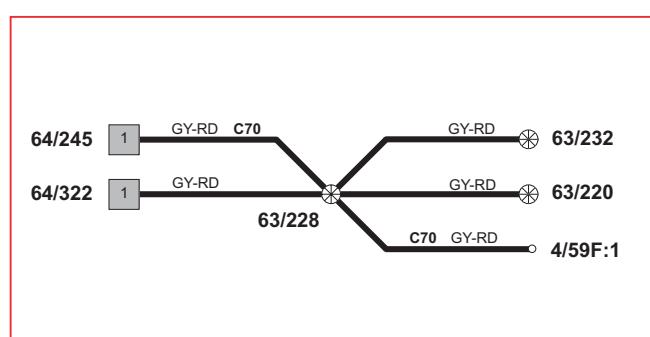


Branching points

63/229 - 63/420


63/229

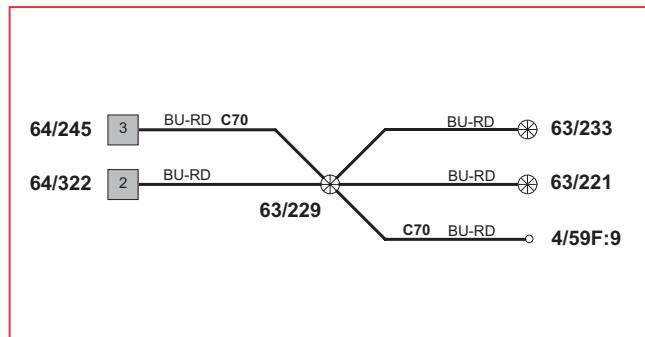


63/339

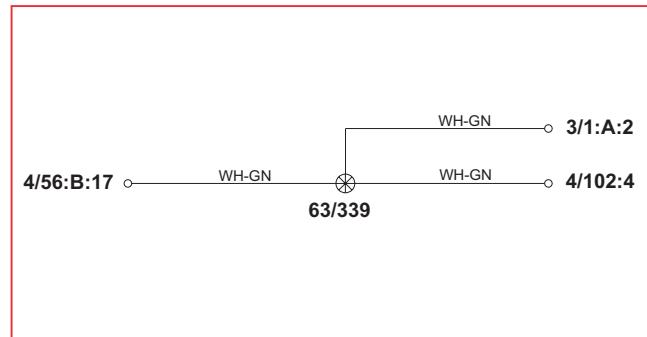


63/231

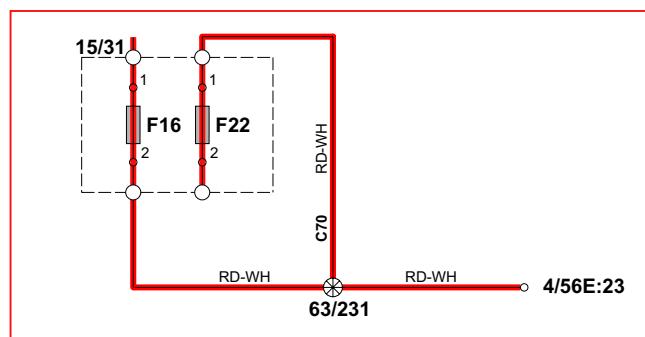


63/340 C70

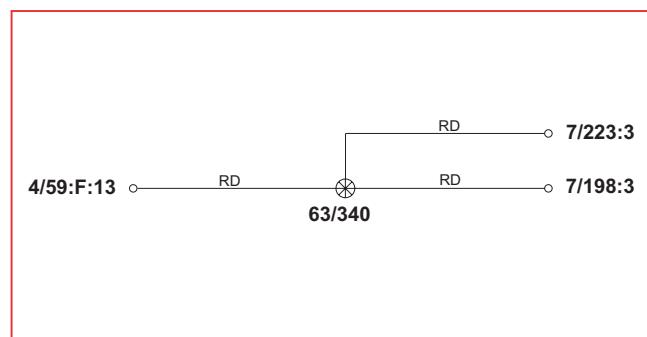


63/232

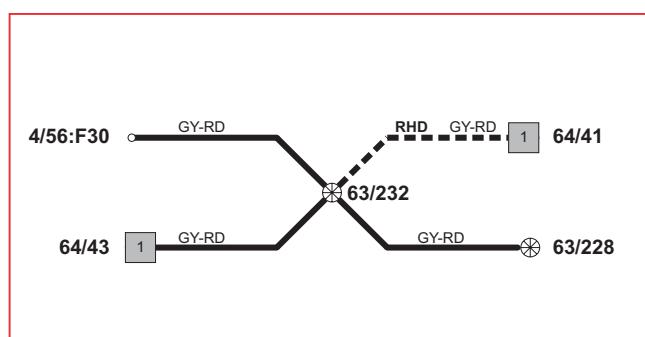


63/415

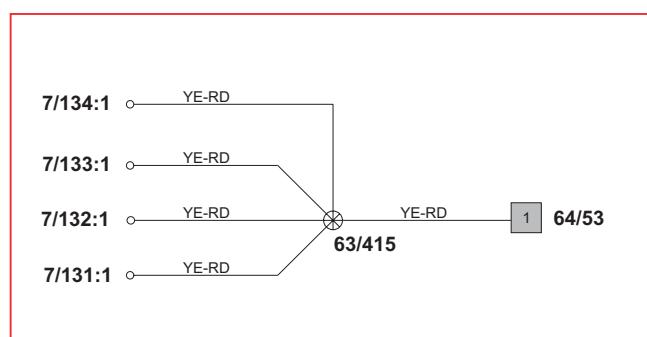


63/233

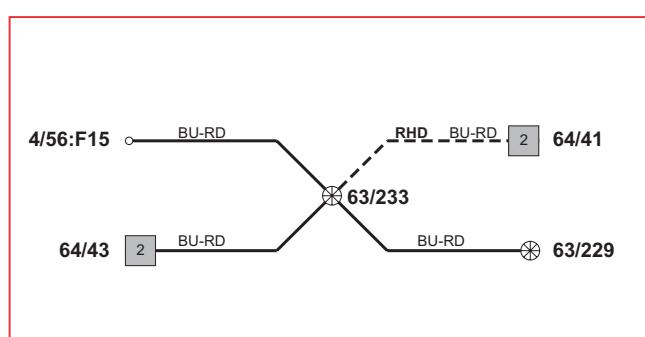


63/416

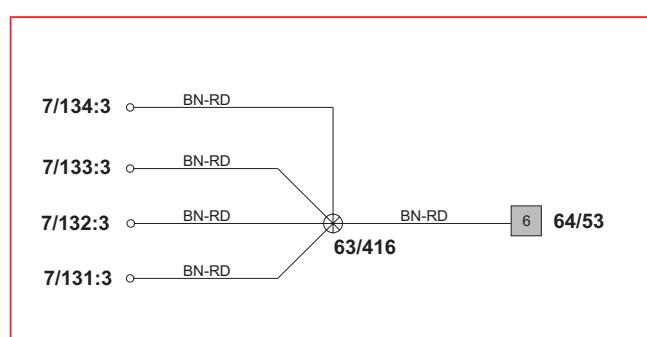

63/277 C70

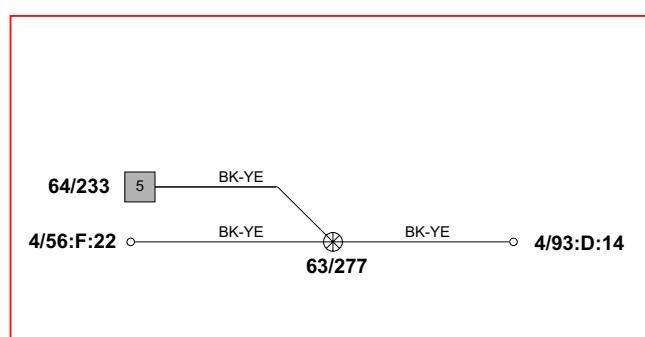


63/420

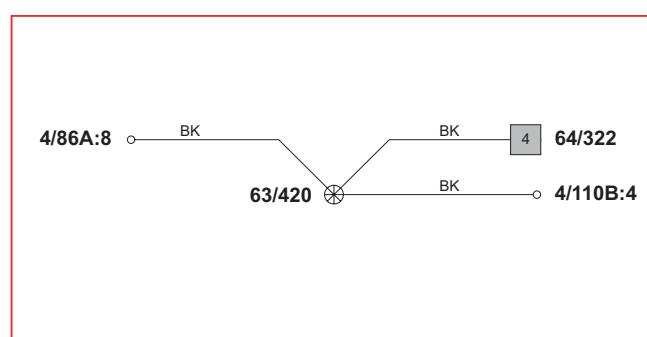


Branching points

63/421 - 63/SH8


63/421

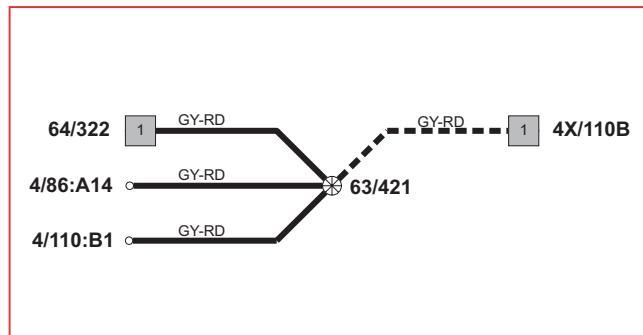


63/1000 S40/V50

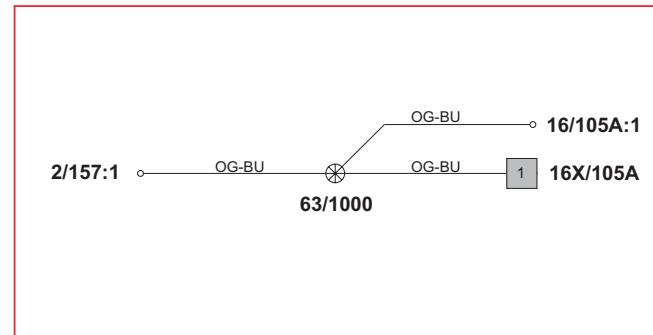


63/422

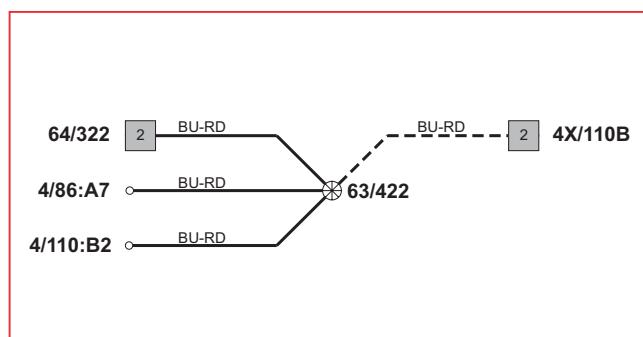


63/1001 S40/V50

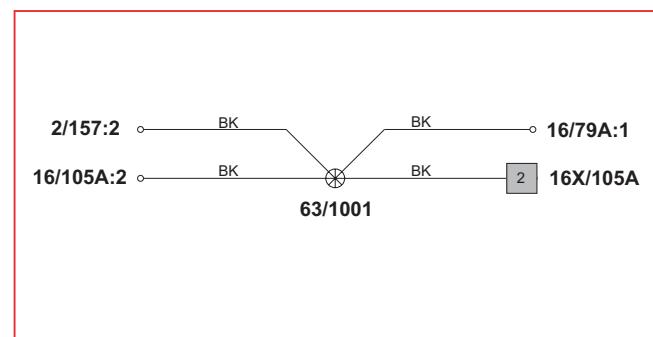


63/504 C70

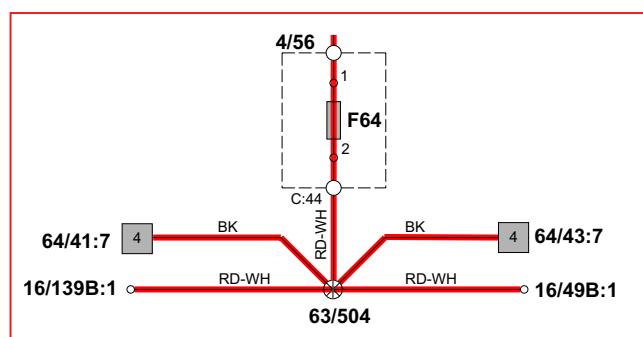


63/SH8

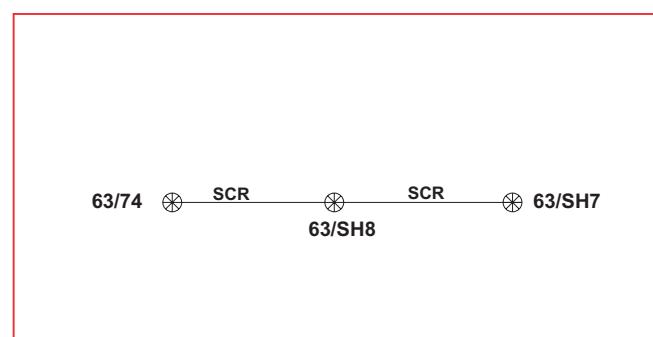


63/615

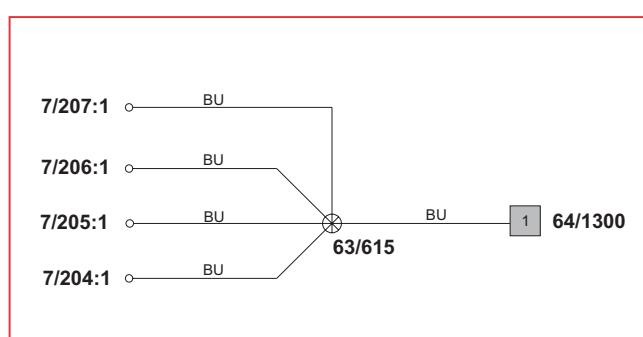


63/616

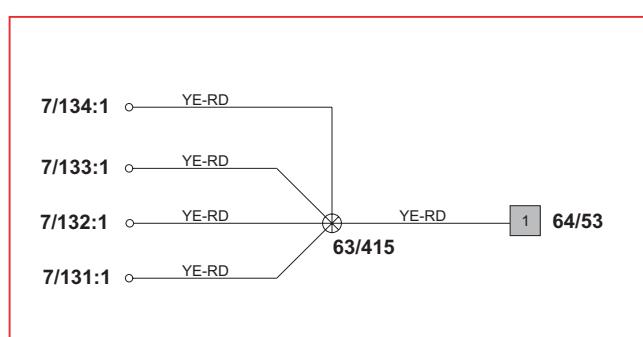


Cable harness routing in vehicle
Engine harness Gasoline, 4-cyl. 1.6l

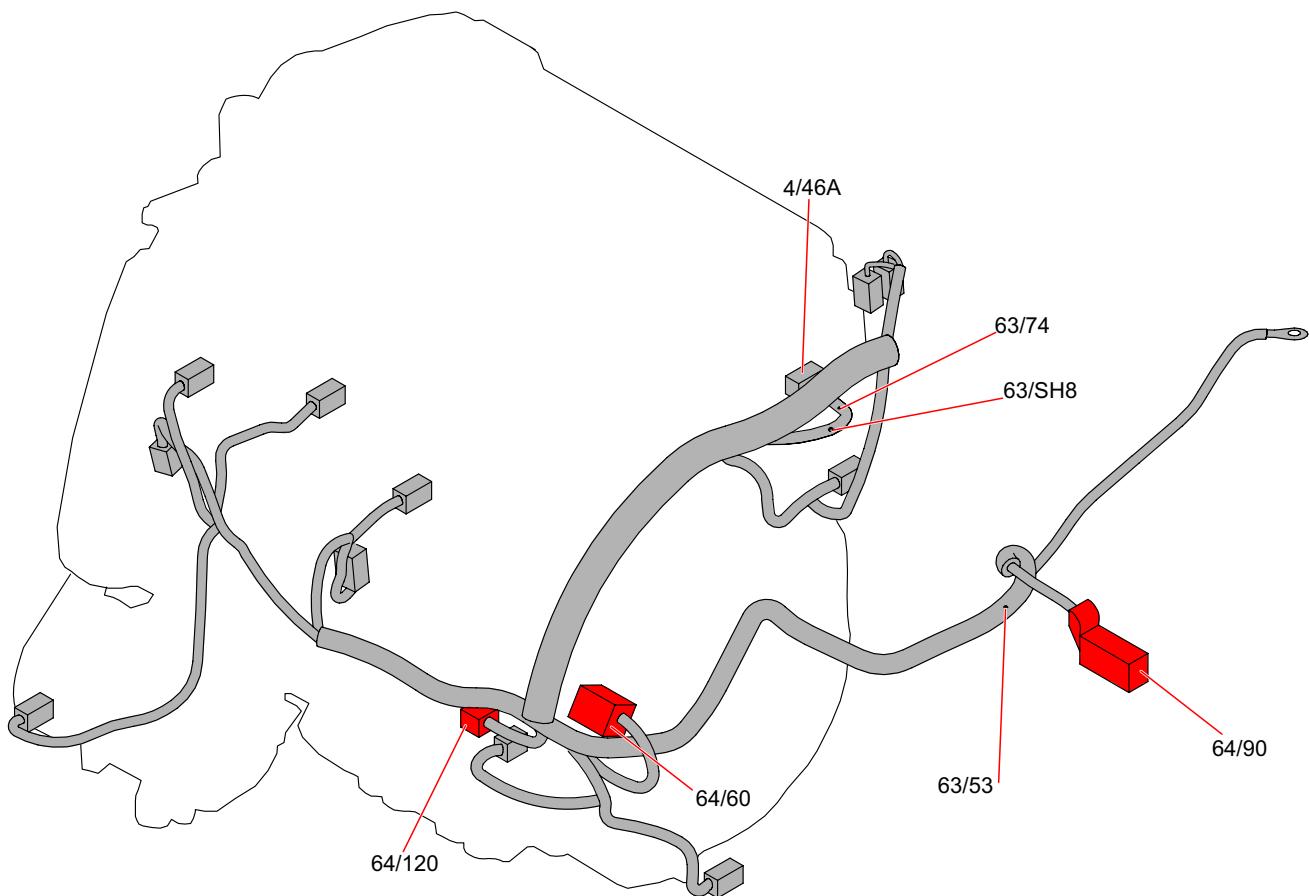


Cable harness routing in vehicle
Engine harness Gasoline, 4-cyl. 1.8l

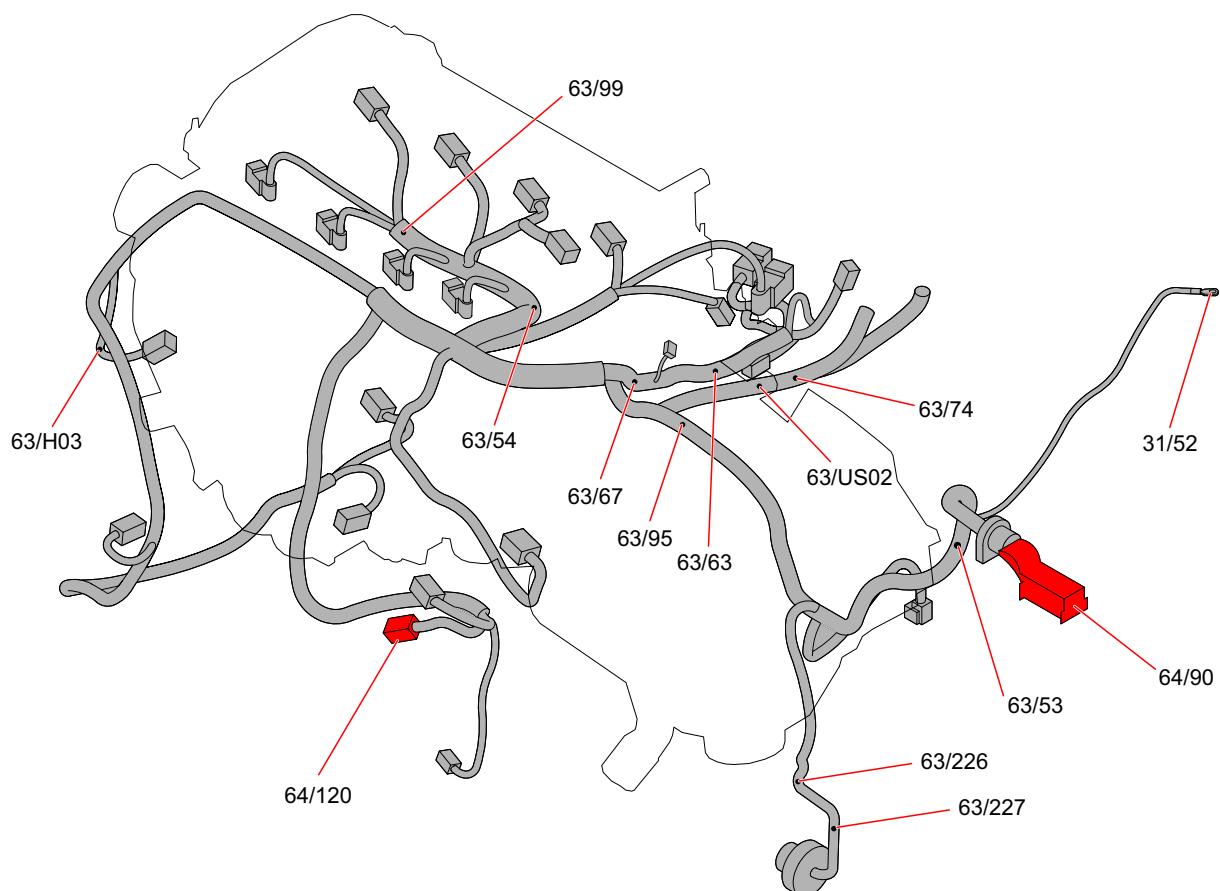


Cable harness routing in vehicle Engine harness Gasoline, 5-cyl.

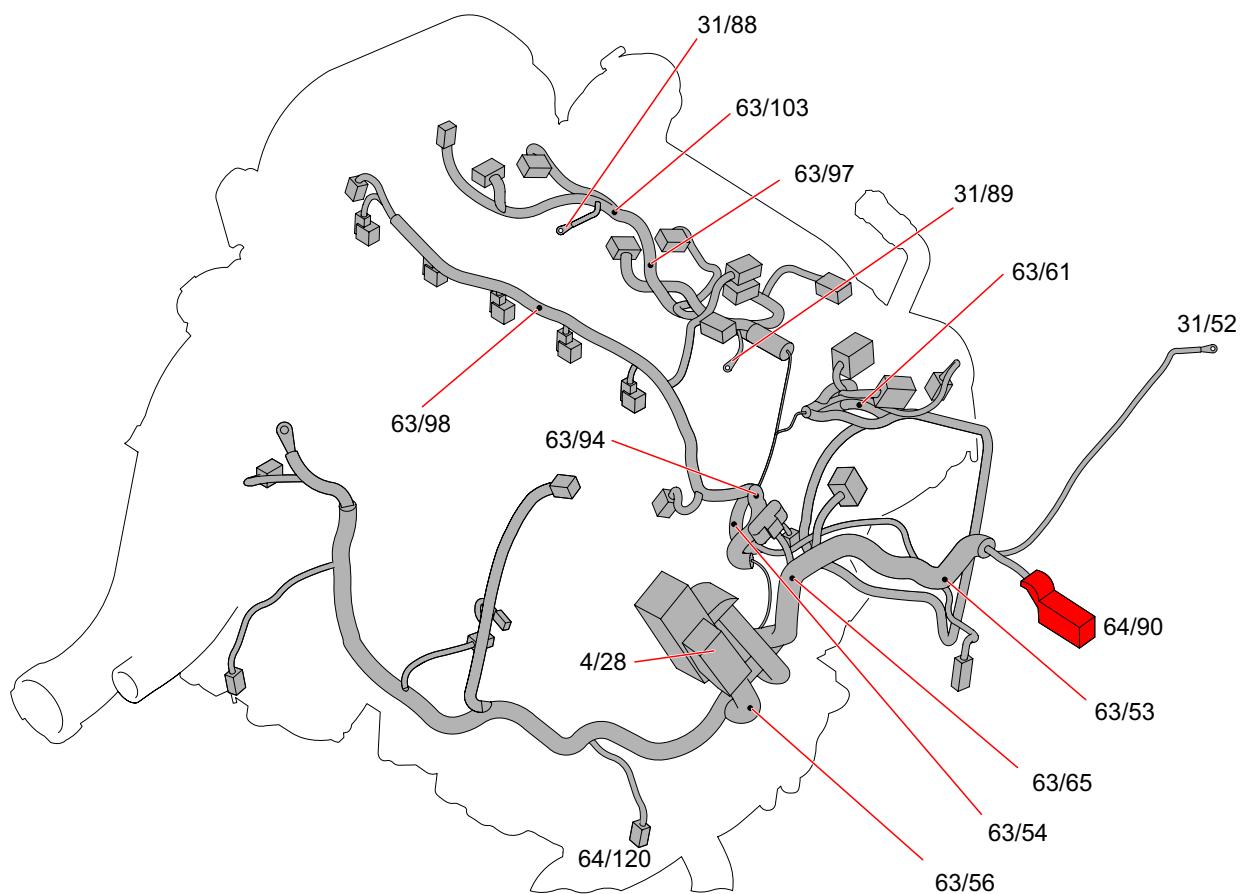


Cable harness routing in vehicle Engine harness Gasoline, 5-cyl., Turbo

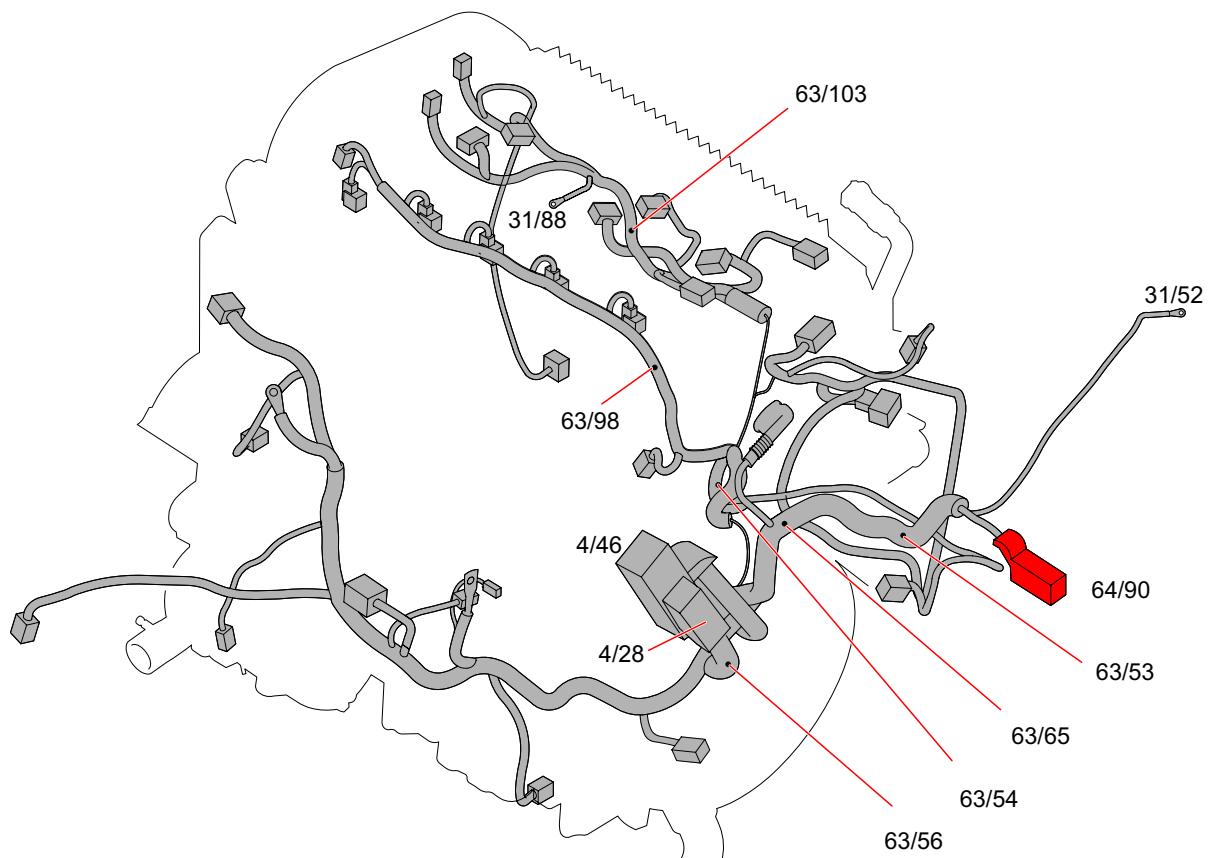

Cable harness routing in vehicle Engine harness Diesel 1.6l

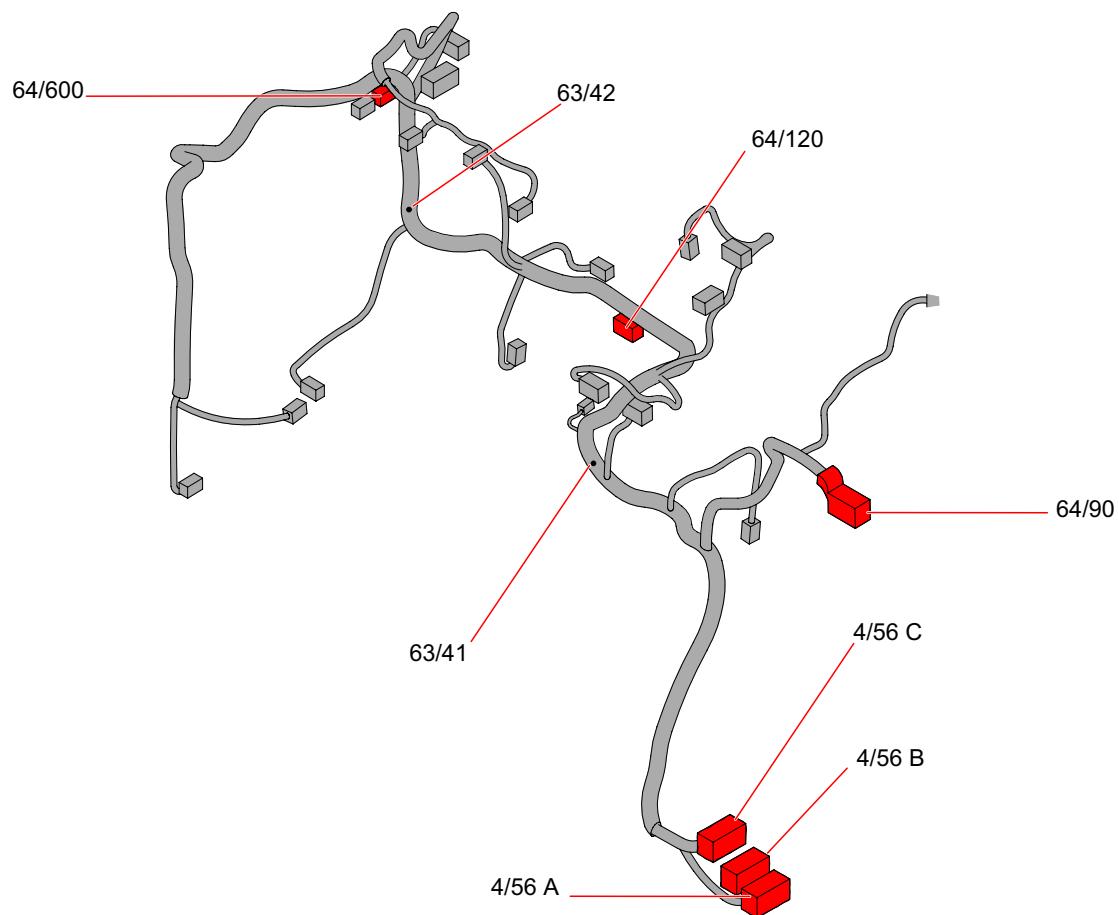


Cable harness routing in vehicle Engine harness Diesel 2.0l

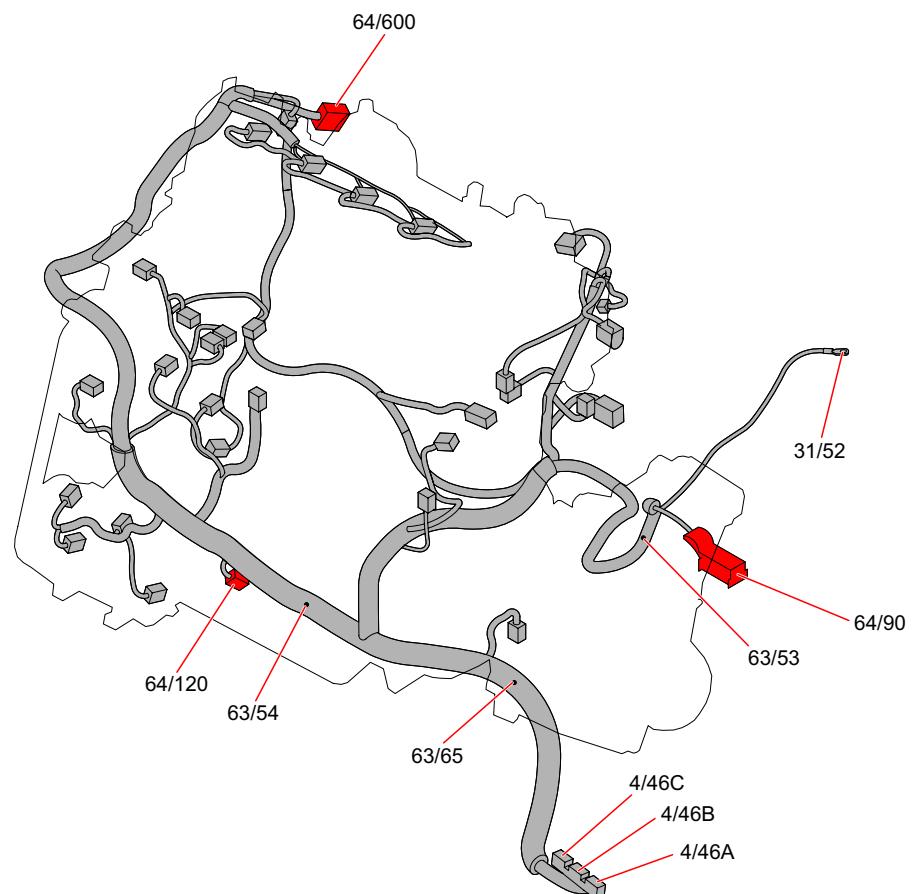


Cable harness routing in vehicle


Engine harness Diesel 2.4I

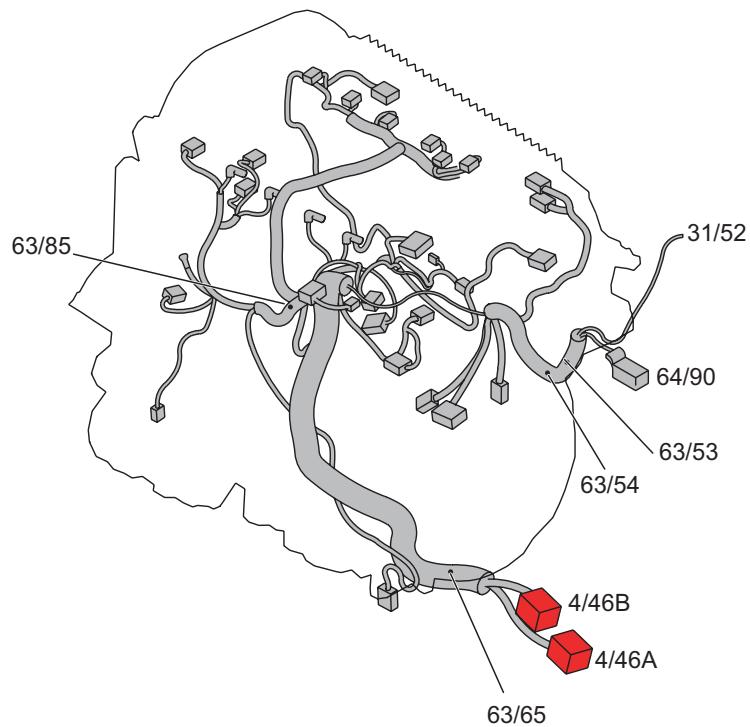


Cable harness routing in vehicle Engine compartment harness, 4-cyl.

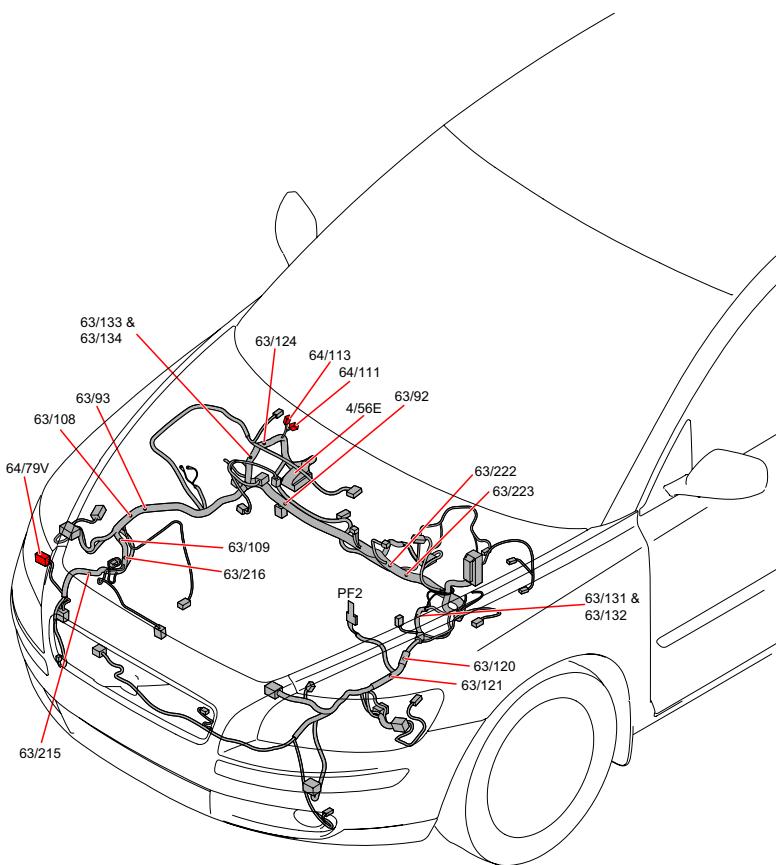


Cable harness routing in vehicle Engine compartment harness, 5-cyl.

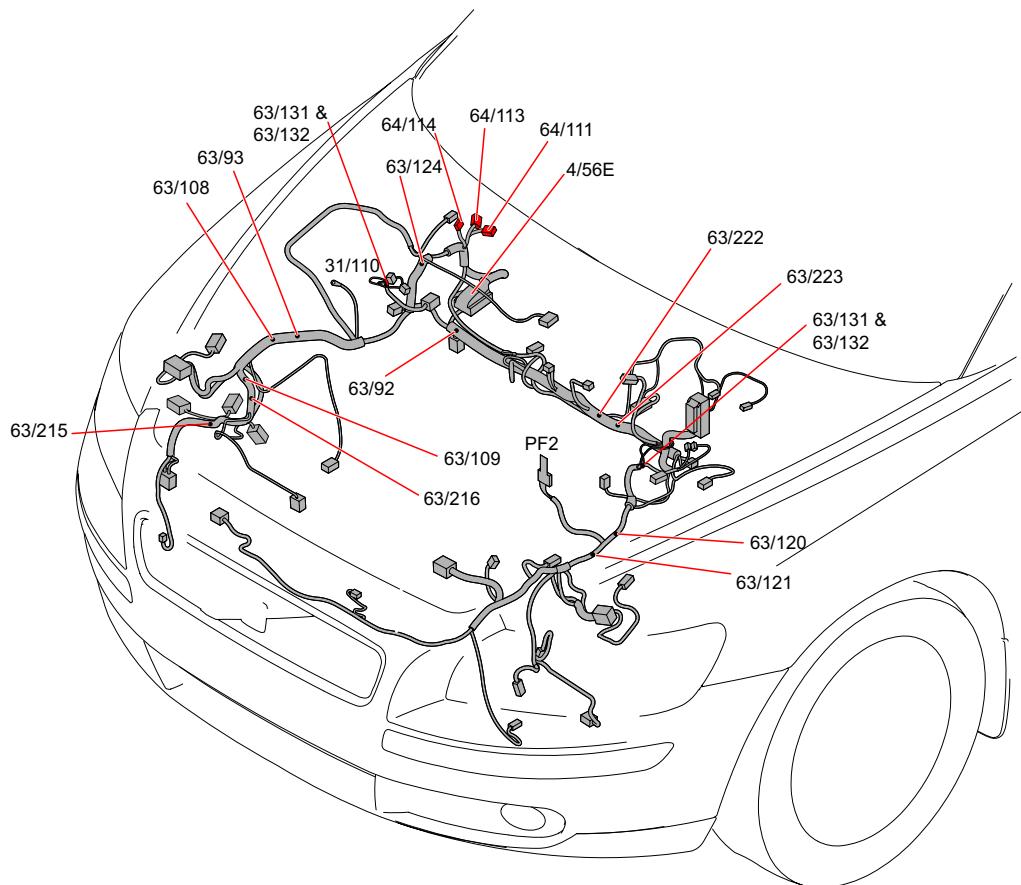

Cable harness routing in vehicle Dashboard harness LHD

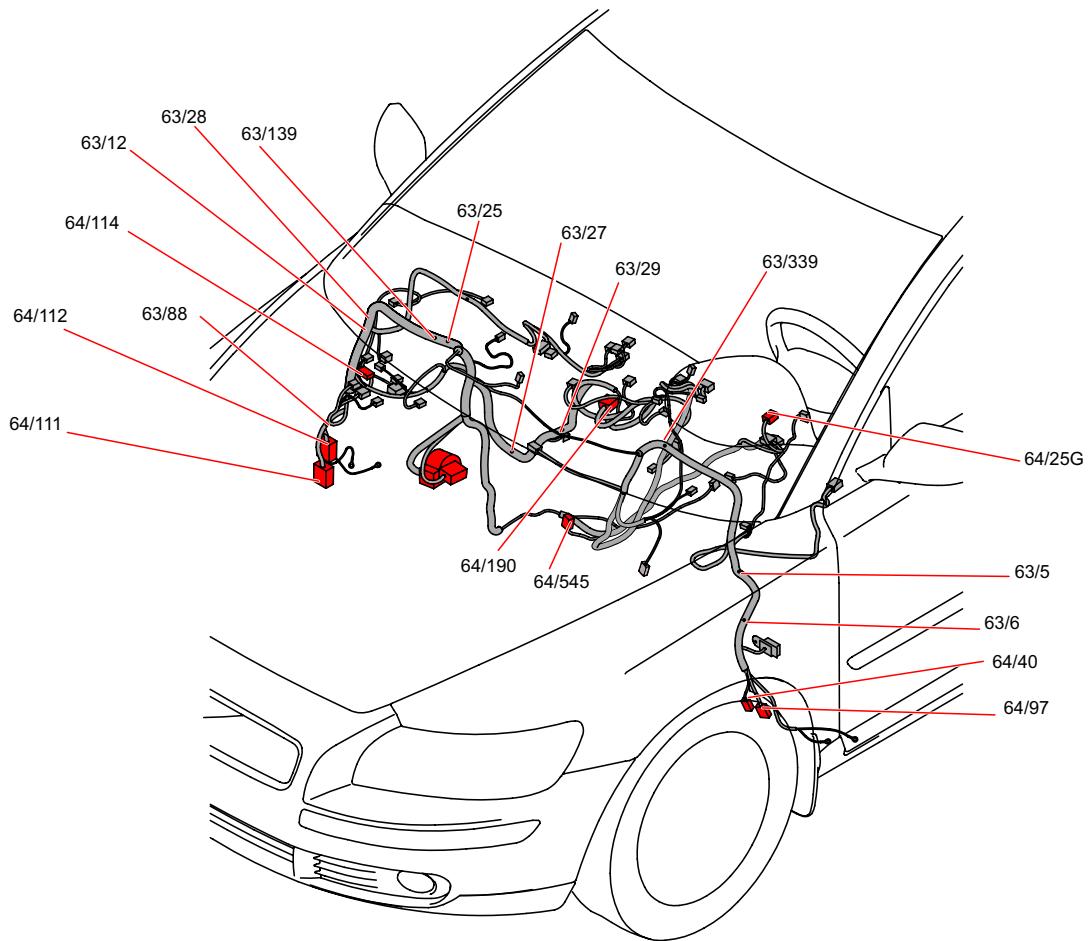


Cable harness routing in vehicle Dashboard harness RHD

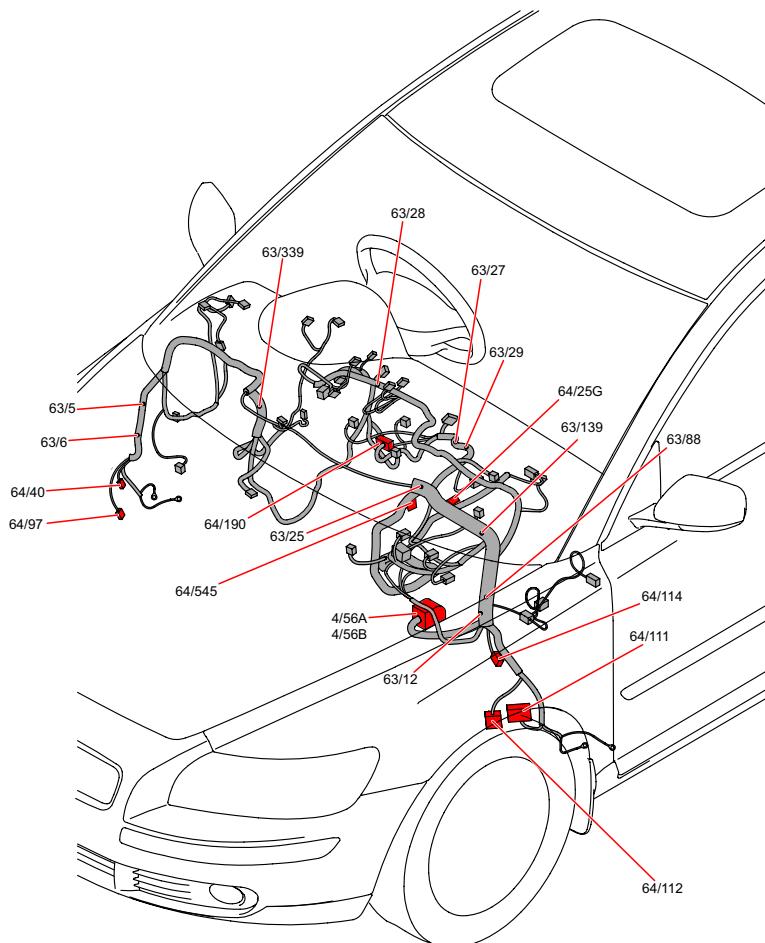


Cable harness routing in vehicle

Floor harness S40 LHD

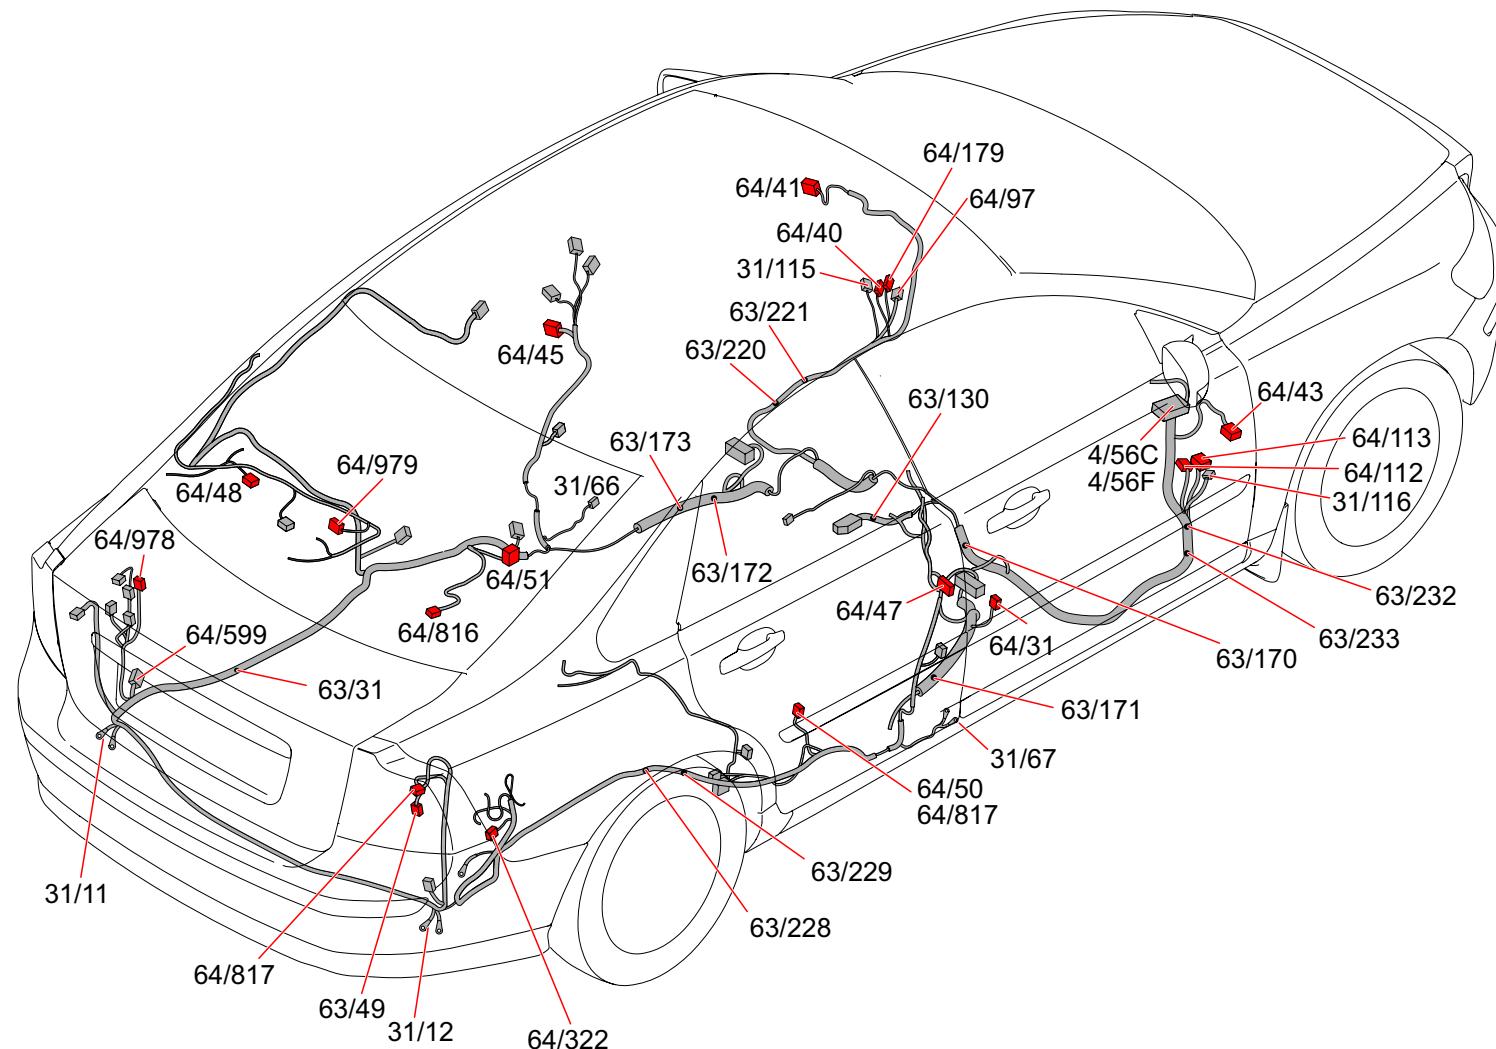


Cable harness routing in vehicle

Floor harness S40 RHD

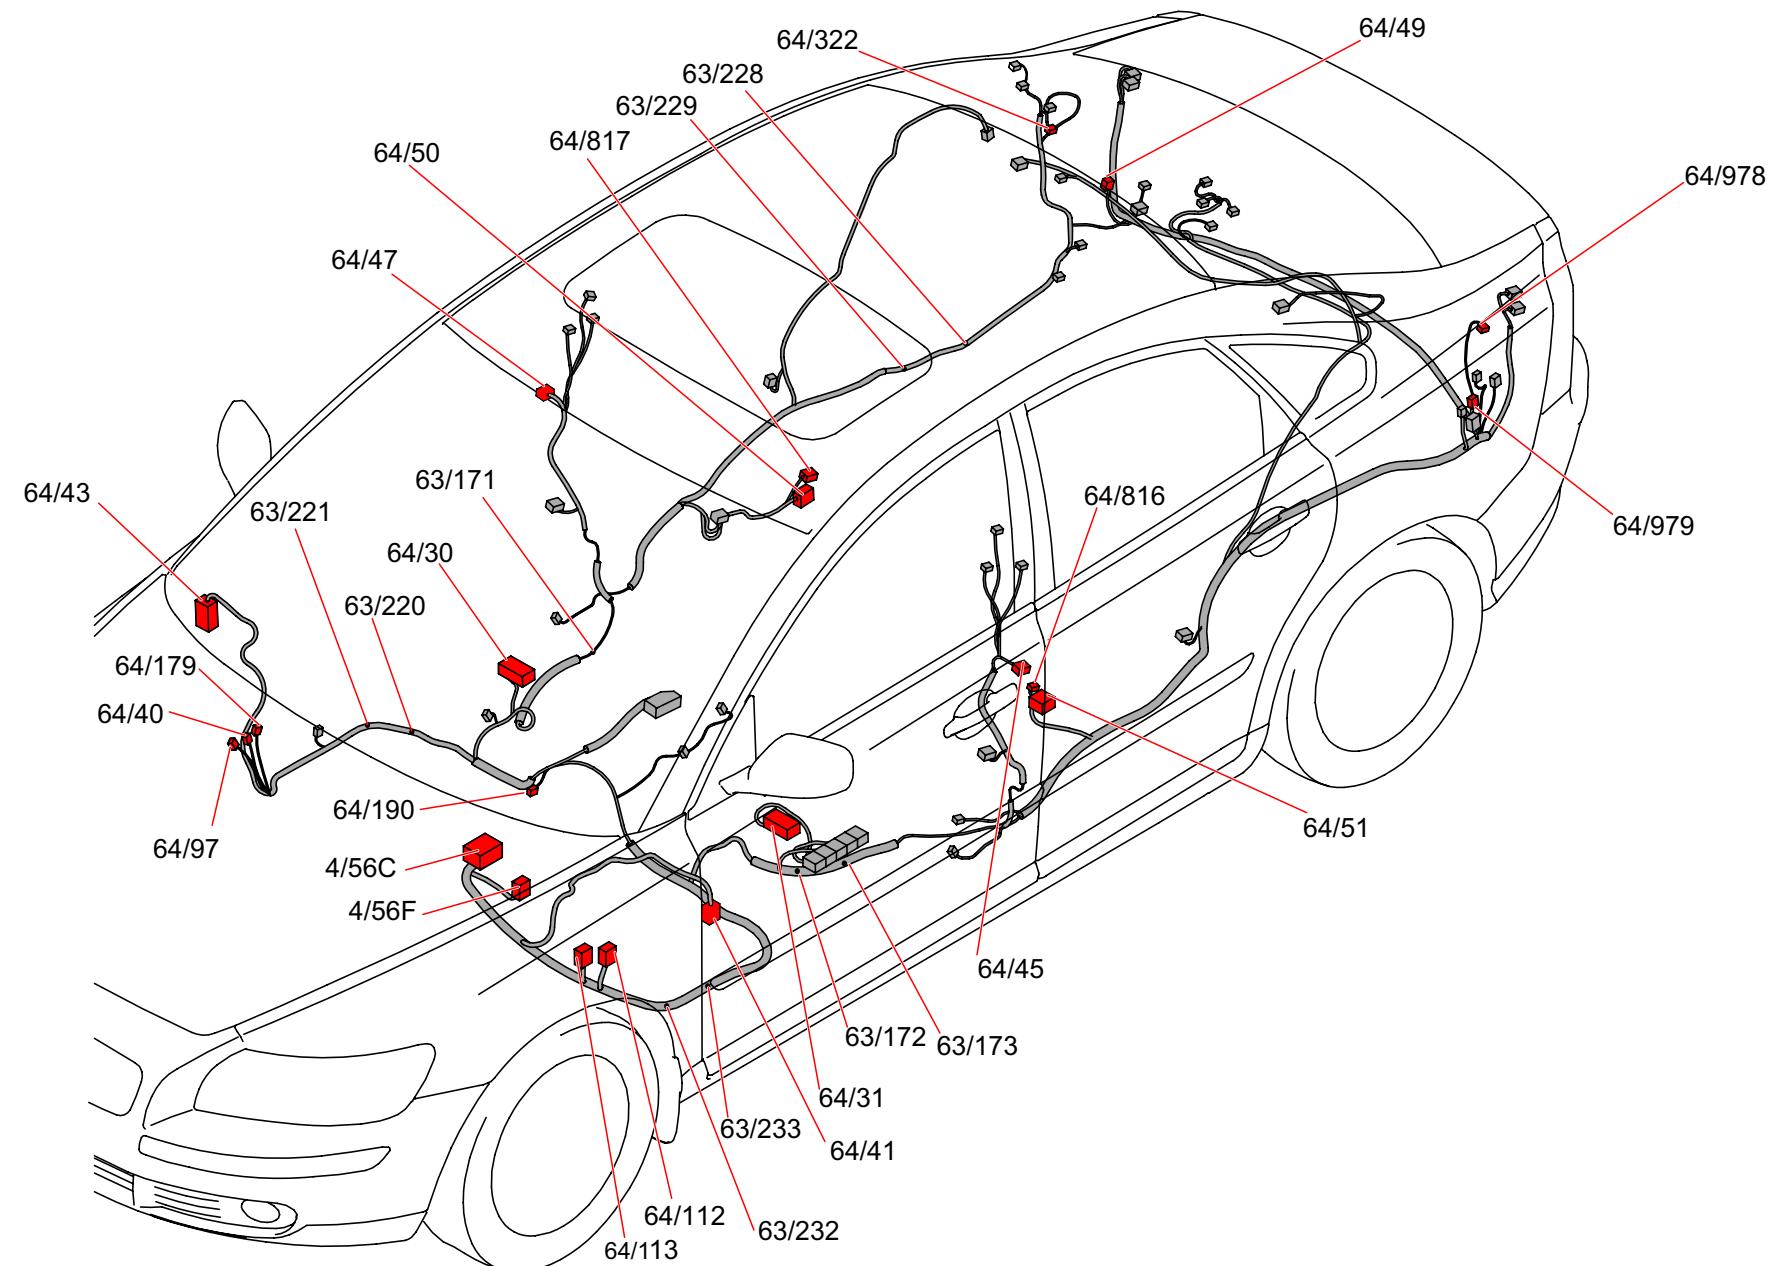


Cable harness routing in vehicle

Floor harness, V50 LHD

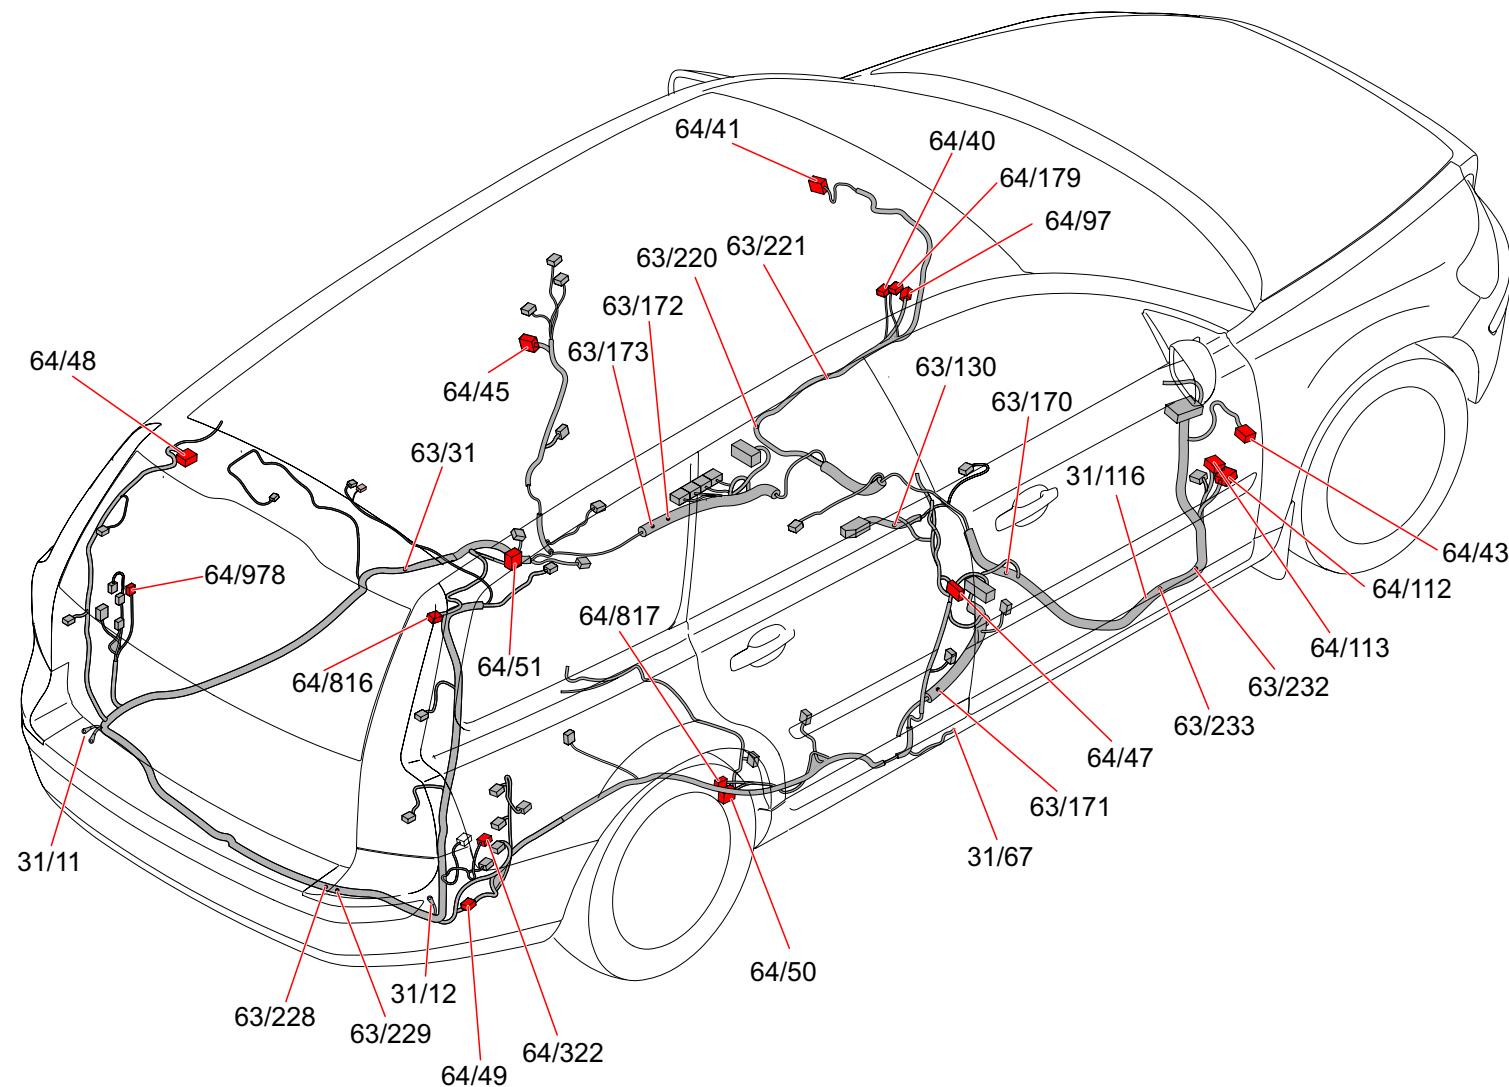


Cable harness routing in vehicle

Floor harness V50 RHD

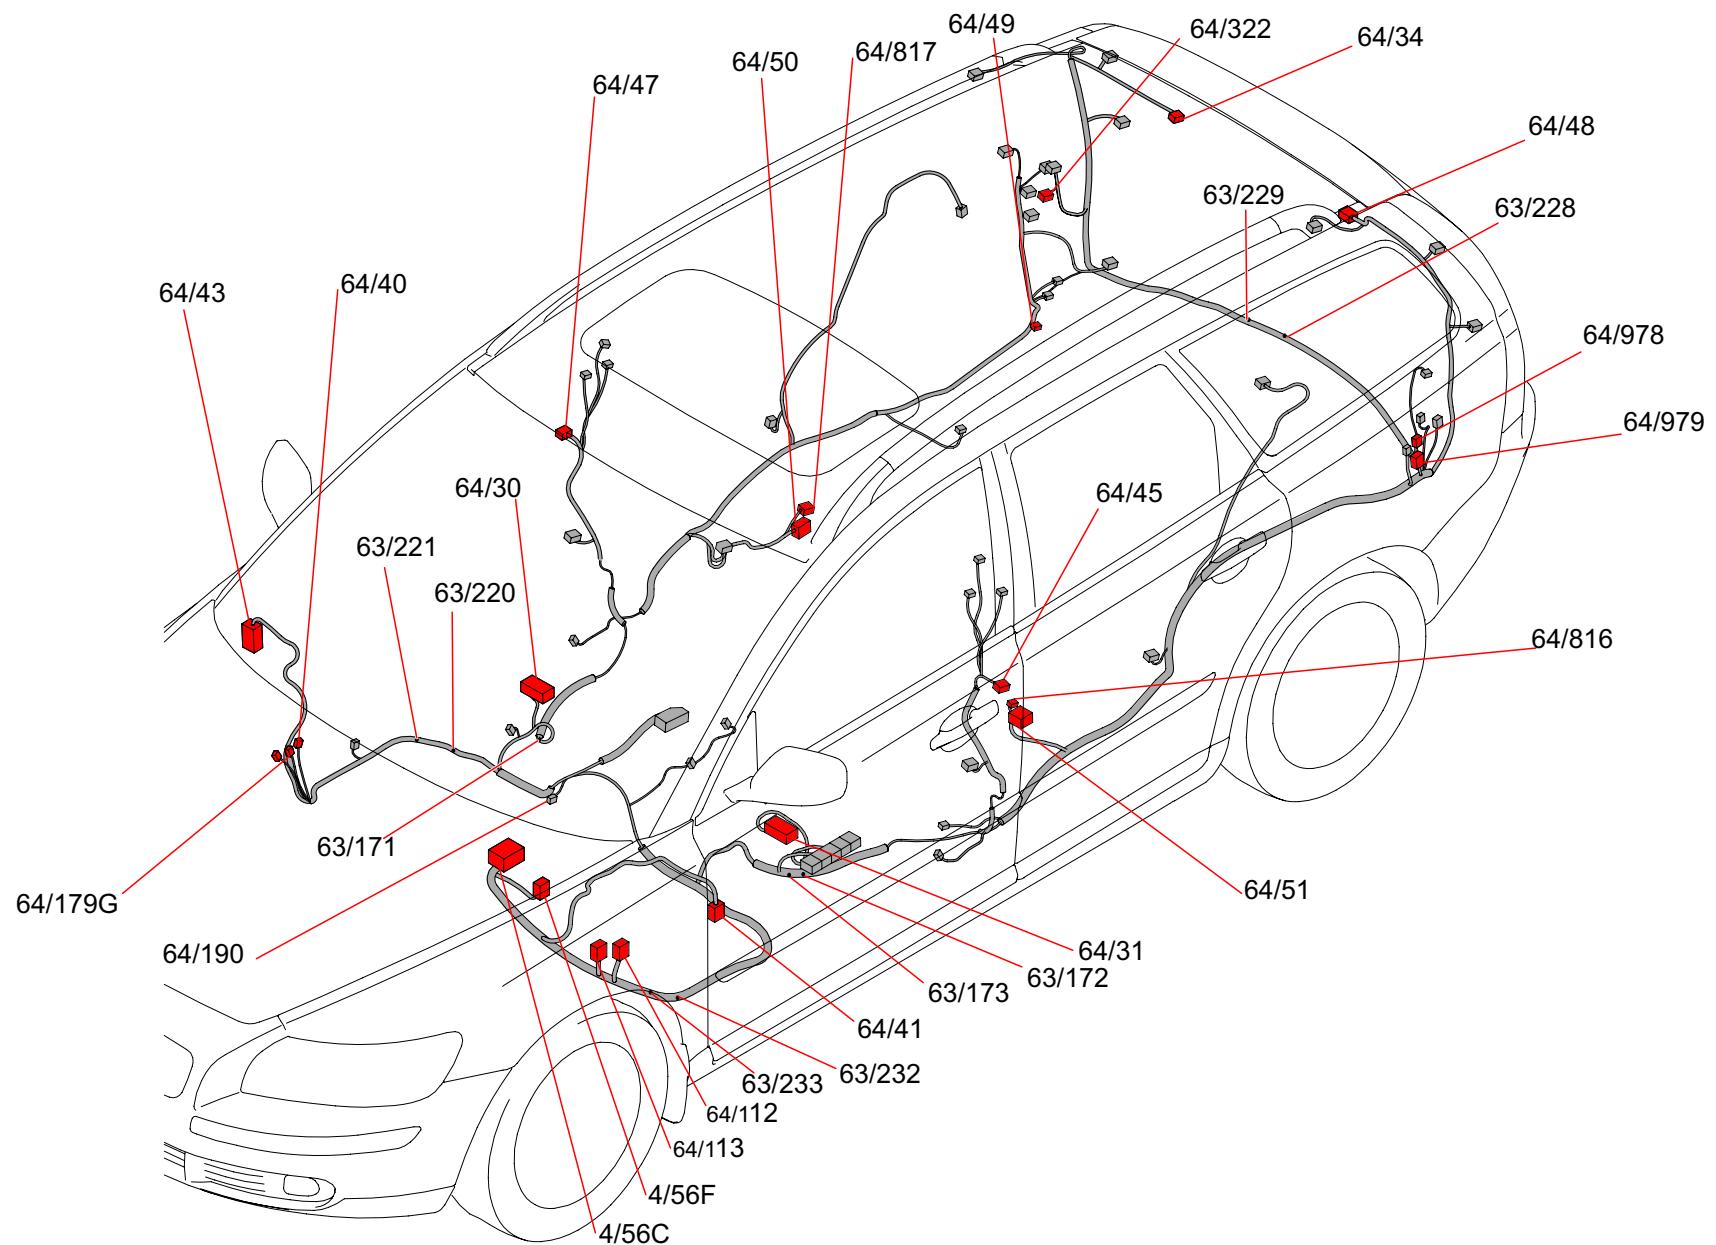


Cable harness routing in vehicle

Floor harness, C70, LHD

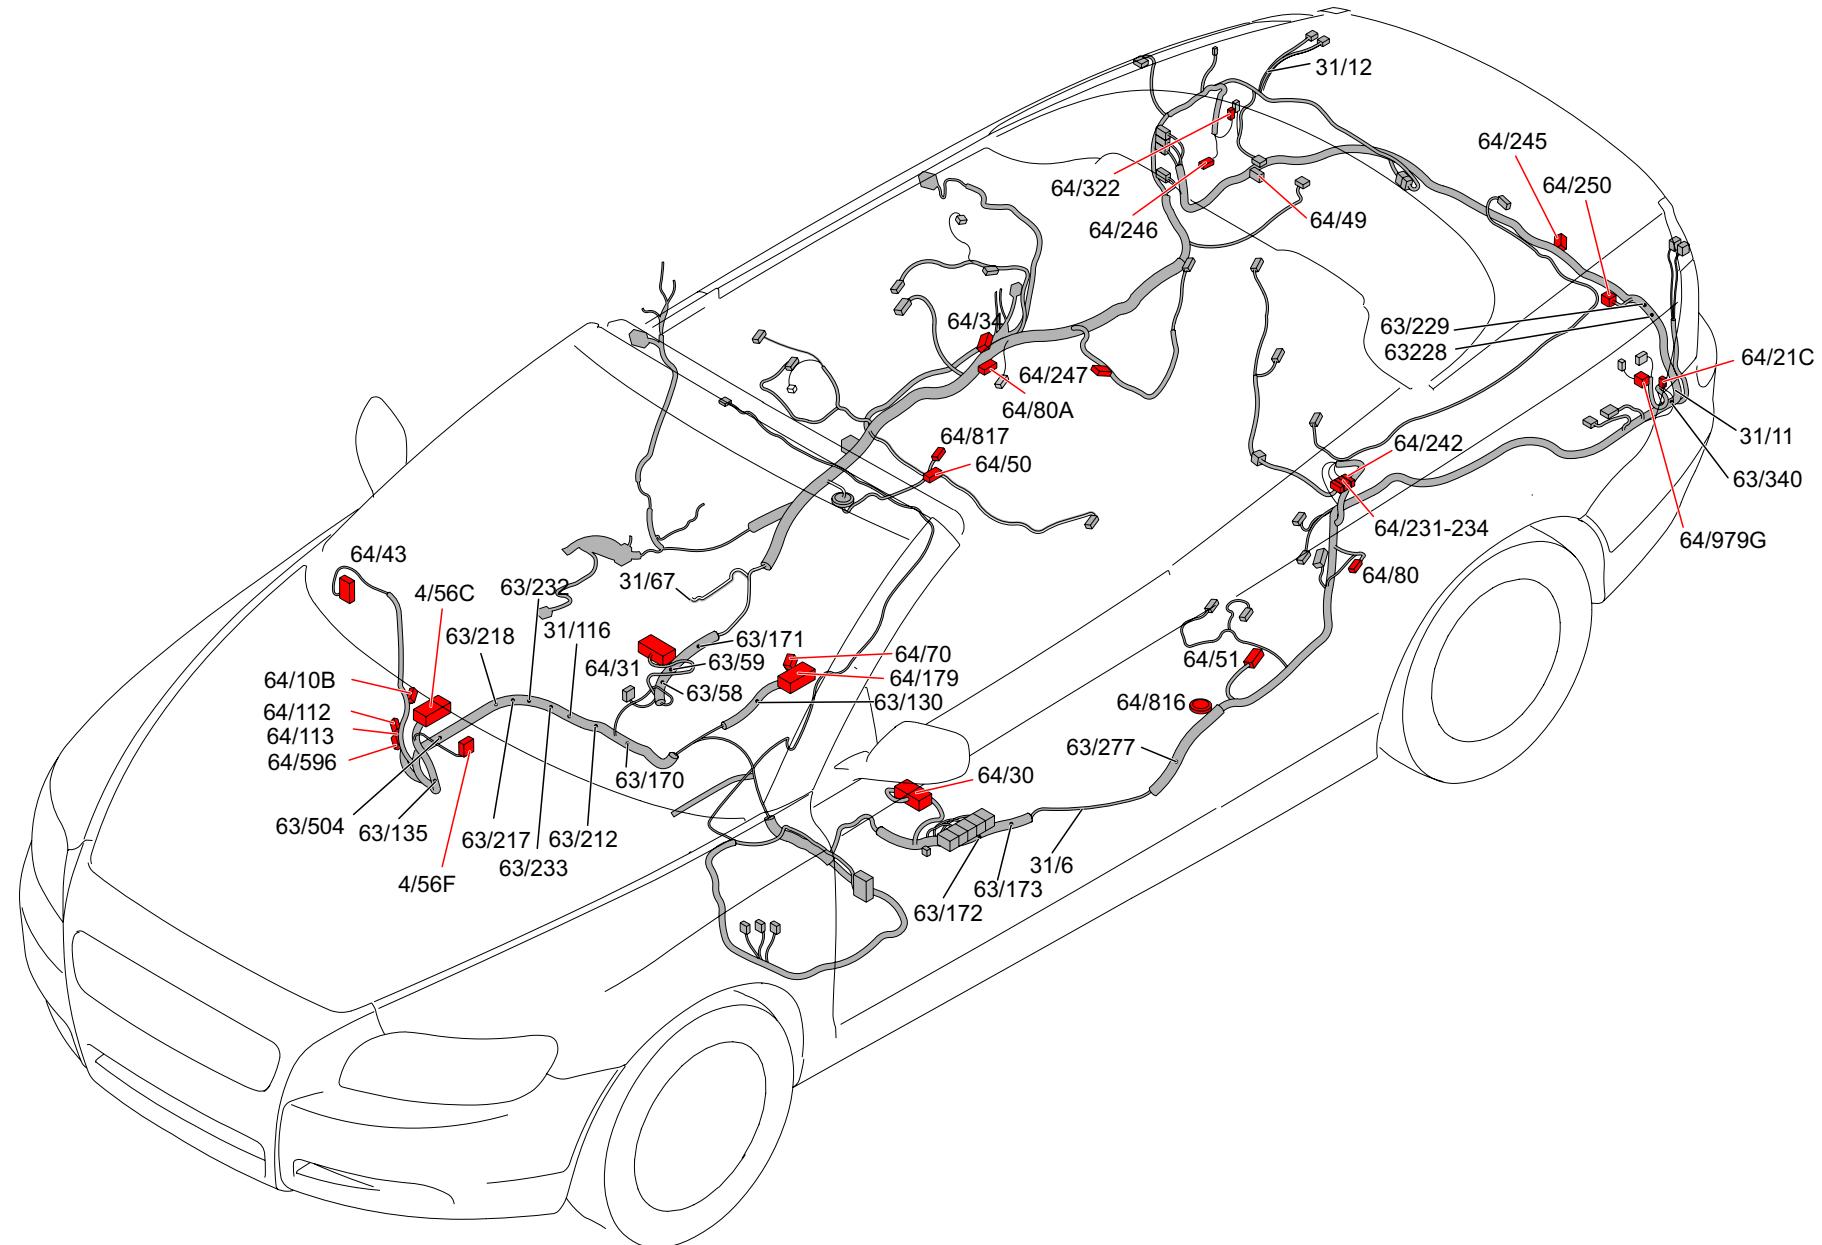


Cable harness routing in vehicle


Floor harness C70 RHD

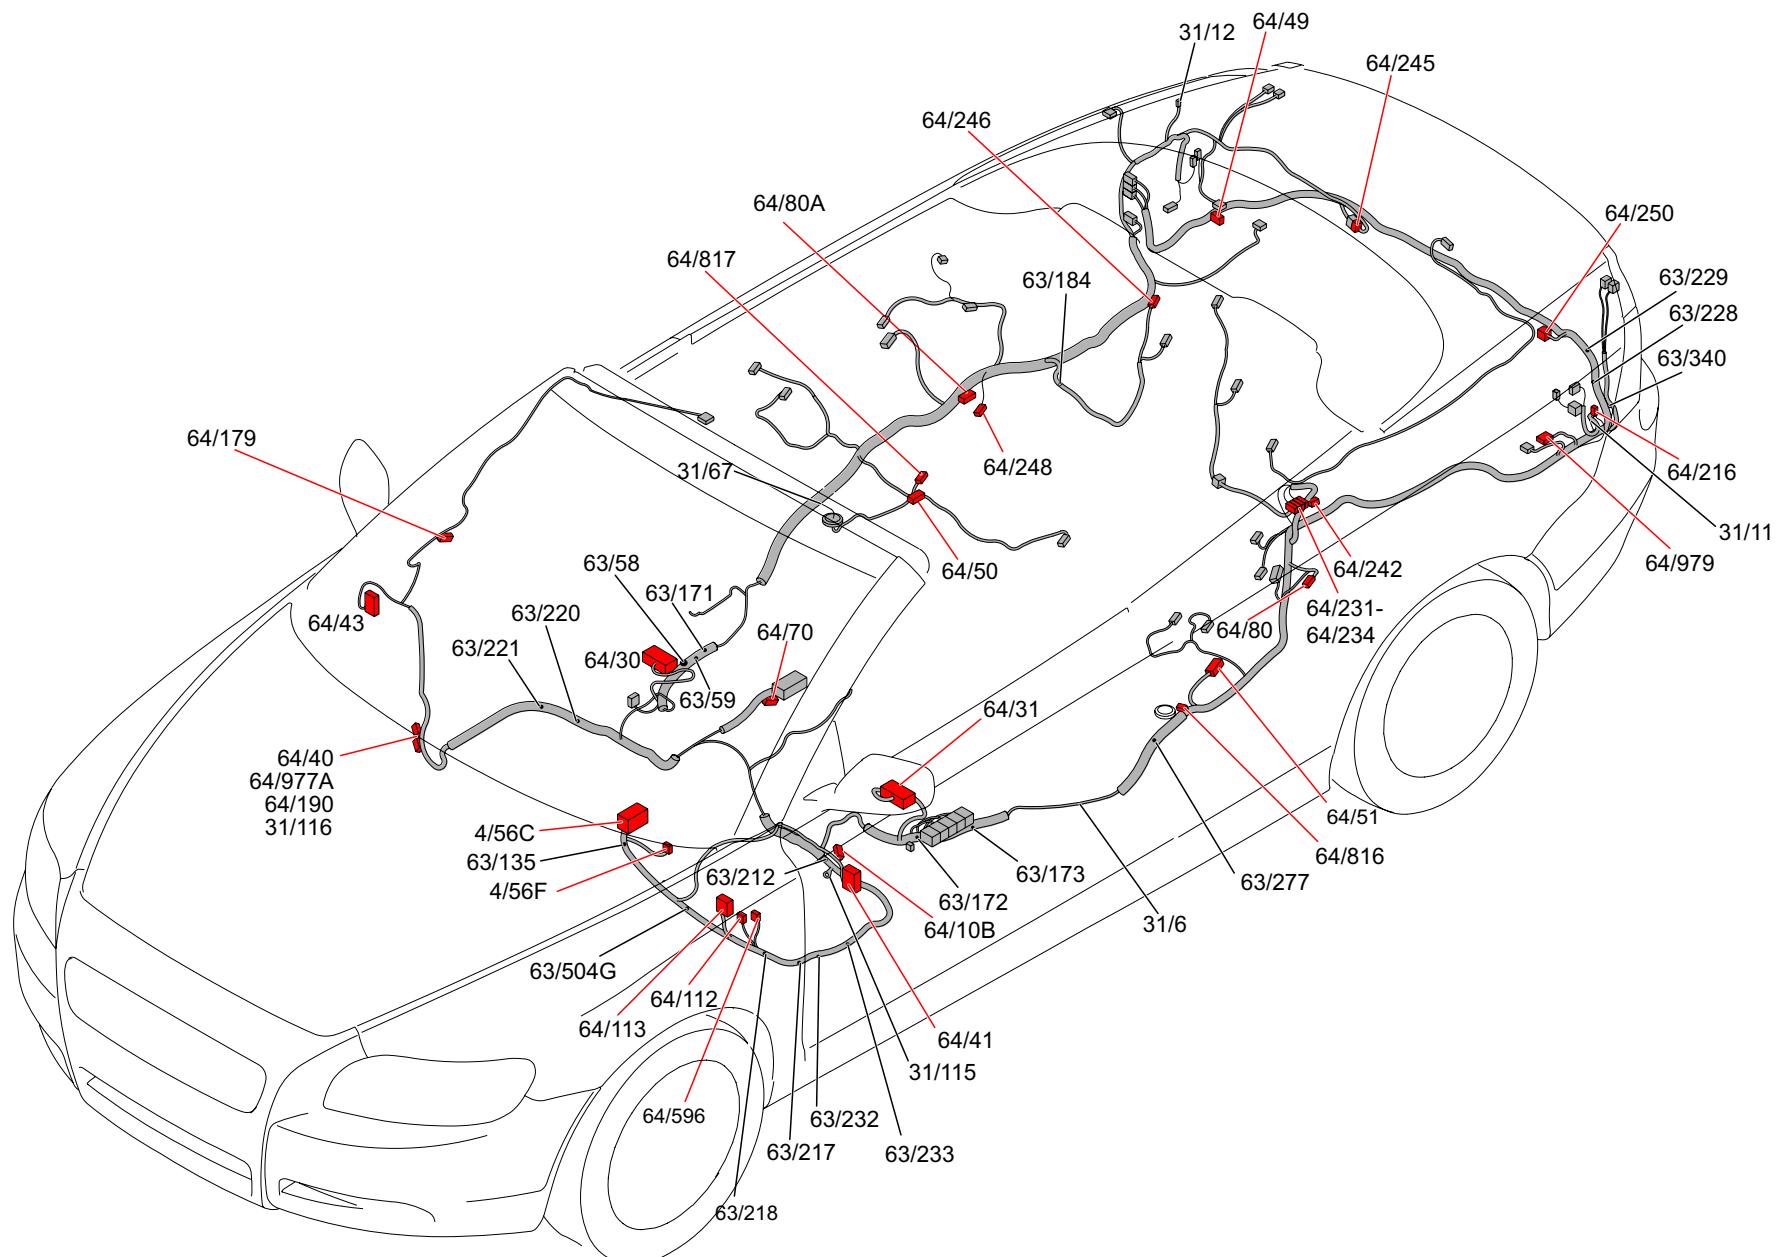


Cable harness routing in vehicle Roof harness S40

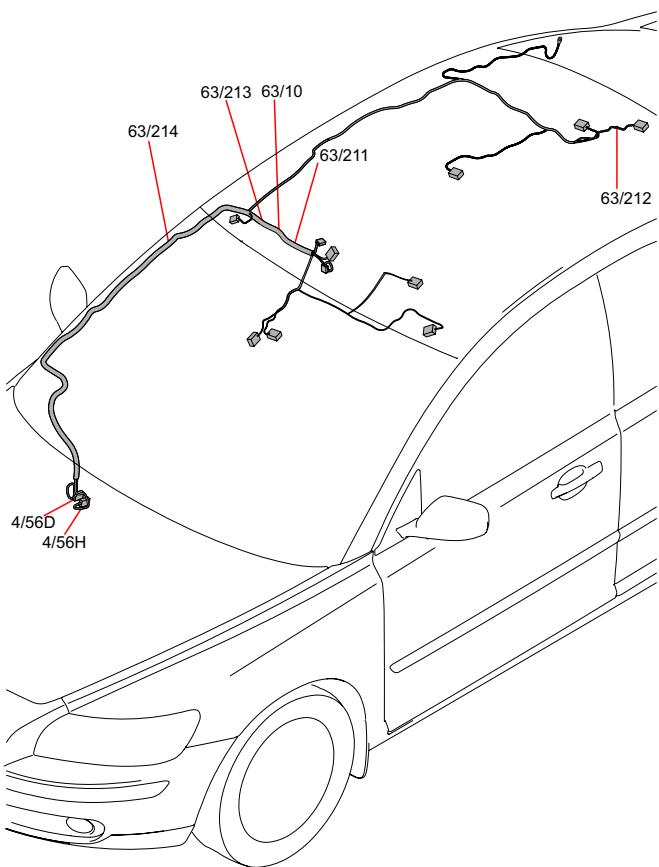


Cable harness routing in vehicle Roof harness V50

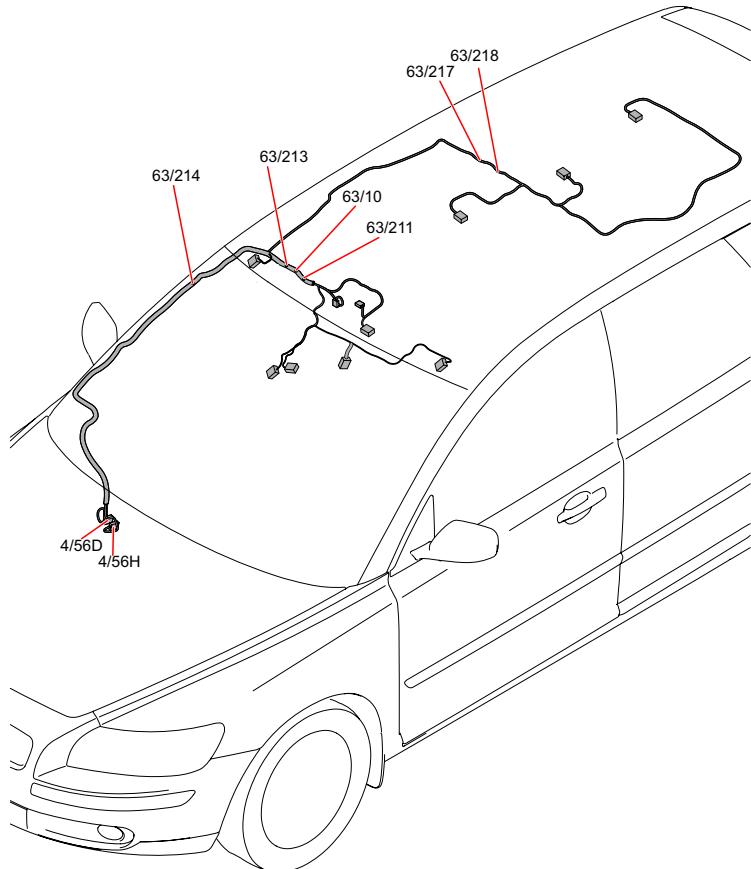


Cable harness routing in vehicle
Tunnel harness S40/V50

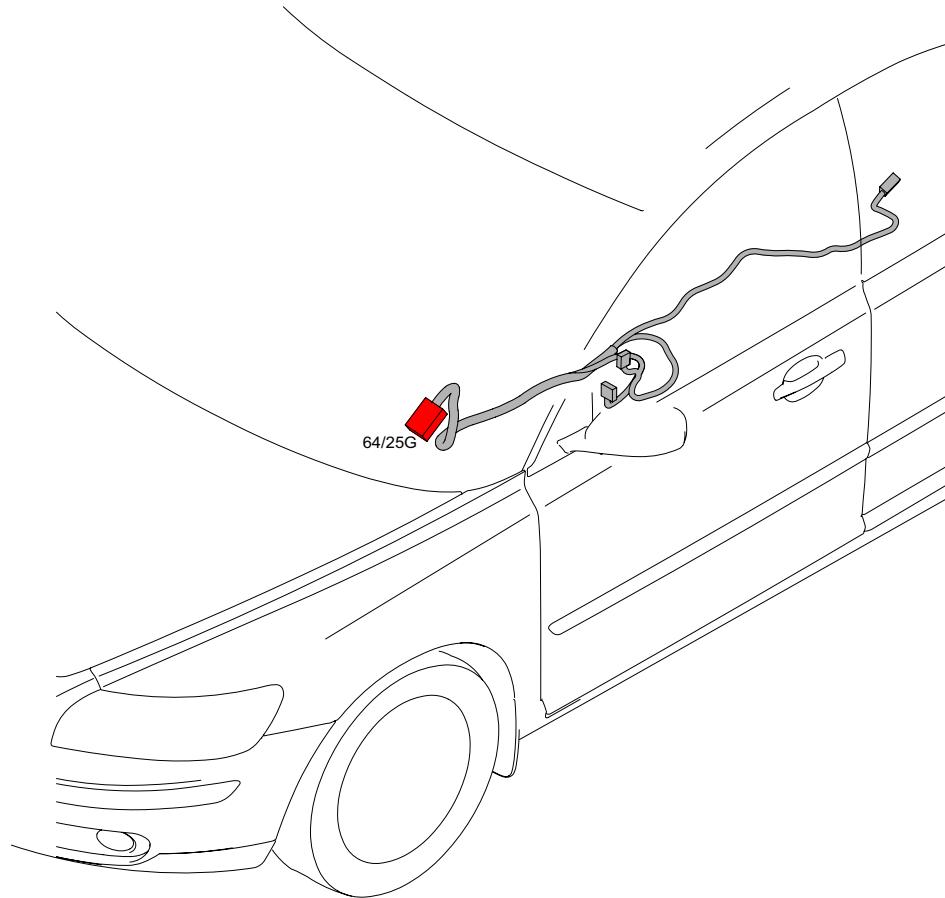


Cable harness routing in vehicle
Tunnel harness C70

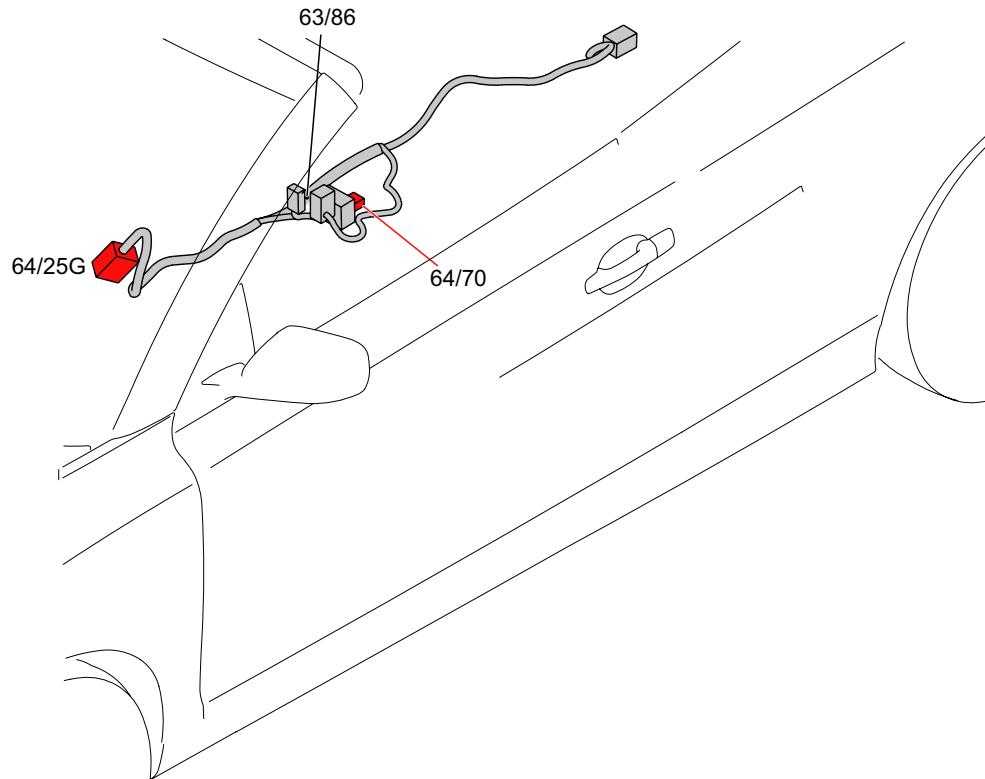


**Cable harness routing in vehicle
Driver's door harness S40/V50**

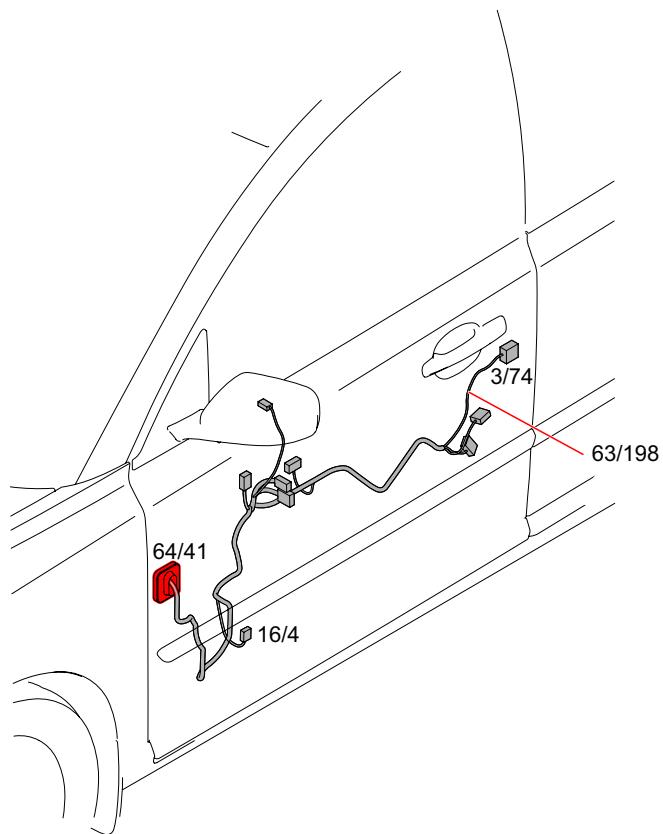


**Cable harness routing in vehicle
Passenger door harness S40/V50**

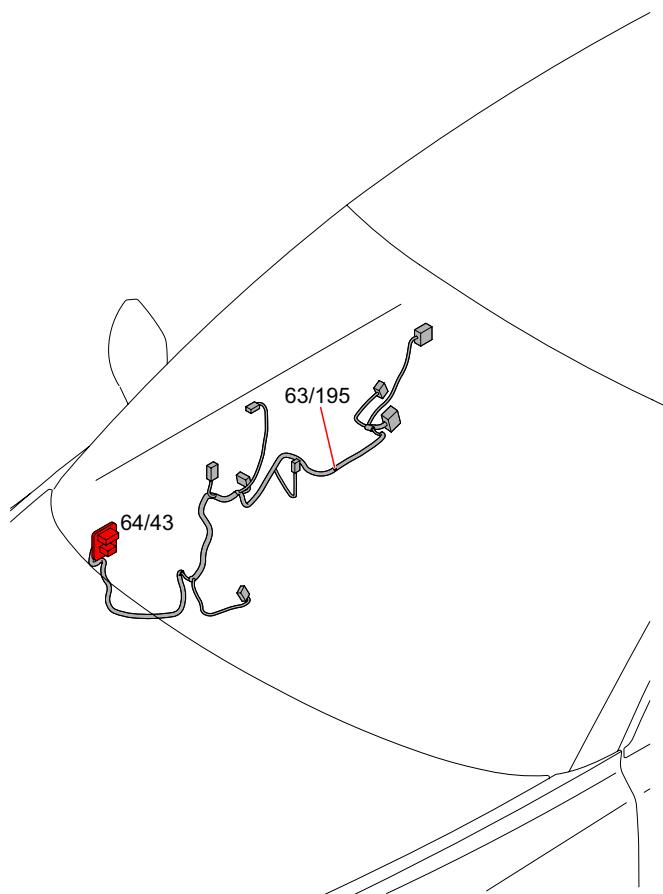


Cable harness routing in vehicle Driver's door harness C70

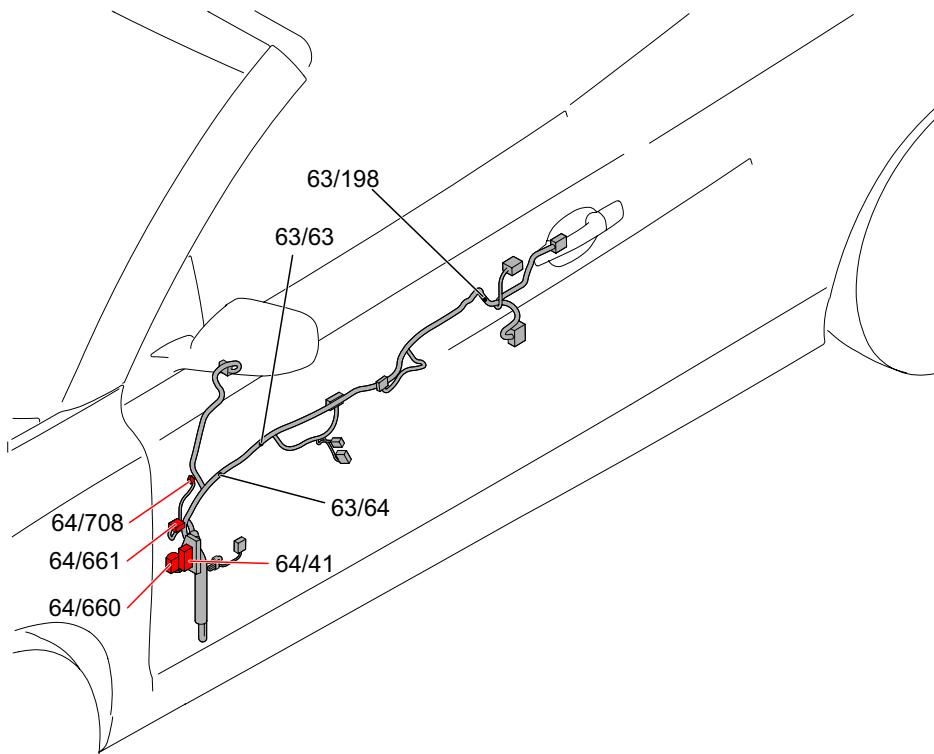


Cable harness routing in vehicle Driver's door harness supplement C70

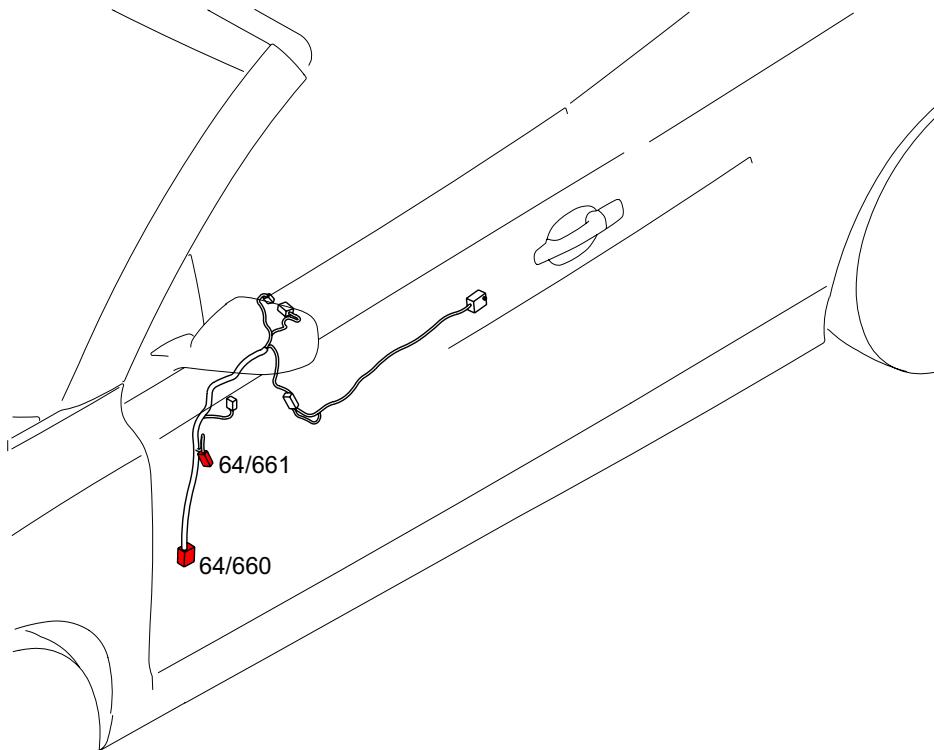


Cable harness routing in vehicle Passenger door harness C70

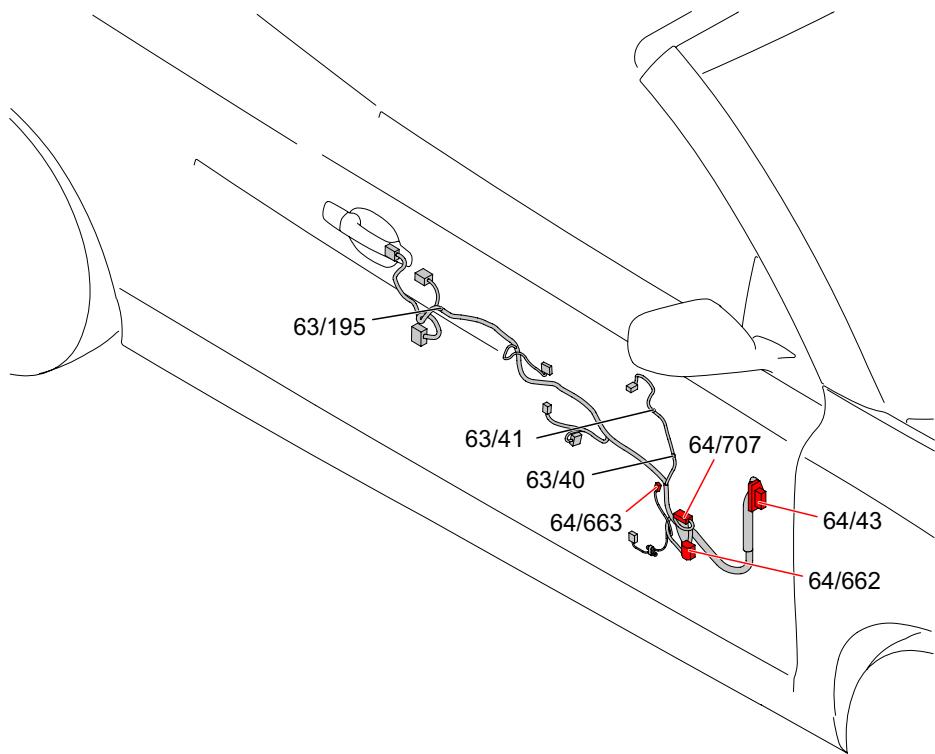


Cable harness routing in vehicle Passenger door harness supplement C70

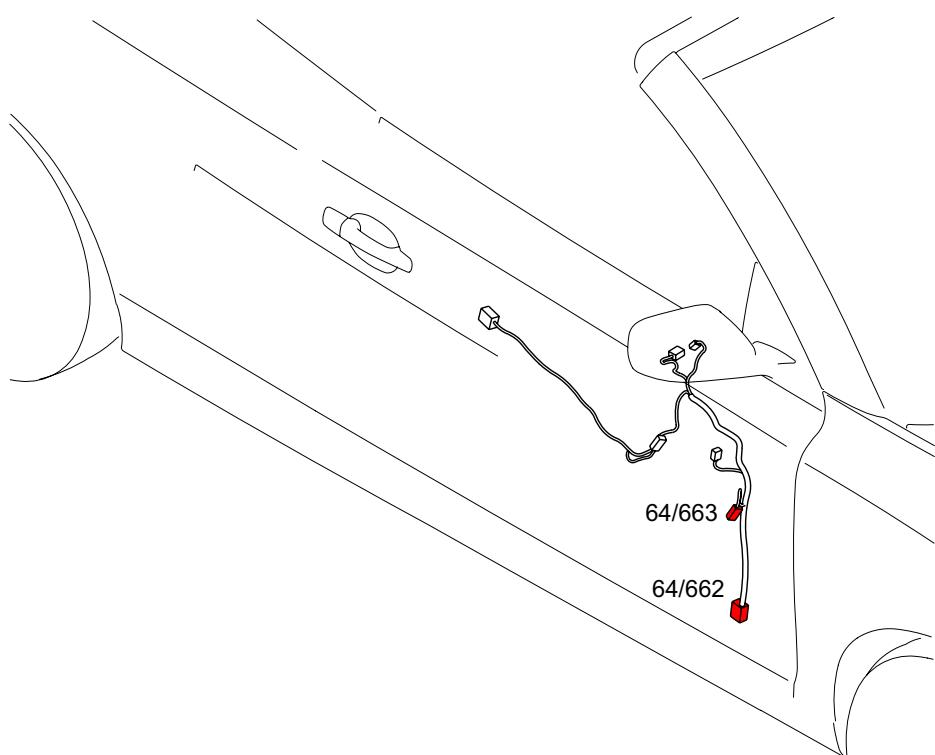


**Cable harness routing in vehicle
Rear right door harness S40/V50**

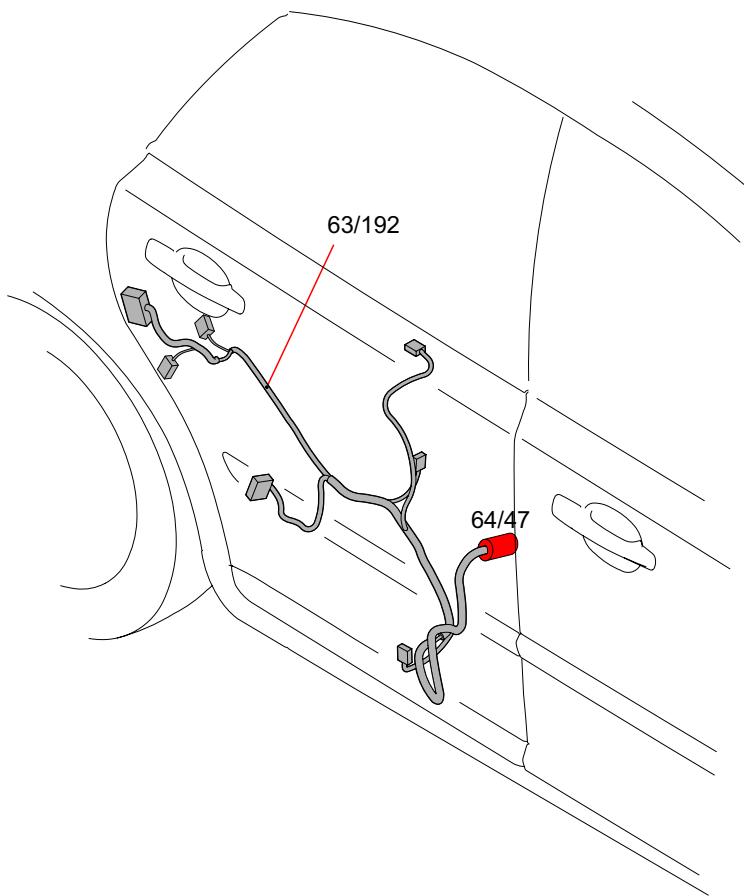


**Cable harness routing in vehicle
Rear left door harness S40/V50**

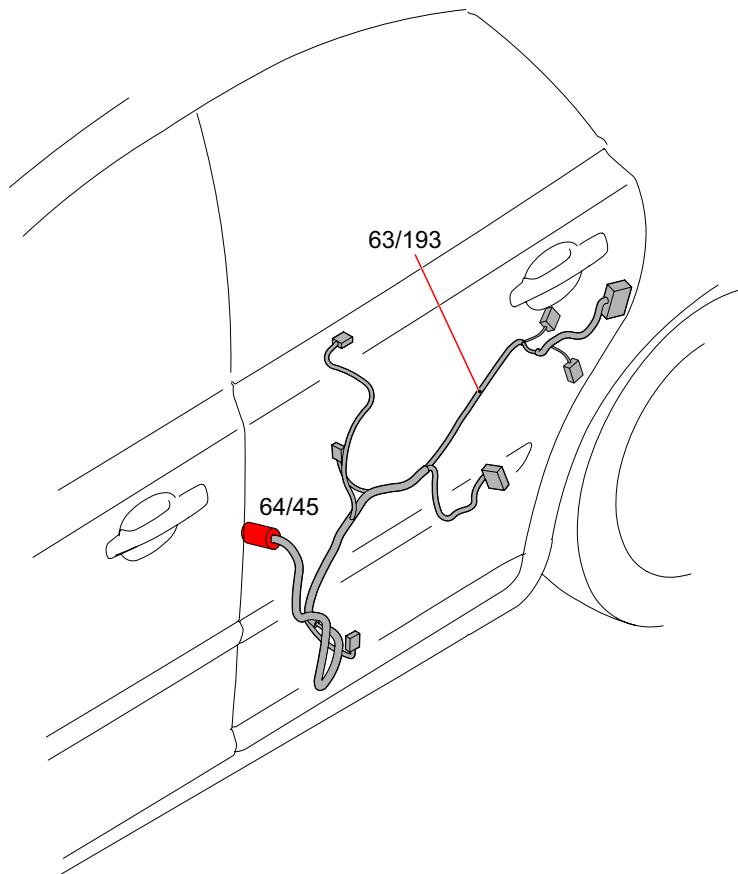


**Cable harness routing in vehicle
Harness, rear side panel, left C70**

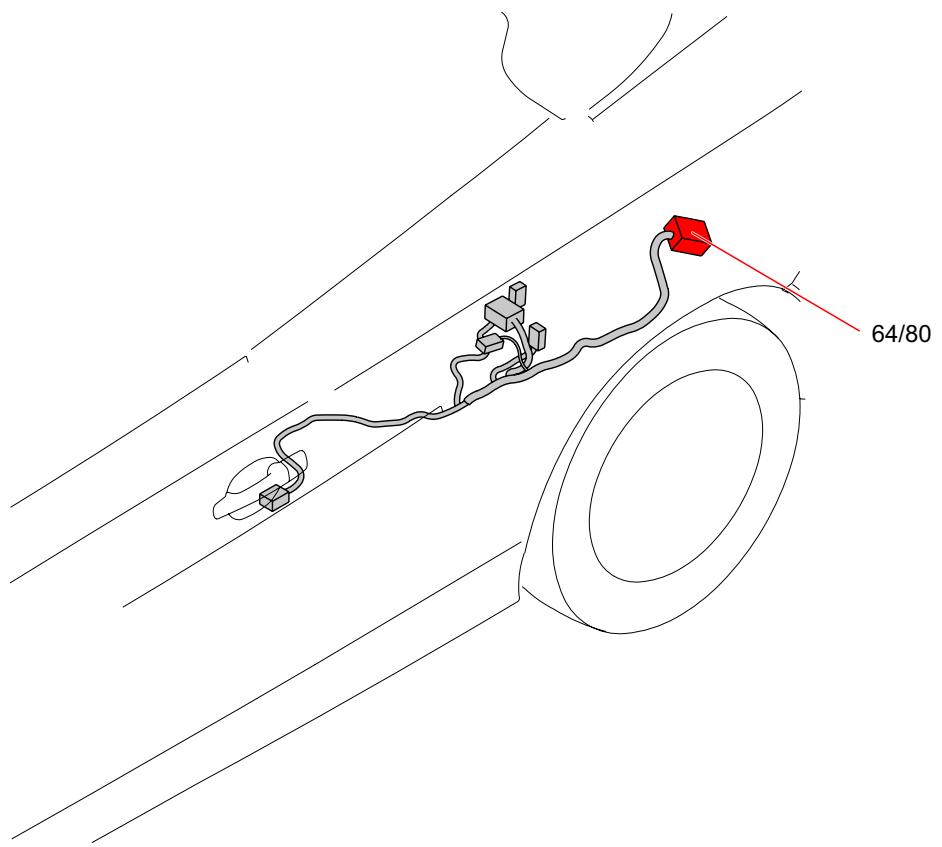


**Cable harness routing in vehicle
Harness, rear side panel, right C70**

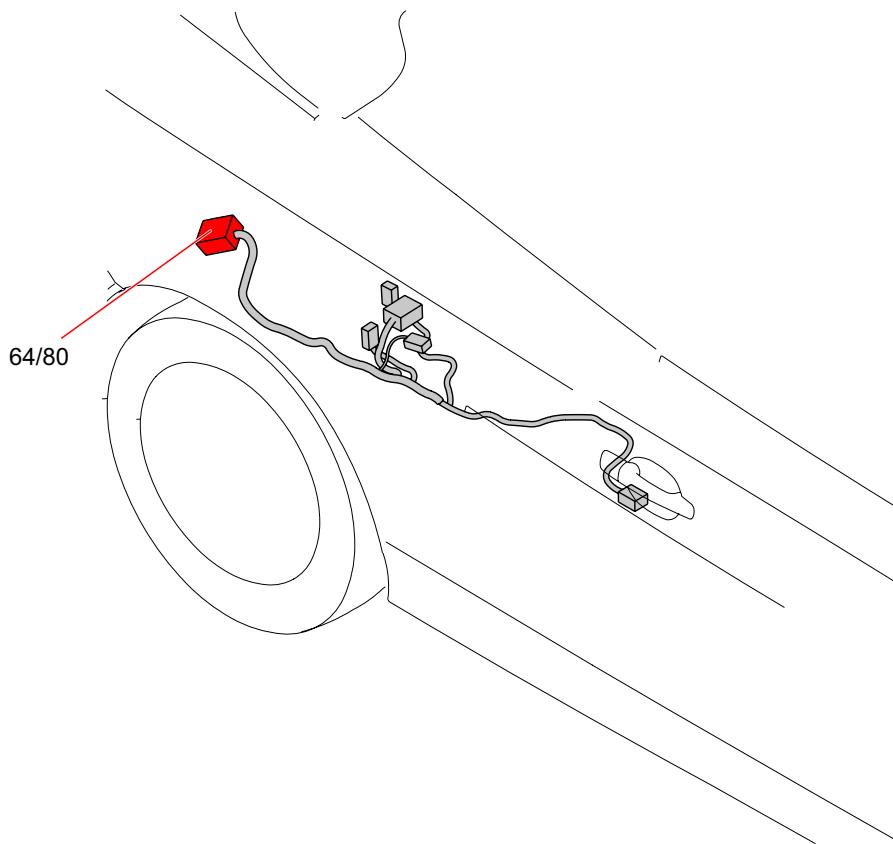


**Cable harness routing in vehicle
Tailgate harness S40**

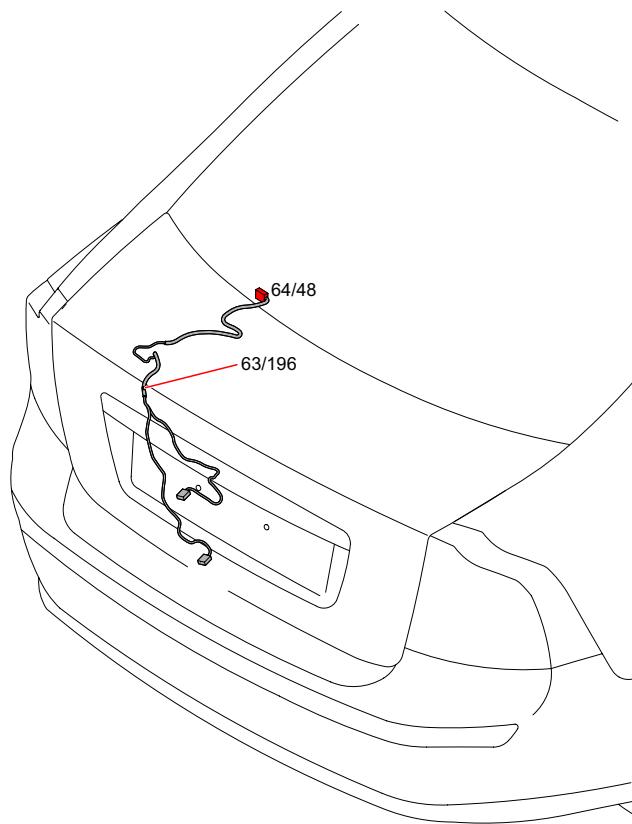

**Cable harness routing in vehicle
Tailgate harness V50**

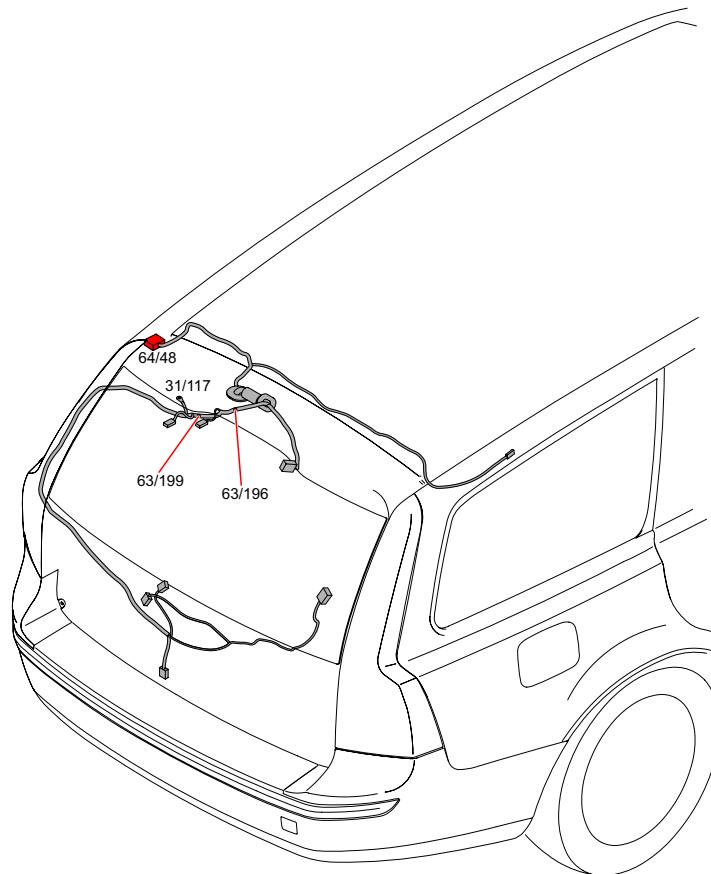


Cable harness routing in vehicle
Tailgate harness C70

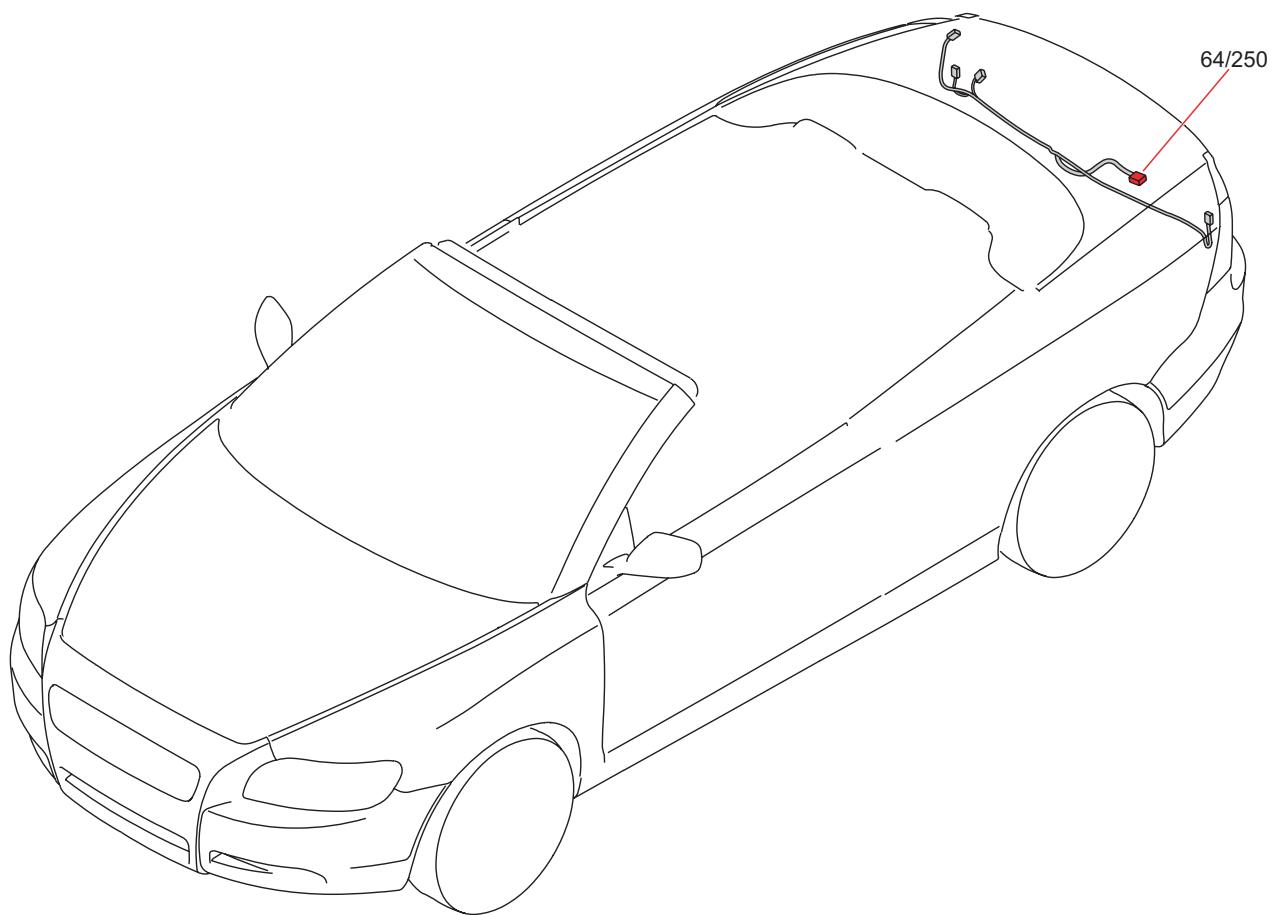


Component illustrations

1/1 - 2/64


1/1 Battery

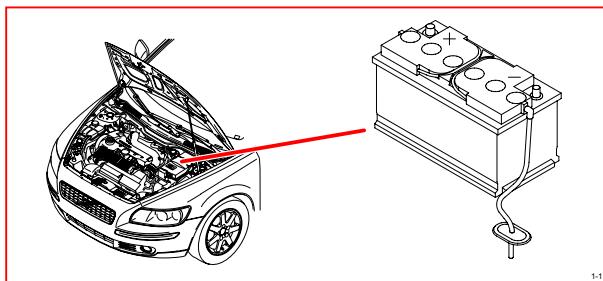


2/32 Main relay, engine management system

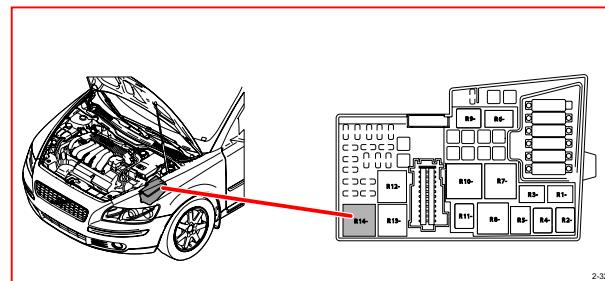


2/16 Relay, rear window wiper

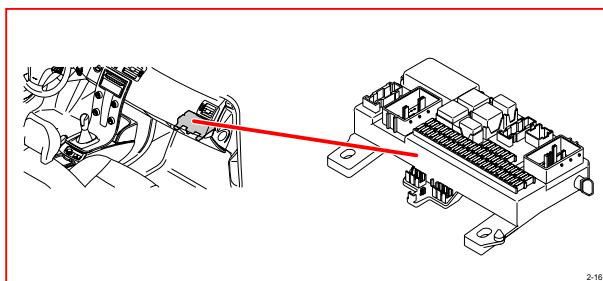


2/34 Relay, front fog lights

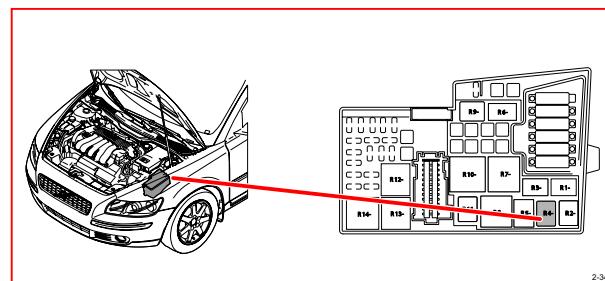


2/17 Relay, horn

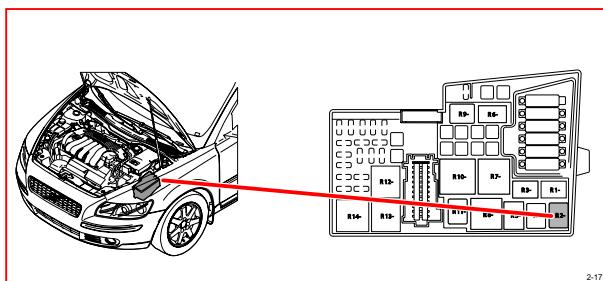


2/35 Relay, starter motor

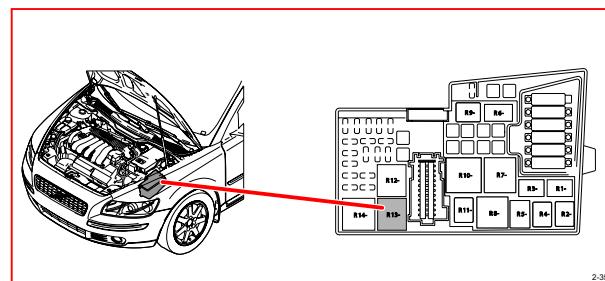


2/22 Relay, climate control system

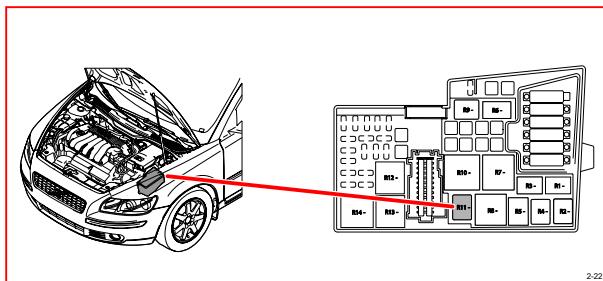


2/63 Relay, high beam

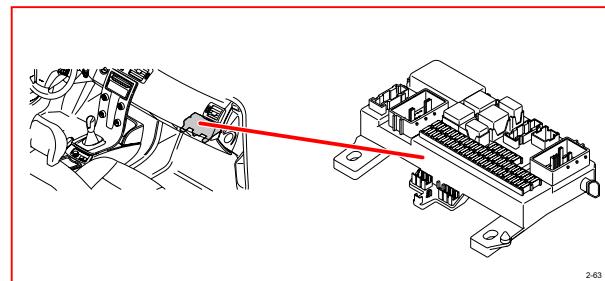

2/23 Relay, fuel pump

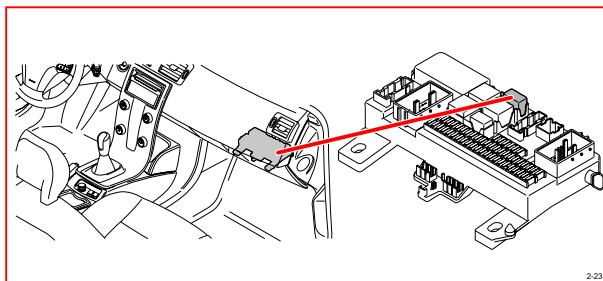


2/64 Relay, auxiliary lights (accessory)

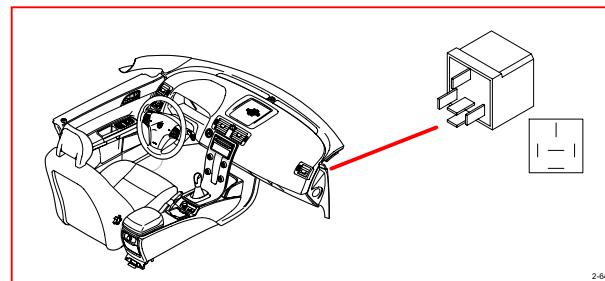


Component illustrations

2/80 - 2/192 4-cyl.


2/80 Relay, reversing light

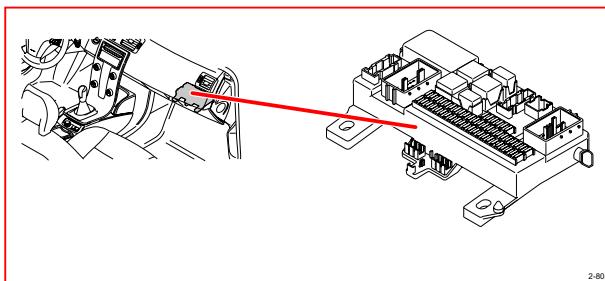


2/142 Fuel filter preheater relay

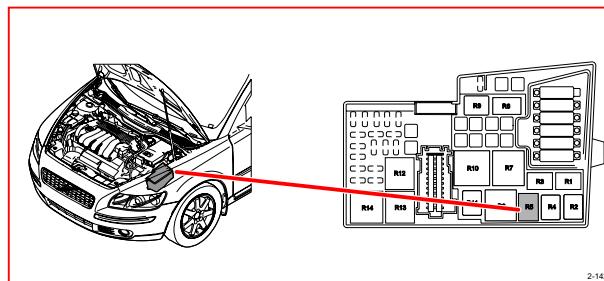


2/82 Relay, heated rear window

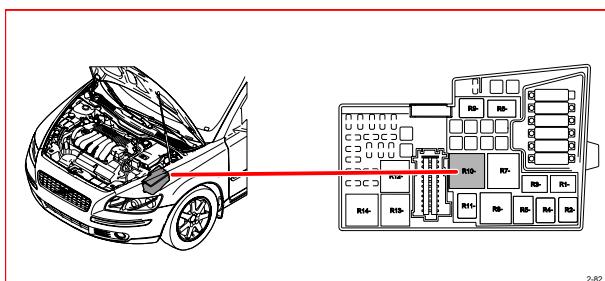


2/157 Relay, subwoofer control module

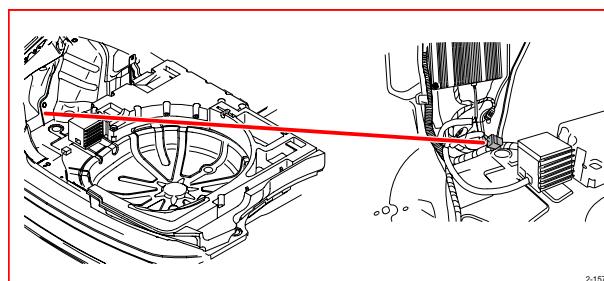


2/89 Relay, interior lighting

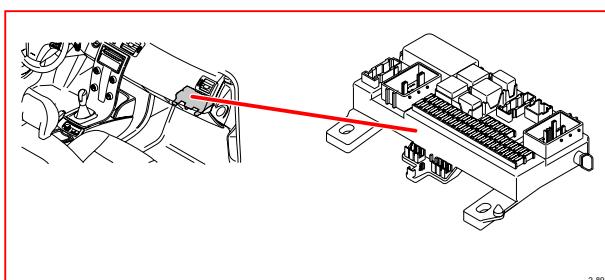


2/159 Relay, infotainment

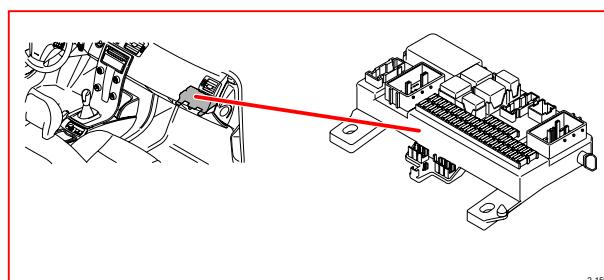


2/92 Relay, windshield washer motor

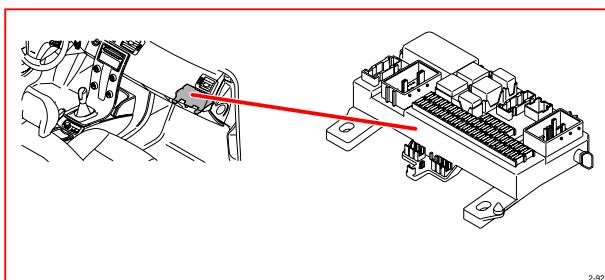


2/182 Relay, headlight washer motor

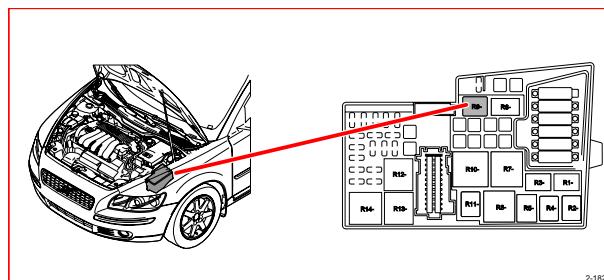

2/93 Relay, rear window washer motor

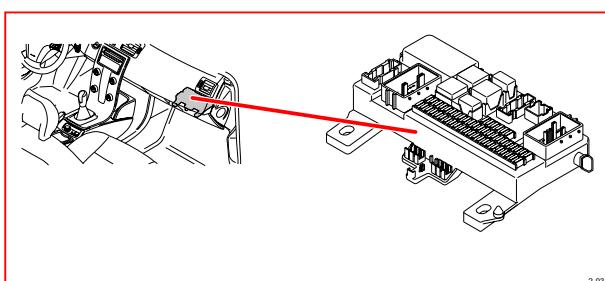


2/192 Relay, electric engine heater, 4-cyl.

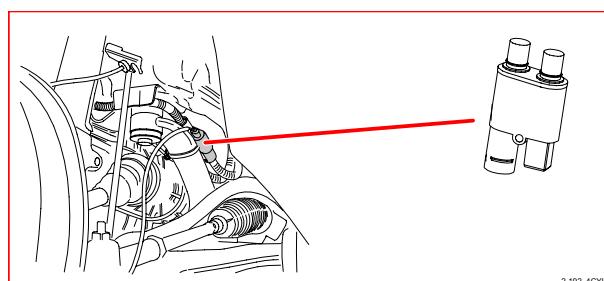


Component illustrations

2/192 5-cyl. - 3/25


2/192 Relay, electric engine heater, 5-cyl.

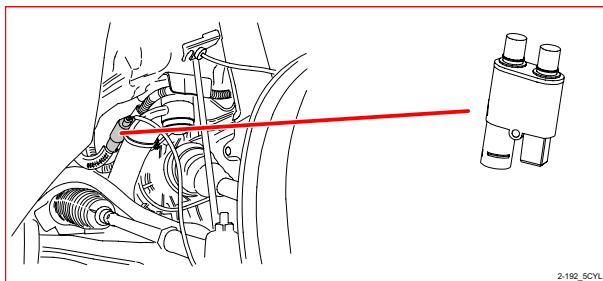


2/193 Relay, comfort functions

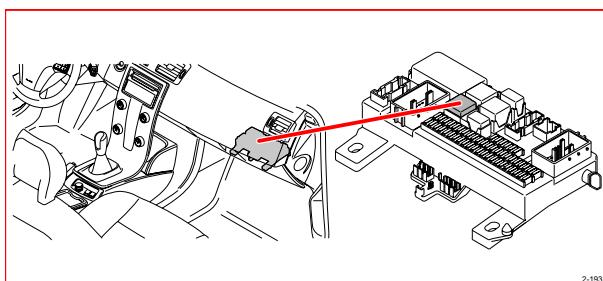


2/238 Relay, audio disconnection

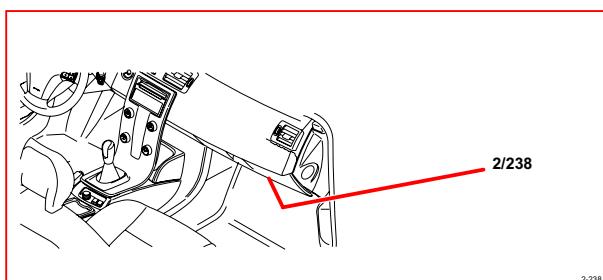


3/1 Ignition switch

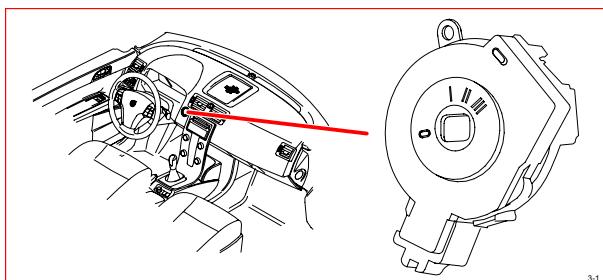


3/4 Switch unit, cruise control (SWS)

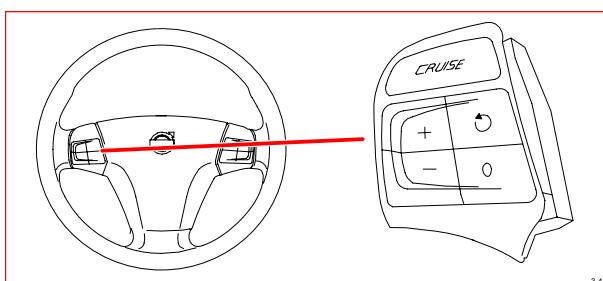


3/6 Switch, hazard warning flashers

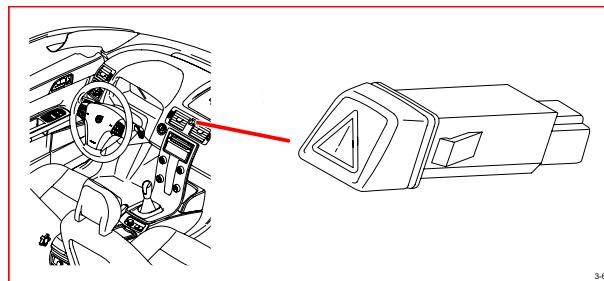


3/8 Switch, heated rear window/exterior rearview mirrors

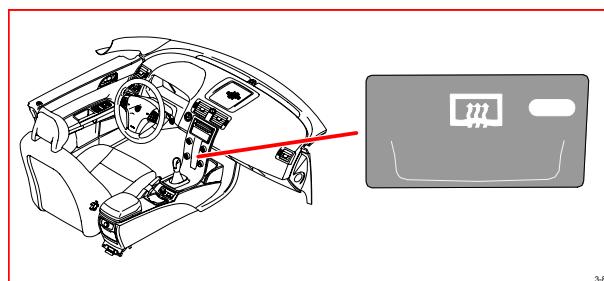


3/9 Contact brake light

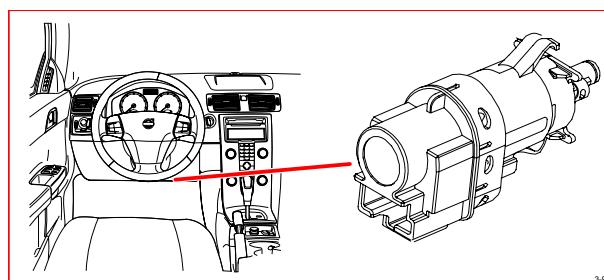

3/10 Reversing light contact

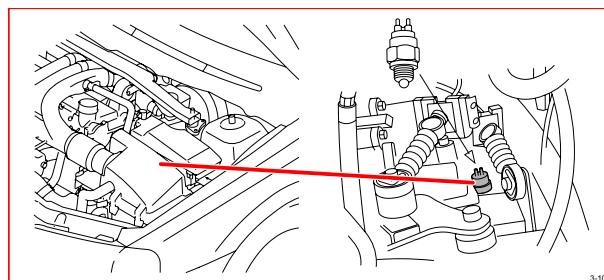


3/25 Switch, power sunroof

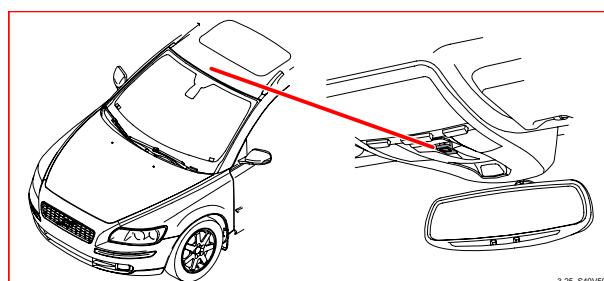


Component illustrations

3/25 C70 - 3/62


3/25 Switch, power roof, C70

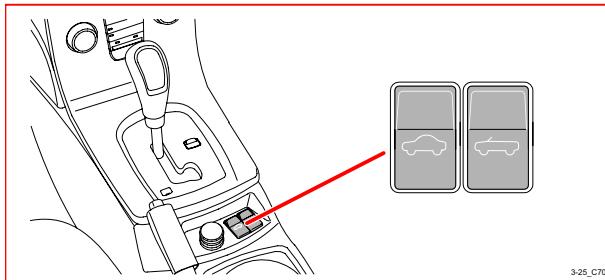


3/39 Clutch pedal contact

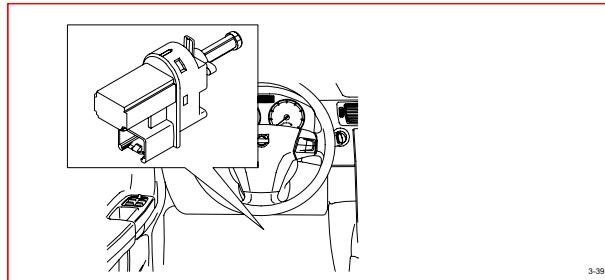


3/26 Switch unit, power driver's seat

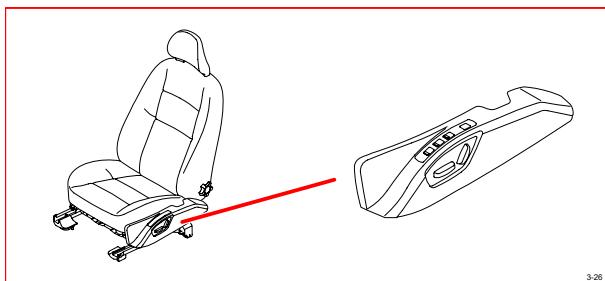


3/46 Seat contact, passenger seat

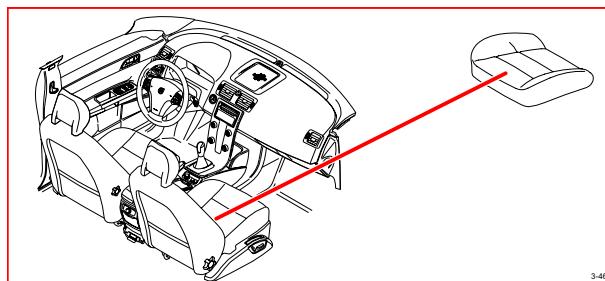


3/27 Switch unit, power passenger seat

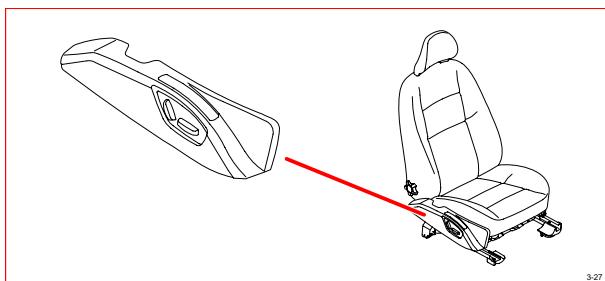


3/47 Parking brake contact

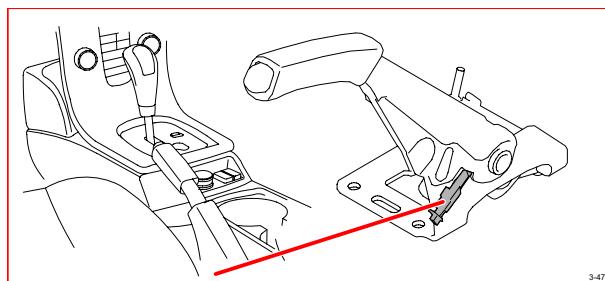


3/35 Switch, handle, trunk lid/tailgate

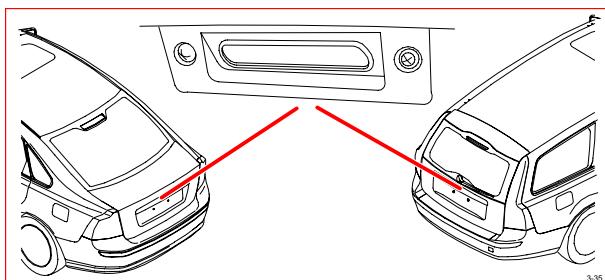


3/60 Switch, auxiliary lights

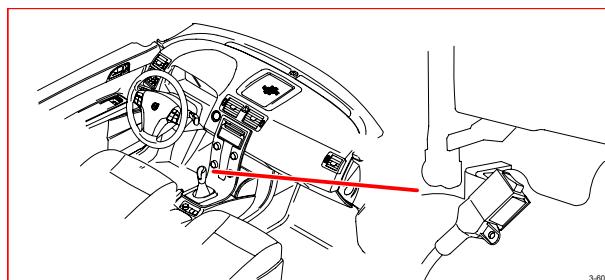

3/37 Contact horn

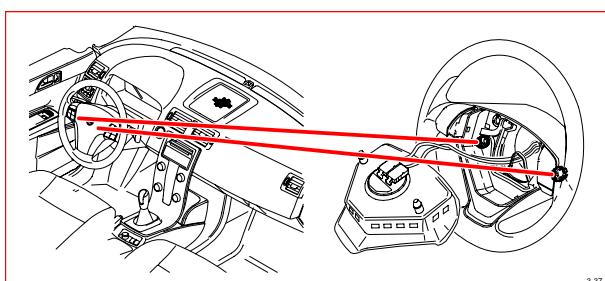


3/62 Hood alarm contact

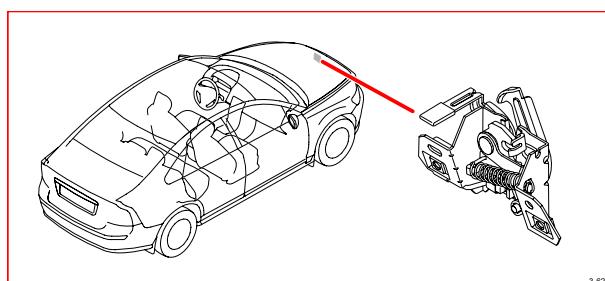


Component illustrations

3/74 - 3/85


3/74 Lock unit, driver's door

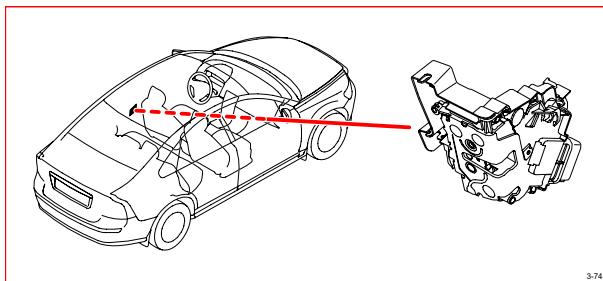


3/80 Switch, central locking driver's door

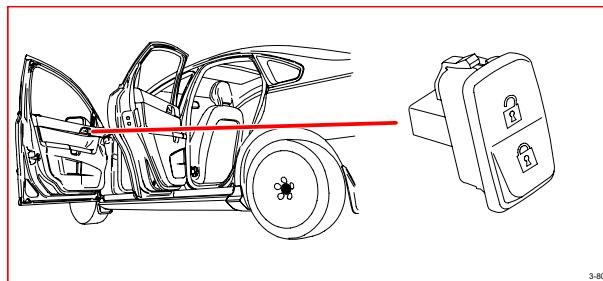


3/75 Lock unit, passenger door

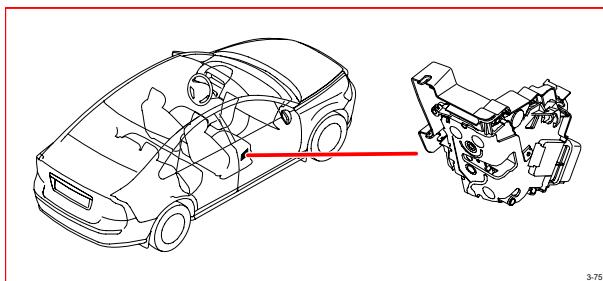


3/81 Power window switches, driver's door

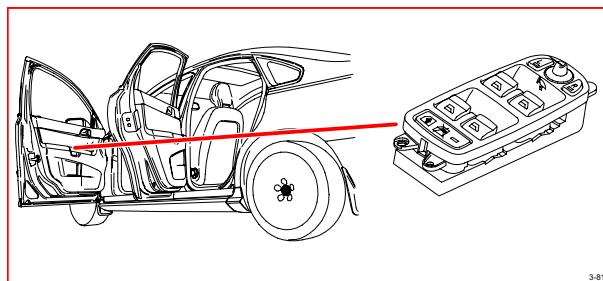


3/76 Lock unit, rear left door

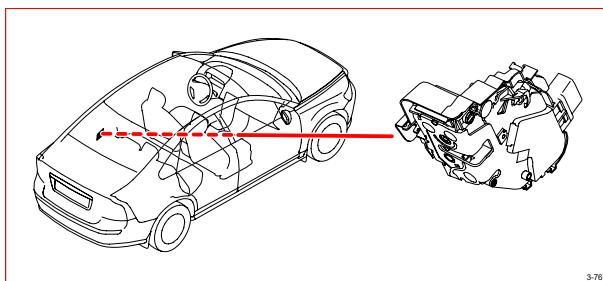


3/82 Switch, central locking passenger door

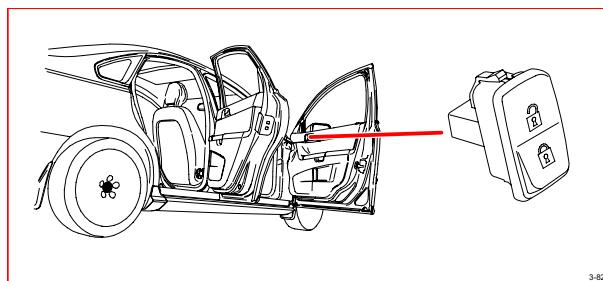


3/77 Lock unit, rear right door

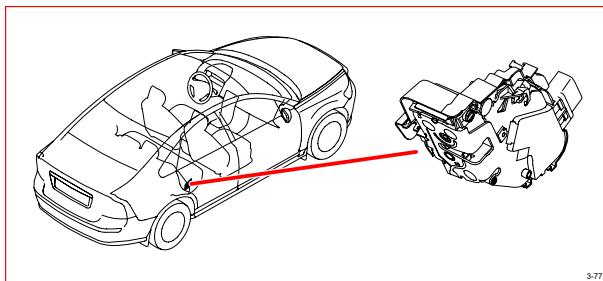


3/83 Switch, power window passenger door

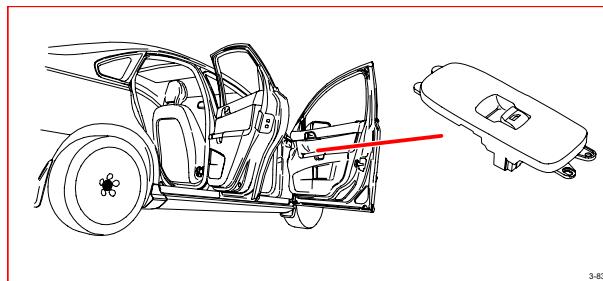

3/78 Lock unit, trunk lid/tailgate

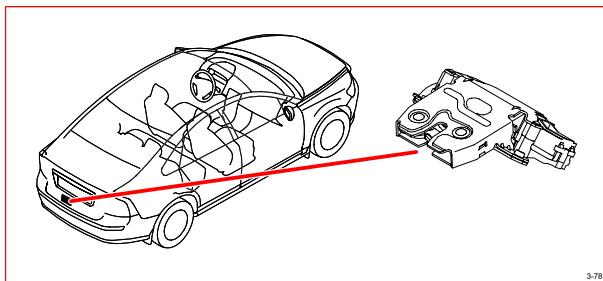


3/85 Power window switch, rear left door

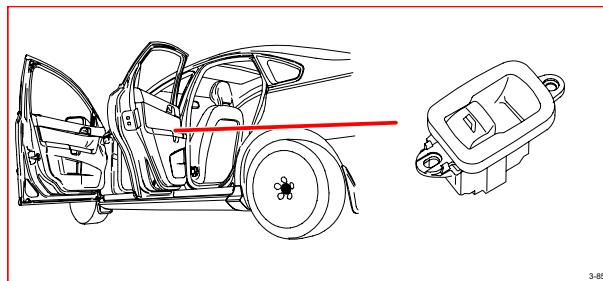


Component illustrations

3/86 - 3/129


3/86 Power window switch, rear right door

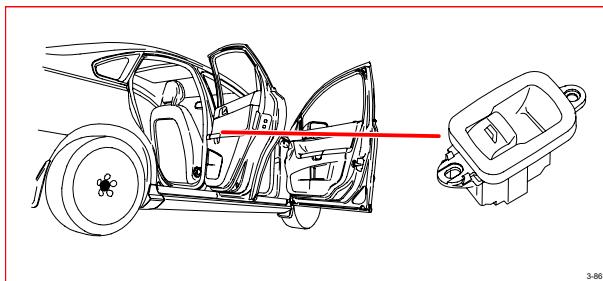


3/117 Switch unit, ceiling light

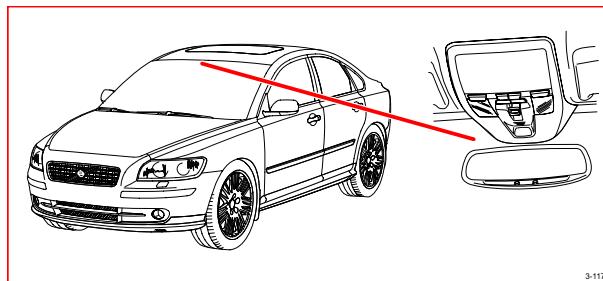


3/93 Belt buckle contact, driver's seat

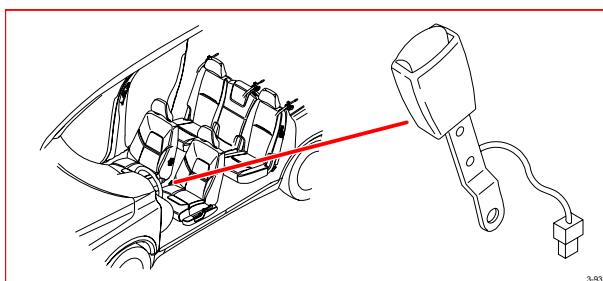


3/126 Driver Door Module (DDM)

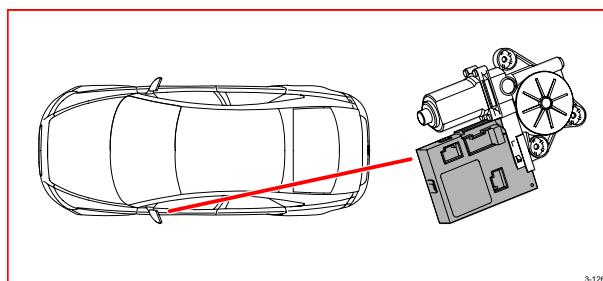


3/94 Belt buckle contact, passenger seat

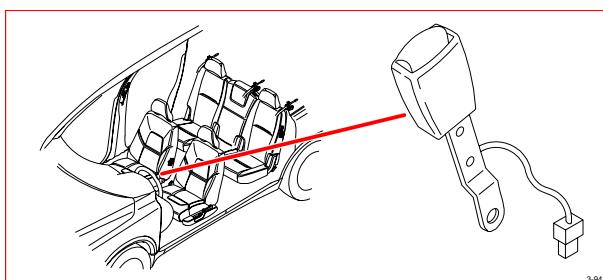


3/127 Passenger Door Module (PDM)

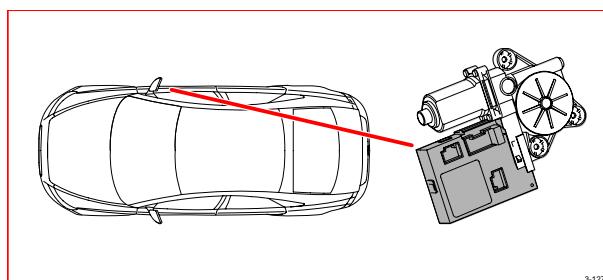


3/111 Light Switch Module (LSM)

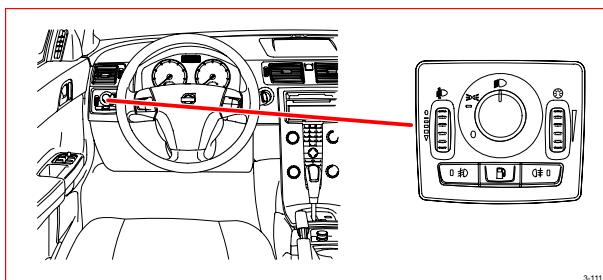


3/128 Rear Left Door Module (LDM)

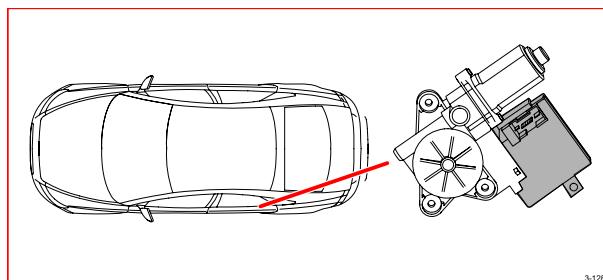

3/112 Climate Control Module (CCM)

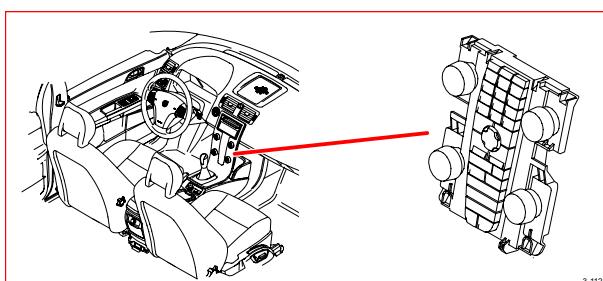


3/129 Rear Right Door Module (RDM)

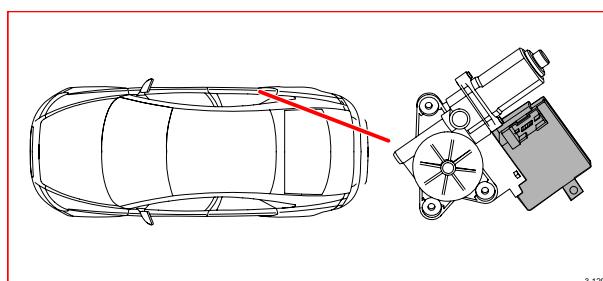


Component illustrations

3/155 - 3/255


3/155 Program selector, automatic transmission

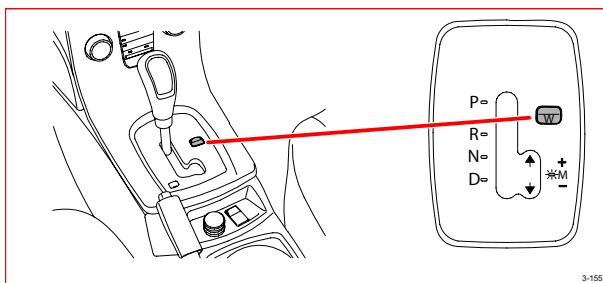


3/156 Gear Selector Module (GSM)

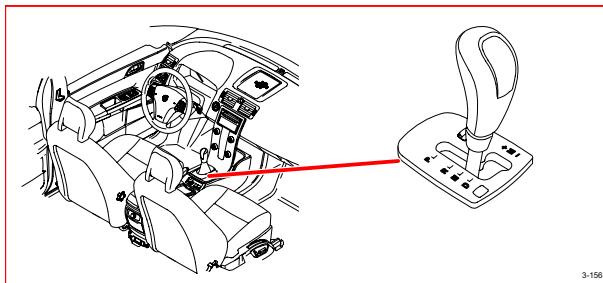


3/157 Switch, passenger side airbag

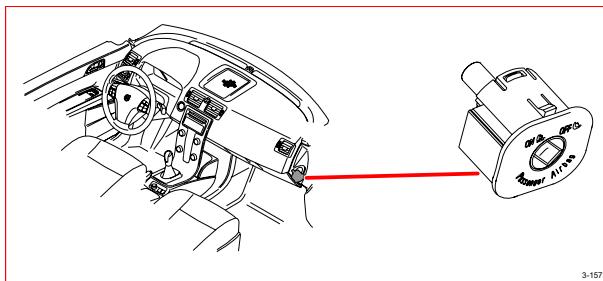


3/173 Switch, trunk lid/tailgate private lock

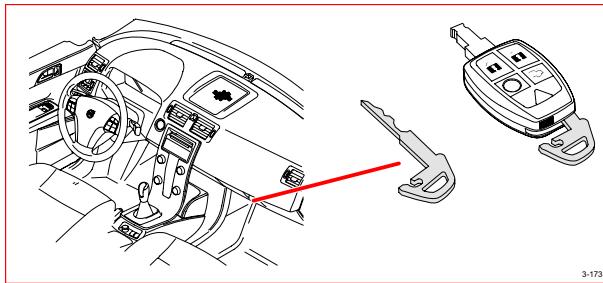


3/174 Switch, reduced alarm

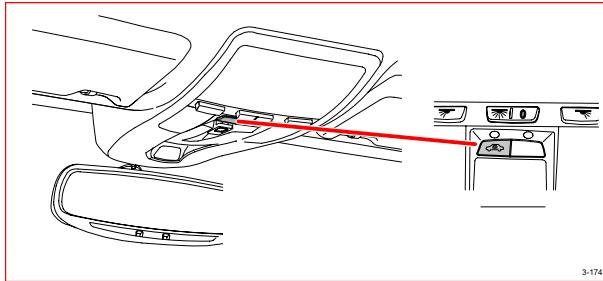


3/217 Belt buckle contact, rear left

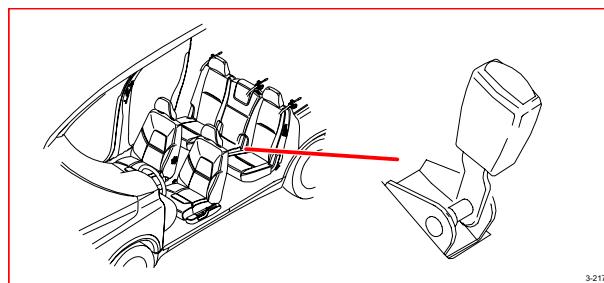


3/218 Belt buckle contact, center rear

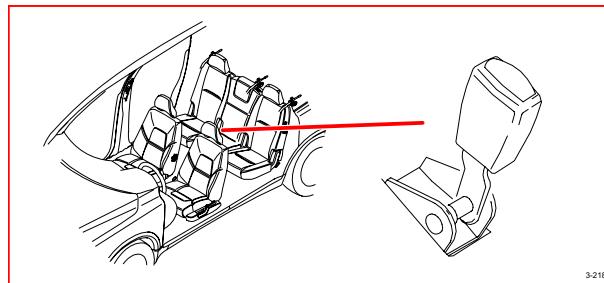


3/219 Belt buckle contact, rear right

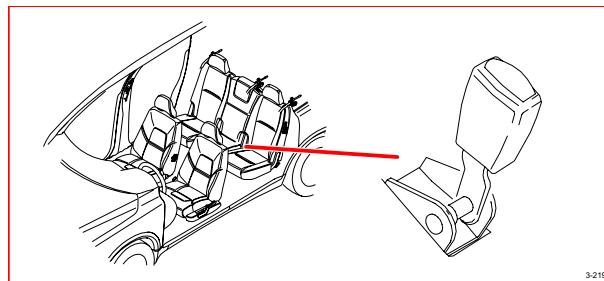

3/254 Steering Wheel Module (SWM)

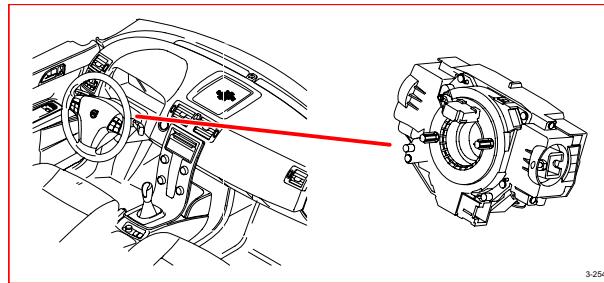


3/255 Position sensor, driver's seat

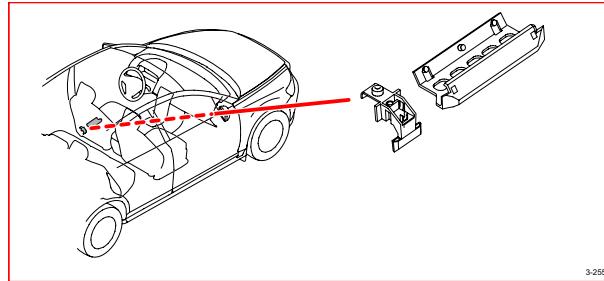


Component illustrations

3/256 - 3/267


3/256 Position sensor, passenger seat

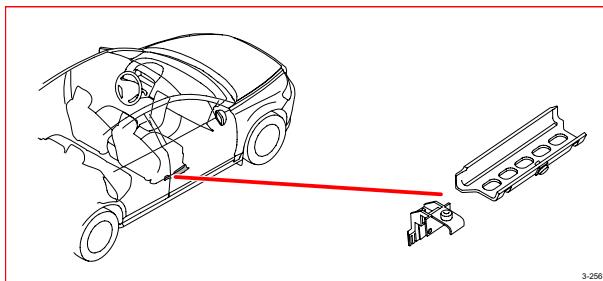


3/262 Contact, unlocking, front left

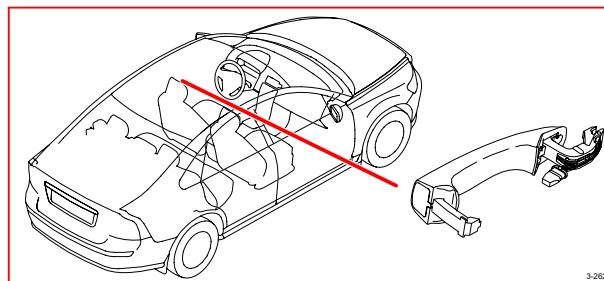


3/258 Contact, locking front left

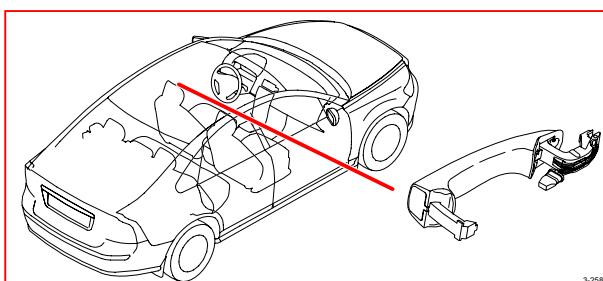


3/263 Contact, unlocking, front right

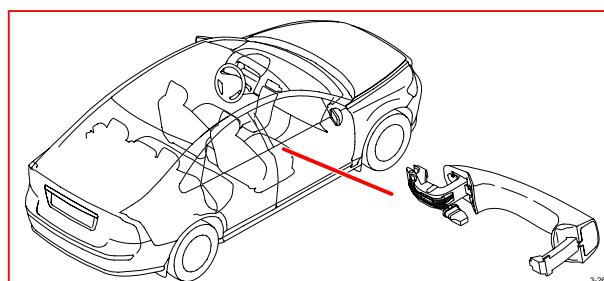


3/259 Contact, locking, front right

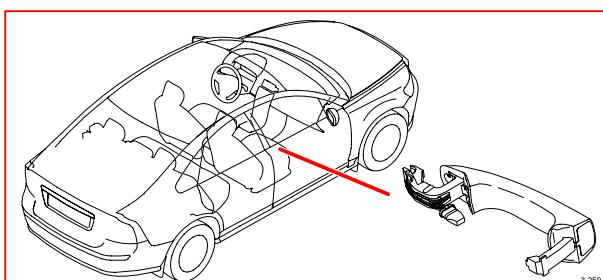


3/264 Contact, unlocking, rear left

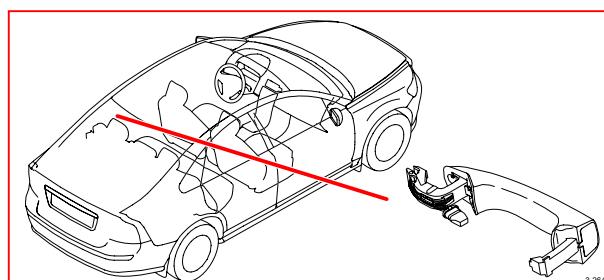


3/260 Contact, locking, rear left

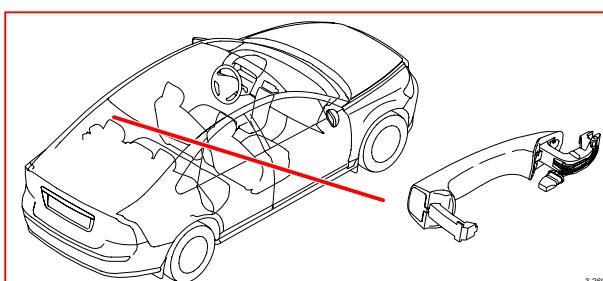


3/265 Contact, unlocking, rear right

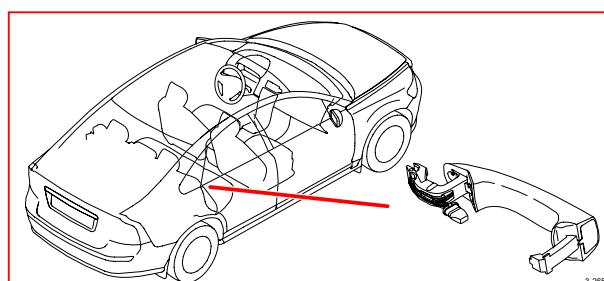

3/261 Contact, locking, rear right

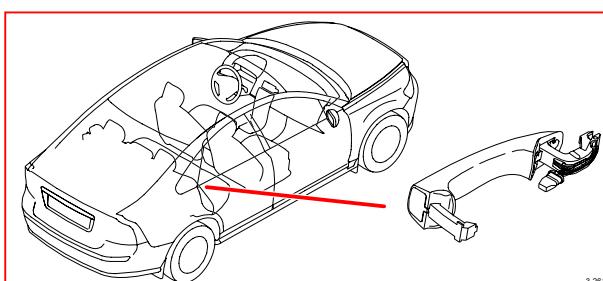


3/267 Switch unit, telematics

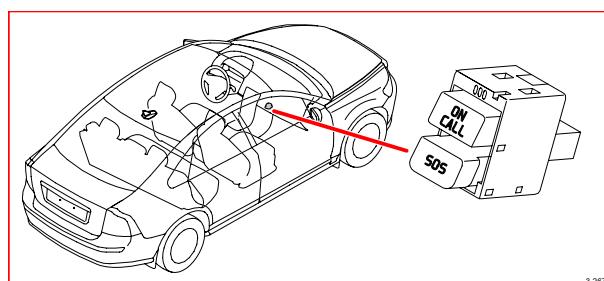


Component illustrations

3/268 - 4/46.1


3/268 Load assistance switch

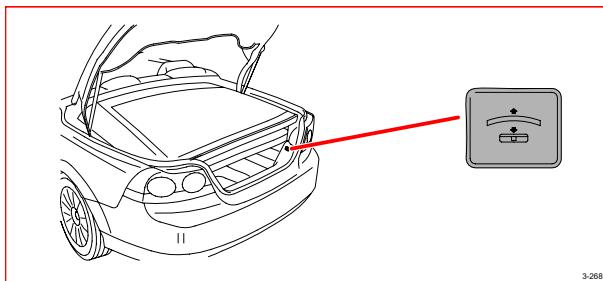


4/16 Brake Control Module (BCM)

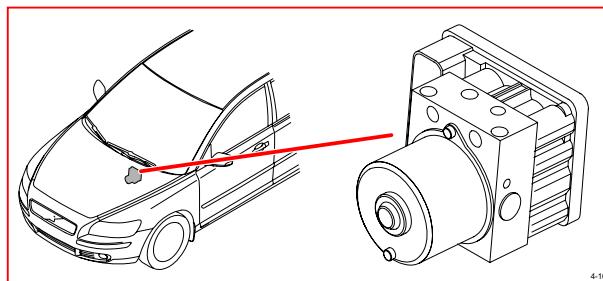


3/271 Contact, immobilizer, clutch pedal

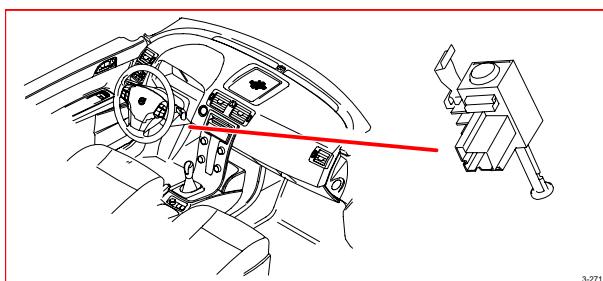


4/28 Transmission Control Module (TCM)

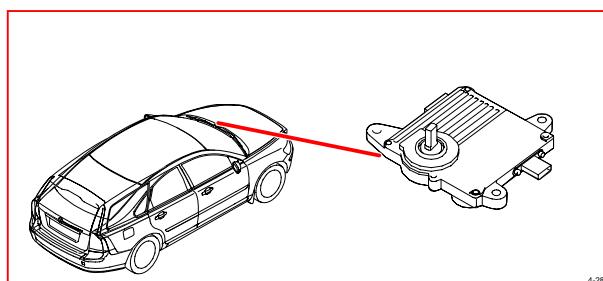


3/286 BLIS switch

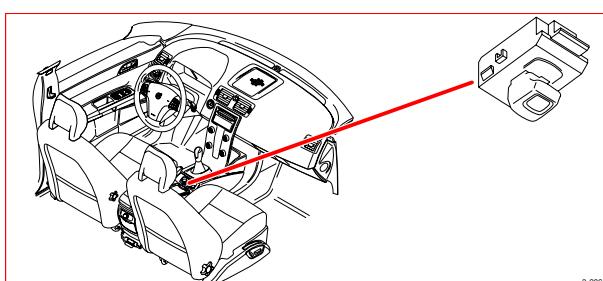


4/31 Fan control module

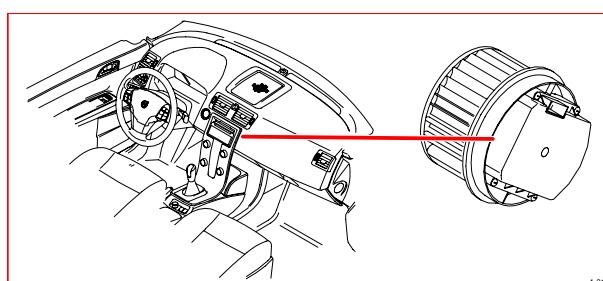


4/7 Combustion Preheater Module (CPM)

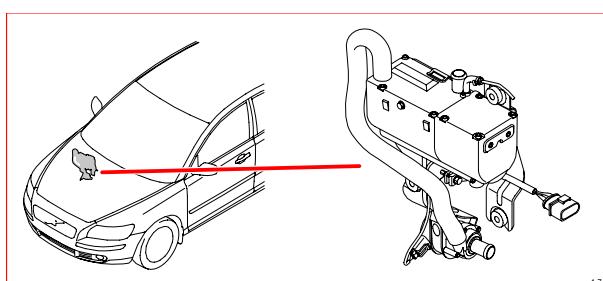


4/33 Sunroof control module

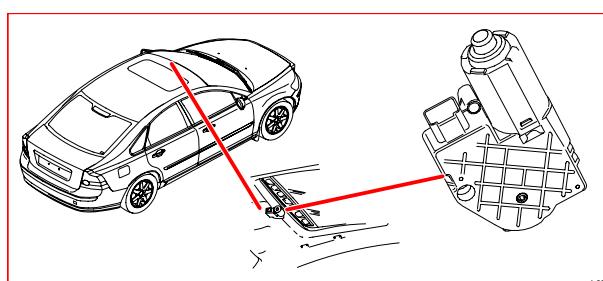

4/9 Supplemental Restraint System Module (SRS)

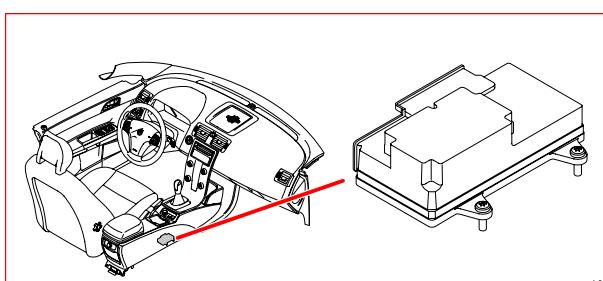


4/46.1 Engine Control Module (ECM), 5-cyl

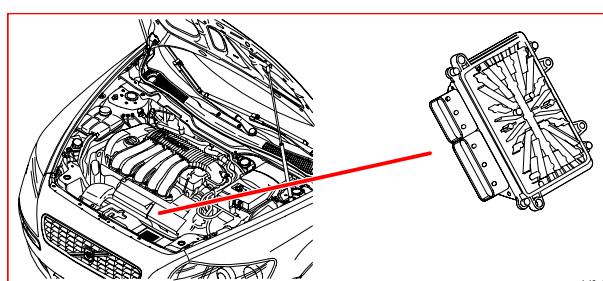


Component illustrations

4/46.2 - 4/59


4/46.2 Engine Control Module (ECM), 5-cyl.
Turbo

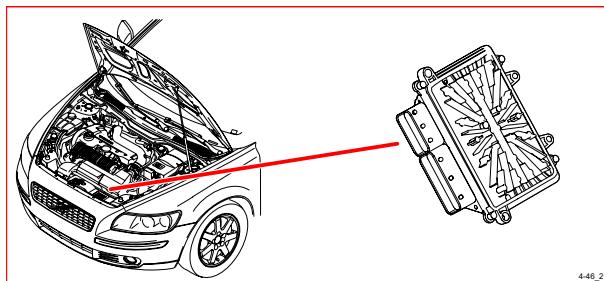


4/46.3 Engine Control Module (ECM), 5-cyl.
2.4l D

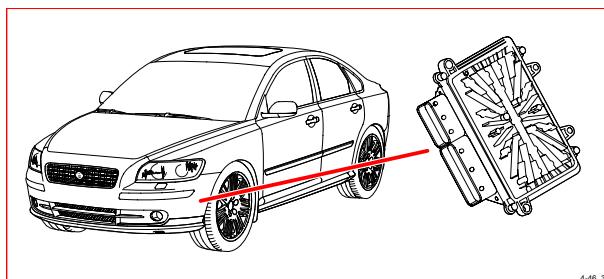


4/46.4 Engine Control Module (ECM), 4-cyl.
2.0l D

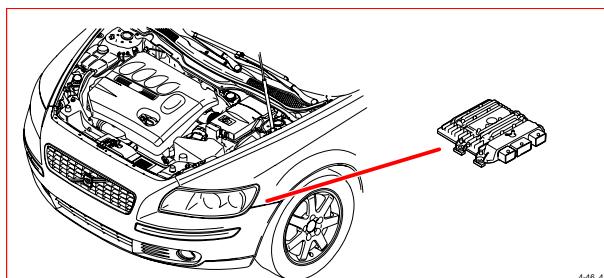


4/46.5 Engine Control Module (ECM), 4-cyl.
1.6l D

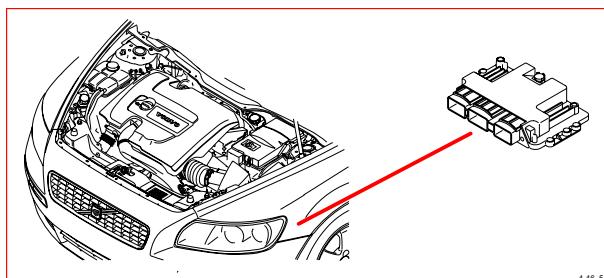


4/46.6 Engine Control Module (ECM), 4-cyl.
1.8l

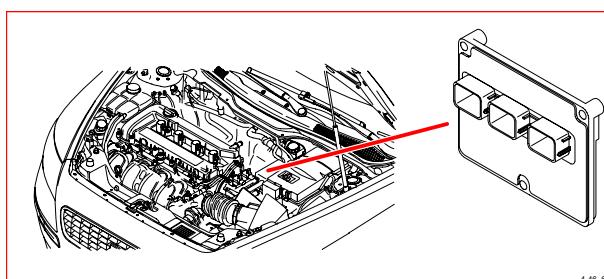


4/46.7 Engine Control Module (ECM), 4-cyl.
1.6l

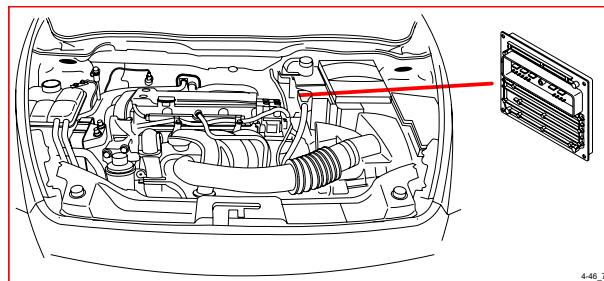


4/52 Power Seat Module (PSM)

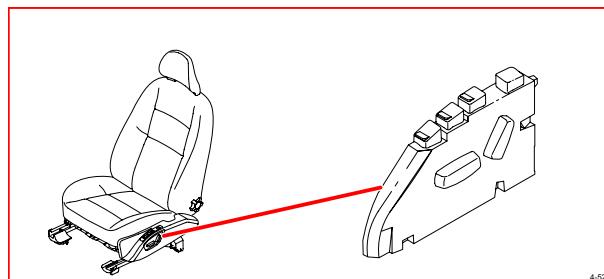


4/56 Central Electronic Module (CEM)

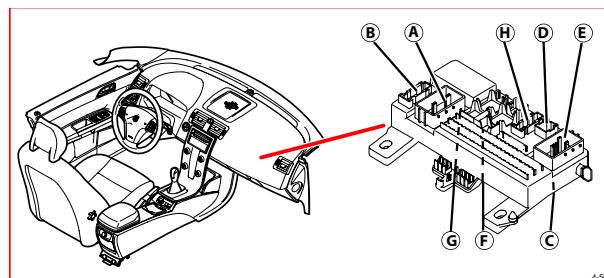

4/56 A-H Central Electronic Module (CEM)

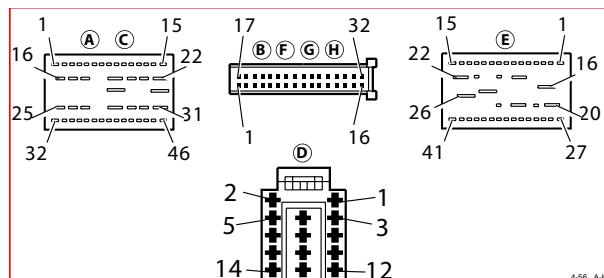


4/59 Convertible Roof Module (CRM)

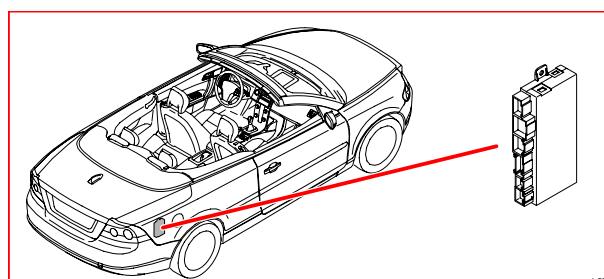


Component illustrations

4/71 - 4/109


4/71 Cooling fan control module

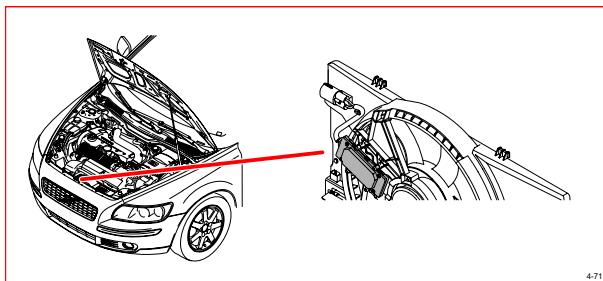


4/93 Keyless Vehicle Module (KVM)

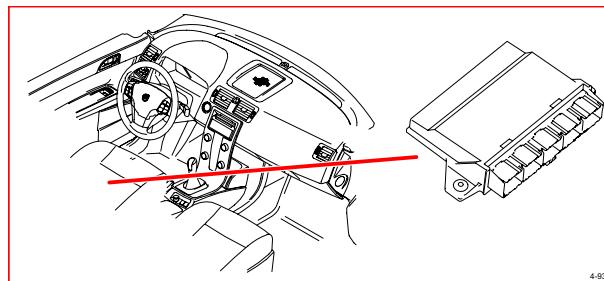


4/78 Accessory Electronic Module (AEM)

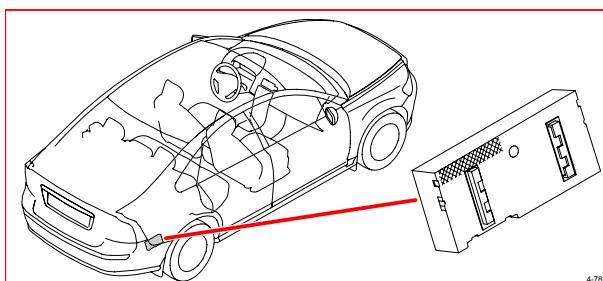


4/102 Steering Column Lock Module (SCL)

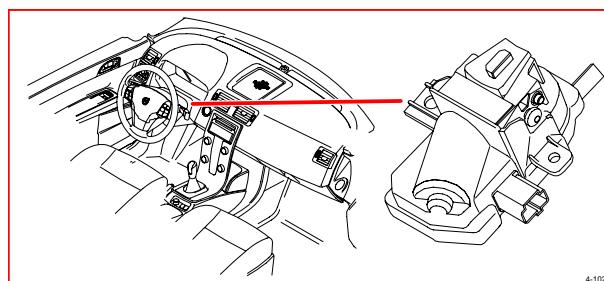


4/82 Differential Electronic Module (DEM)

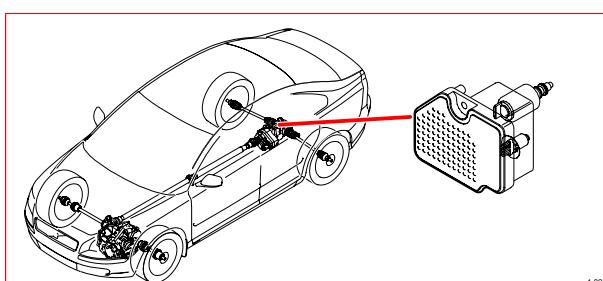


4/103 Remote Receiver Module (RRX)

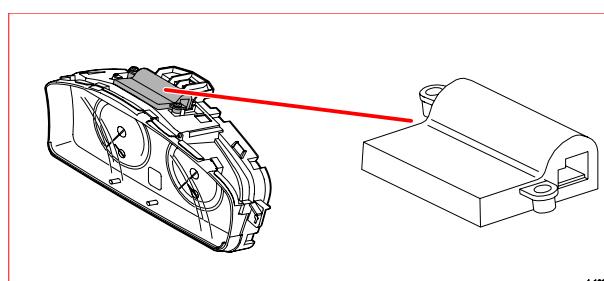


4/83 Control module fuel pump

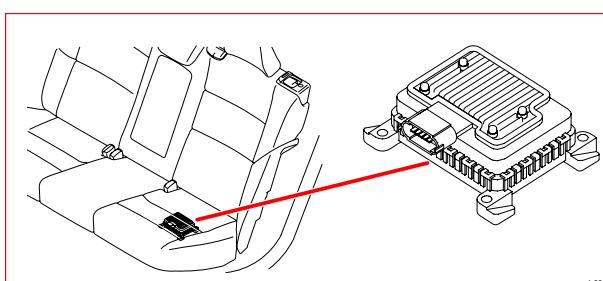


4/103 Signal receiver, keyless vehicle (RKE)

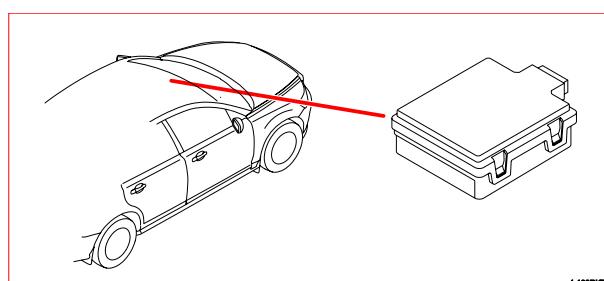

4/86 Parking Assistance Module (PAM)

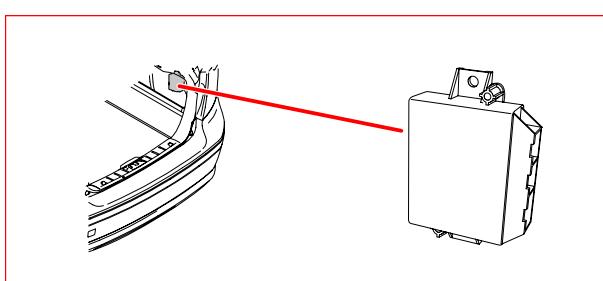


4/109 Glow plug control module

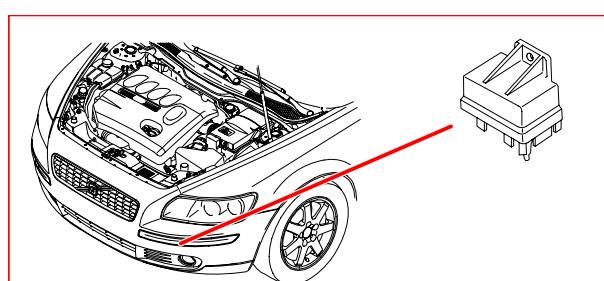


Component illustrations

4/110 - 6/16


4/110 Trailer Module (TRM)

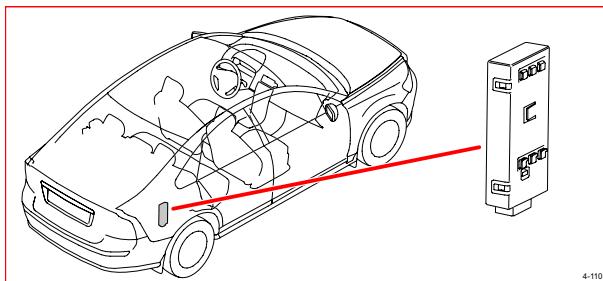


4/127 Right Camera Module (RCM)

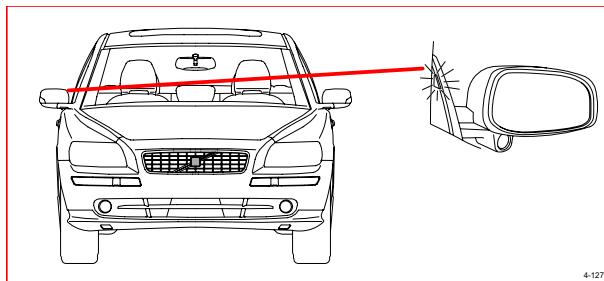


4/111 Additive Dosing Module (ADM)

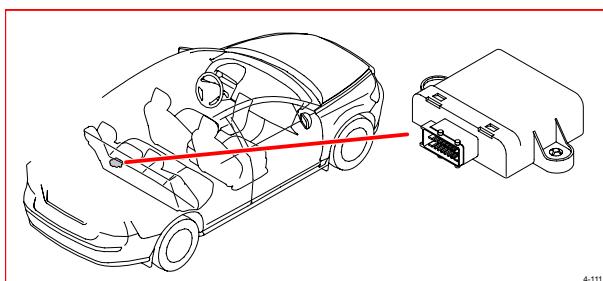


5/1 Driver Information Module (DIM)

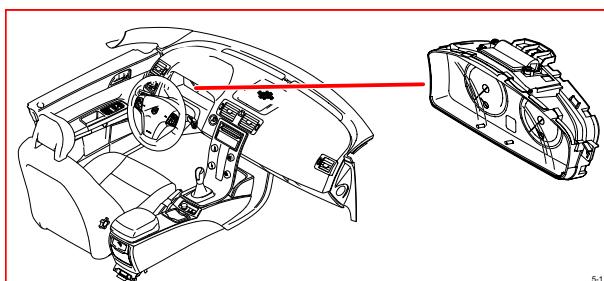


4/112 Control module, gas discharge lamp master, left

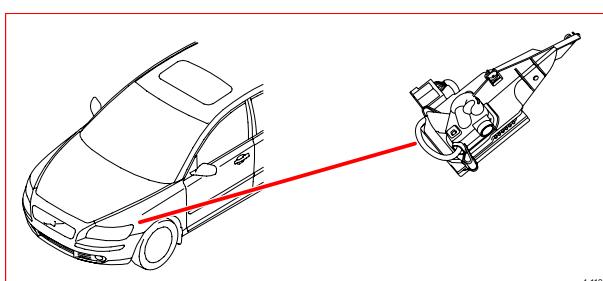


6/1 Wiper Motor Module (WMM)

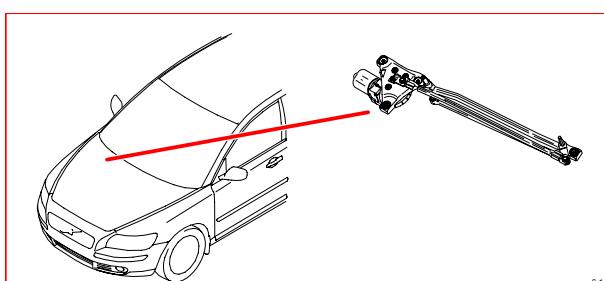


4/113 Control module, gas discharge lamp slave, right

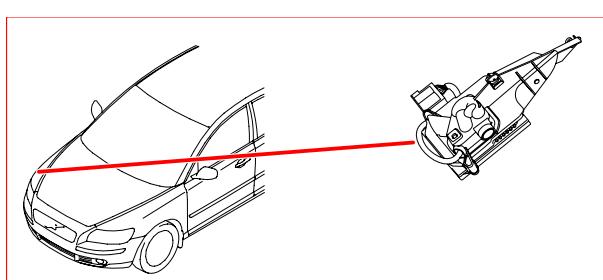


6/2 Washer pump

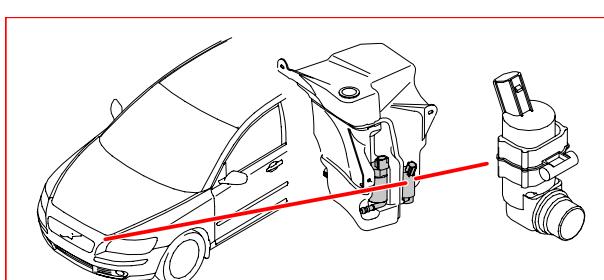

4/126 Left Camera Module (LCM)

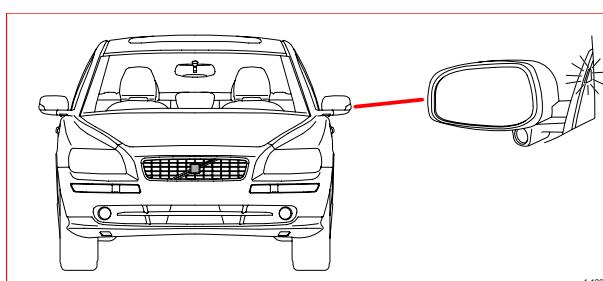


6/16 Motor driver's seat, backrest angle

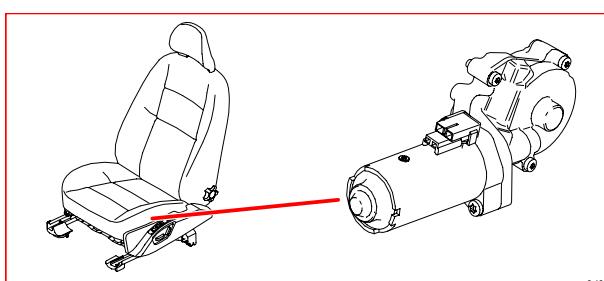


Component illustrations

6/17 - 6/33


6/17 Motor driver's seat, up/down front edge

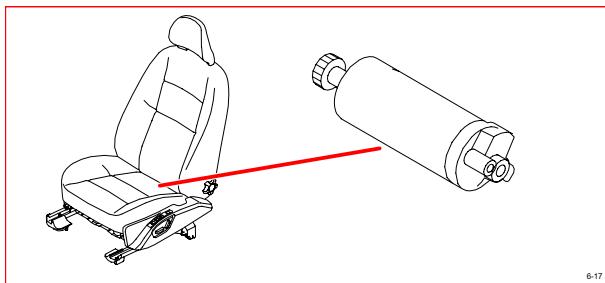


6/18 Motor driver's seat, up/down rear edge

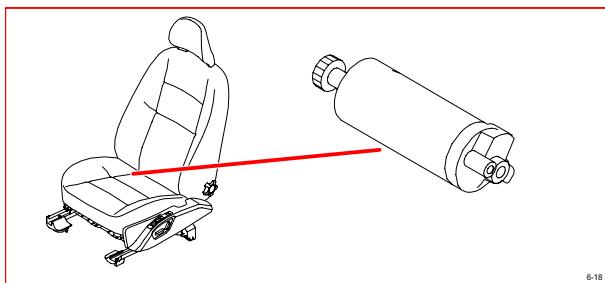


6/19 Motor driver's seat, fore/aft

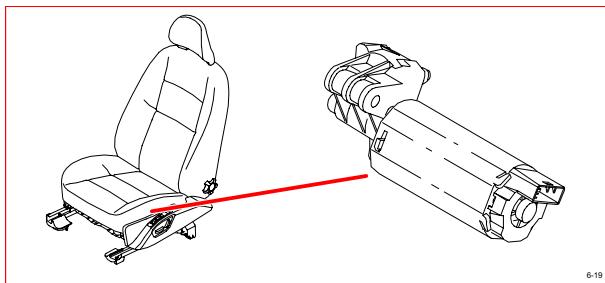


6/20 Motor passenger seat, fore/aft

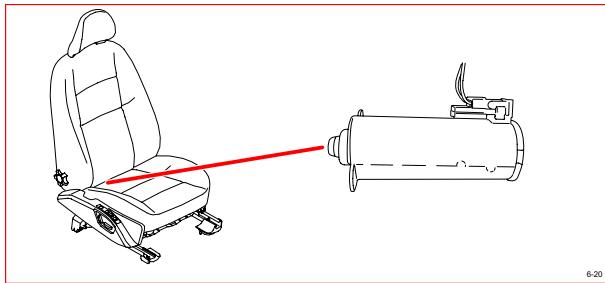


6/25 Starter motor

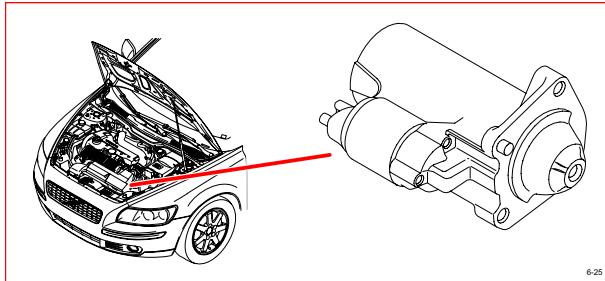


6/26 Alternator

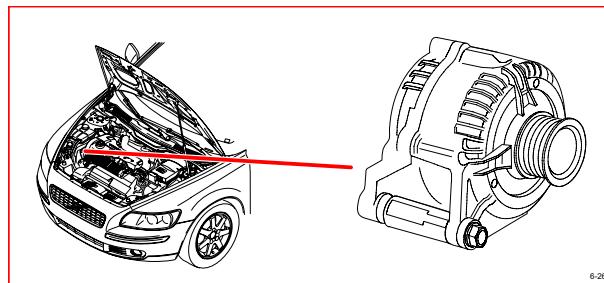


6/28 Motor, passenger compartment fan

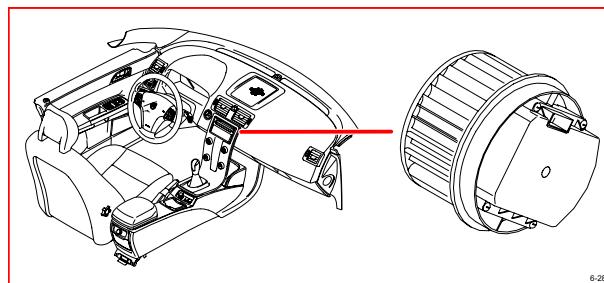


6/29 Motor, electric cooling fan

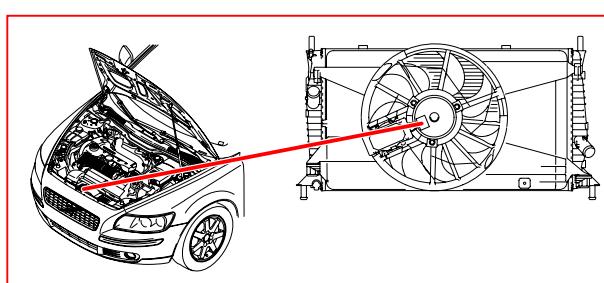

6/32 Rear window wiper motor

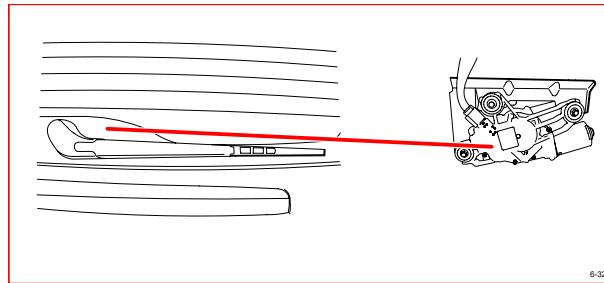


6/33 Fuel pump

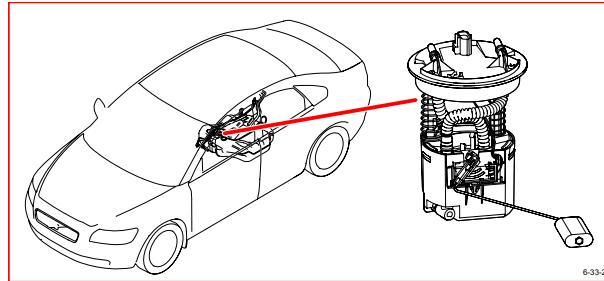


Component illustrations

6/35 - 6/66


6/35 Fuel pump, auxiliary heater

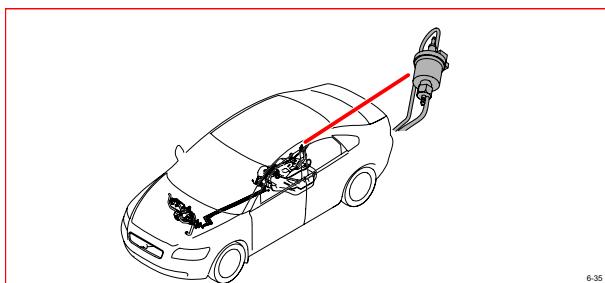


6/62 Power rear-view mirror driver's door

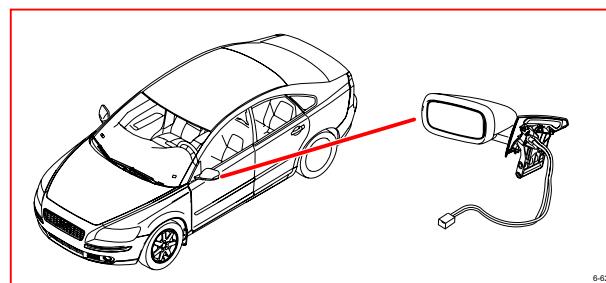


6/37 Lock motor, fuel filler flap

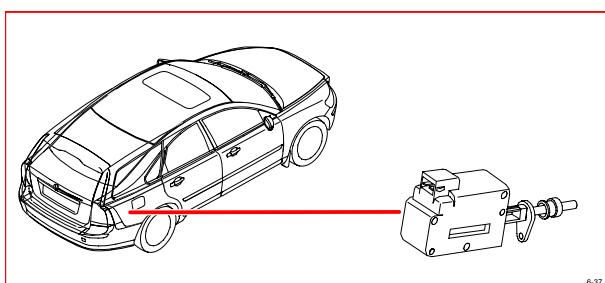


6/63 Power passenger door mirror

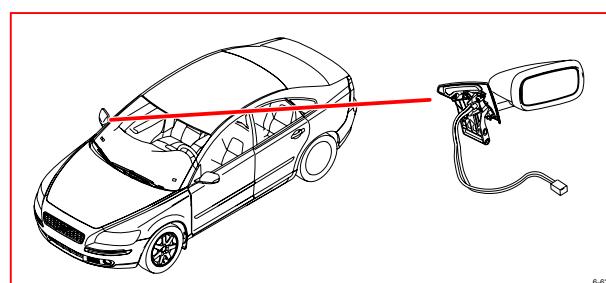


6/38 Motor, left headlight adjustment

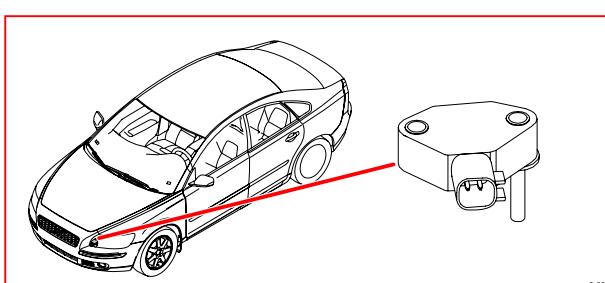


6/64 Motor, passenger seat backrest angle

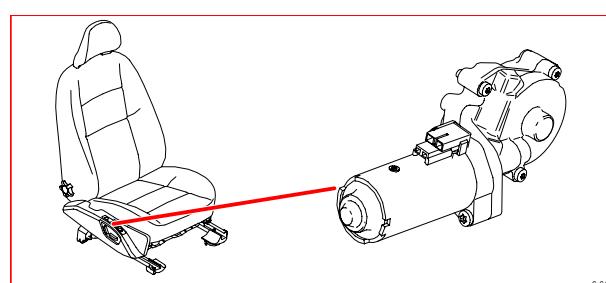


6/39 Motor, right headlight adjustment

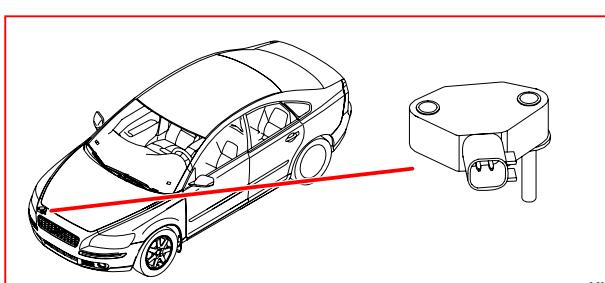


6/65 Motor, passenger seat, front edge up/down

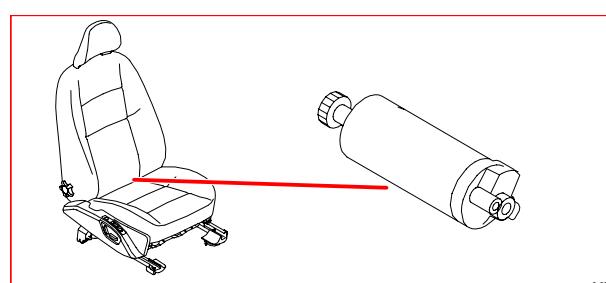

6/48 Damper Motor Module (DMM), recirculation

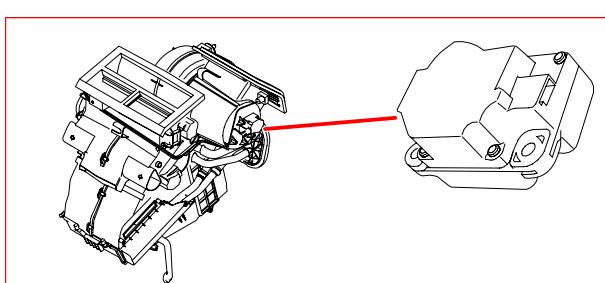


6/66 Motor passenger seat, up/down rear edge

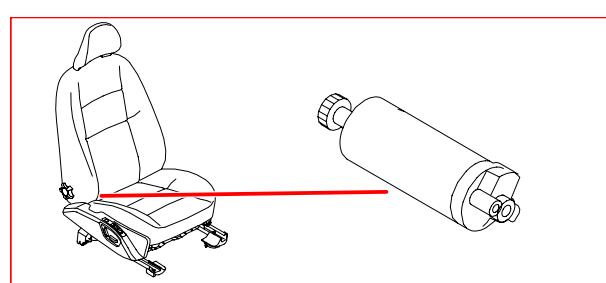


Component illustrations

6/67 - 6/114


6/67 Pump, fuel leakage control

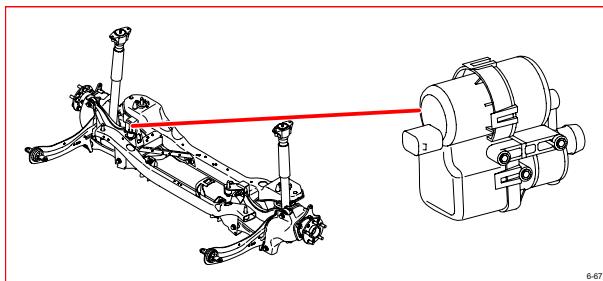


6/71 Electrical Power Steering Module (EPS)

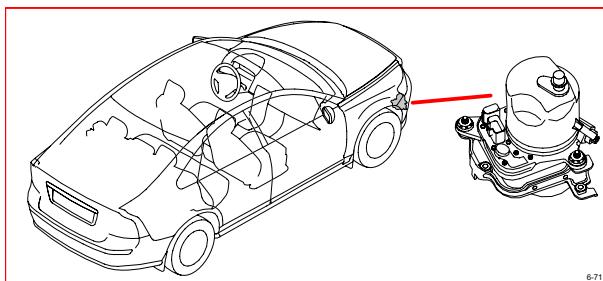


6/73 Coolant pump, auxiliary heater

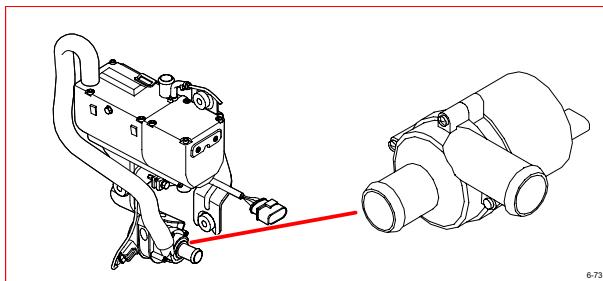


6/95 Damper Motor Module (DMM), temperature, left side

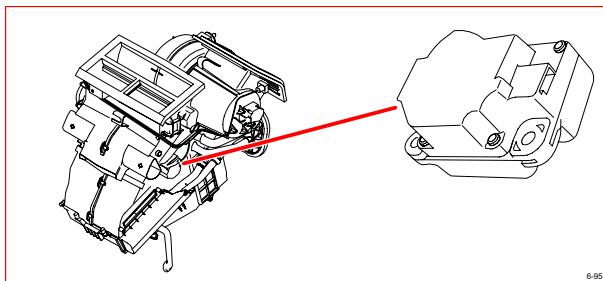


6/96 Damper Motor Module (DMM), right-hand side

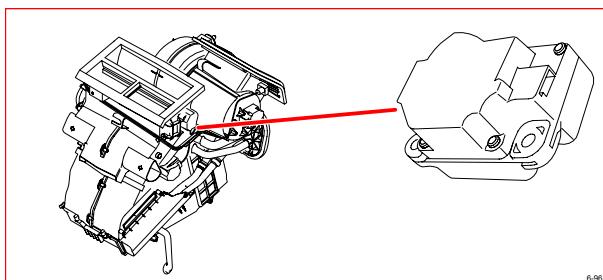


6/99 Engine EGR

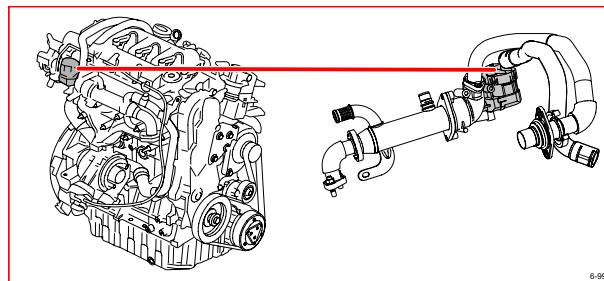


6/102 Damper Motor Module (DMM), defroster

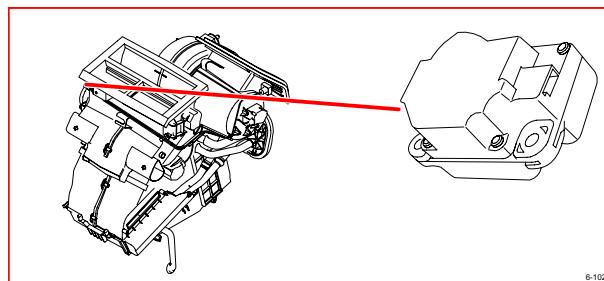


6/103 Damper Motor Module (DMM), floor/ventilation

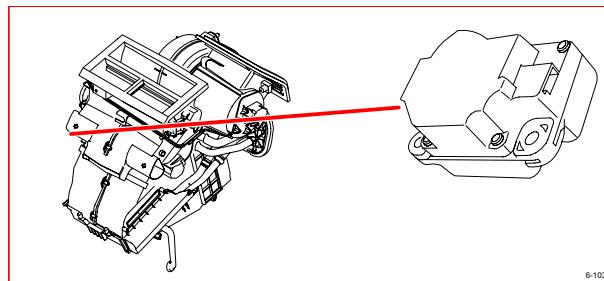

6/104 High pressure headlight washer motor

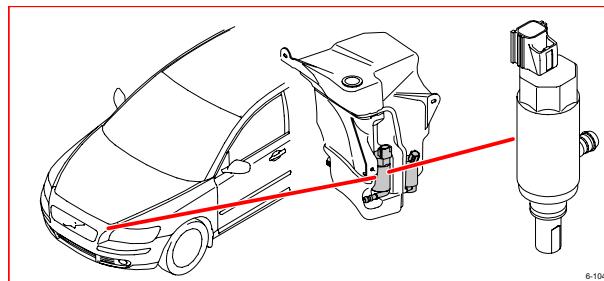


6/114 Vacuum pump

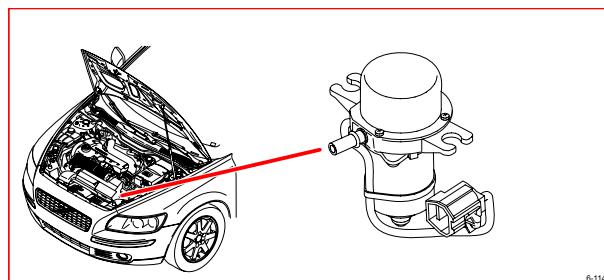


Component illustrations

6/117 - 7/6


6/117 Interior temperature sensor

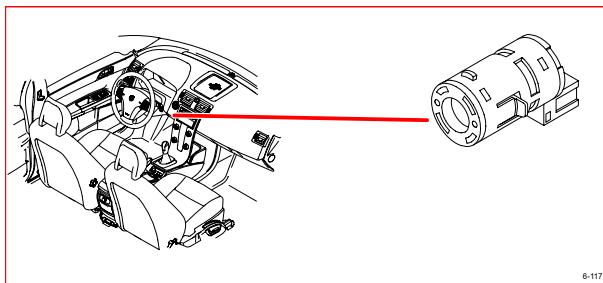


6/155 Pump unit, roof operation

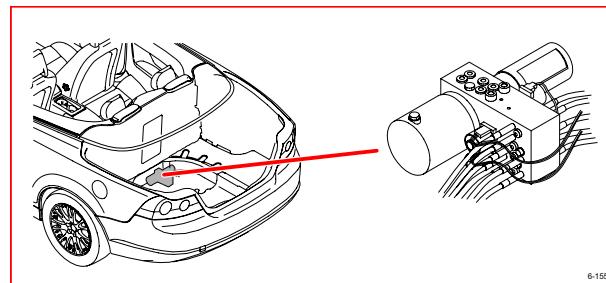


6/118 Regulator motor, swirl throttle

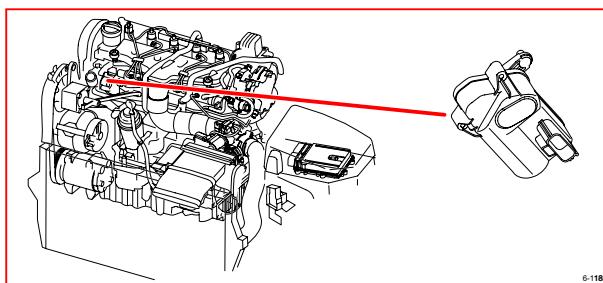


7/4 Brake fluid level sensor

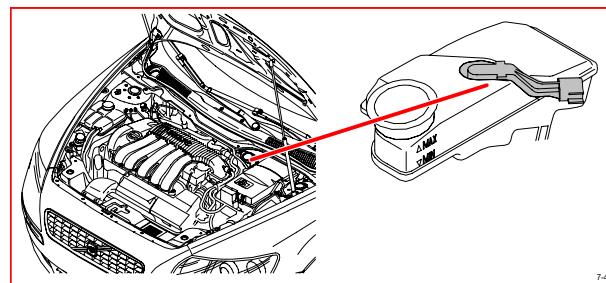


6/120 Engine throttle body

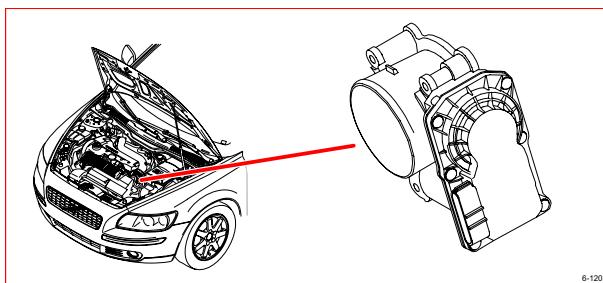


7/5 Washer fluid level sensor

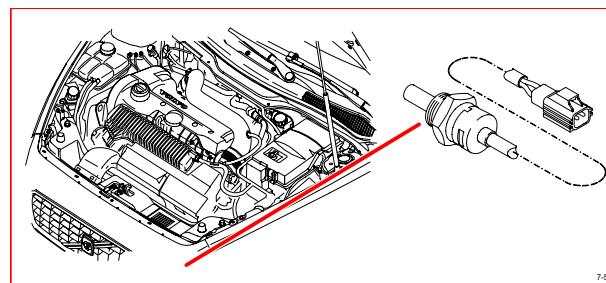


6/143 Regulator motor, Turbo

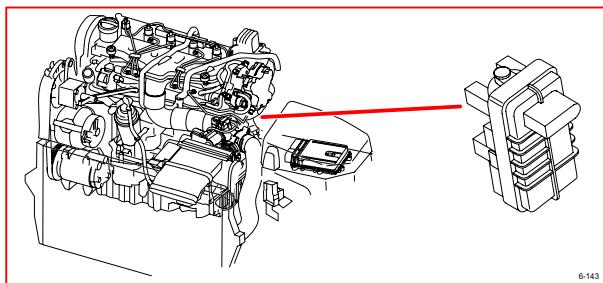


7/6 Oil pressure monitor, 4-cyl

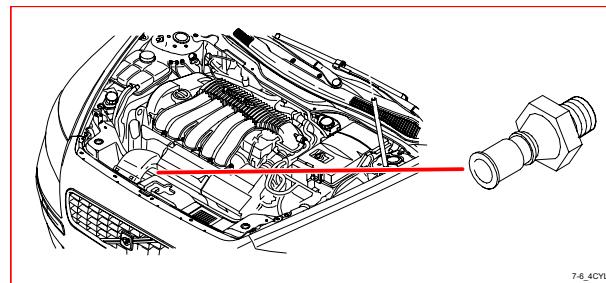

6/149 Electric catch motor

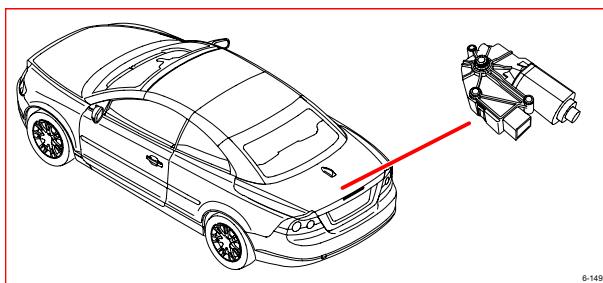


7/6 Oil pressure monitor, 5-cyl

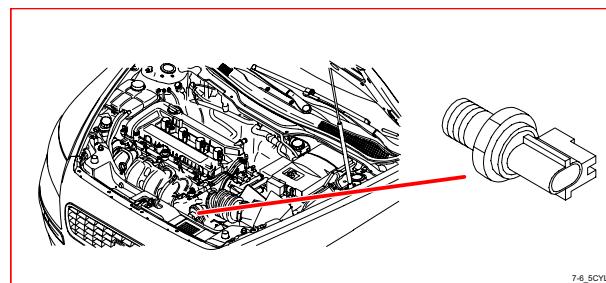


Component illustrations

7/6 - 7/24


7/6 Oil pressure monitor, Turbo

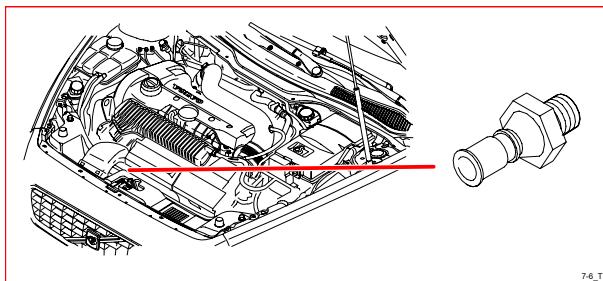


7/16 Sensor, coolant temperature

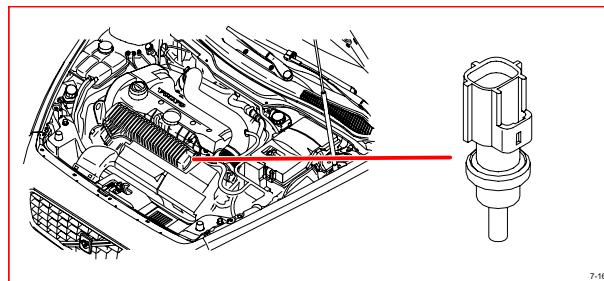


7/6 Oil pressure monitor, Diesel

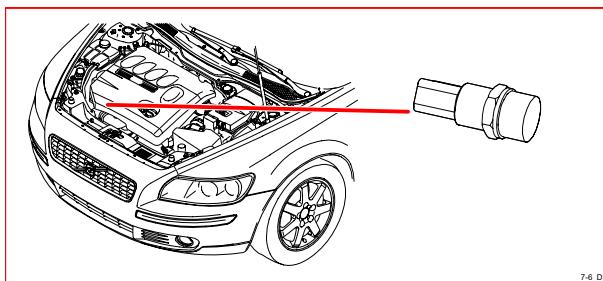


7/17 Mass air flow sensor (MAF), 5-cyl

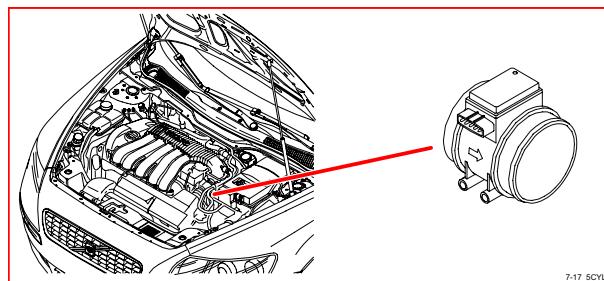


7/8 Pressure sensor, climate control system

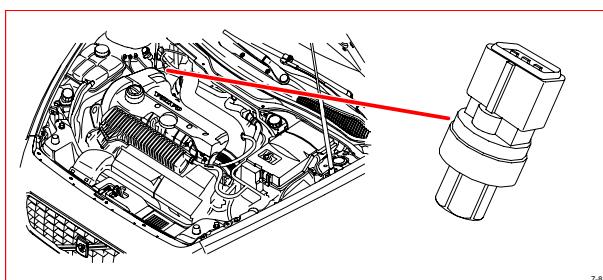


7/17 Mass air flow sensor (MAF), Turbo

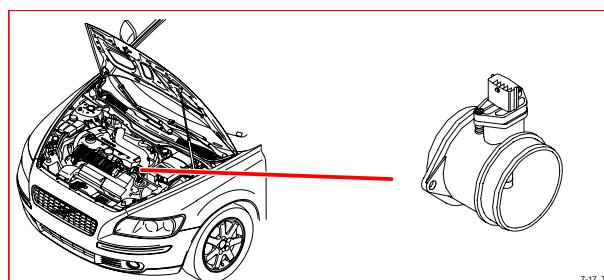


7/12 Solar sensor, twilight sensor and indicator alarm

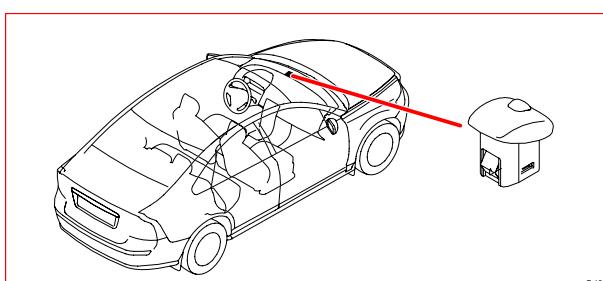


7/21 Camshaft position sensor

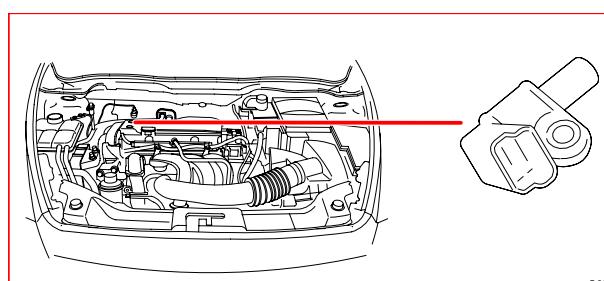

7/15 Heated oxygen sensor, front

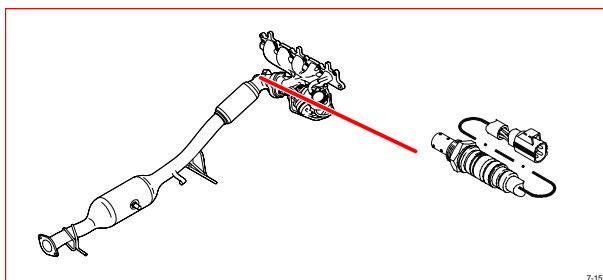


7/24 Front knock sensor, 4-cyl

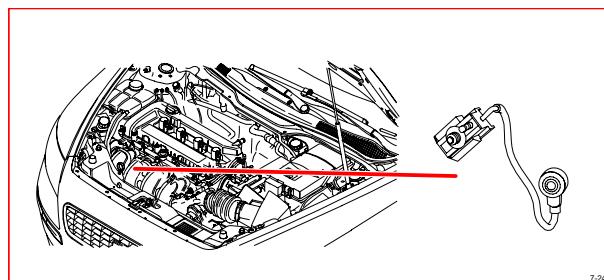


Component illustrations

7/24 - 7/51


7/24 Front knock sensor, 5-cyl

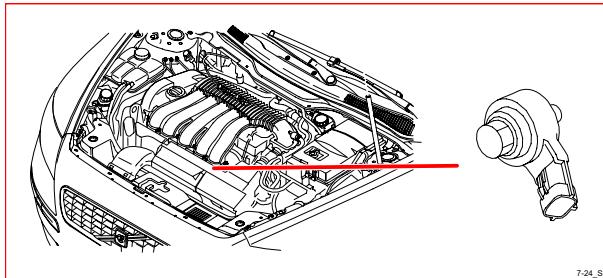


7/25 Impulse sensor, Diesel

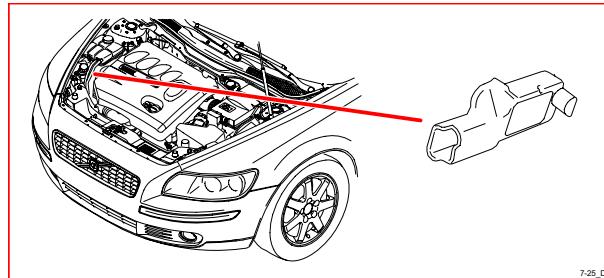


7/24 Front knock sensor, Turbo

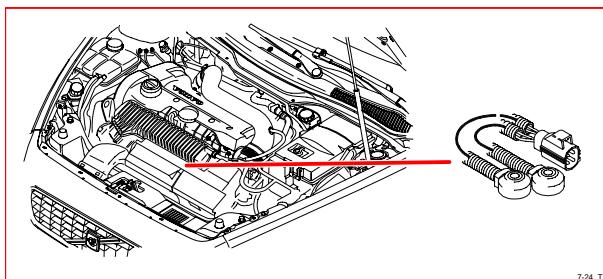


7/31 Sensor ABS, front left

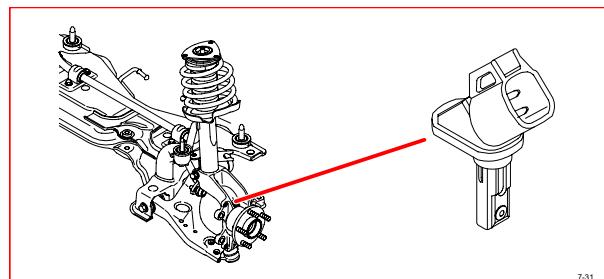


7/25 Impulse sensor, 4-cyl

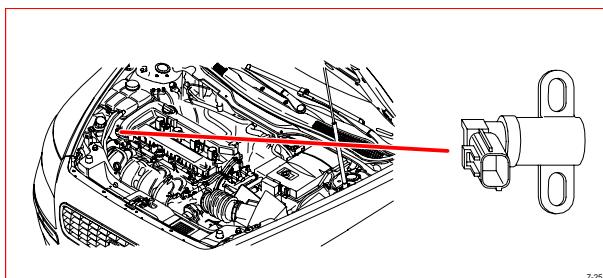


7/32 Sensor ABS, front right

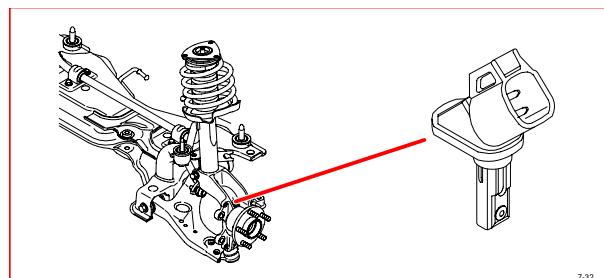


7/25 Impulse sensor, 5-cyl

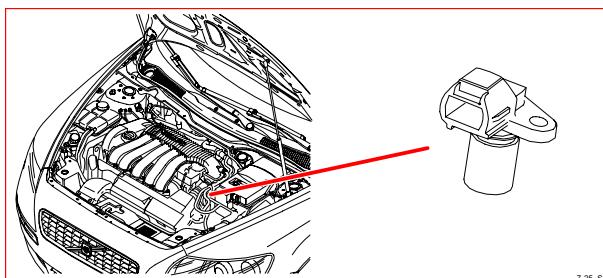


7/41 Temperature sensor evaporator

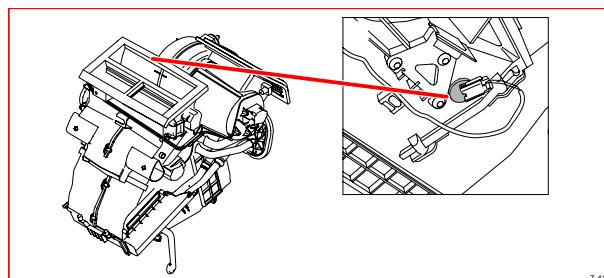

7/25 Impulse sensor, Turbo

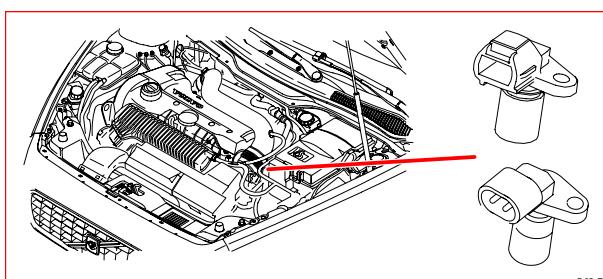


7/51 Accelerator pedal sensor

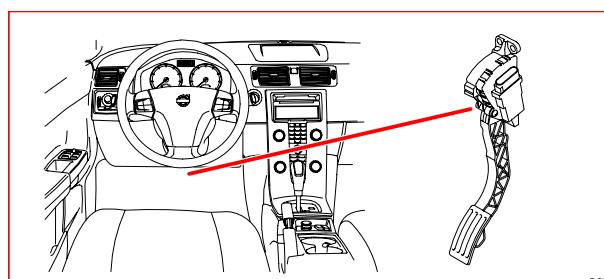

Component illustrations


7/56 - 7/81

7/56 Sensor ABS, rear left

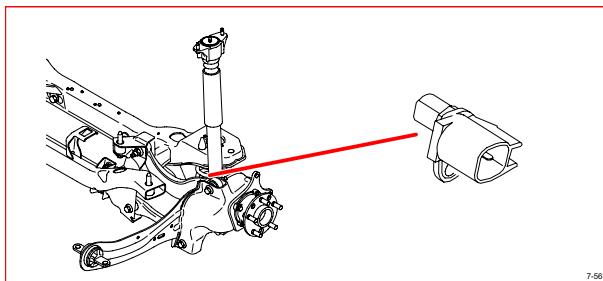


7-56

7/71 Sensor boost pressure

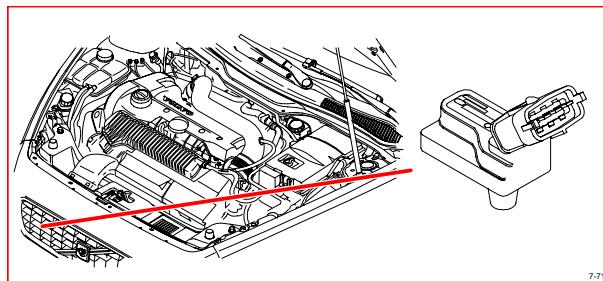


7-71

7/57 Sensor ABS, rear right

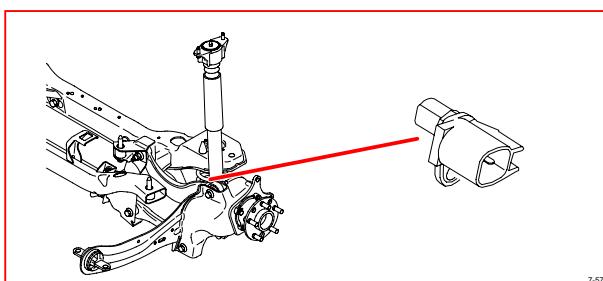


7-57

7/74 Sensor oil temperature, automatic transmission

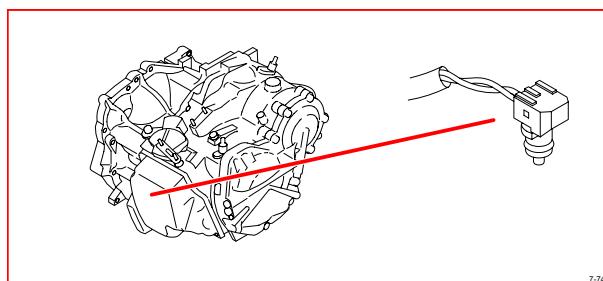


7-74

7/61 Sensor input speed

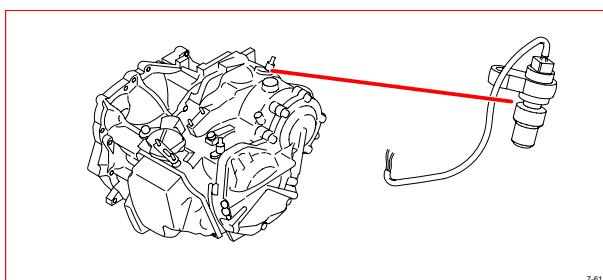


7-61

7/77 Temperature sensor, intake air 1

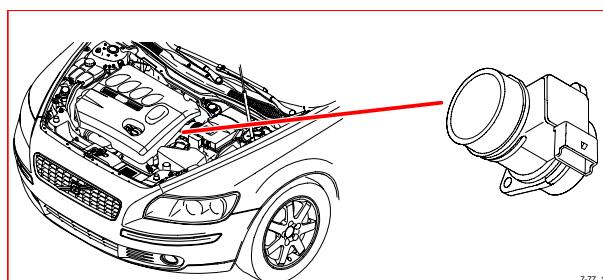


7-77_1

7/62 Sensor output speed

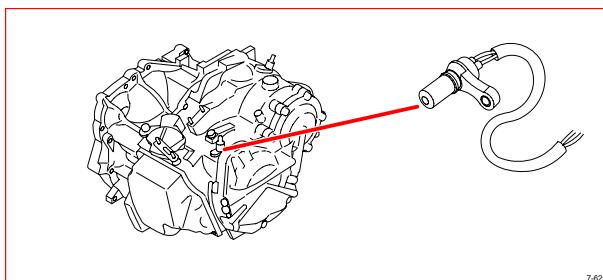


7-62

7/77 Temperature sensor, intake air 2

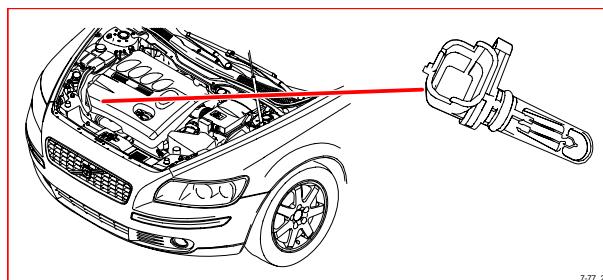


7-77_2

7/69 Sensor outdoor temperature

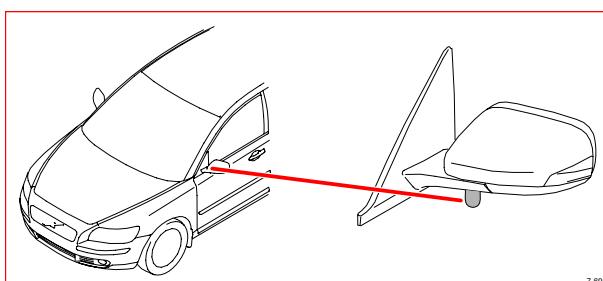

7-69

7/81 Pressure sensor, intake manifold

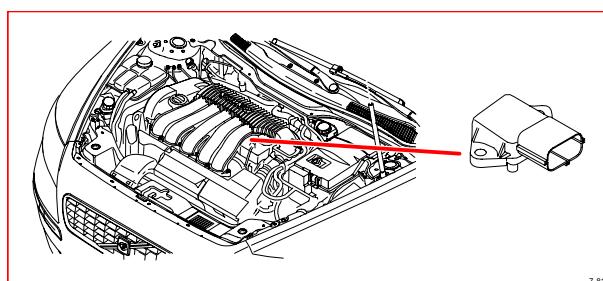


7-81


Component illustrations

7/82 - 7/111


7/82 Heated oxygen sensor, rear

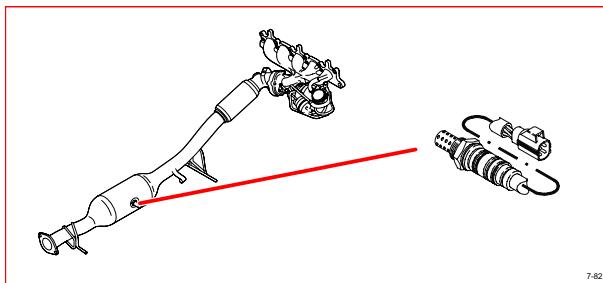


7/100 Level sensor, alarm, C70

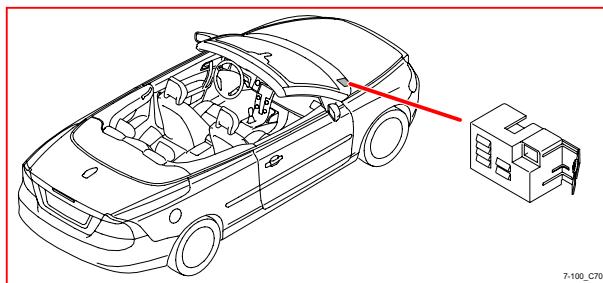


7/86 Intake air temperature sensor, Diesel

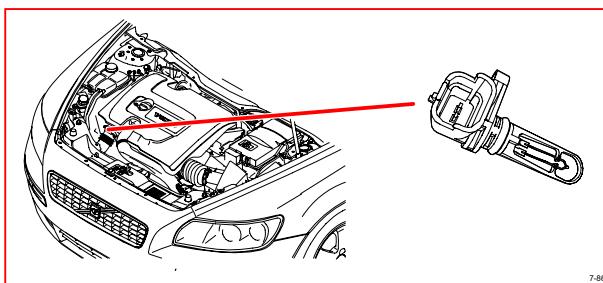


7/108 Side impact sensor, rear left

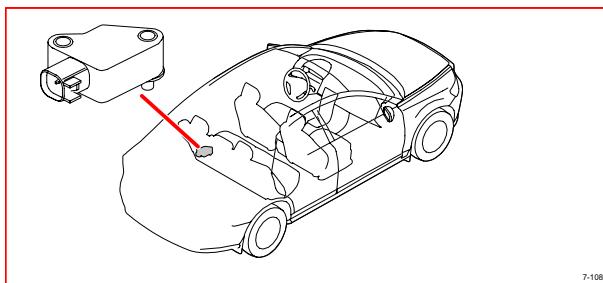


7/93 Occupant Weight Sensor (OWS)

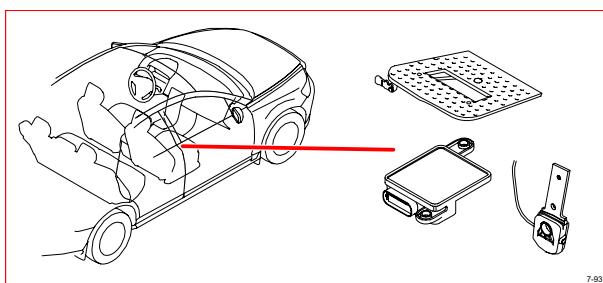


7/109 Side impact sensor, rear right

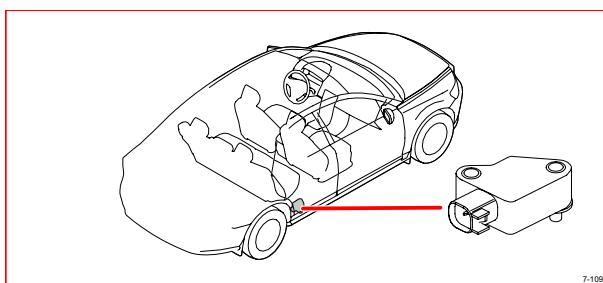


7/100 Level sensor alarm, S40

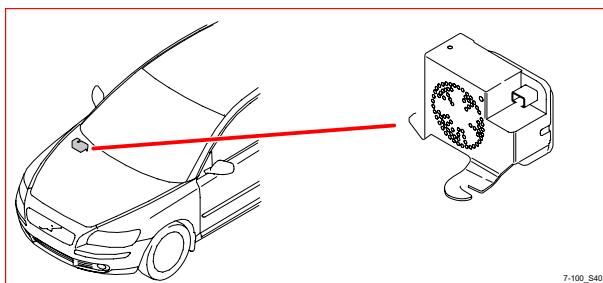


7/110 Sensor temperature driver's seat

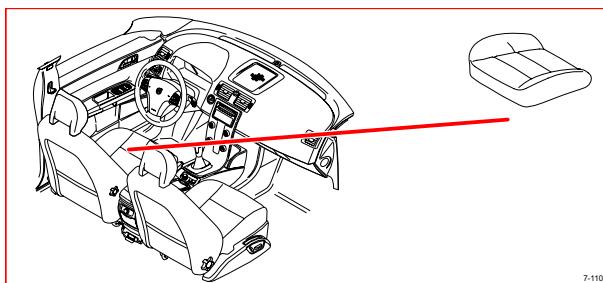

7/100 Level sensor alarm, V50

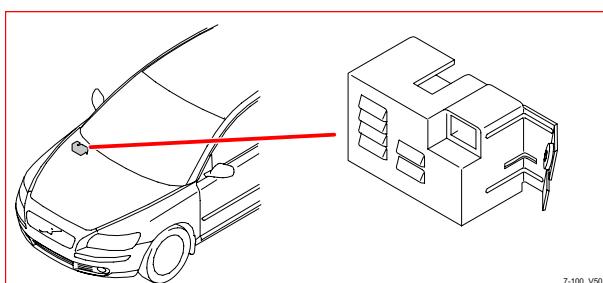


7/111 Sensor temperature passenger seat

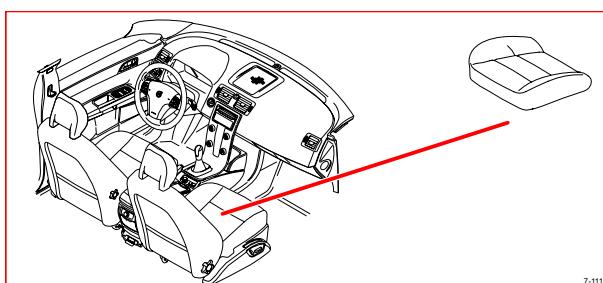

Component illustrations


7/115 - 7/134

7/115 Side impact sensor, left B-post

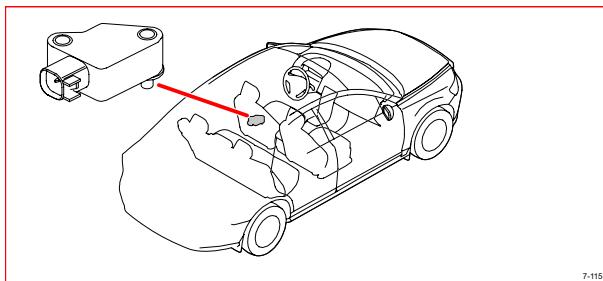


7-115

7/122 Mass Movement Sensor module (MMS), front, C70

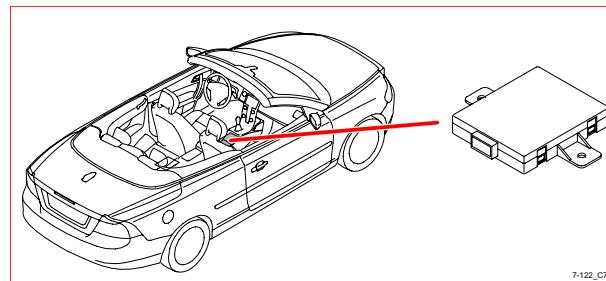


7-122_C70

7/116 Side impact sensor, right B-post

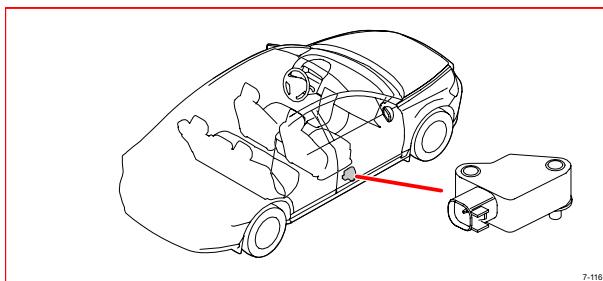


7-116

7/123 Clutch pedal sensor

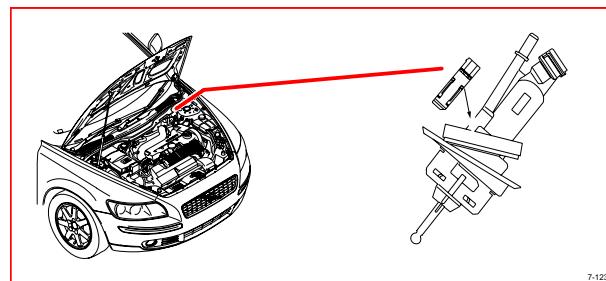


7-123

7/120 Angle sensor, Bi-Xenon rear

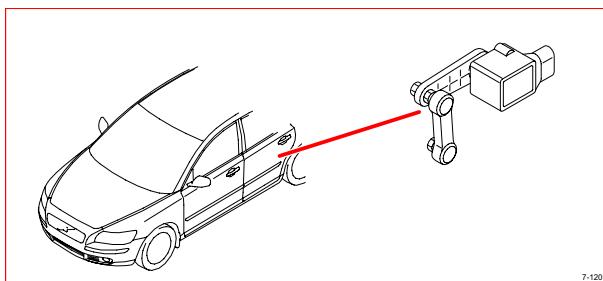


7-120

7/124 Sensor brake pedal

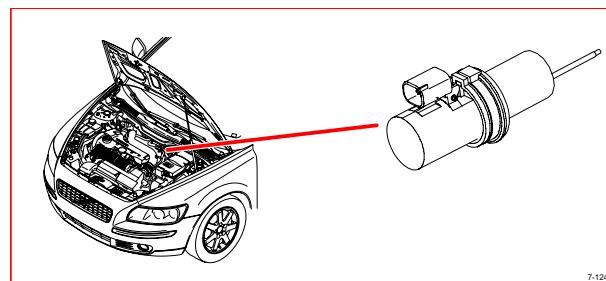


7-124

7/121 Angle sensor, Bi-Xenon front

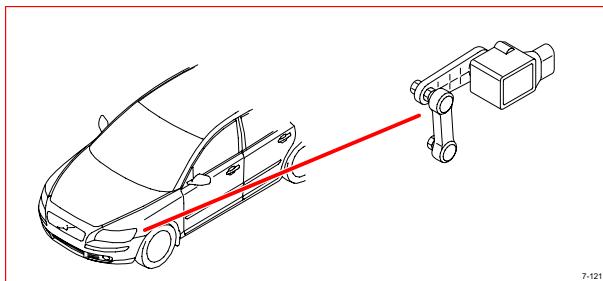


7-121

7/130 Fuel level sensor, ejector side

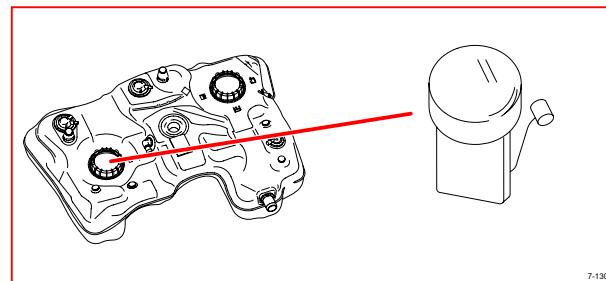

7-130


7/122 Mass Movement Sensor module (MMS), front, S40/V50

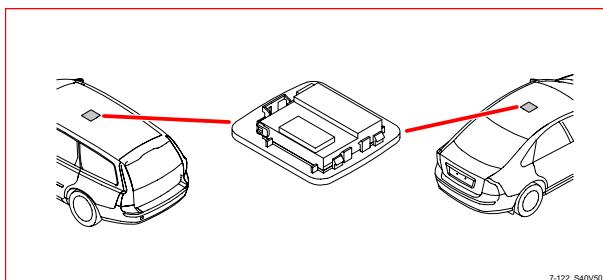

7-122_S40/V50

7/131-

7/134 Rear parking assistance sensor

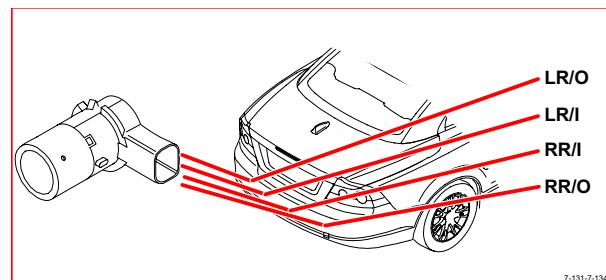


7-131-7-134


Component illustrations

7/143 - 7/163


7/143 Sensor fuel level, pump side

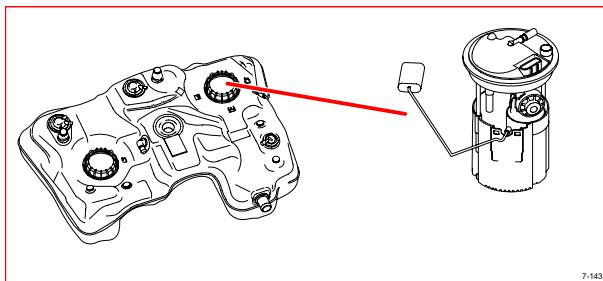


7/158 Rear mass movement sensor,
S40/V50

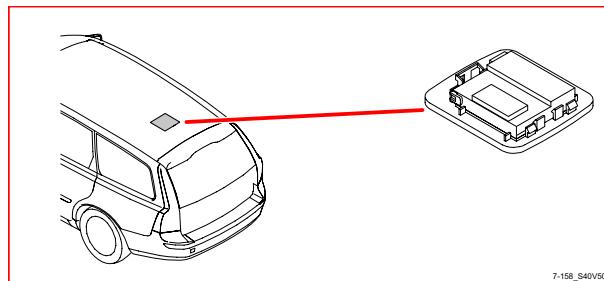


7/149 Rain Sensor Module (RSM)

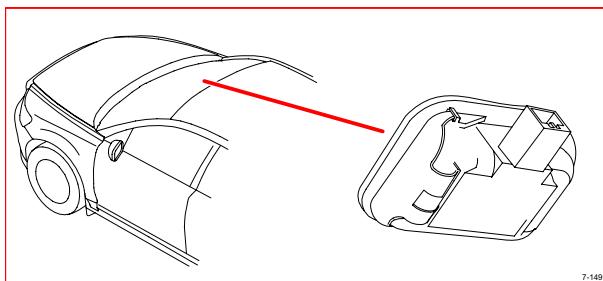


7/158 Rear mass movement sensor, C70

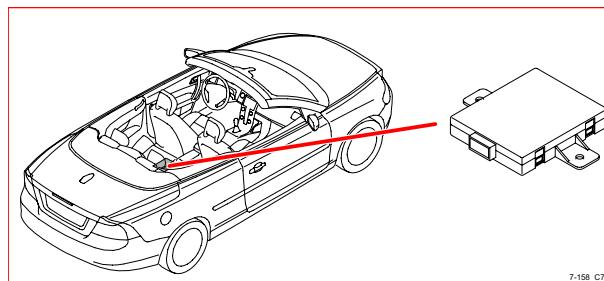


7/154 Sensor fuel temperature

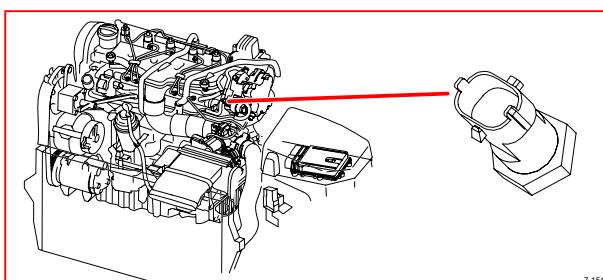


7/159 Air Quality Sensor (AQS)

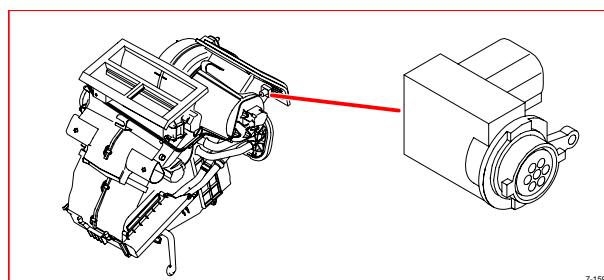


7/156 Fuel pressure and temperature
sensor, 5-cyl

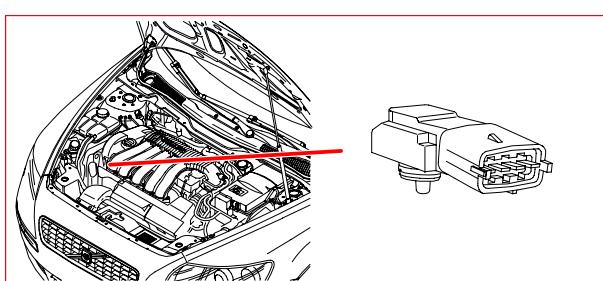


7/162 Pressure sensor, fuel line

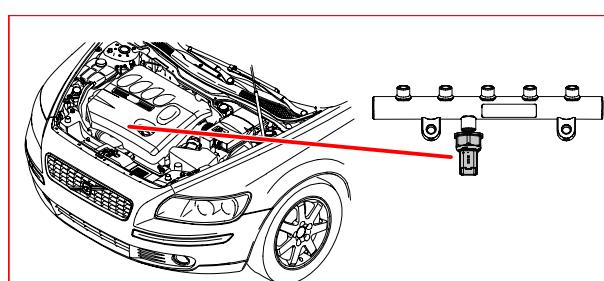

7/156 Pressure and temperature sensor
fuel, Turbo

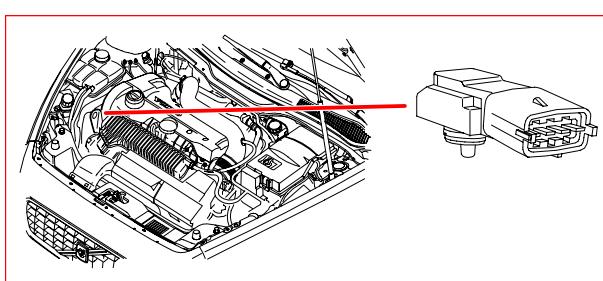


7/163 Camshaft position sensor 2

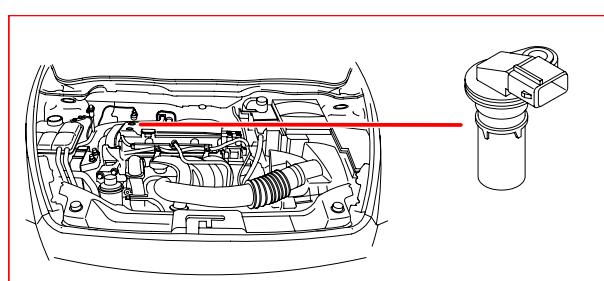


Component illustrations

7/164 - 7/186


7/164 Body Sensor Cluster Stability Sensor (BSC)

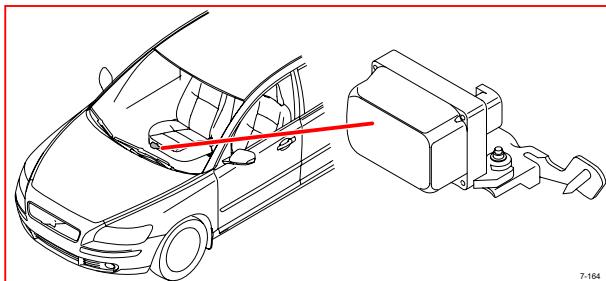


7/165 Pressure and temperature sensor, intake manifold

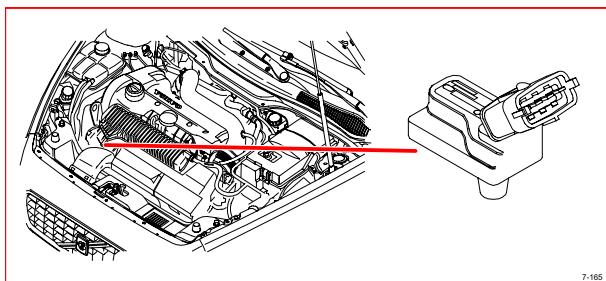


7/166 Oil level sensor

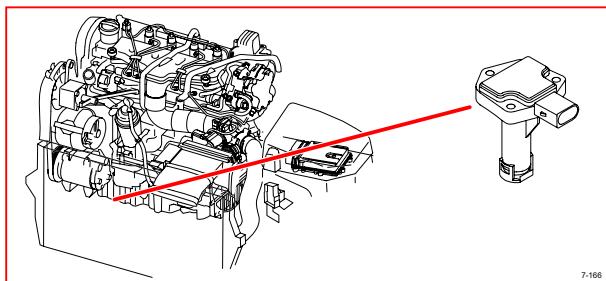


7/172 Position sensor camshaft, intake side

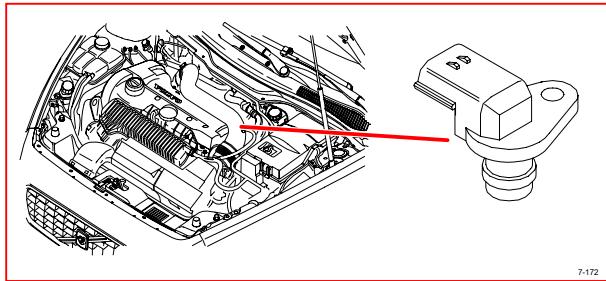


7/173 Position sensor camshaft, exhaust side

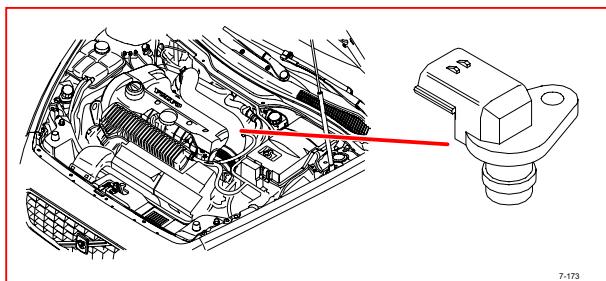


7/174 Differential pressure sensor, particle filter

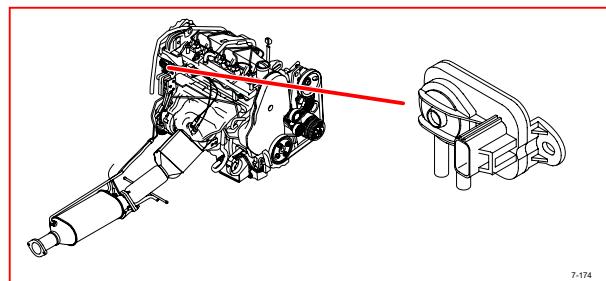


7/178 Front impact sensor, right

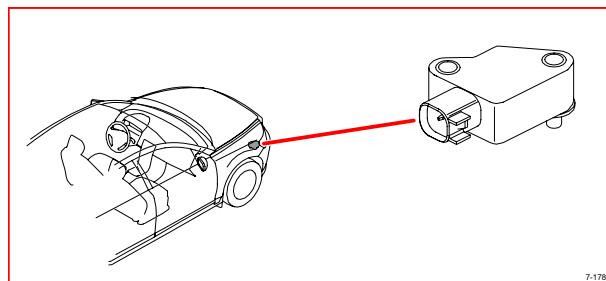


7/179 Front impact sensor, left

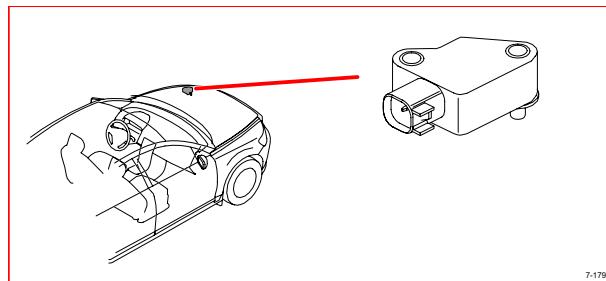

7/182 Remote control IR sensor, RTI

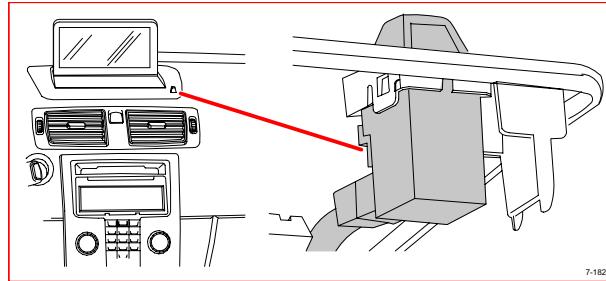


7/186 Heated oxygen sensor, rear

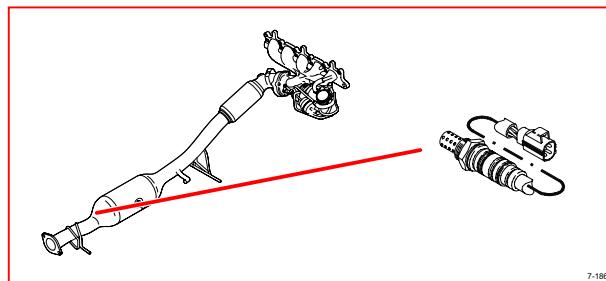

Component illustrations


7/187 - 7/208

7/187 Center heated oxygen sensor

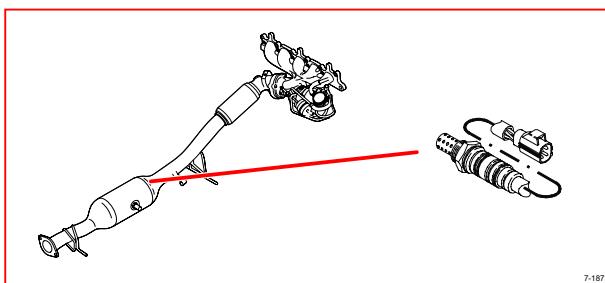


7-187

7/194 Sensor belt roller, driver

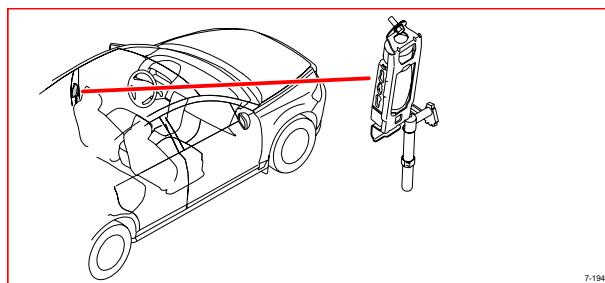


7-194

7/190 Temperature sensor, exhaust gases upstream of particle filter

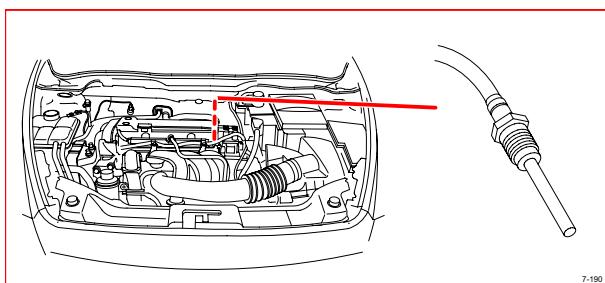


7-190

7/191 Temperature sensor, exhaust gases downstream of particle filter

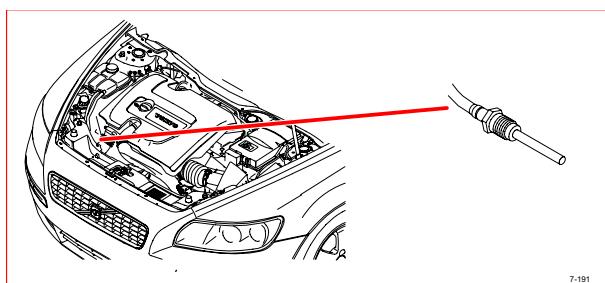


7-191

7/195 Sensor belt roller, passenger

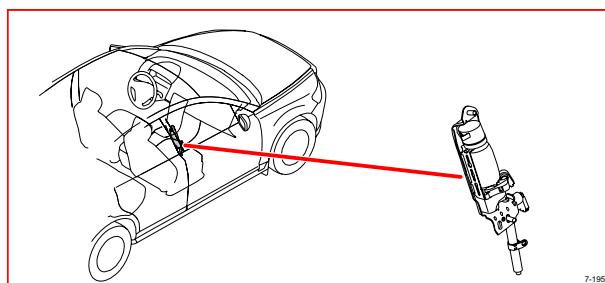


7-195

7/198 Detector, windshield frame

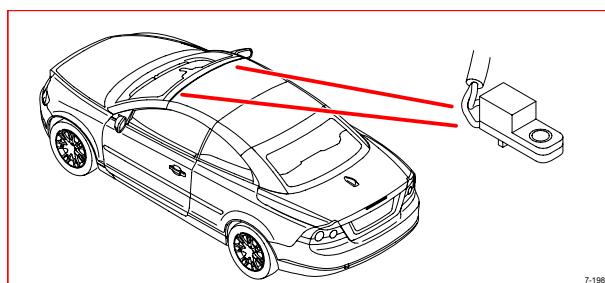

7-198


7/192 Water detection sensor

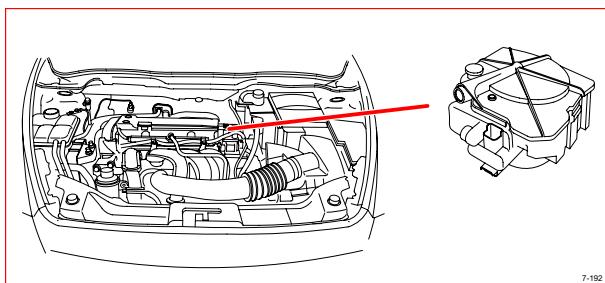

7-192


7/204-

7/207 Front parking assistance sensor

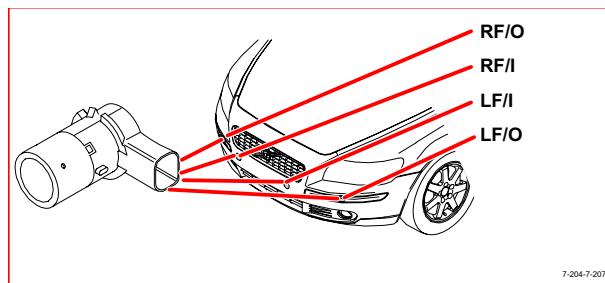


7-204-7-207

7/193 Position sensor turbo

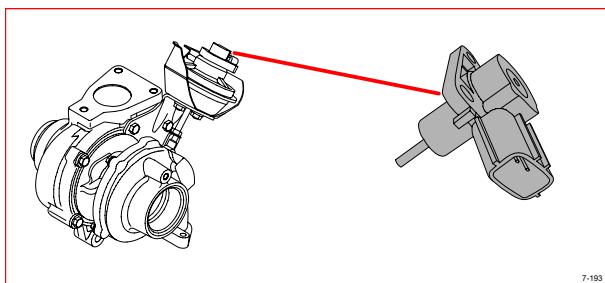

7-193

7/208 Side impact sensor, left door, C70

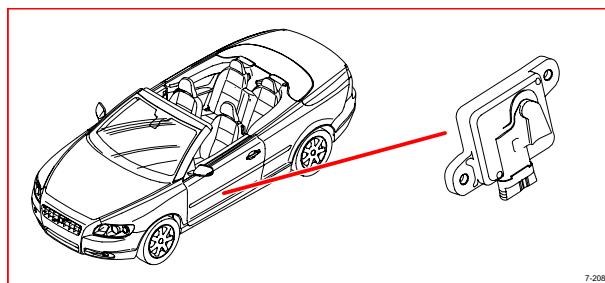


7-208

Component illustrations


7/209 - 8/19

7/209 Side impact sensor, right door, C70

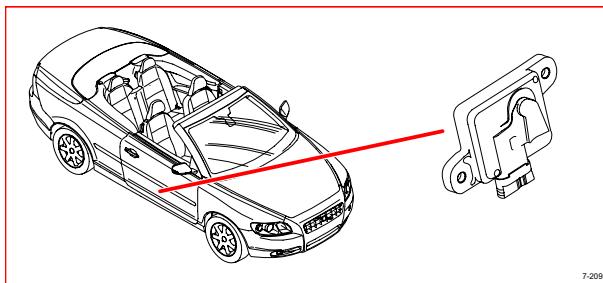


7-209

7/224 Hall sensor, roof, C70

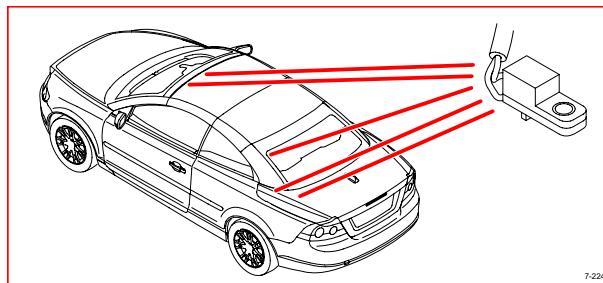


7-224

7/220 Hall sensor, cargo compartment, C70

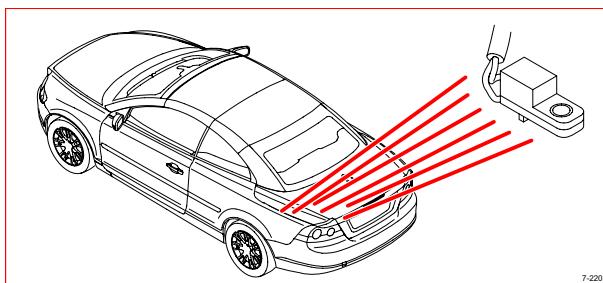


7-220

8/3 Electromagnetic clutch, climate control system

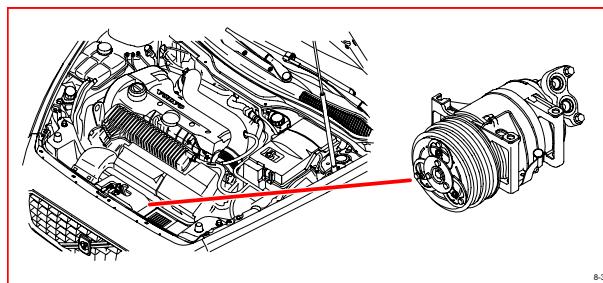


8-3

7/221 Position sensor, rear roof section, C70

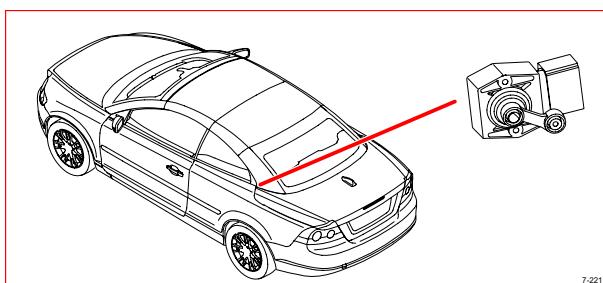


7-221

8/6-10 Injection valves

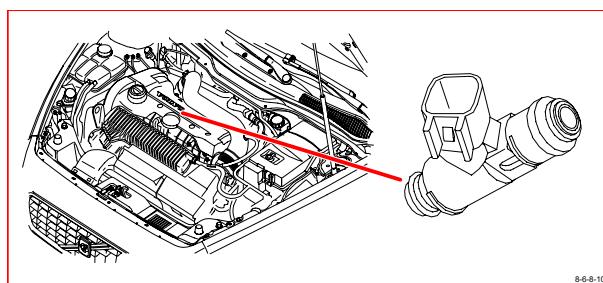


8-6-10

7/222 Position sensor, front roof section, C70

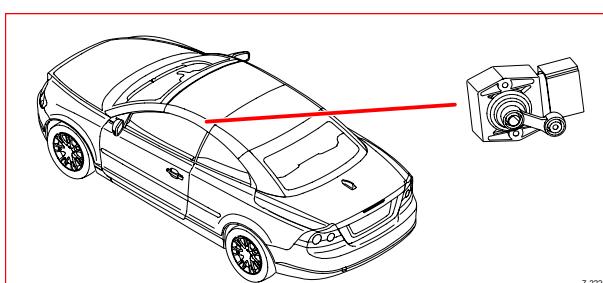


7-222

8/18 EVAP valve

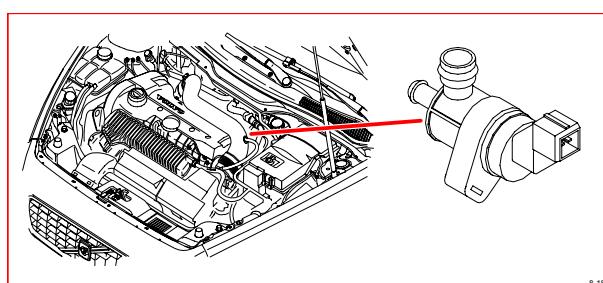


8-18

7/223 Cargo compartment detector, C70

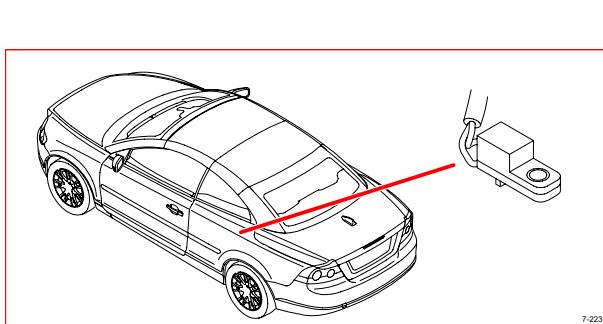

7-223

8/19 Solenoid, variable valve timing, intake

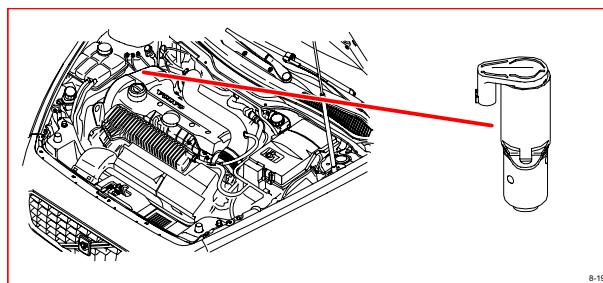


8-19


Component illustrations

8/28 - 8/39


8/28 Turbocharger control valve

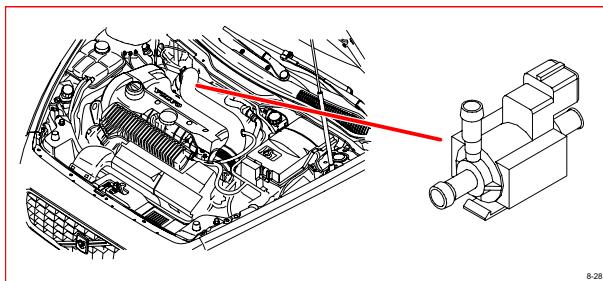


8/34 Igniter, belt tensioner, passenger side

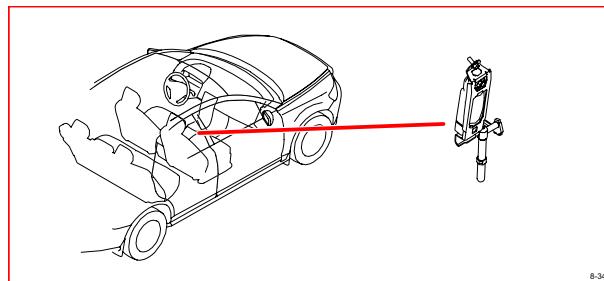


8/30 Airbag igniter, driver's side

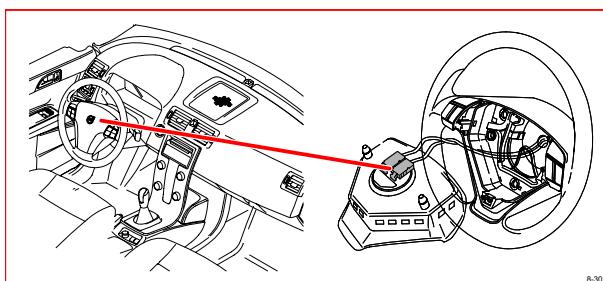


8/36 Solenoid shift lock

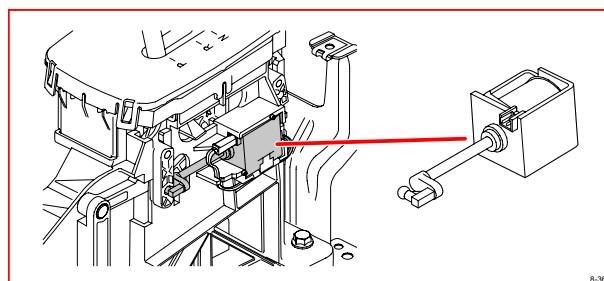


8/31 Airbag igniter, passenger side

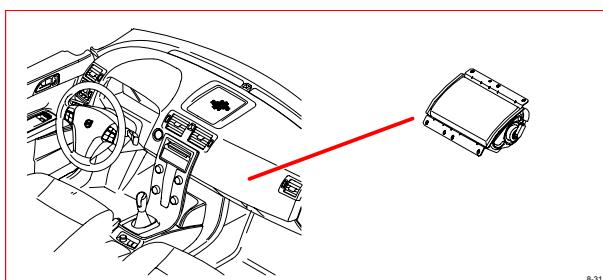


8/37 Automatic transmission

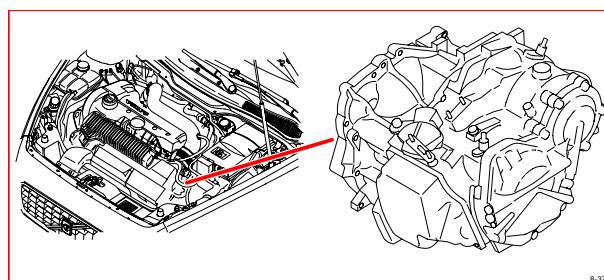


8/32 Igniter, airbag stage 2, passenger side

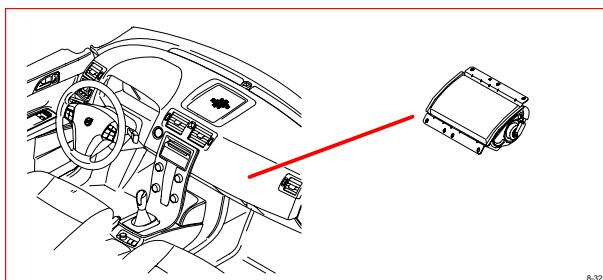


8/38 Shift solenoid 1

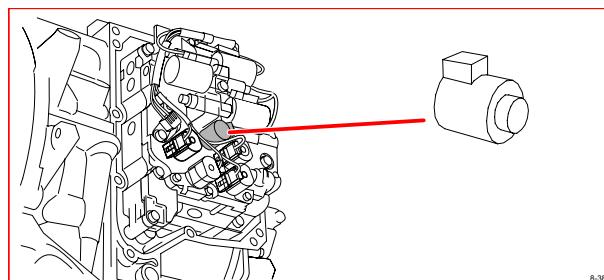

8/33 Igniter, belt tensioner, driver's side

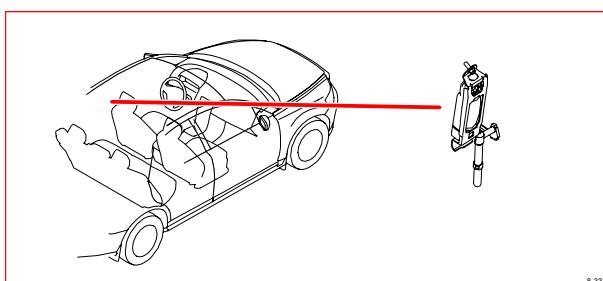


8/39 Shift solenoid 2

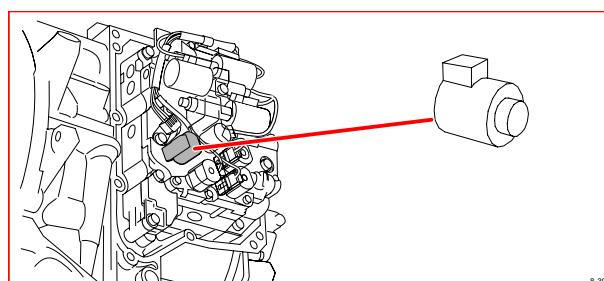


Component illustrations

8/40 - 8/58


8/40 Lock-up solenoid

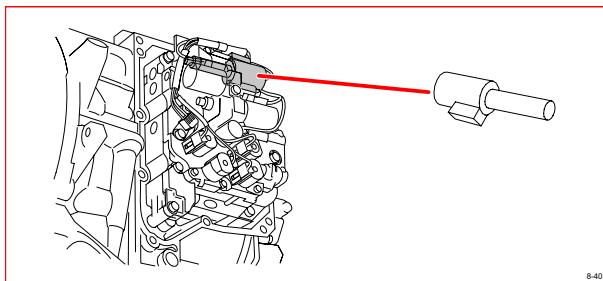


8/52 Igniter side airbag, passenger side

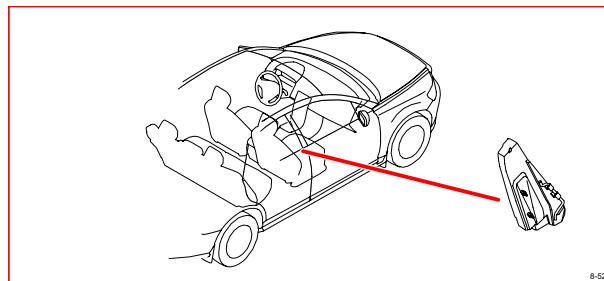


8/41 Pressure solenoid

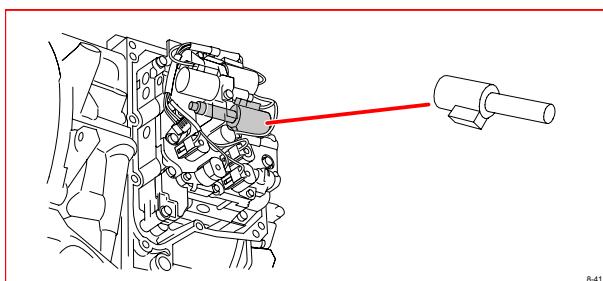


8/55 Igniter, rear left belt tensioner

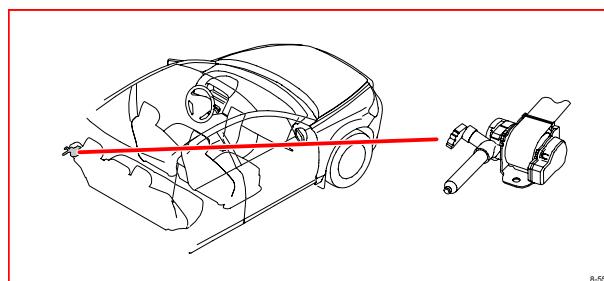


8/45 Solenoid, variable valve timing, intake

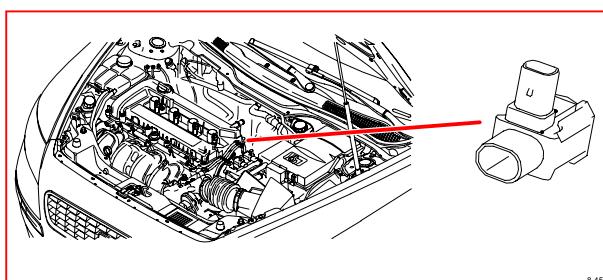


8/56 Igniter, rear right belt tensioner

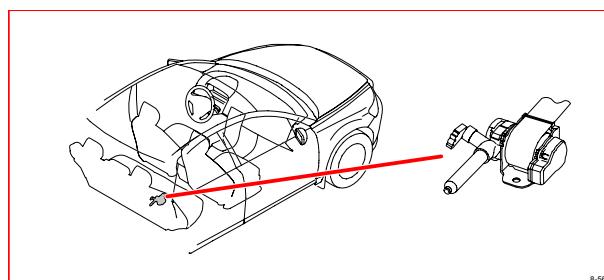


8/48 Auto-dimming rearview mirror

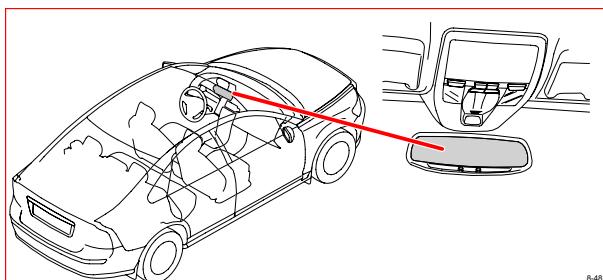


8/57 Igniter, left anti-roll bar

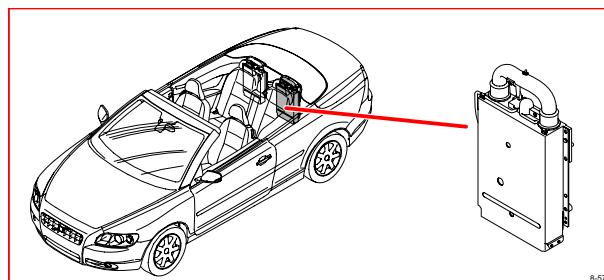

8/51 Igniter side airbag, driver's side

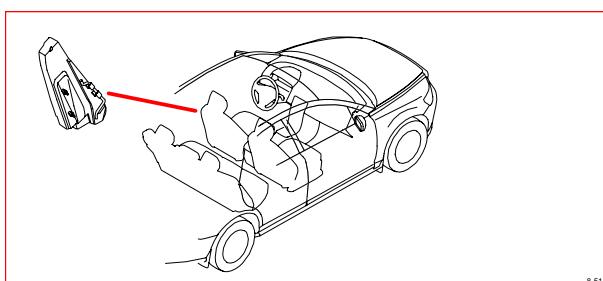


8/58 Igniter, right anti-roll bar

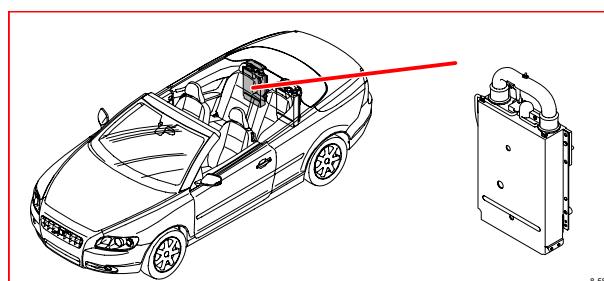


Component illustrations

8/61 - 8/77


8/61 Igniter, airbag stage 2, driver's side

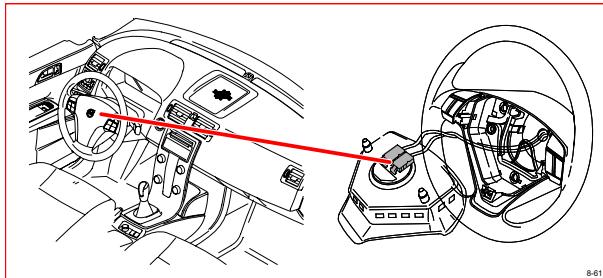


8/71 Throttle solenoid

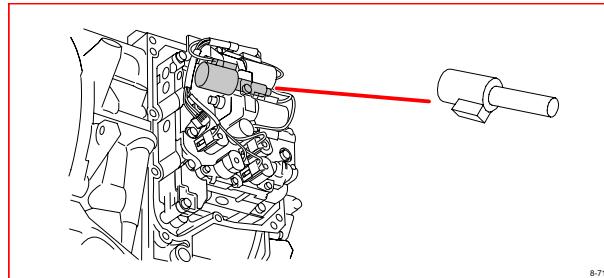


8/66 Igniter, left inflatable curtain, S40/V50

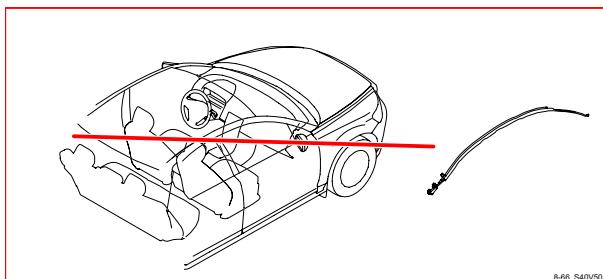


8/72 Shift solenoid 3

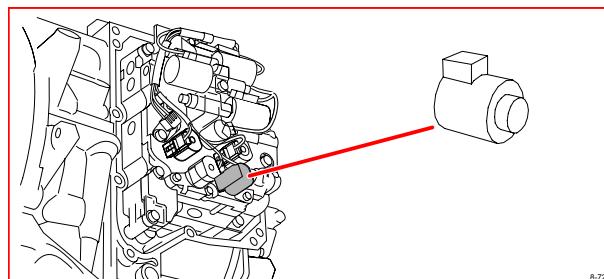


8/66 Igniter, left inflatable curtain, C70

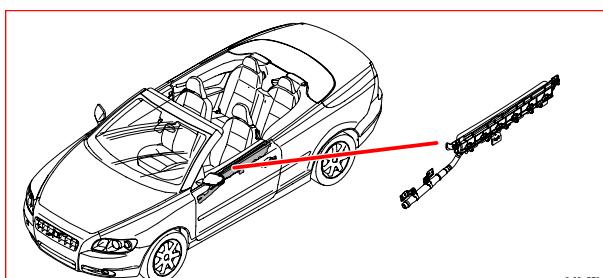


8/73 Shift solenoid 4

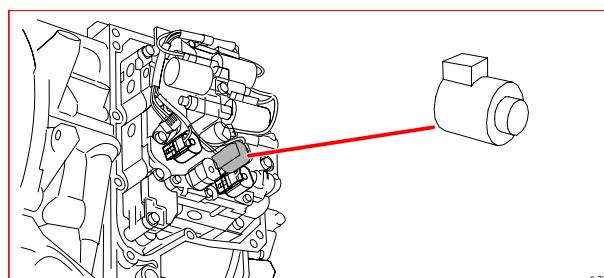


8/67 Igniter, right inflatable curtain, S40/V50

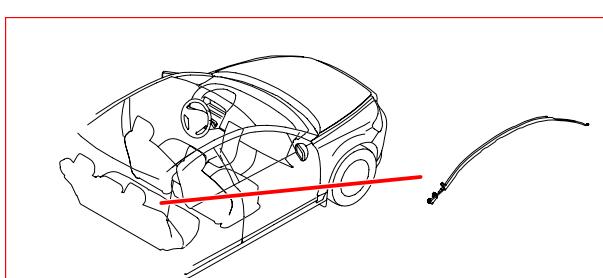


8/74 Shift solenoid 5

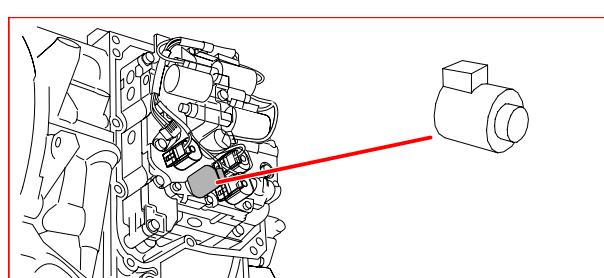

8/67 Igniter, right inflatable curtain, C70

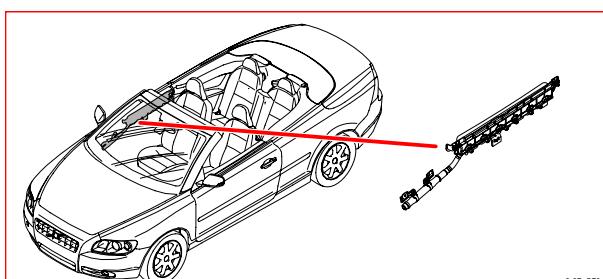


8/77 Control valve, fuel volume

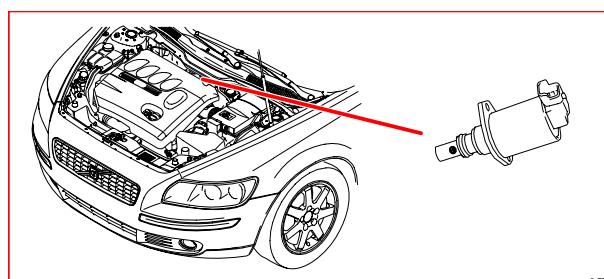


Component illustrations

8/81 - 8/119


8/81 Solenoid, variable valve timing outlet

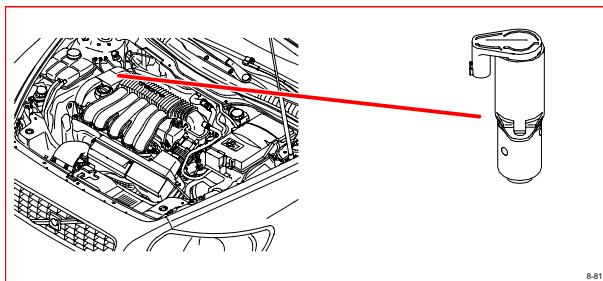


8/99 Igniter, steering column

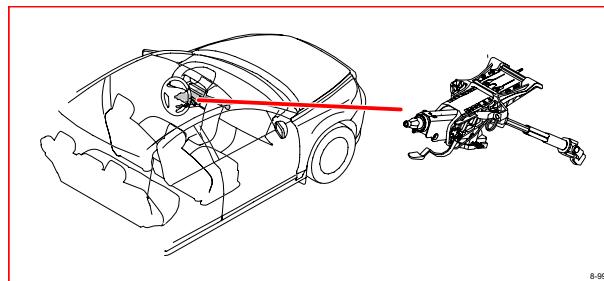


8/82 Solenoid, variable turbo geometry

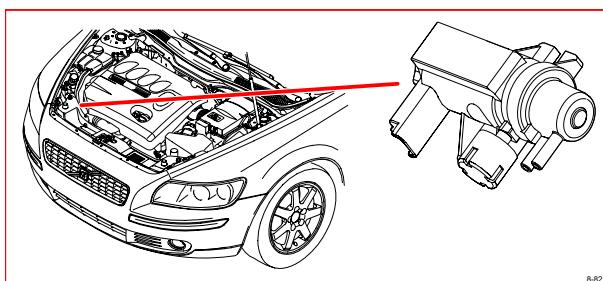


8/111 High-pressure solenoid valve, Diesel

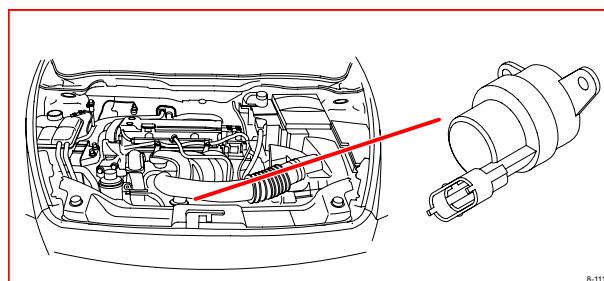


8/84 Switch, vacuum pump

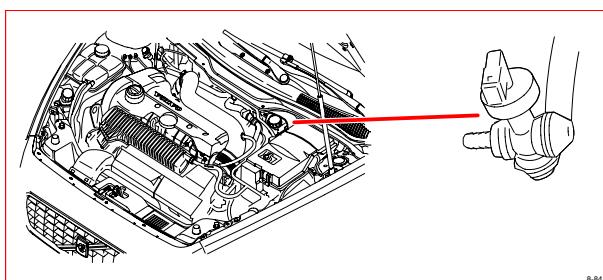


8/113 Bypass valve, EGR cooling

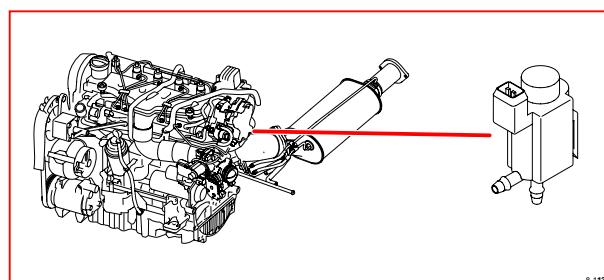


8/92 Lap belt tensioner, driver

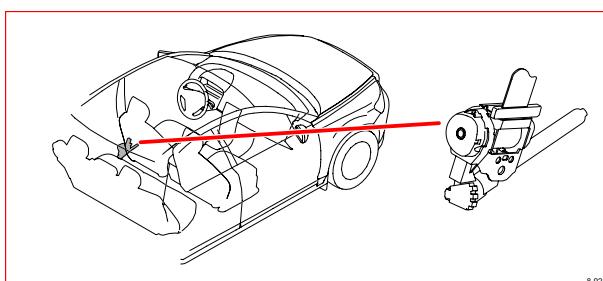


8/114 Valve mixing air/fuel

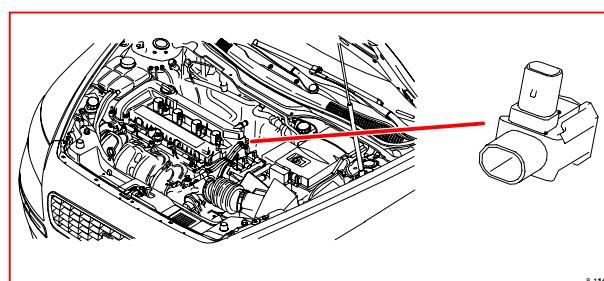

8/98 Control valve fuel pressure

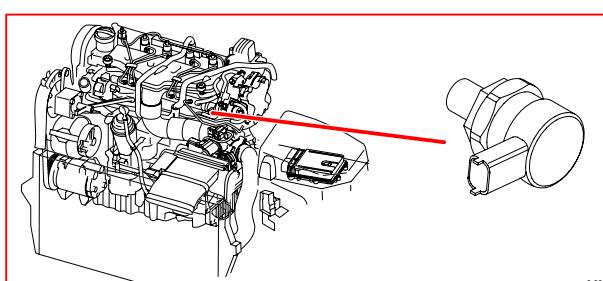


8/119 Pressure monitor, climate control system

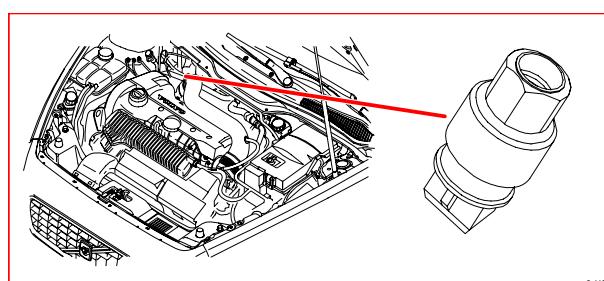


Component illustrations

8/120 - 8/137


8/120 EGR valve

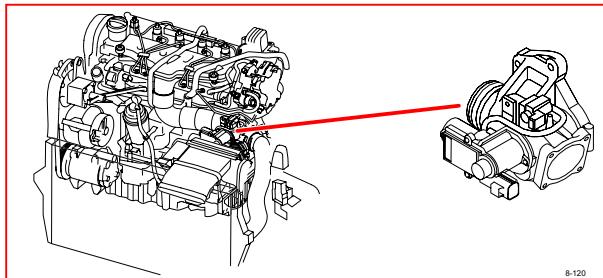


8/129 Passenger belt force limiter

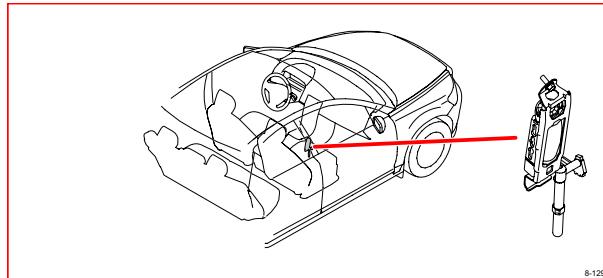


8/121 Valve coolant

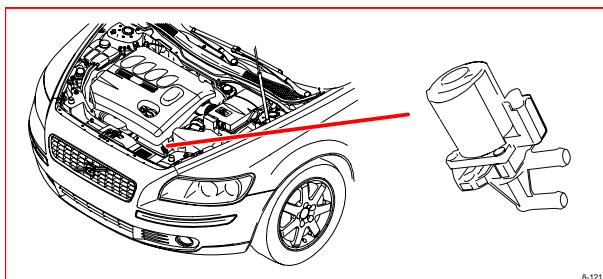


8/132 Control valve inlet

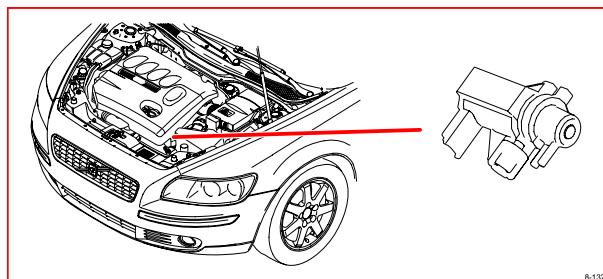


8/122 Bypass valve, intercooler

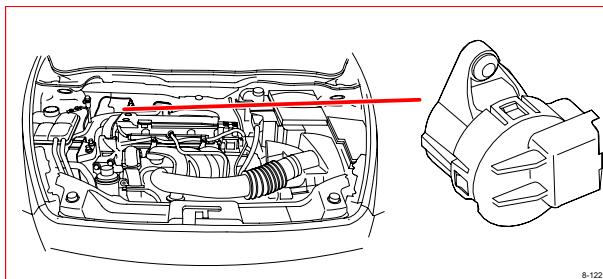


8/133 Control valve fuel pressure

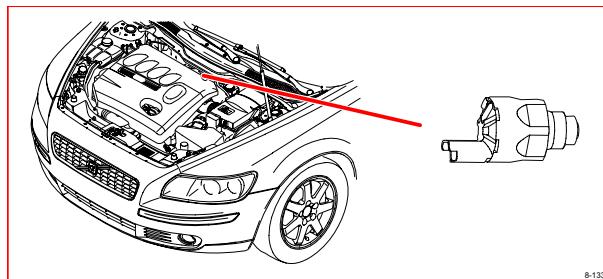


8/127 Pressure switch, climate control system

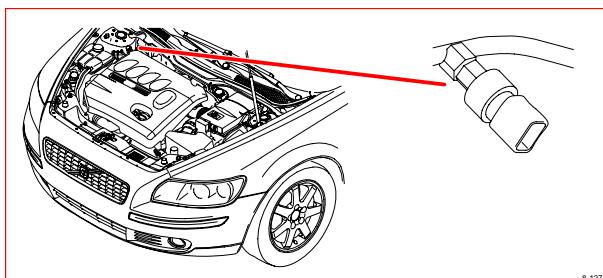


8/134 Solenoid, reverse interlock, manual

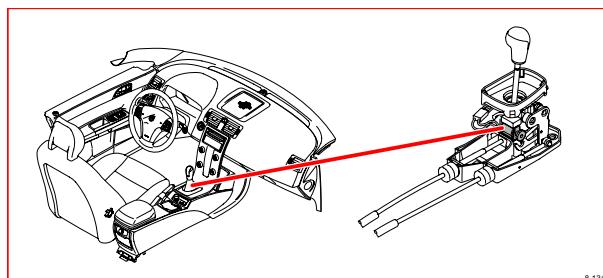

8/128 Driver's belt force limiter

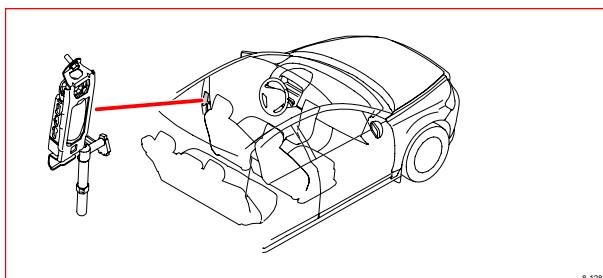


8/137 Lock motor, left door compartment

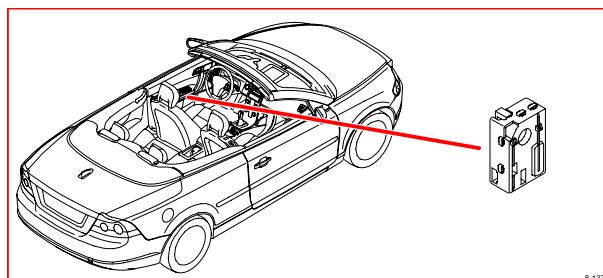


Component illustrations

8/138 - 9/17


8/138 Lock motor, right door compartment

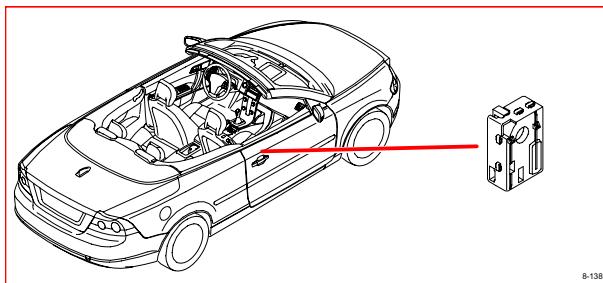


9/2 Heated rear window

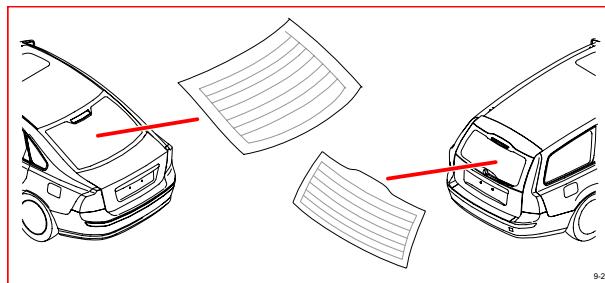


8/139 Lock motor, ski hatch

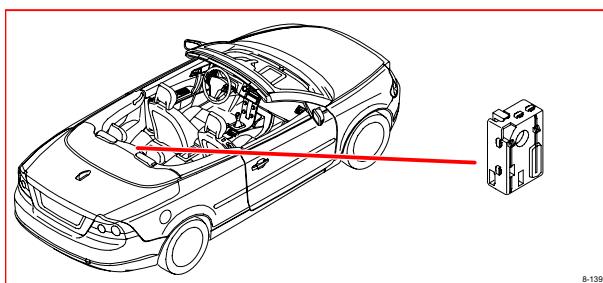


9/12 Seat Heating Module (SHM), driver's side

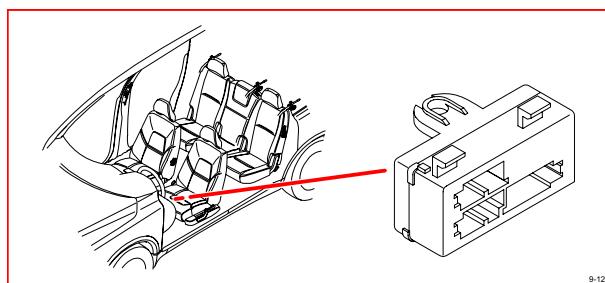


8/140 Lock motor, rear left seat compartment

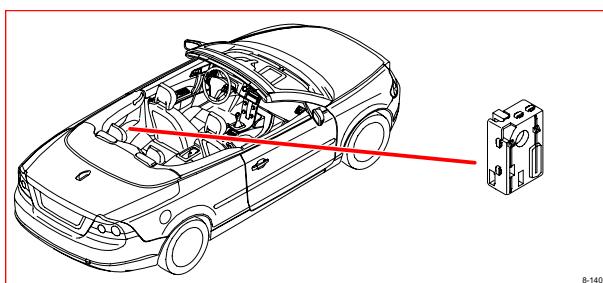


9/13 Seat Heating Module (SHM), passenger side

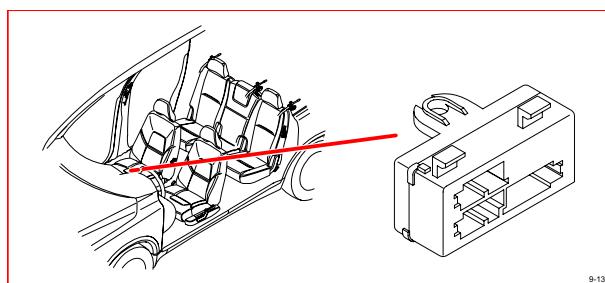


8/141 Lock motor, rear right seat compartment

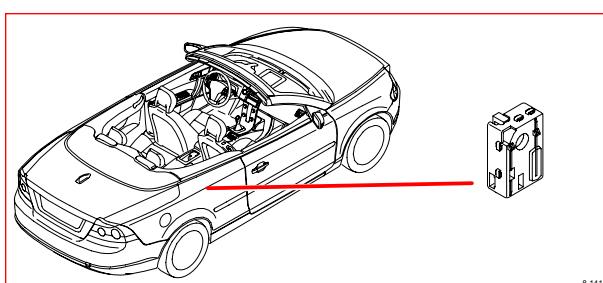


9/16 Heating element, driver's seat backrest

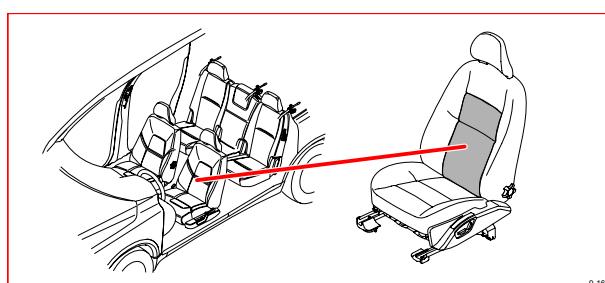

9/1 Front 12V outlet

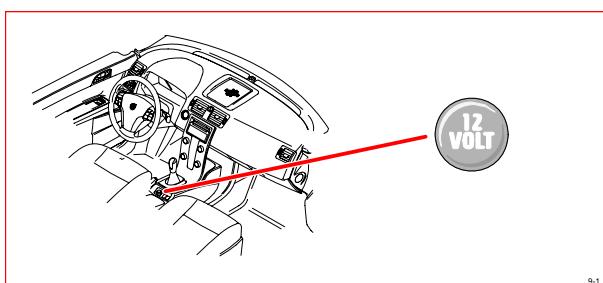


9/17 Heating element, passenger seat backrest

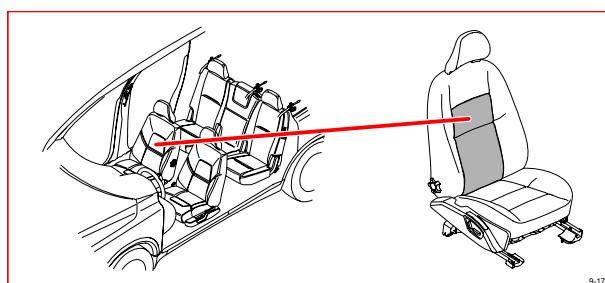


Component illustrations

9/18 - 9/41.1


9/18 Heating element, driver's seat cushion

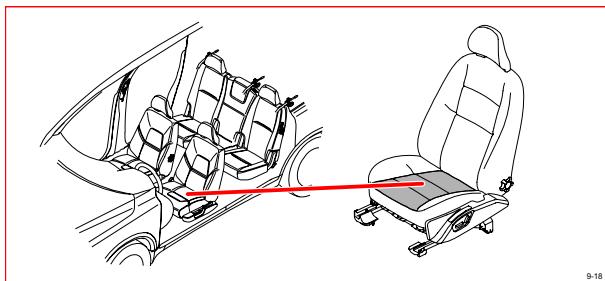


9/19 Heating element, passenger seat cushion

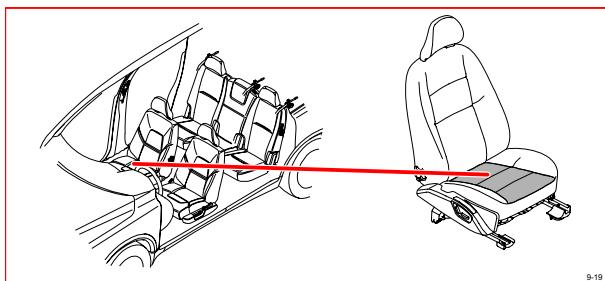


9/25 Rear 12V outlet

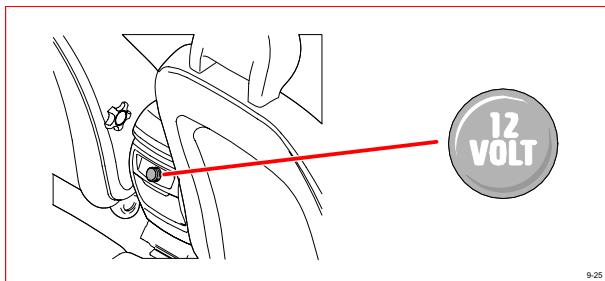


9/30 Auxiliary heater

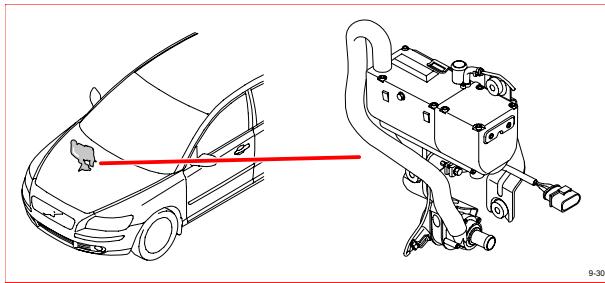


9/32 PTC resistor, oil trap

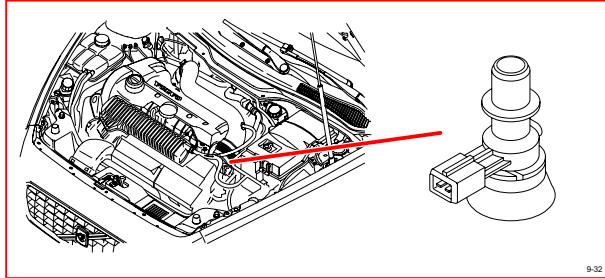


9/33 Electrically heated rear-view mirror, driver's door

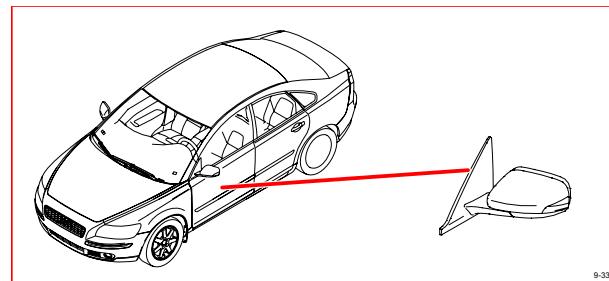


9/34 Electrically heated rear-view mirror, passenger door

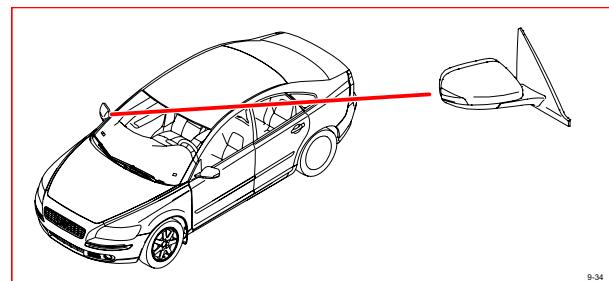


9/38 Electrically heated fuel filter

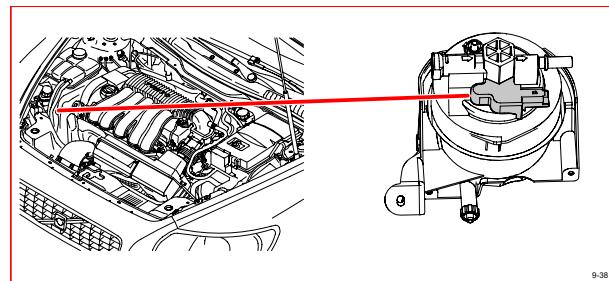

9/41 PTC-element

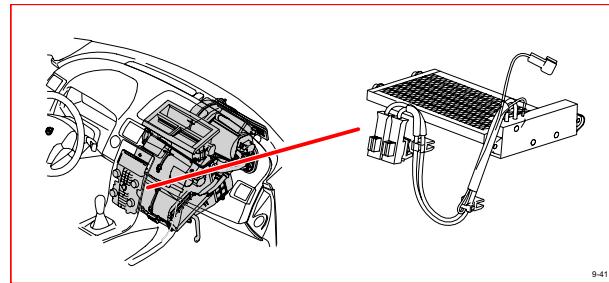


9/41.1 Electric engine heater

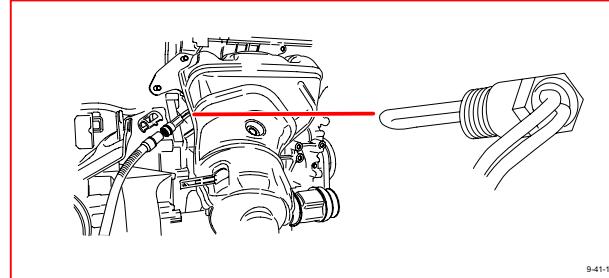


Component illustrations

10/1 - 10/15


10/1 Lamp housing, front left

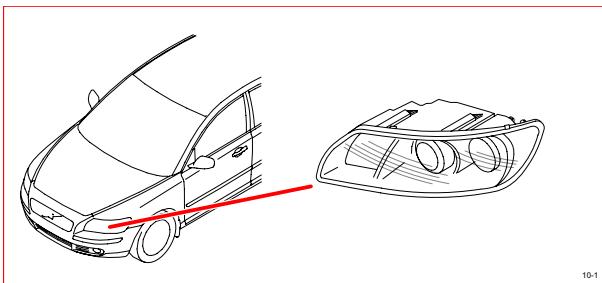


10/11 Position/parking light, front left

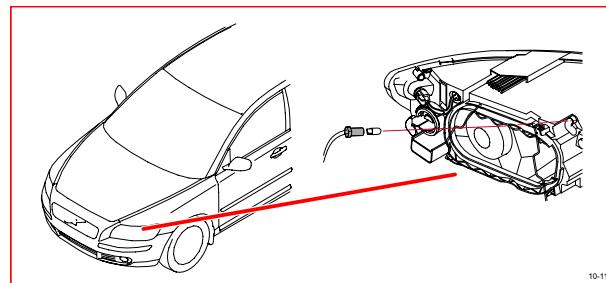


10/2 Lamp housing, front right

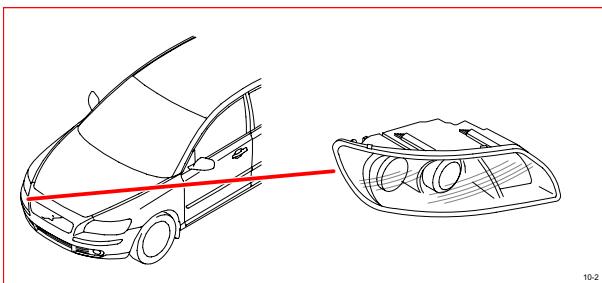


10/12 Position/parking light, front right

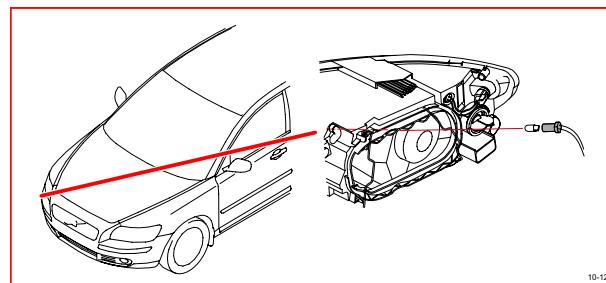


10/3 License plate lighting

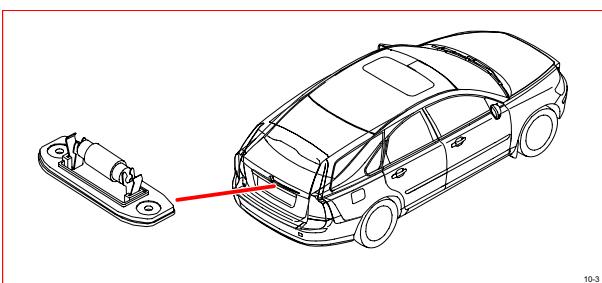


10/13 Direction indicator, front left

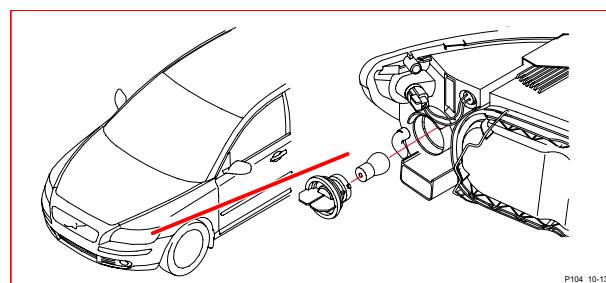


10/5 Fog light, front left

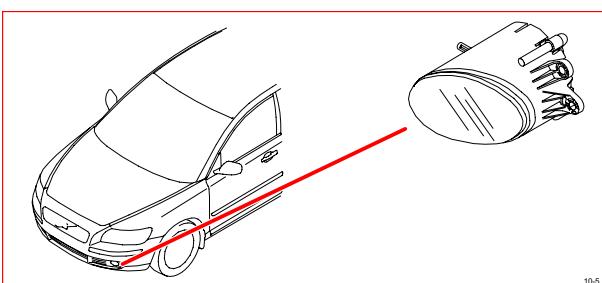


10/14 Direction indicator, front right

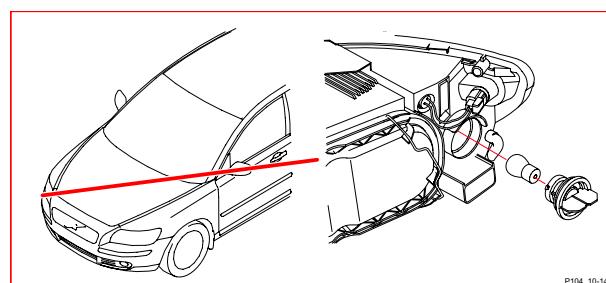

10/6 Fog light, front right

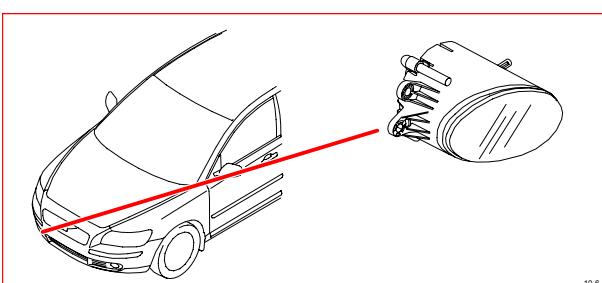


10/15 Direction indicator, rear-view mirror driver's door

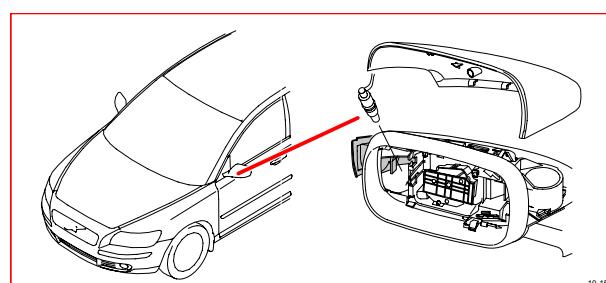


Component illustrations

10/16 - 10/24


10/16 Direction indicator, passenger door mirror

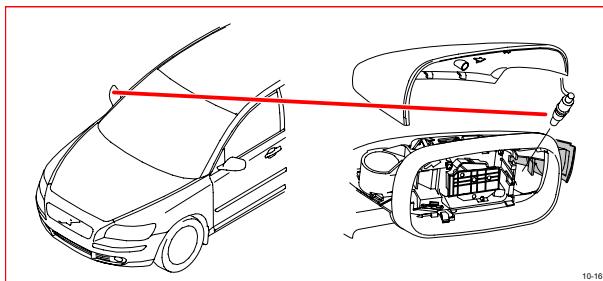


10/17 Lamp housing, rear right, S40/V50

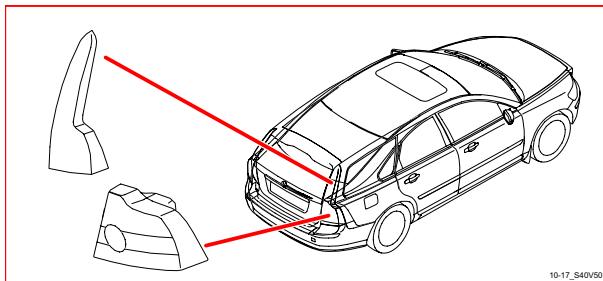


10/17 Lamp housing, rear right, C70

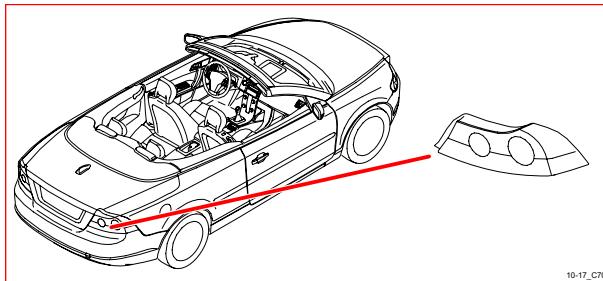


10/18 Lamp housing, rear left, S40/V50

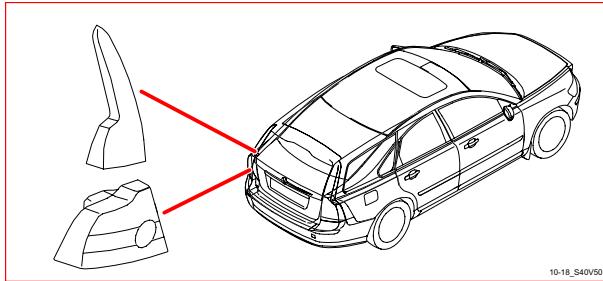


10/18 Lamp housing, rear left, C70

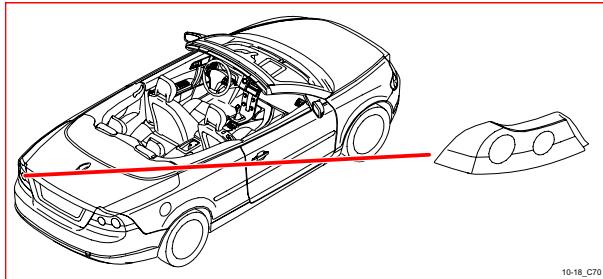


10/19 Auxiliary brake light, S40/V50

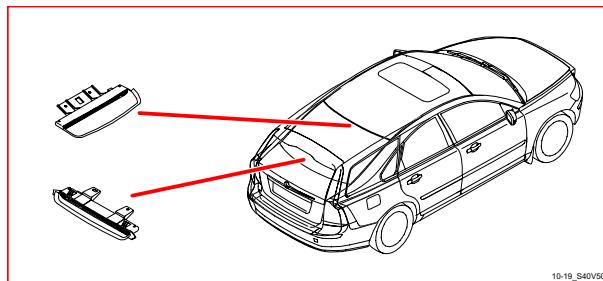


10/19 Auxiliary brake light, C70

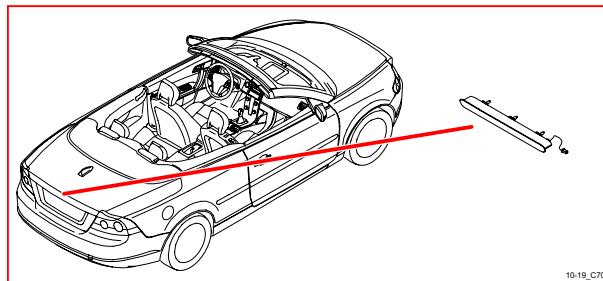


10/22 Ceiling light, S40/V50

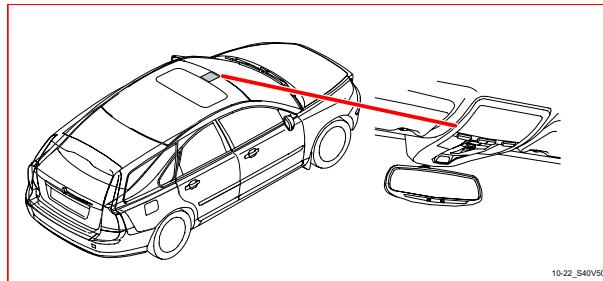

10/22 Ceiling light, C70

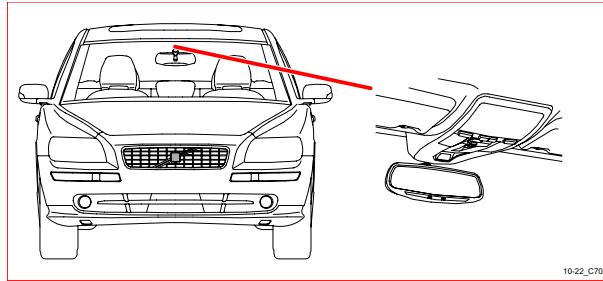


10/24 Cargo compartment lighting, S40

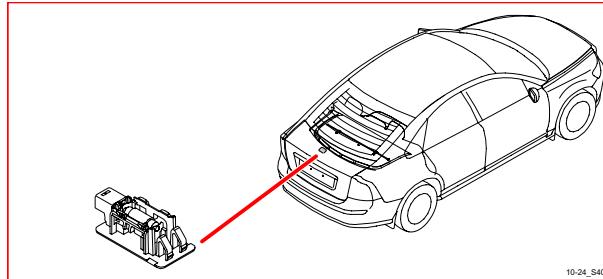


Component illustrations

10/24 - 10/45


10/24 Cargo compartment lighting, C70

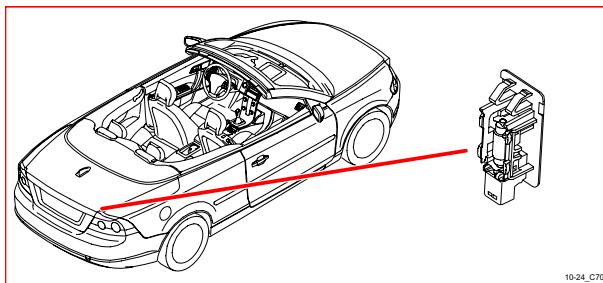


10/43 Right brake light, S40/V50

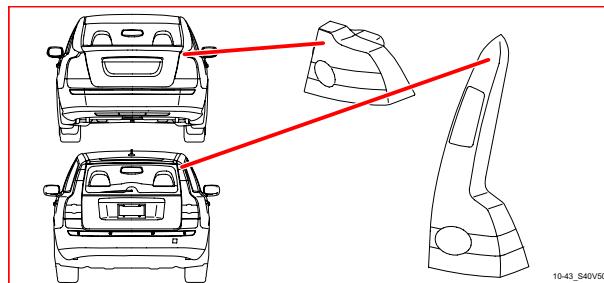


10/25 Cargo compartment lighting

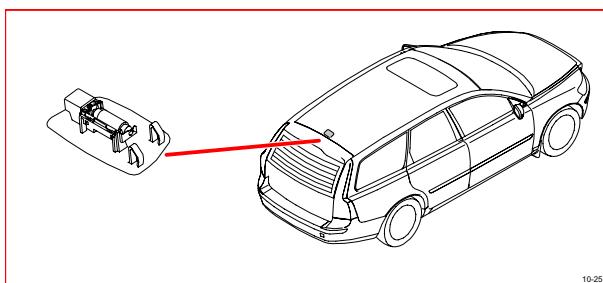


10/43 Right brake light, C70

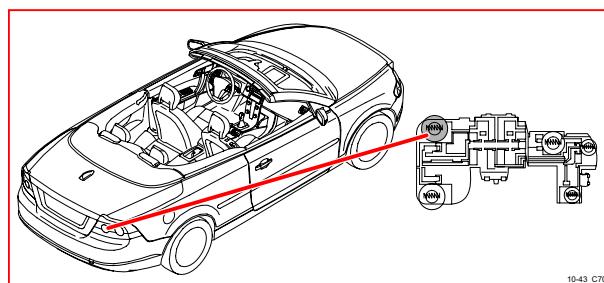


10/26 Reading light, rear left

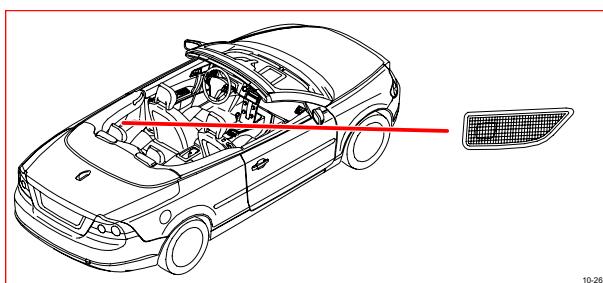


10/44 Right tail light 1, S40/V50

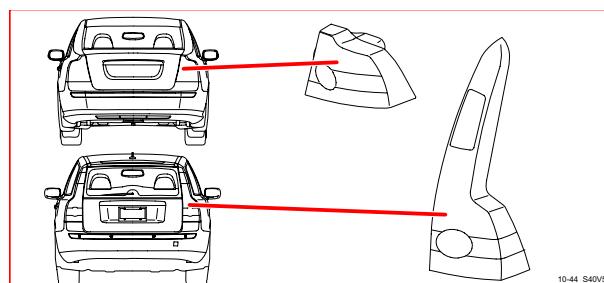


10/27 Reading light, rear right

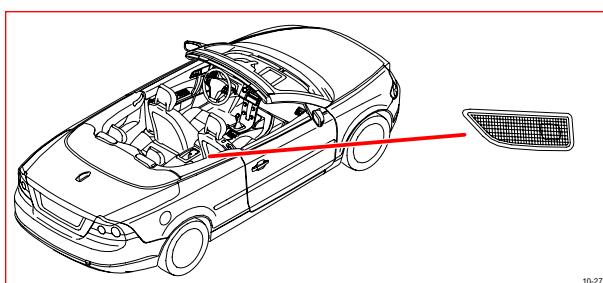


10/44 Right tail light 1, C70

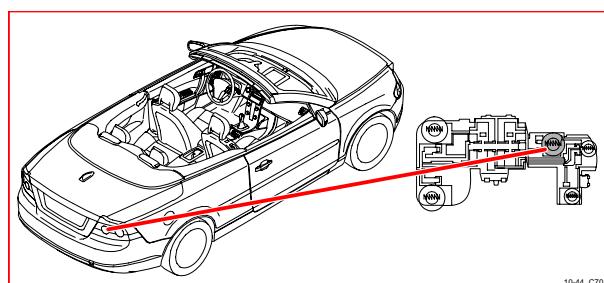

10/29 Glove compartment lighting

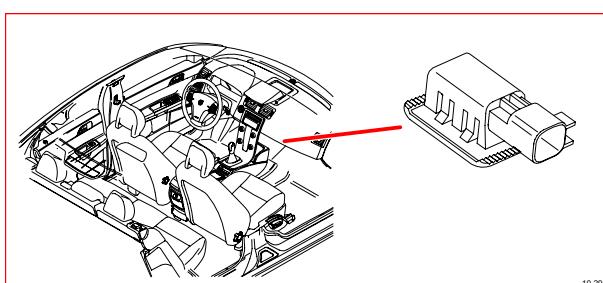


10/45 Right tail light 2, S40/V50

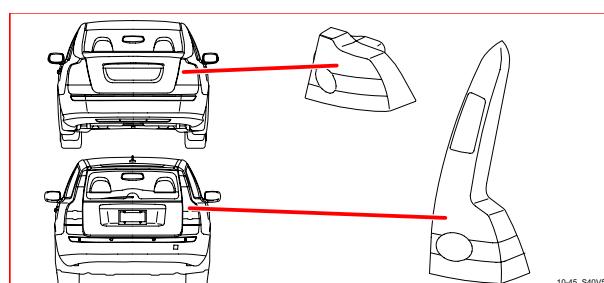


Component illustrations

10/45 - 10/51


10/45 Right tail light 2, C70

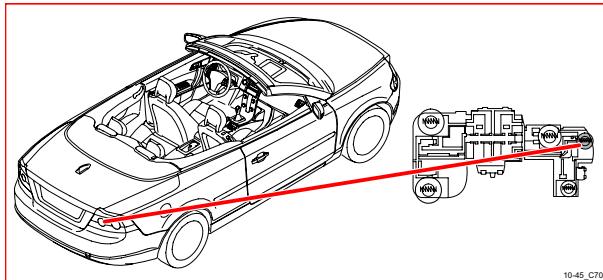


10/48 Right reversing light, S40/V50

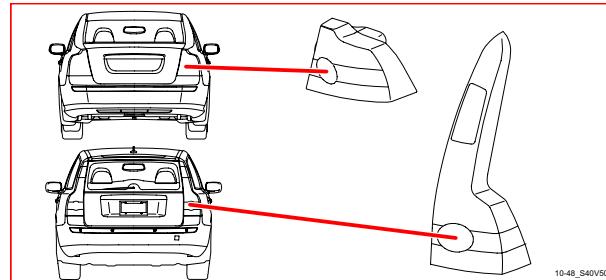


10/46 Rear right fog light, S40/V50

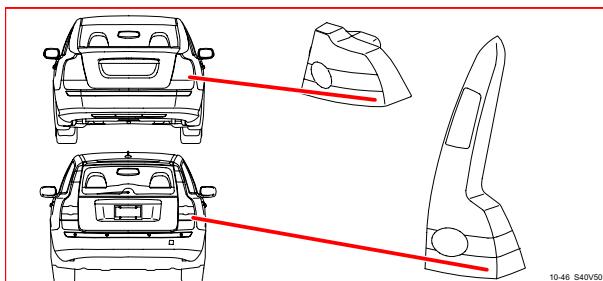


10/48 Right reversing light, C70

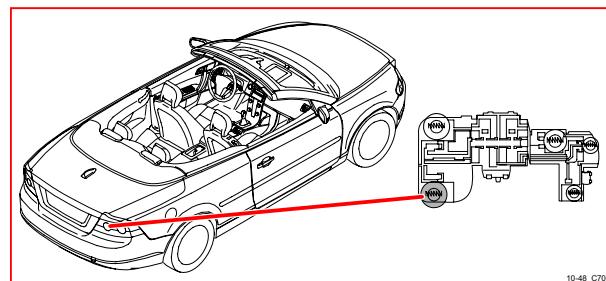


10/46 Rear right fog light, C70

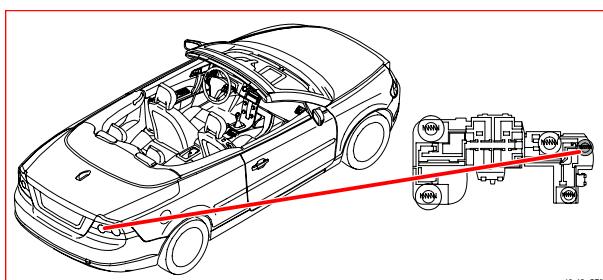


10/50 Left brake light, S40/V50

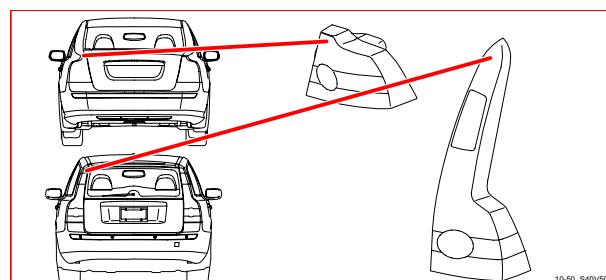


10/47 Rear right direction indicator, S40/V50

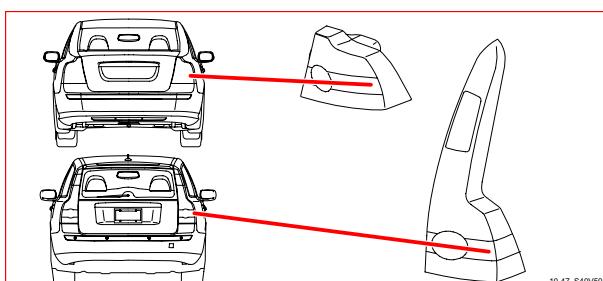


10/50 Left brake light, C70

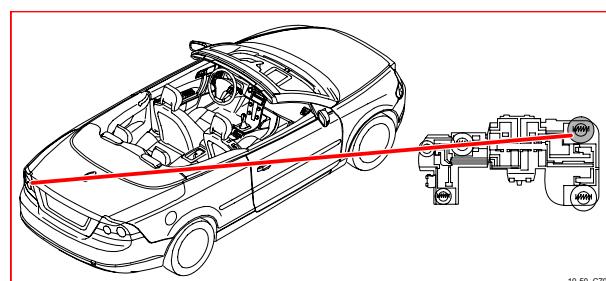

10/47 Rear right direction indicator, C70

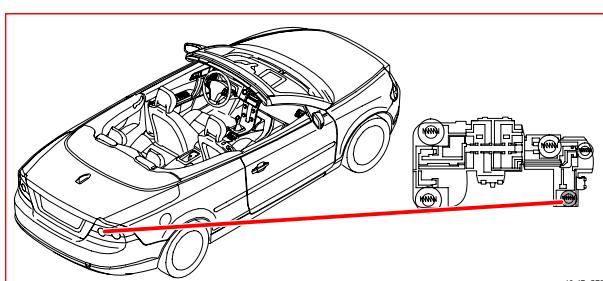


10/51 Left tail light 1, S40/V50

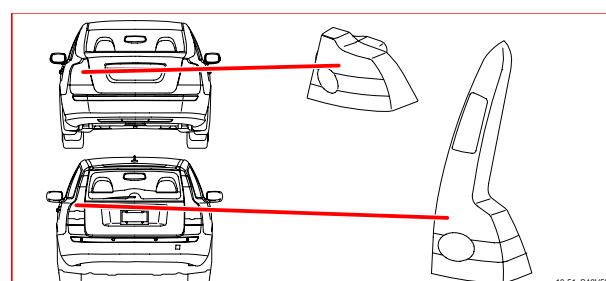


Component illustrations

10/51 - 10/64


10/51 Left tail light 1, C70

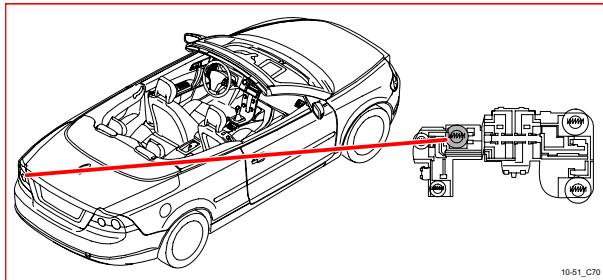


10/54 Rear left direction indicator, S40/V50

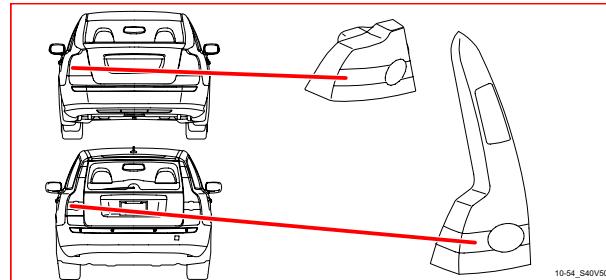


10/52 Left tail light 2, S40/V50

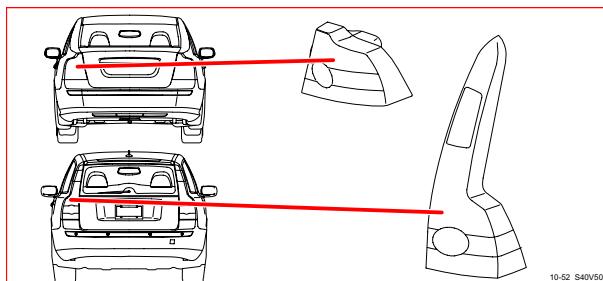


10/54 Rear left direction indicator, C70

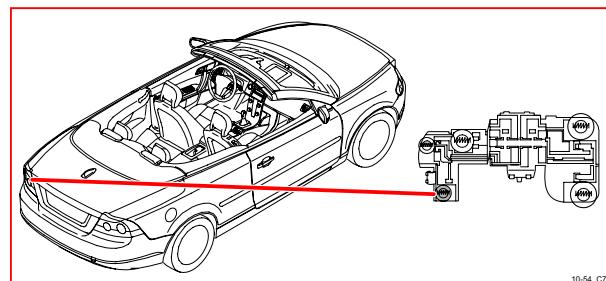


10/52 Left tail light 2, C70

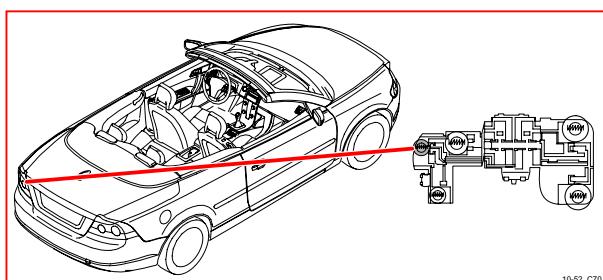


10/55 Left reversing light, S40/V50

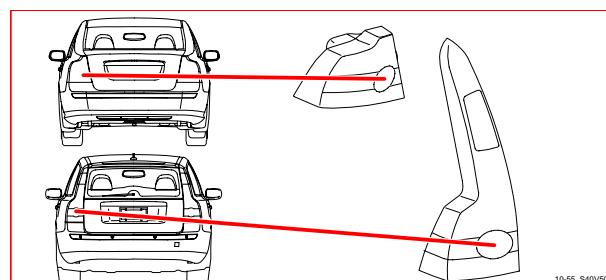


10/53 Rear left fog light, S40/V50

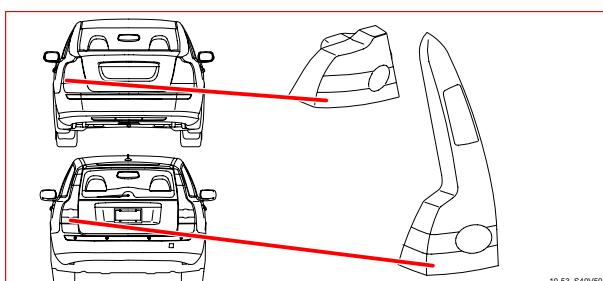


10/55 Left reversing light, C70

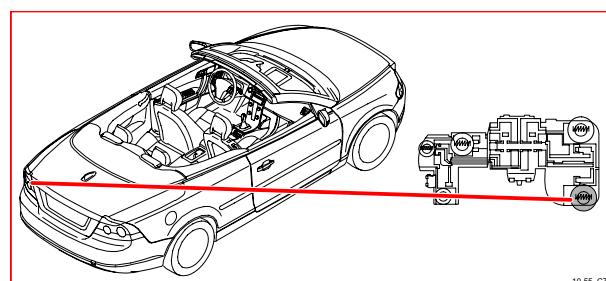

10/53 Rear left fog light, C70

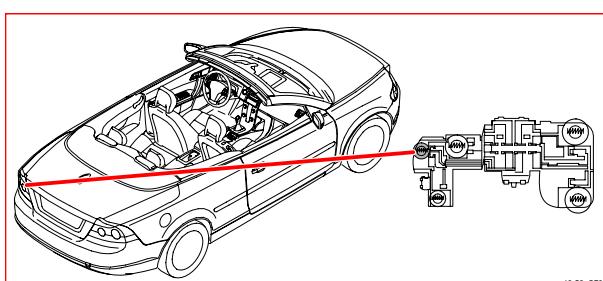


10/64 High beam, right

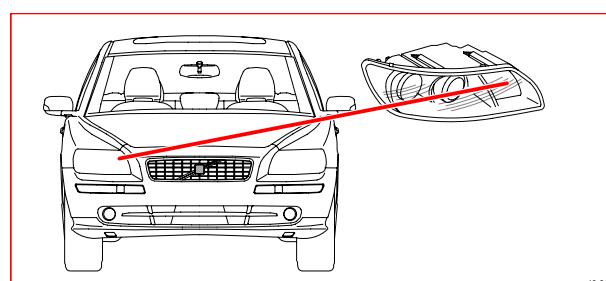


Component illustrations

10/65 - 10/148


10/65 Auxiliary light, front right

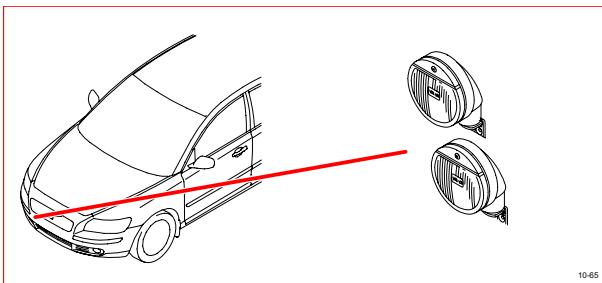


10/97 Courtesy lighting, left

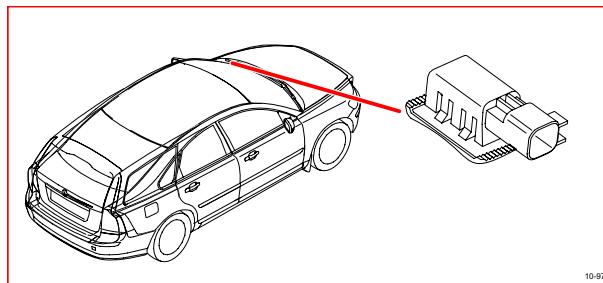


10/66 Low beam, right

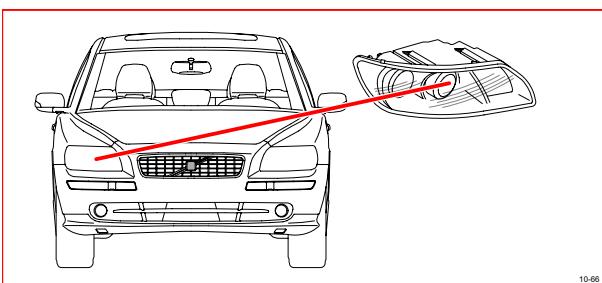


10/102 Courtesy lighting, right

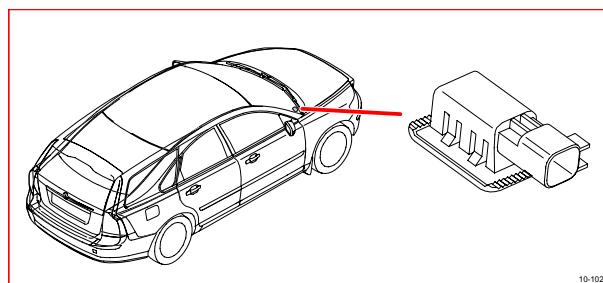


10/68 High beam, left

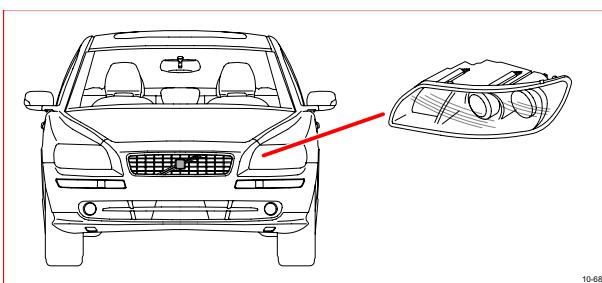


10/114 Vanity mirror lighting, left

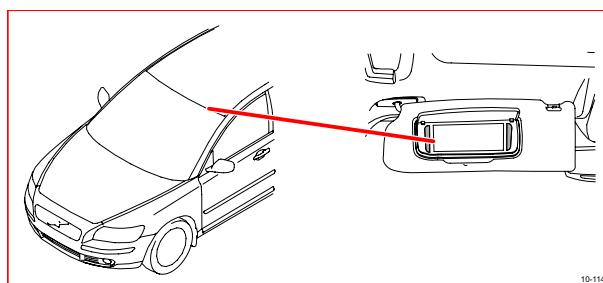


10/69 Auxiliary light, front left

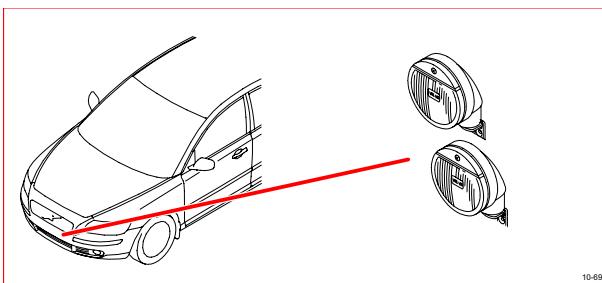


10/115 Vanity mirror lighting, right

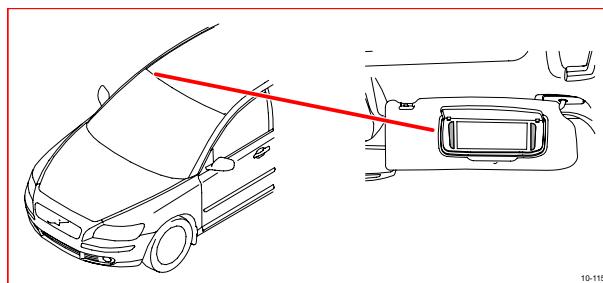

10/70 Low beam, left

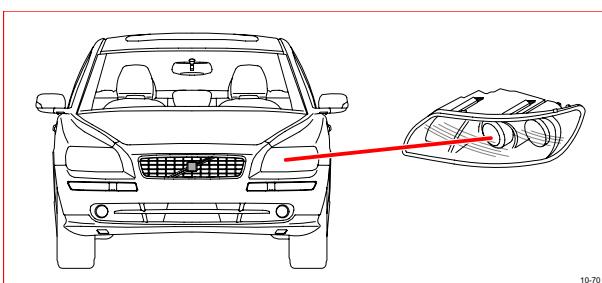


10/148 Lighting, rear-view mirror driver's door

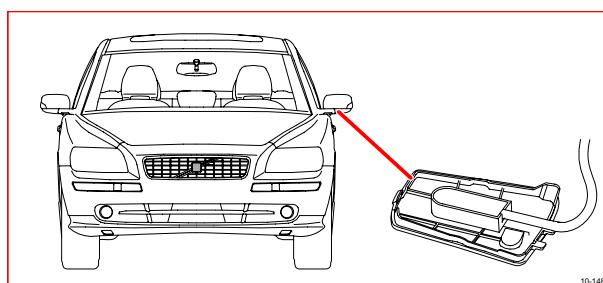


Component illustrations

10/149 - 16/5


10/149 Lighting, rear-view mirror passenger door

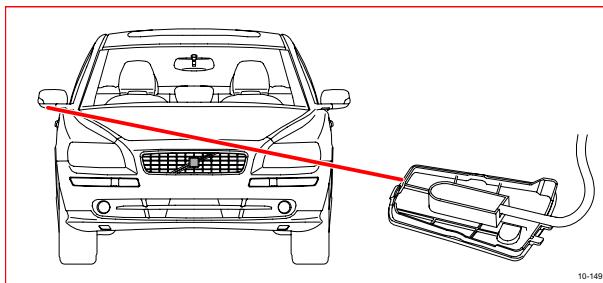


10/150 Rear reading light

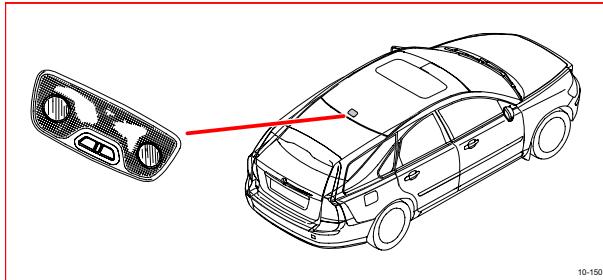


10/245 Lock indicator, left door

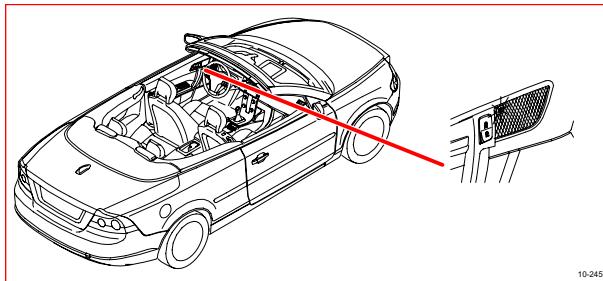


10/246 Lock indicator, right door

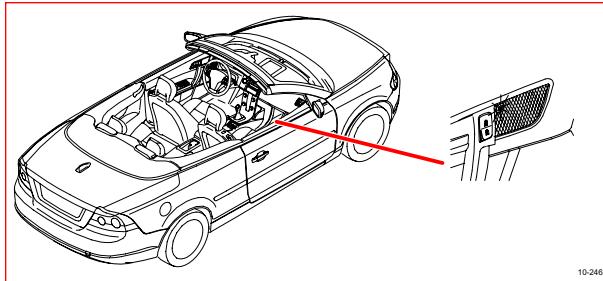


15/31 Distribution box in engine compartment

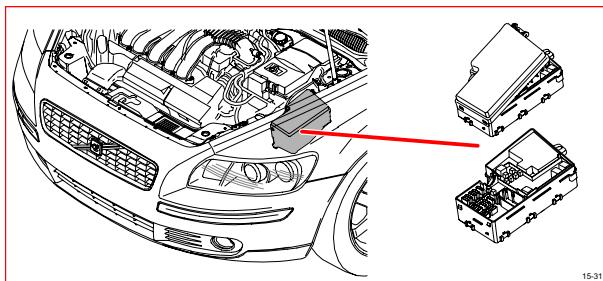


16/1 Integrated Audio Module (IAM)

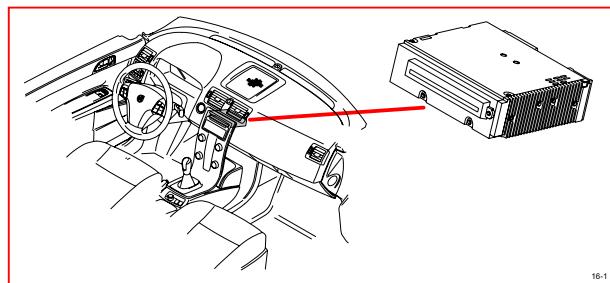


16/1.2 Infotainment Control Module (ICM)

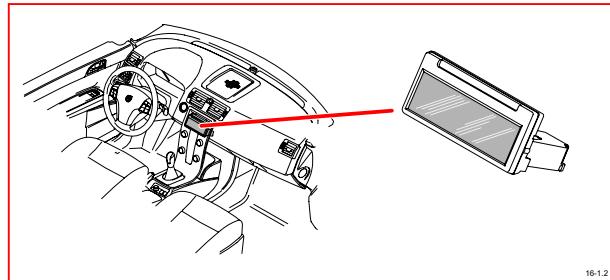


16/3 Speaker, passenger door

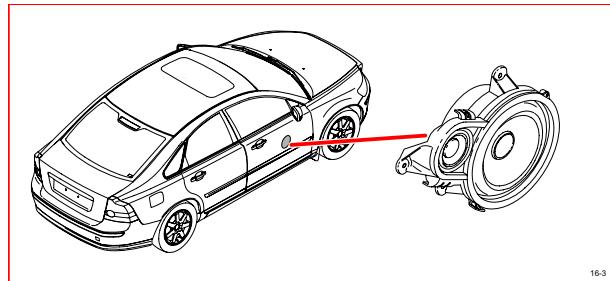

16/4 Speaker, driver's door

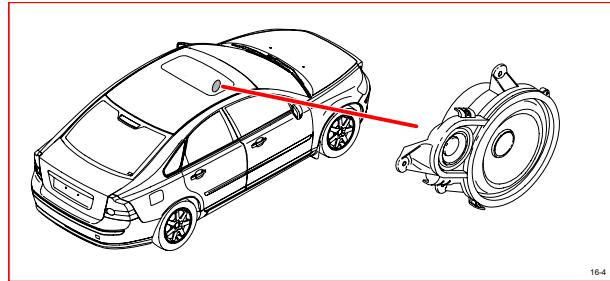


16/5 Speaker, rear right door

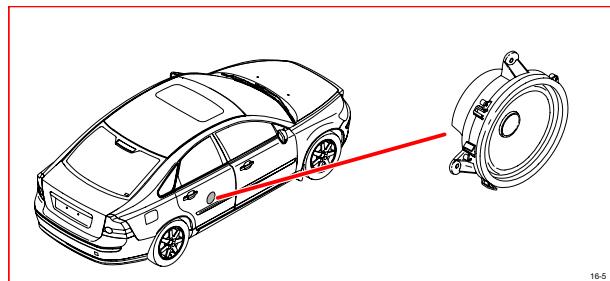


Component illustrations

16/6 - 16/35


16/6 Speaker, rear left door

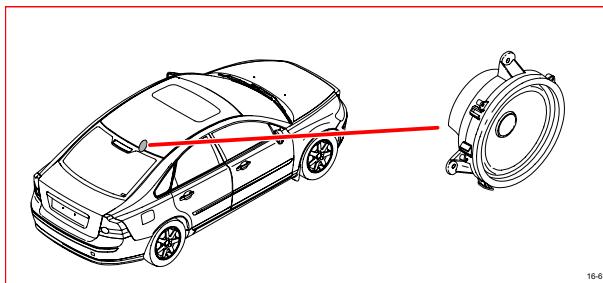


16/9 Window antenna

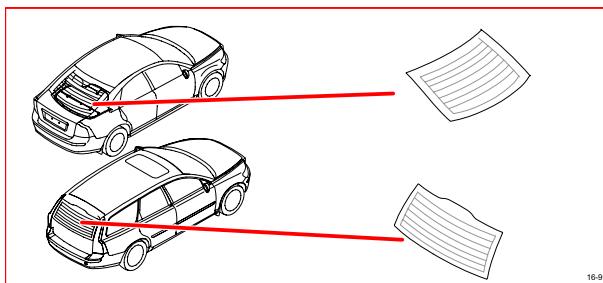


16/9.1 TMC antenna

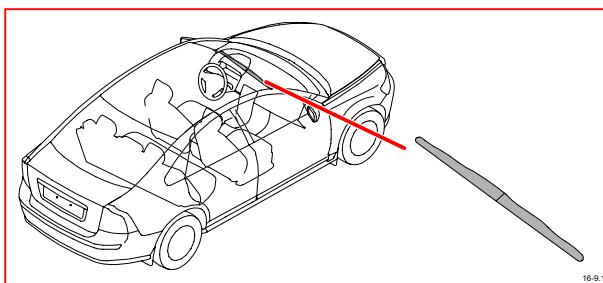


16/10 Horn 1

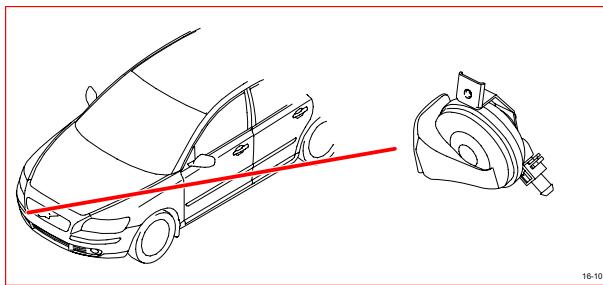


16/11 Horn 2

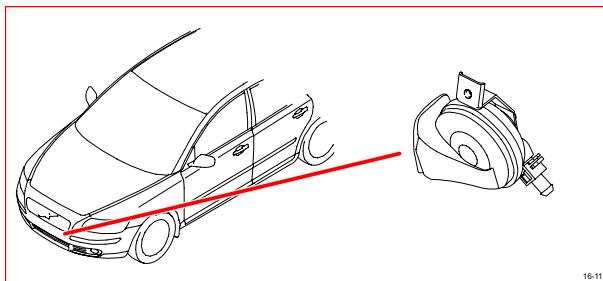


16/16 Window antenna amplifier

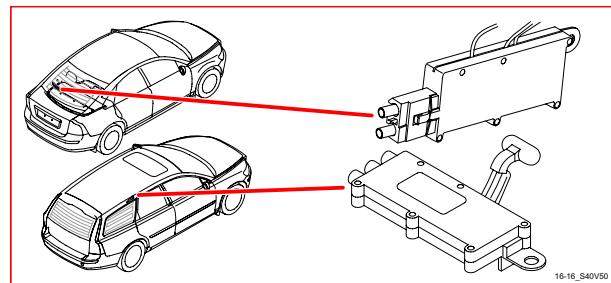


16/26 Speaker, dashboard middle

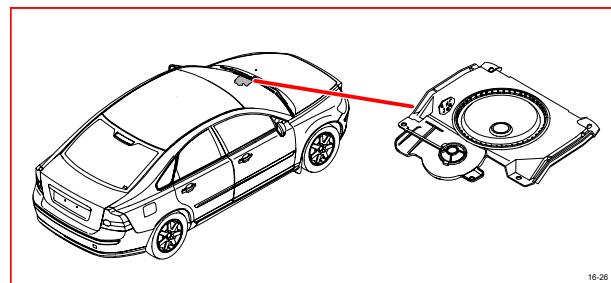


16/35 Siren Control Module (SCM), S40

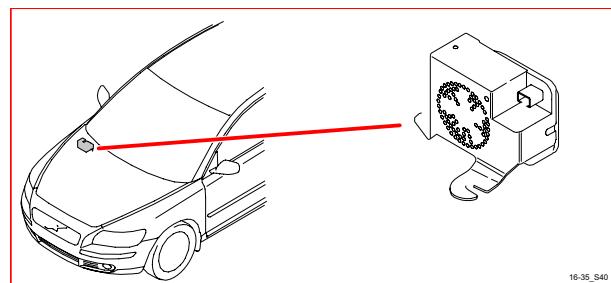

16/35 Siren Control Module (SCM), V50

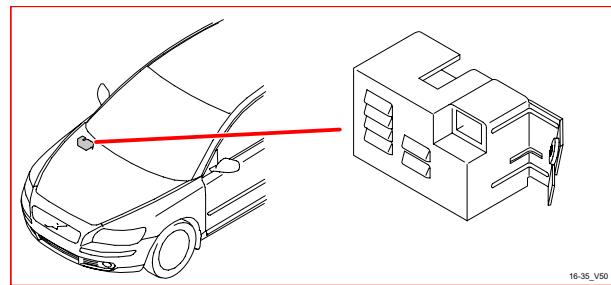


16/35 Siren Control Module (SCM), C70

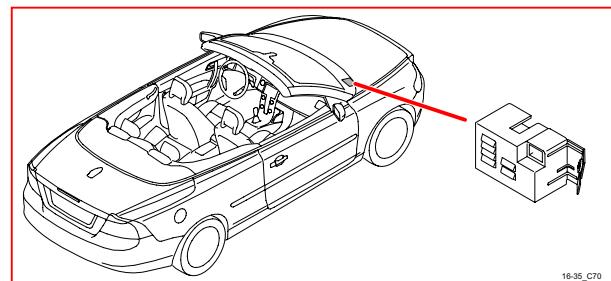


Component illustrations

16/45 - 16/60


16/45 Road Traffic Information module (RTI)

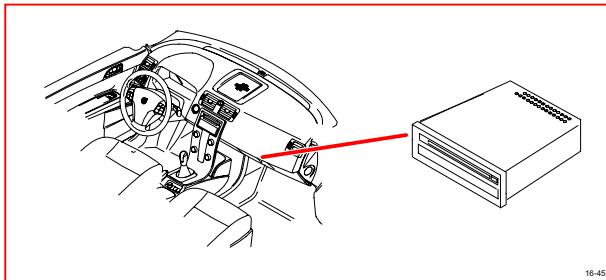


16/46 RTI Display

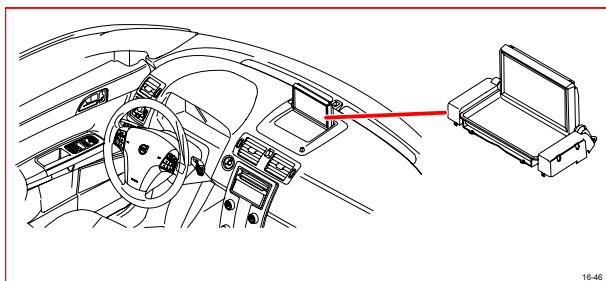


16/46.1 RTI Display

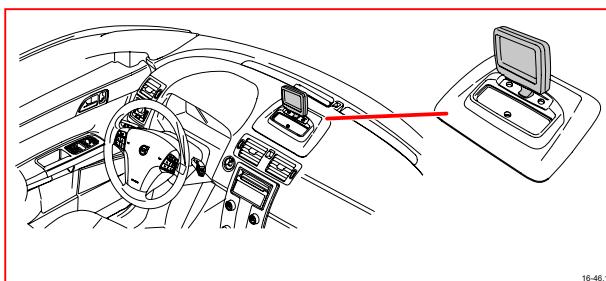


16/47 GSM/GPS/RDAR antenna, S40/V50

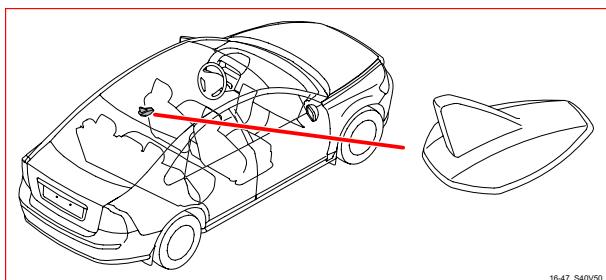


16/47 GSM/GPS/RDAR antenna, C70

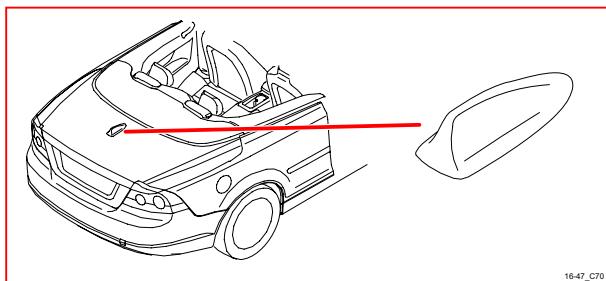


16/49 Traffic Message Channel Module (TMC)

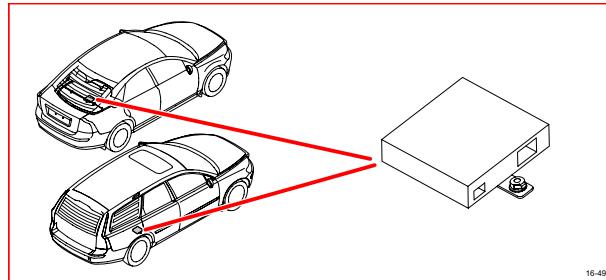


16/49.1 Traffic Message Channel Module (TMC)

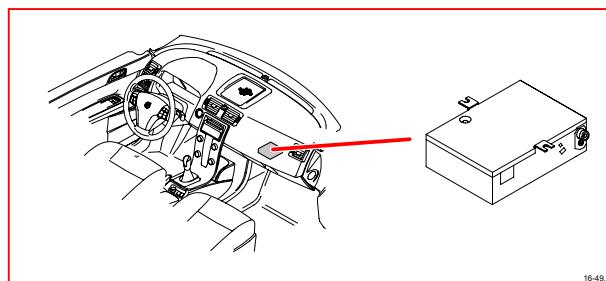


16/55 Treble speaker, driver's door

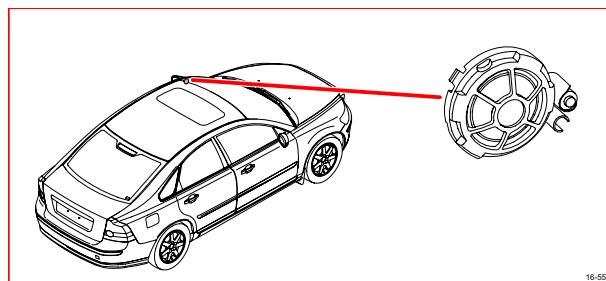

16/56 Treble speaker, passenger door

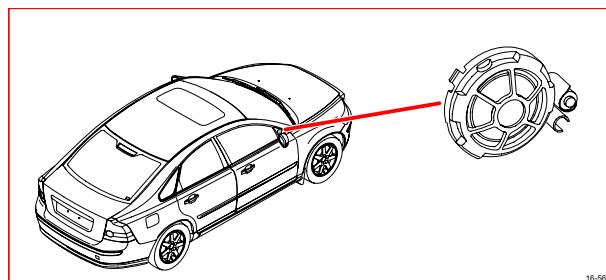


16/60 Phone Module (PHM)

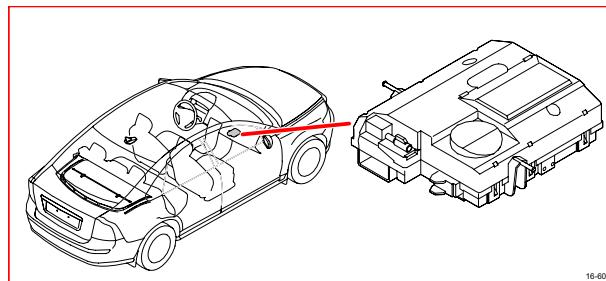


Component illustrations

16/62 - 16/105


16/62 Hand unit, cellular phone

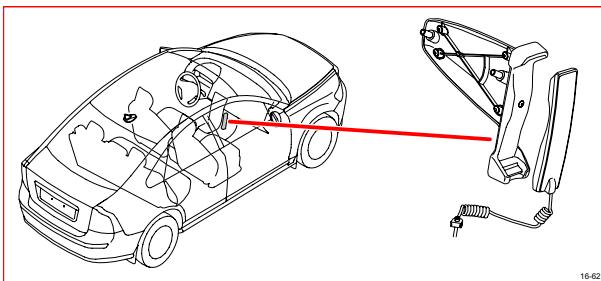


16/79 Subwoofer Module (SUB), S40/V50

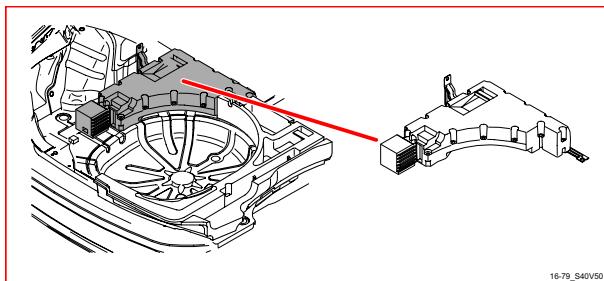


16/64 Cellular phone antenna, S40/V50

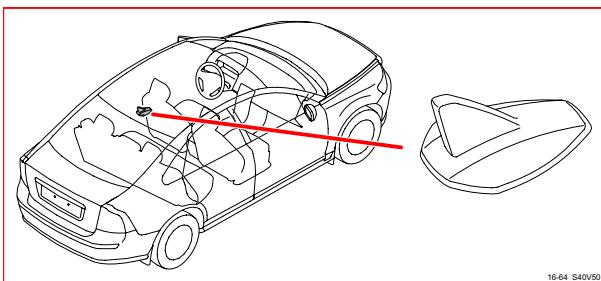


16/79 Subwoofer Module (SUB), C70

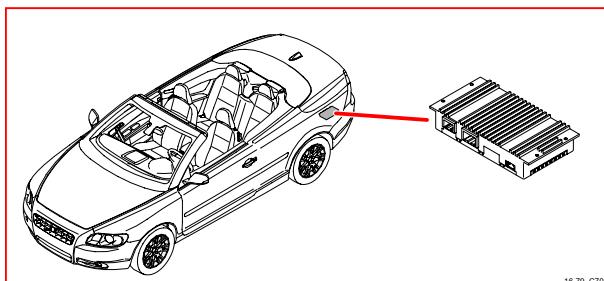


16/64 Cellular phone antenna, C70

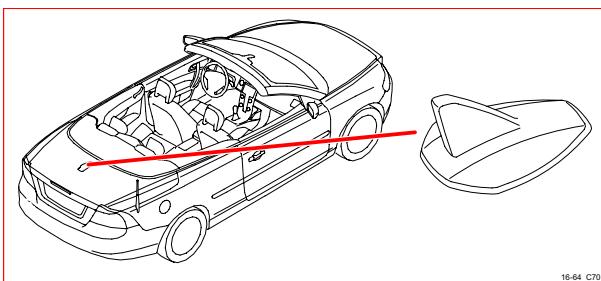


16/93 Control module, cellular phone handsfree

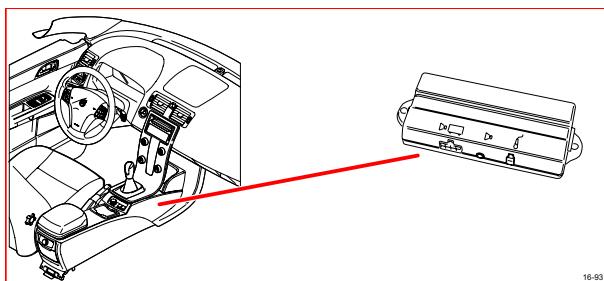


16/67 Antenna amplifier, bumper

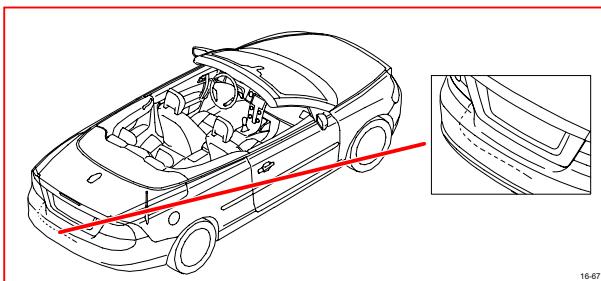


16/98 Microphone

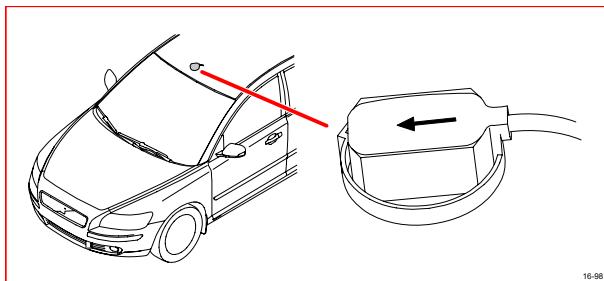

16/68 TMC and FM subantenna, bumper

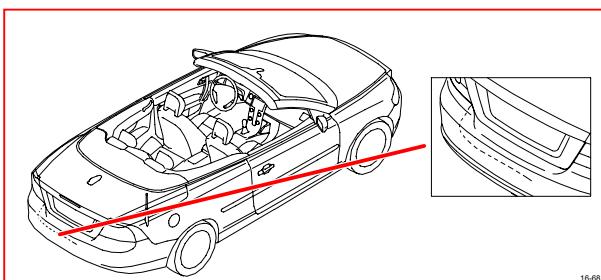


16/105 Audio Module (AUD)

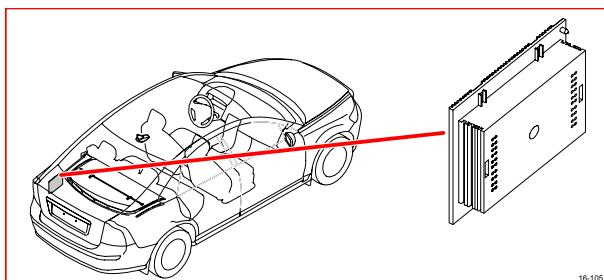


Component illustrations

16/108 - 16/133


16/108 Multimedia Module (MMM)

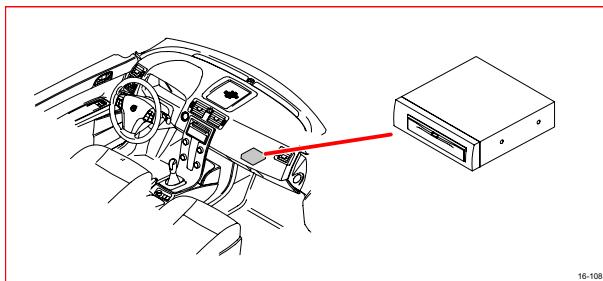


16/130 Antenna, rear left door lock

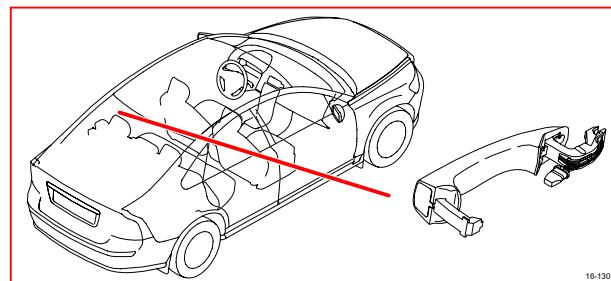


16/126 Holder, handsfree cellular phone

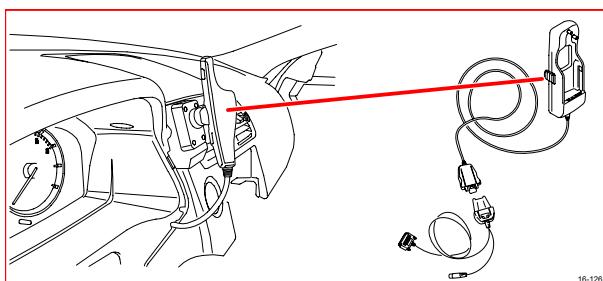


16/131 Antenna, rear right door lock

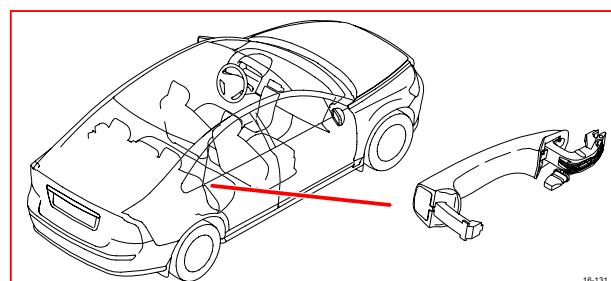


16/127 Microphone, handsfree cellular phone

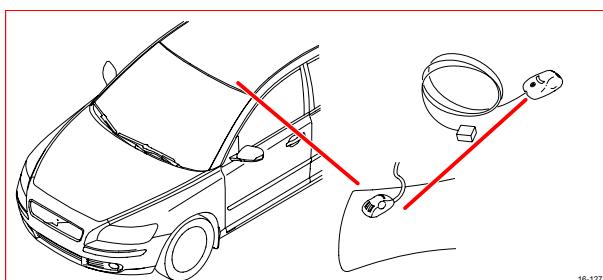


16/132 Antenna, door lock, bumper

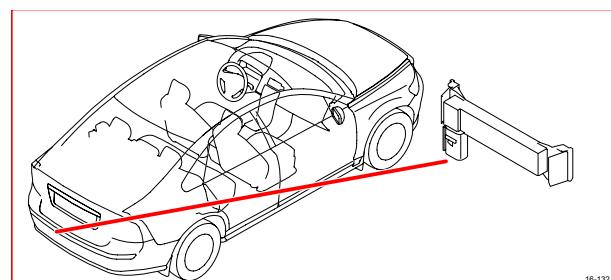


16/128 Antenna, front left door lock

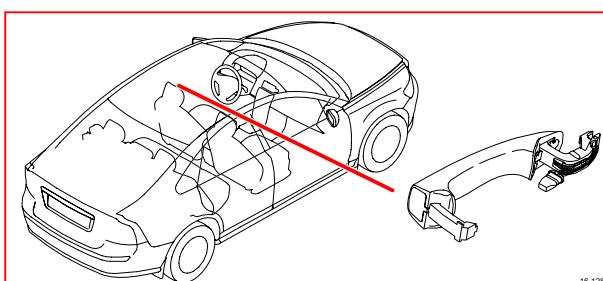


16/133 Antenna, rear door lock cabin 1, S40/V50

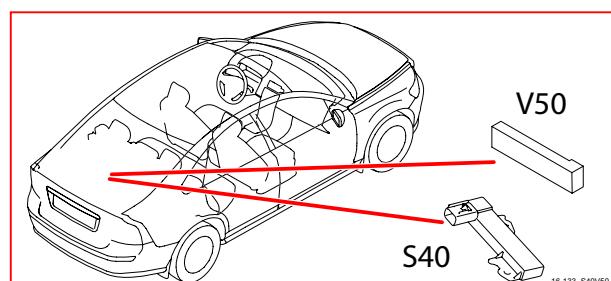

16/129 Antenna, door lock, front right

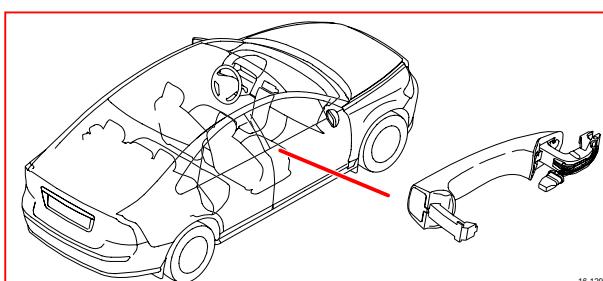


16/133 Antenna door lock cabin 1 rear, C70

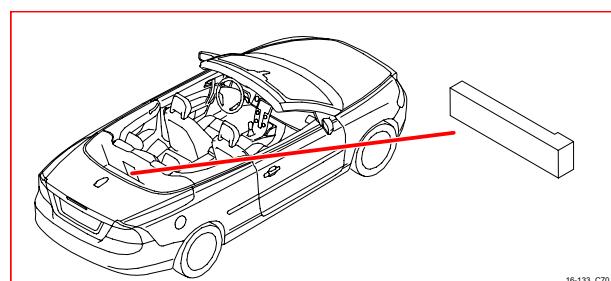

Component illustrations


16/134 - 16/141

16/134 Antenna, door lock cabin 2, S40/V50

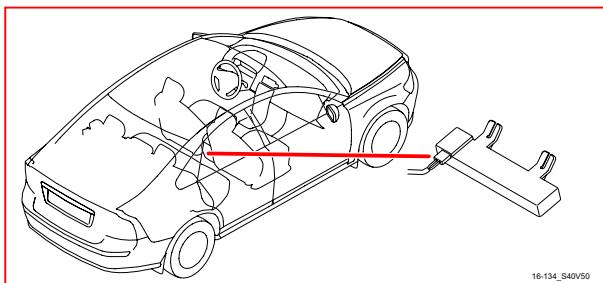


16-134_S40V50

16/137 Treble speaker, rear right door

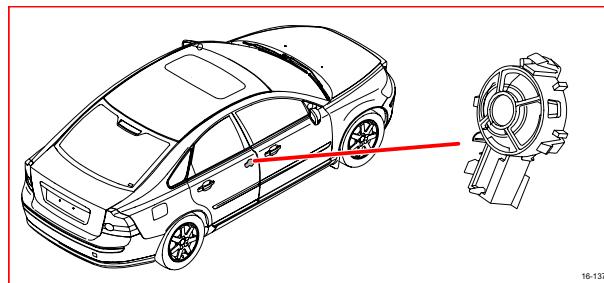


16-137

16/134 Antenna door lock cabin 2, C70

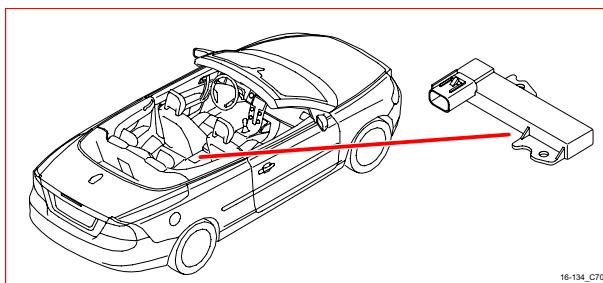


16-134_C70

16/138 Rear window antenna, right

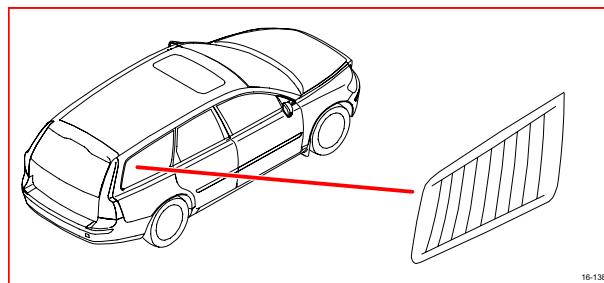


16-138

16/135 Antenna, door lock cabin 3, S40/V50

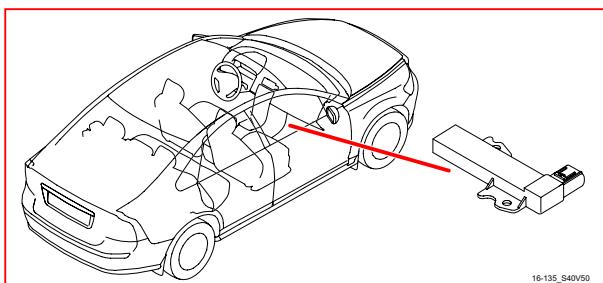


16-135_S40V50

16/139 Global Positioning System module (GPS)

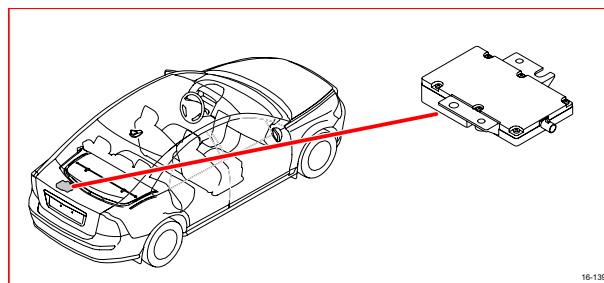


16-139

16/135 Antenna door lock cabin 3, C70

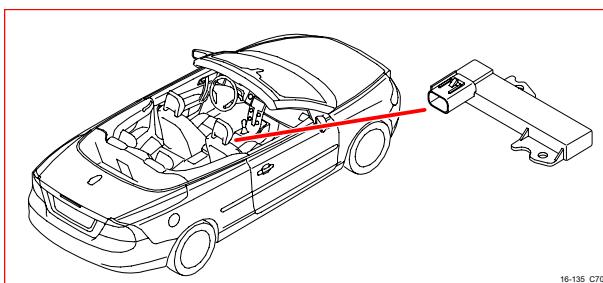


16-135_C70

16/140 SIM card reader

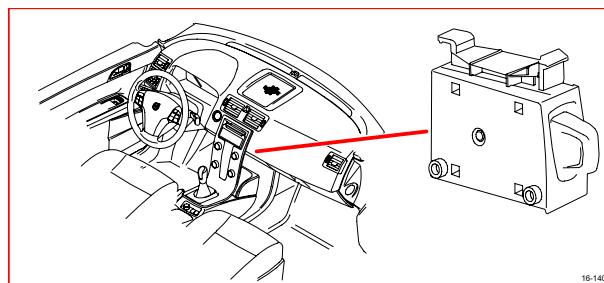


16-140

16/136 Treble speaker, rear left door

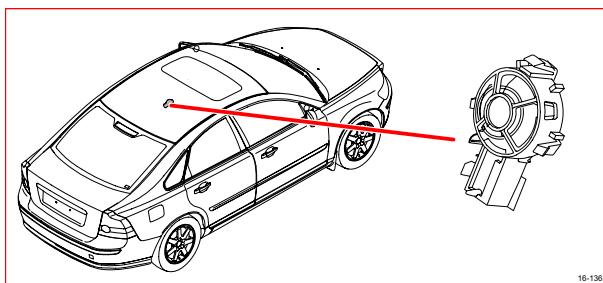

16-136

16/141 Interference filter, rear window, left

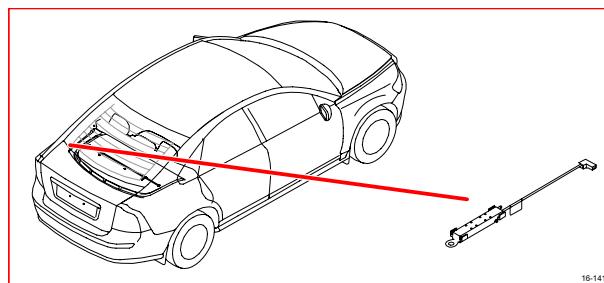


16-141

Component illustrations


16/142 - 17/39

16/142 Interference filter, rear window, right

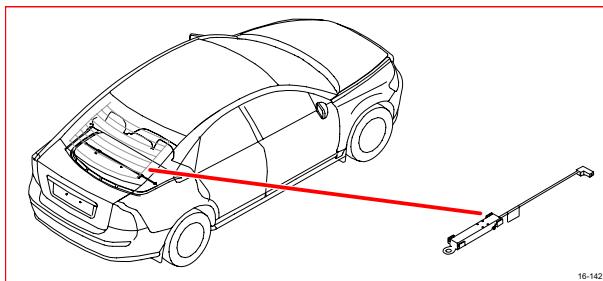


16-142

17/13 Data link connector

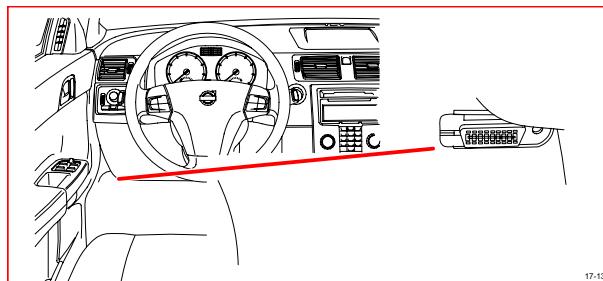


17-13

16/145 Remote Digital Audio Receiver (RDAR)

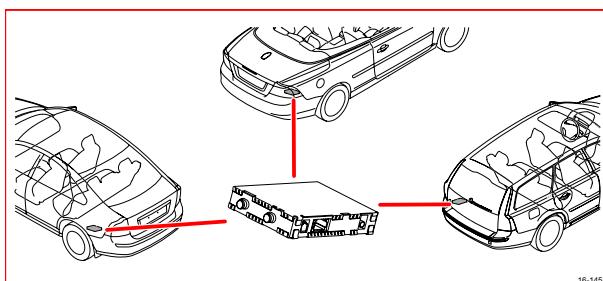


16-145

17/19 12V outlet, cargo compartment

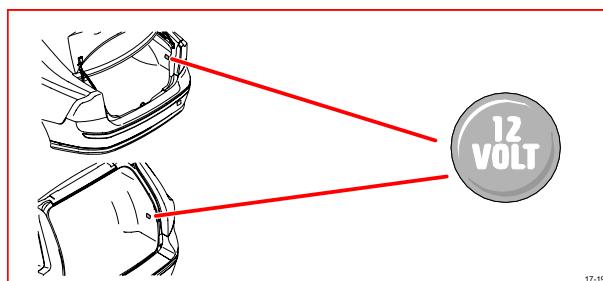


17-19

16/150 AM/FM antenna and amplifier, rear right fender

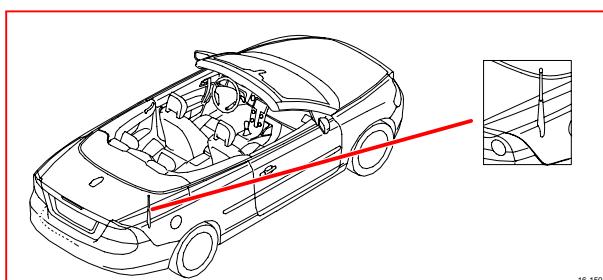


16-150

17/37 4-pin outlet, tow hitch cable harness

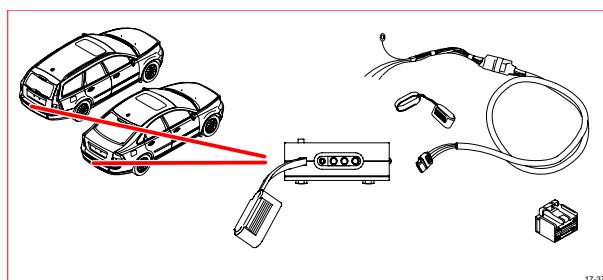


17-37

16/151 Distribution filter, front left door

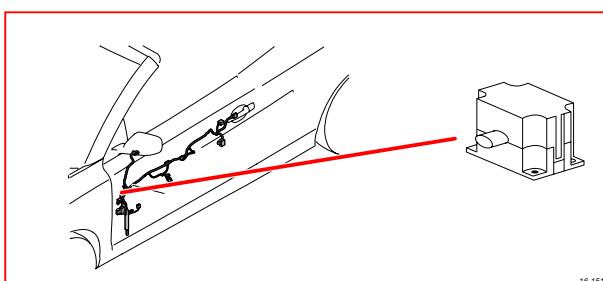


16-151

17/38 7-pin outlet, tow hitch cable harness

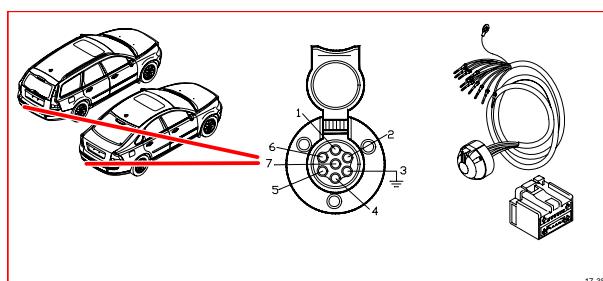


17-38

16/152 Distribution filter, front right door

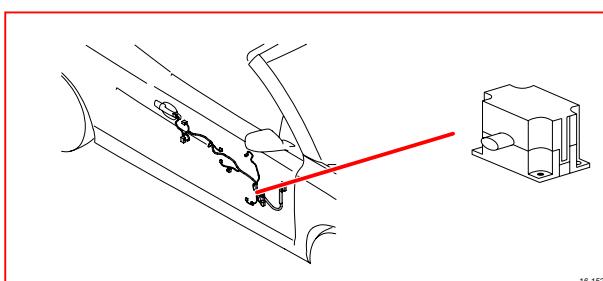

16-152

17/39 13-pin outlet, tow hitch cable harness

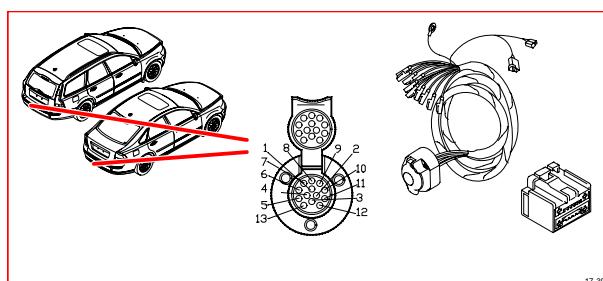


17-39


Component illustrations

17/40 - 31/10


17/40 External equipment input (AUX)

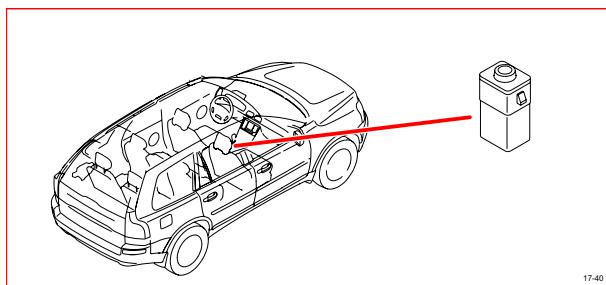


26/5 DC/AC converter, fuel tank

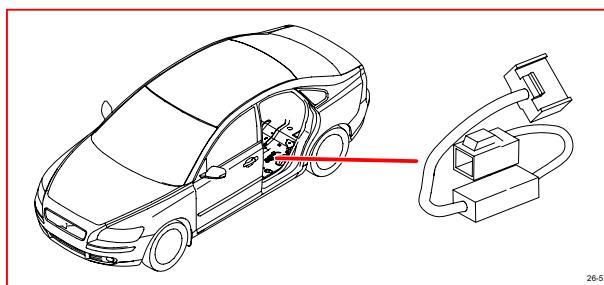


18/4 Contact reel

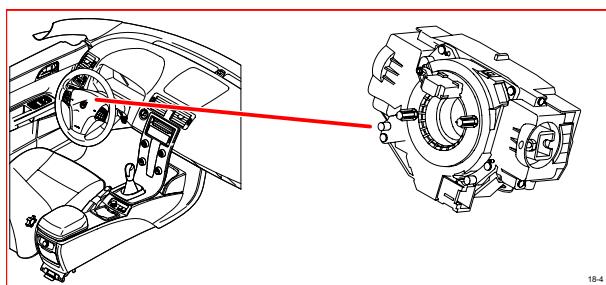


31/3 Ground connection, left MacPherson strut tower

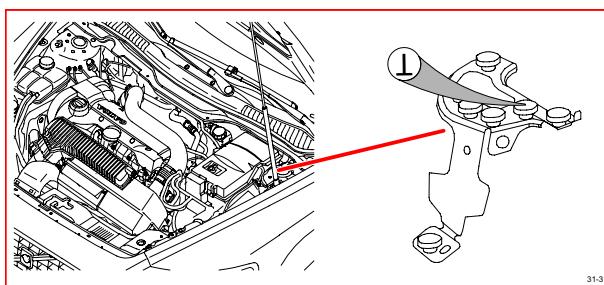


20/3-7 Spark plug and ignition coil

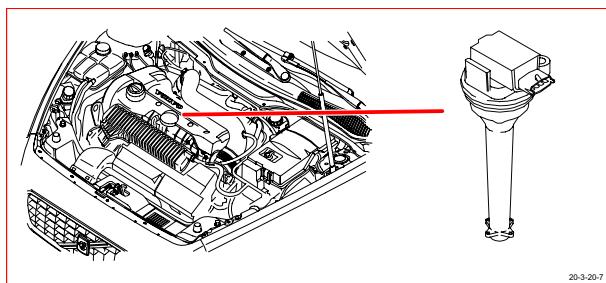


31/4 Ground connection, engine

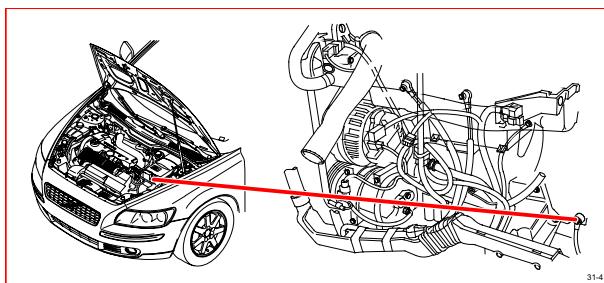


20/17 Transformer, ignition coils

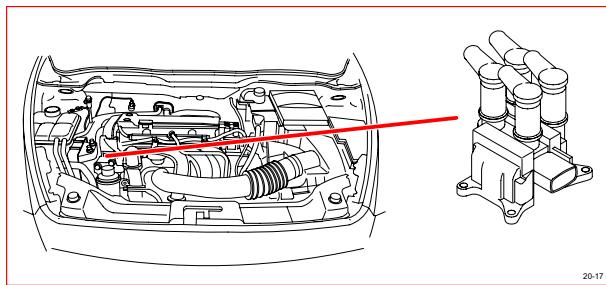


31/6 Ground connection, A-post, driver's side

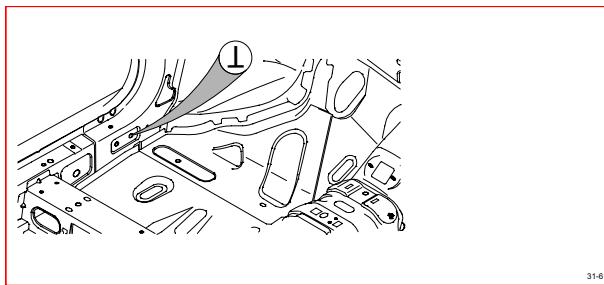

20/22-26Glow plug

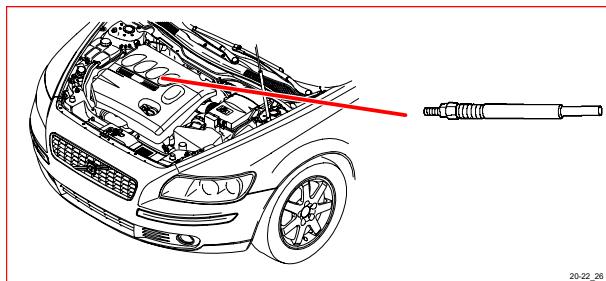


31/10 Ground connection, A-post, passenger side

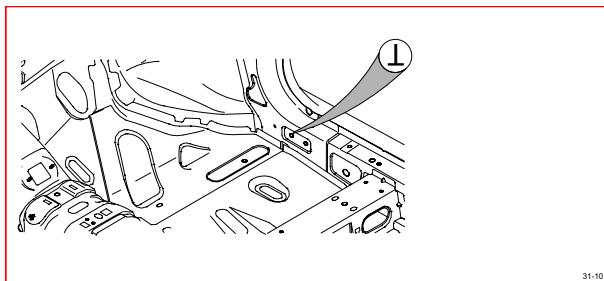

Component illustrations


31/11 - 31/89

31/11 Ground connection, rear left side

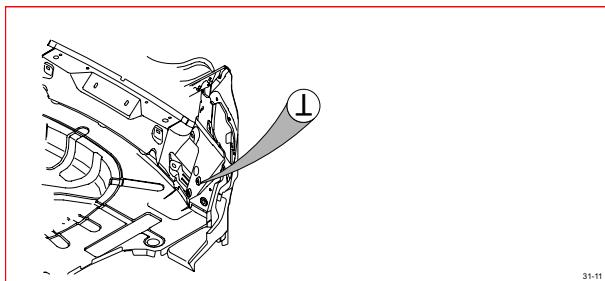


31-11

31/12 Ground connection, rear right side

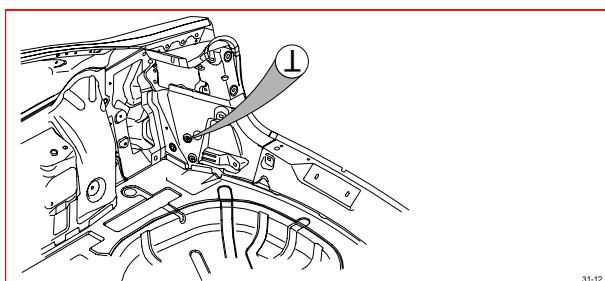


31-12

31/52 Ground connection, left MacPherson strut tower

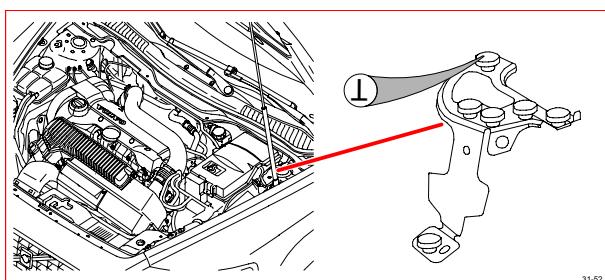


31-52

31/66 Ground connection, front left seat riser

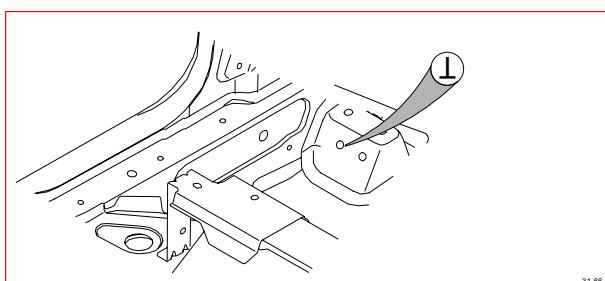


31-66

31/67 Ground connection, front right seat riser

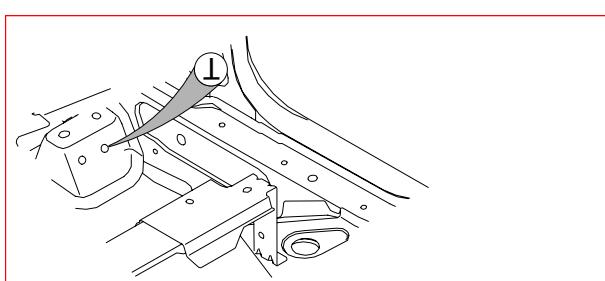


31-67

31/80 Ground connection, left MacPherson strut tower

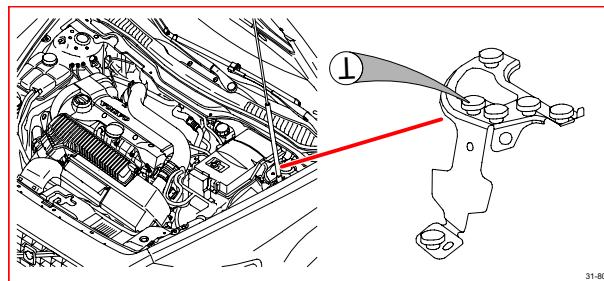


31-80

31/83 Ground connection, A-post, driver's side

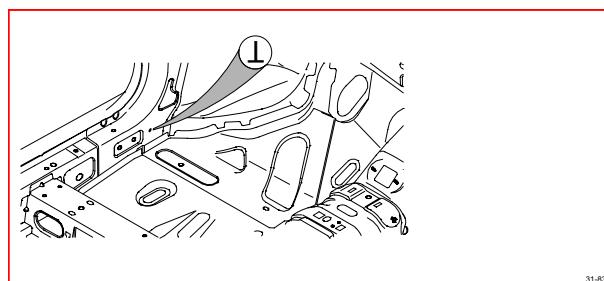


31-83

31/84 Ground connection, A-post, passenger side

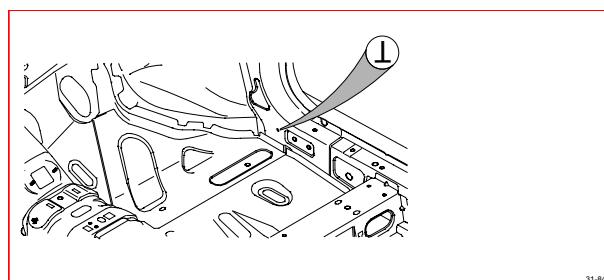


31-84

31/88 Ground connection, engine

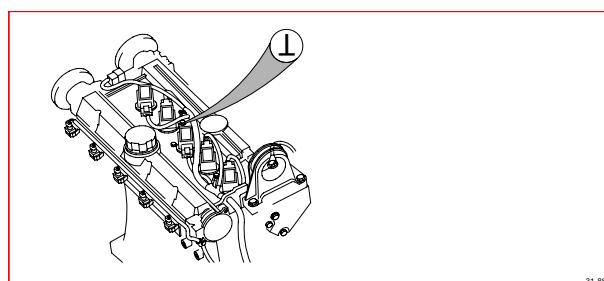

31-88

31/89 Ground connection, engine

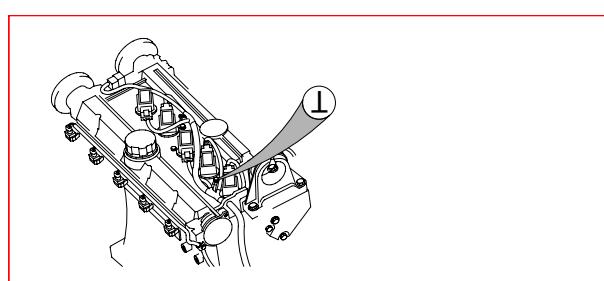


31-89


Component illustrations

31/102 - 64/25G


31/102 Ground connection, front member,
4-cyl.

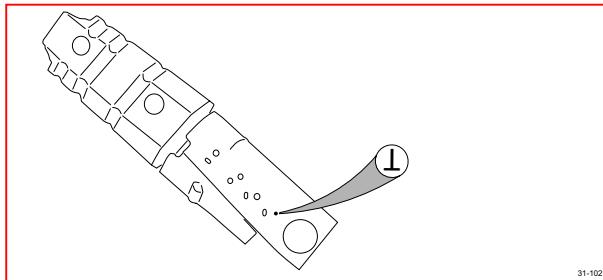


31/102 Ground connection, front member,
5-cyl.

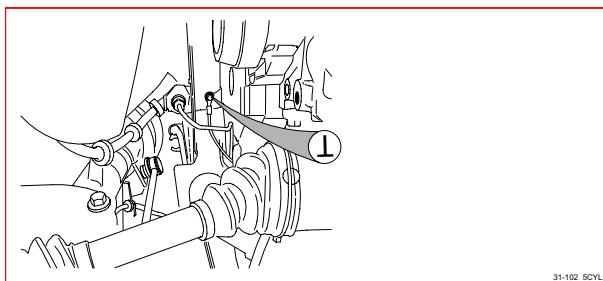


31/107 Ground connection, tailgate (V50)

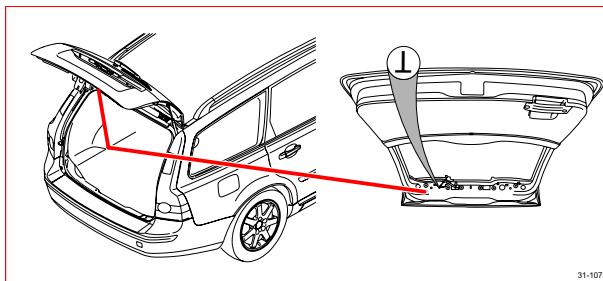


31/110 Ground connection, right
MacPherson strut tower

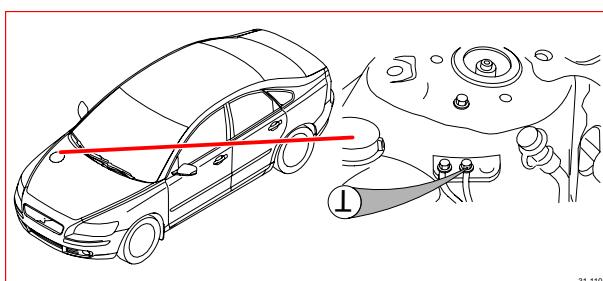


31/112 Ground connection, right
MacPherson strut tower

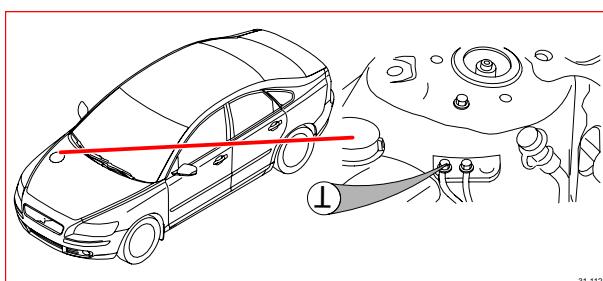


31/114 Ground connection, left MacPherson
strut tower

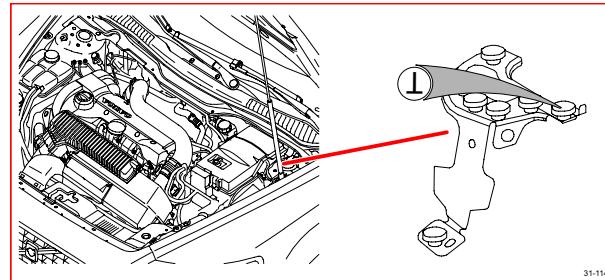


31/115 Ground connection, left A-post

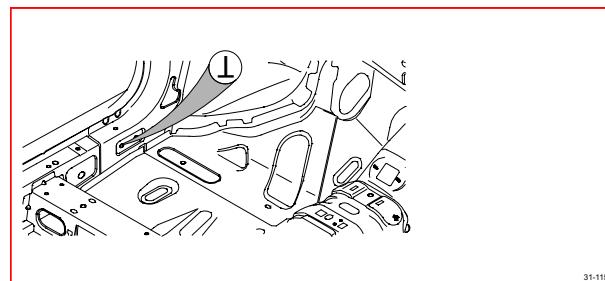


31/116 Ground connection, right A-post

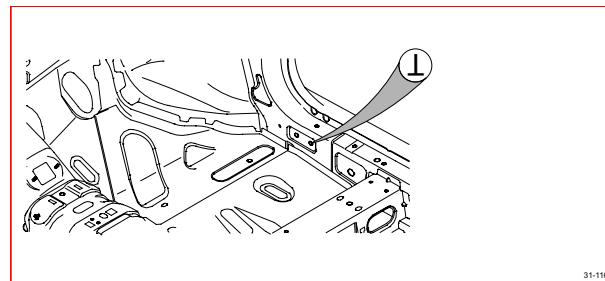

31/119 Ground connection, left MacPherson
strut tower

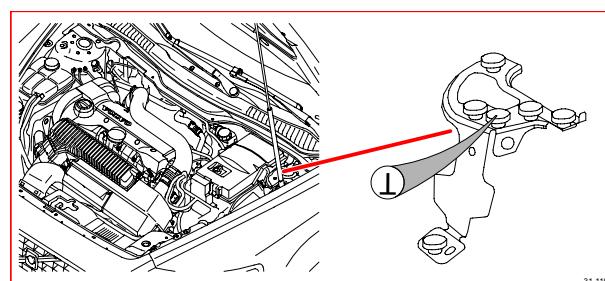


64/25G Connector

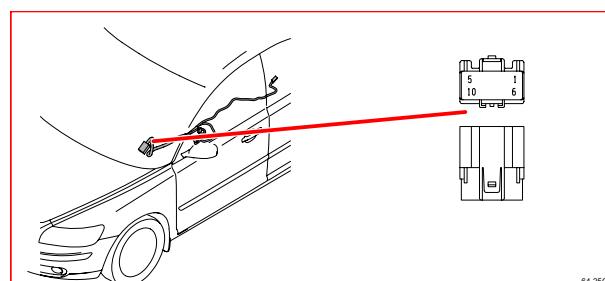


Component illustrations

64/30 - 64/49


64/30 Connector

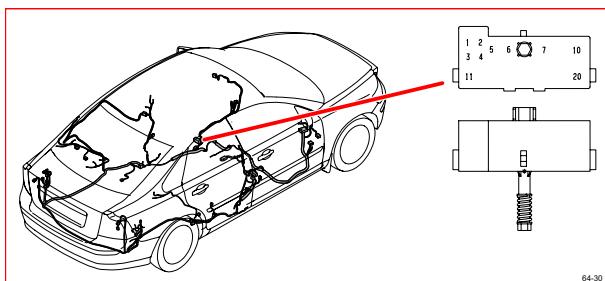


64/43 Connector

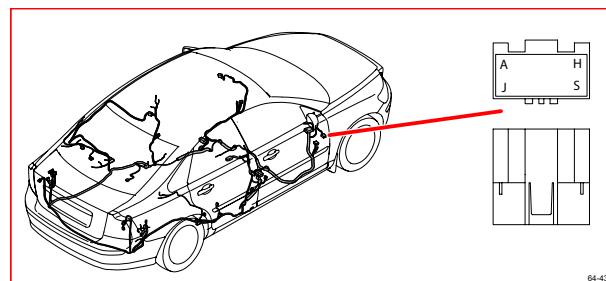


64/31 Connector

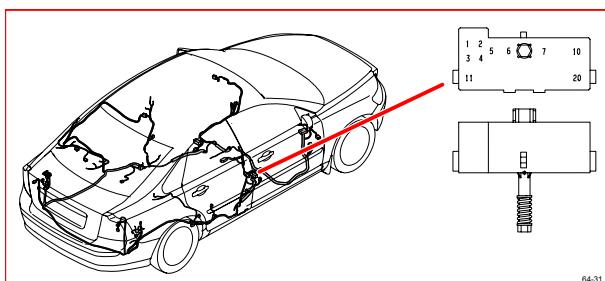


64/45 Connector

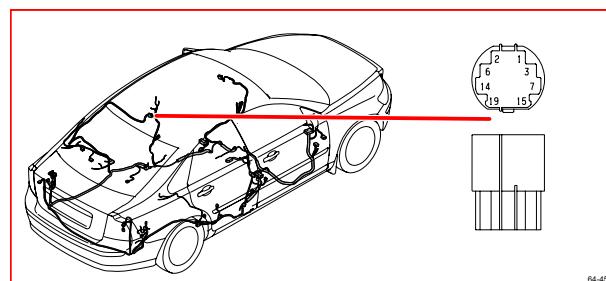


64/34 Connector

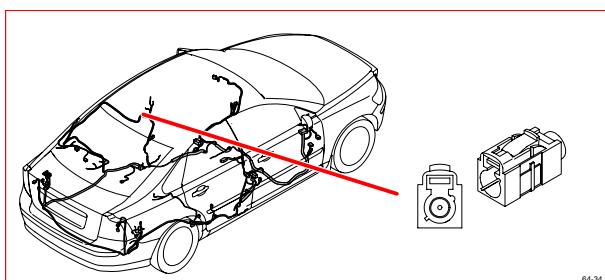


64/47 Connector

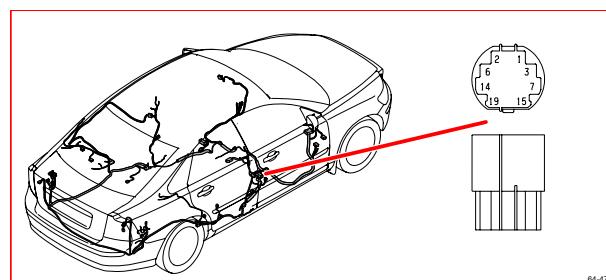


64/40 Connector

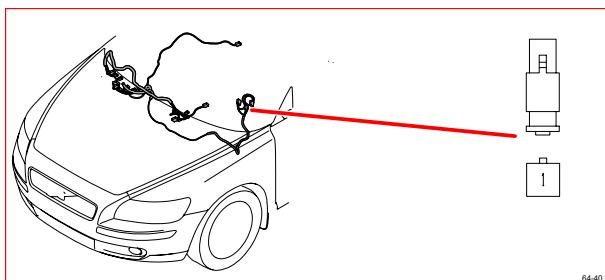


64/48 Connector, S40/V50

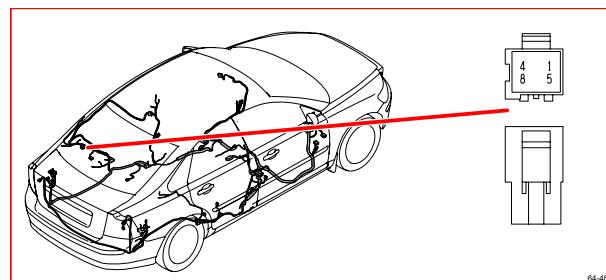

64/41 Connector

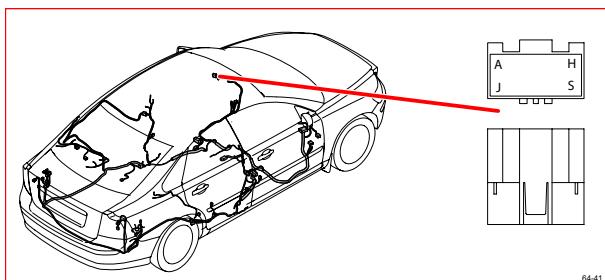


64/49 Connector

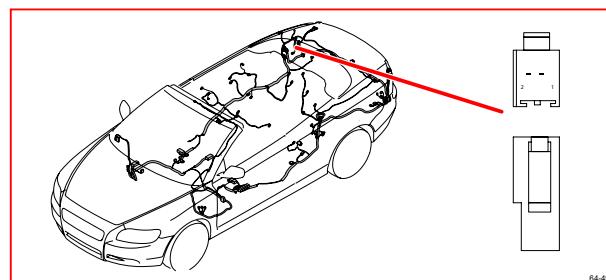


Component illustrations

64/50 - 64/111


64/50 Connector

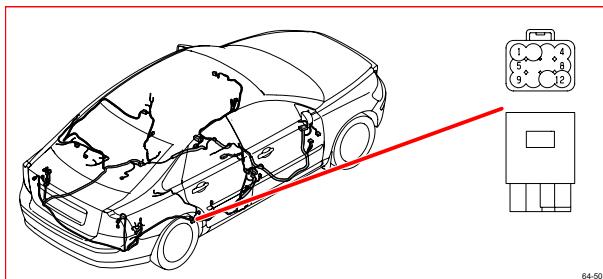


64/79V Connector

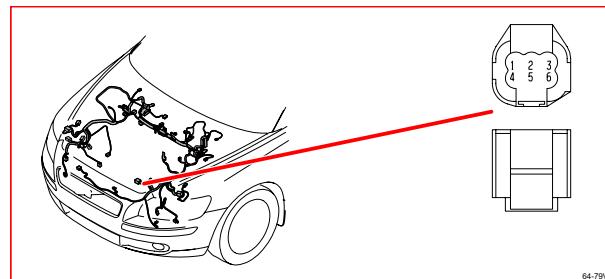


64/51 Connector

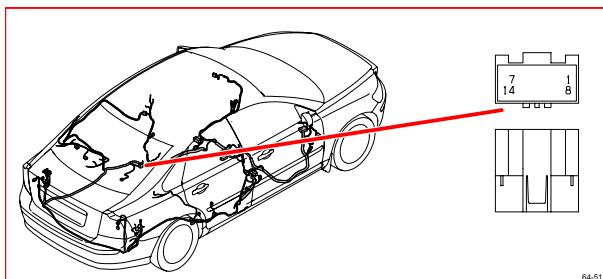


64/80 Connector

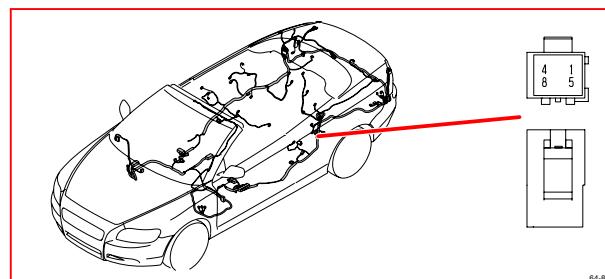


64/53 Connector

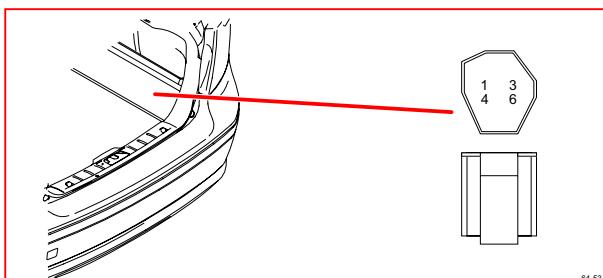


64/80A Connector

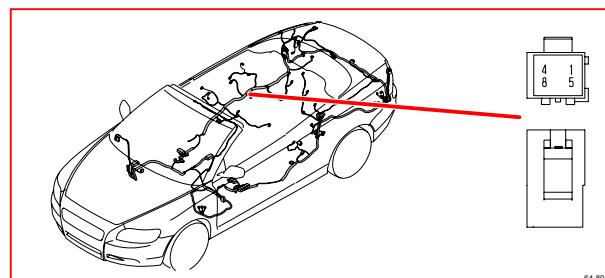


64/60 Connector

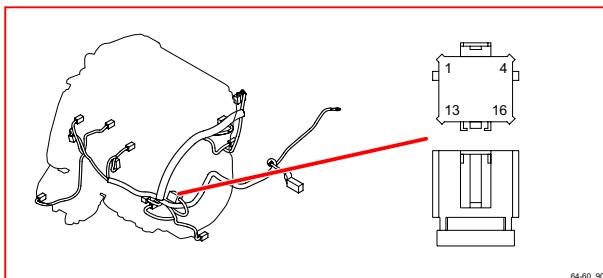


64/90 Connector

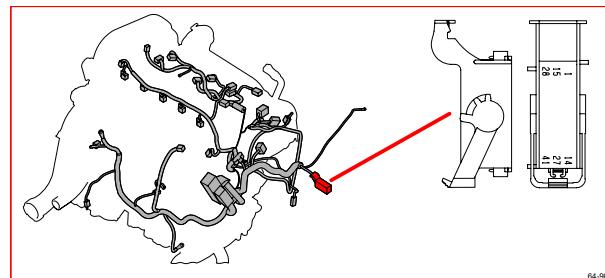

64/70 Connector

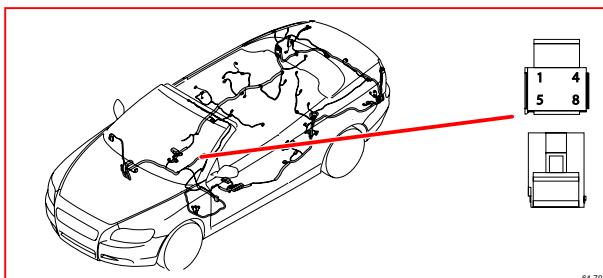


64/111 Connector

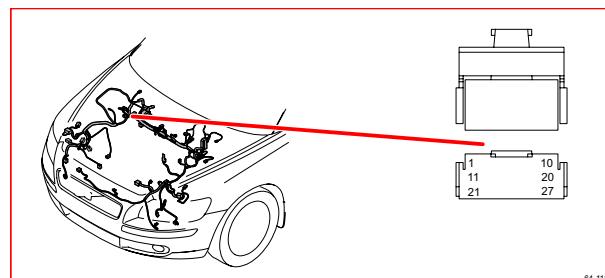


Component illustrations

64/112 - 64/322


64/112 Connector

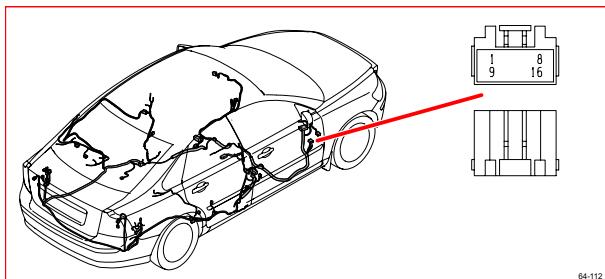


64/233 Connector

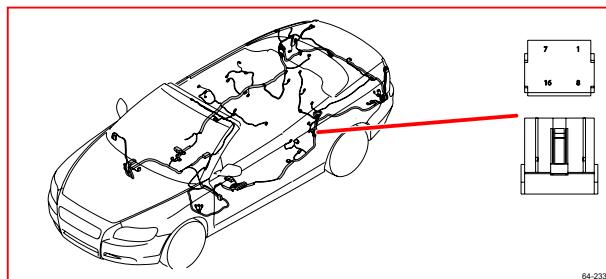


64/113 Connector

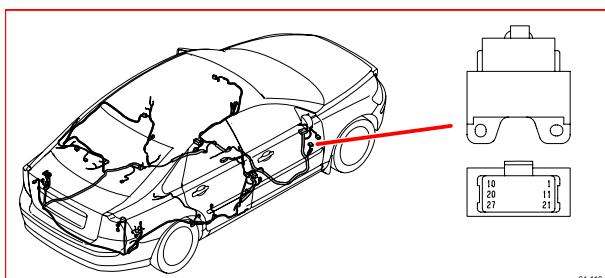


64/245 Connector

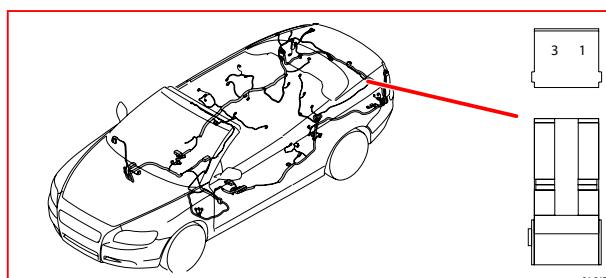


64/114 Connector

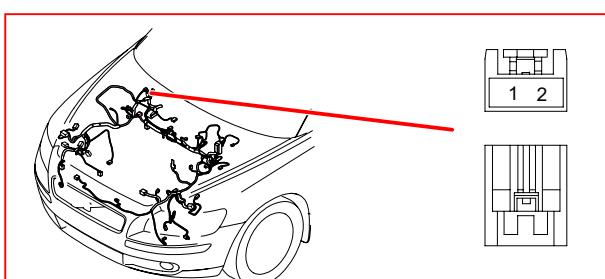


64/246 Connector

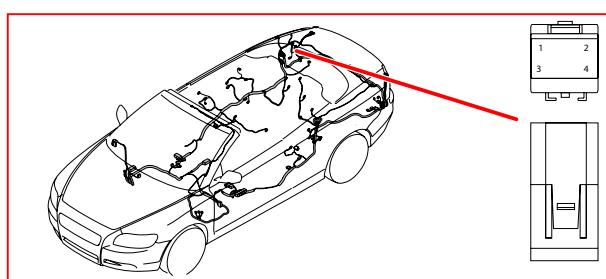


64/120 Connector

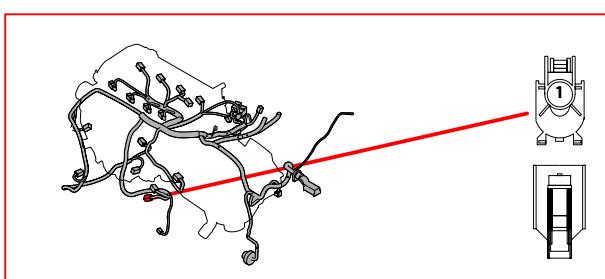


64/250 Connector

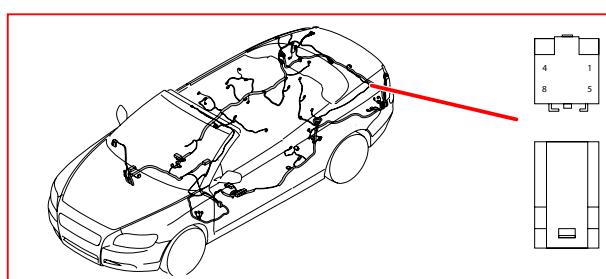

64/179 Connector

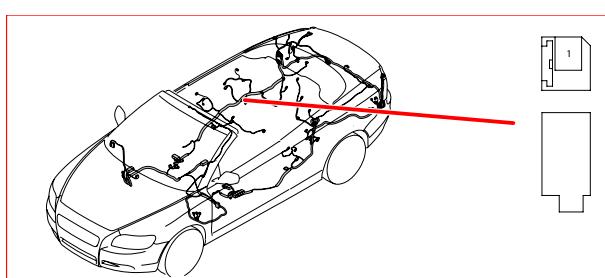


64/322 Connector

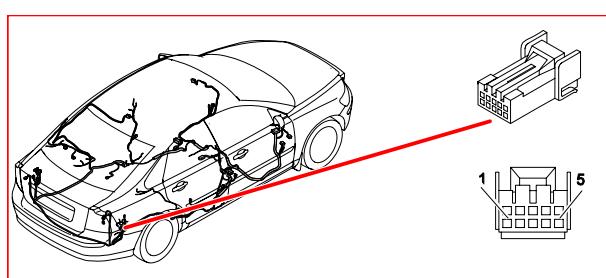


Component illustrations

64/425 - 64/707


64/425 Connector

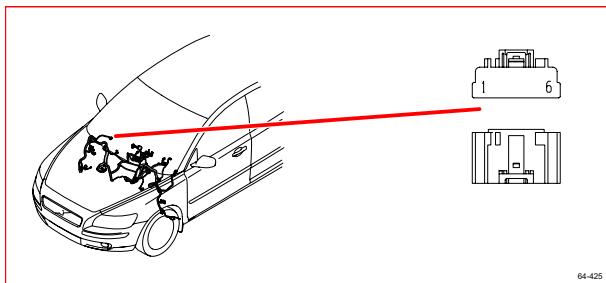


64/660 Connector

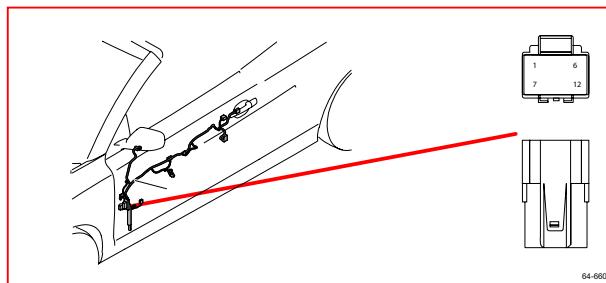


64/545 Connector

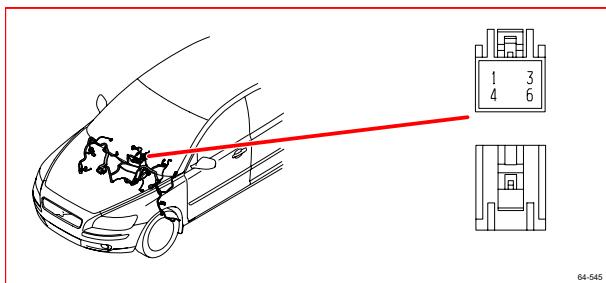


64/661 Connector

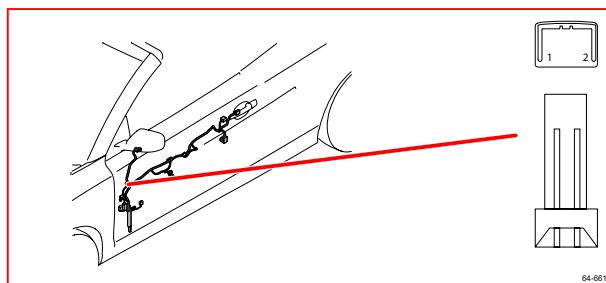


64/596 Connector

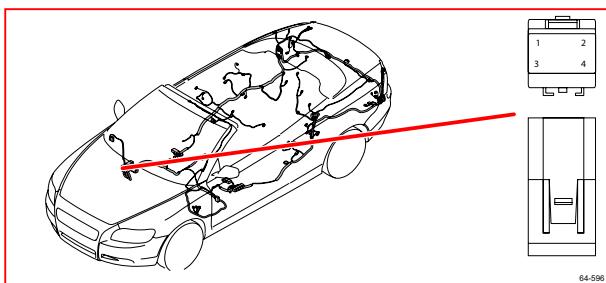


64/662 Connector

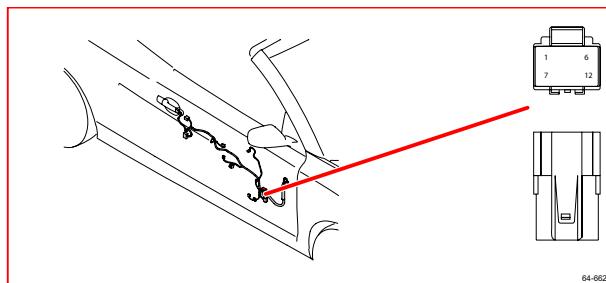


64/599 Connector

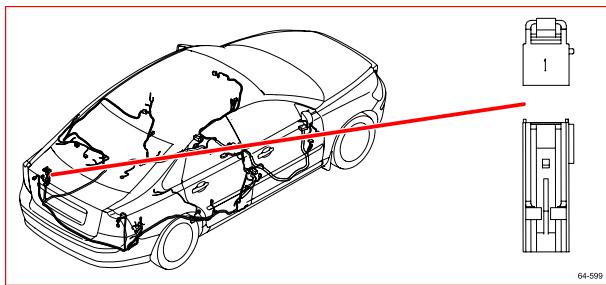


64/663 Connector

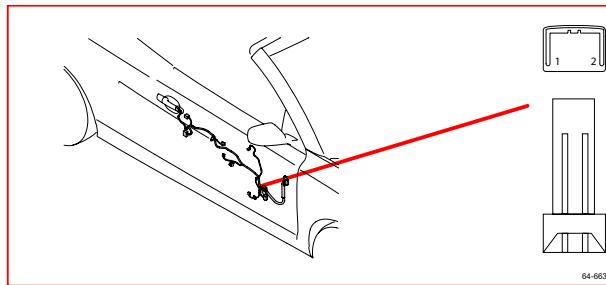

64/600 Connector

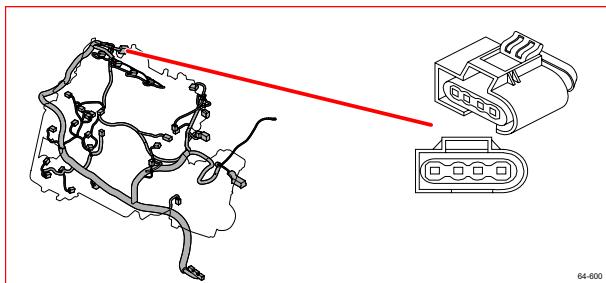


64/707 Connector

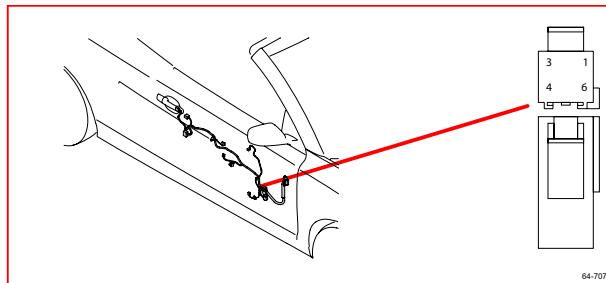


Component illustrations

64/708 - F/no.


64/708 Connector

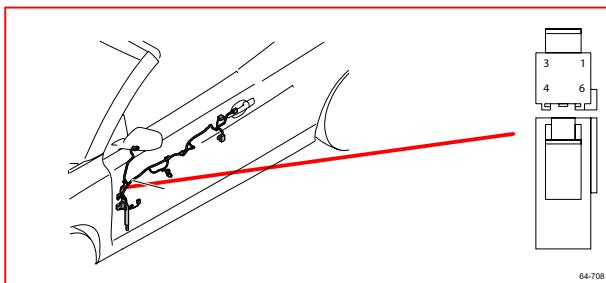


64/978 Connector

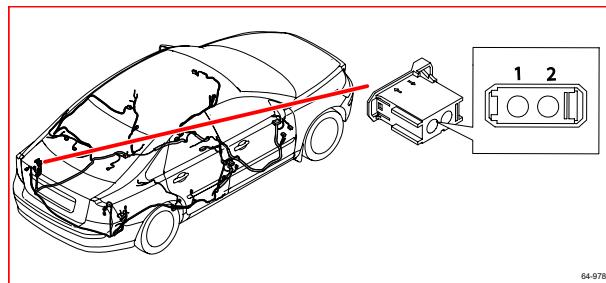


64/816 Connector

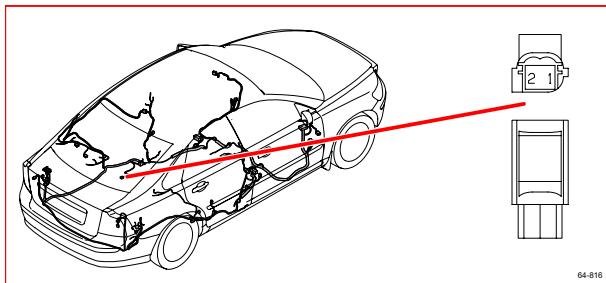


64/979 Connector

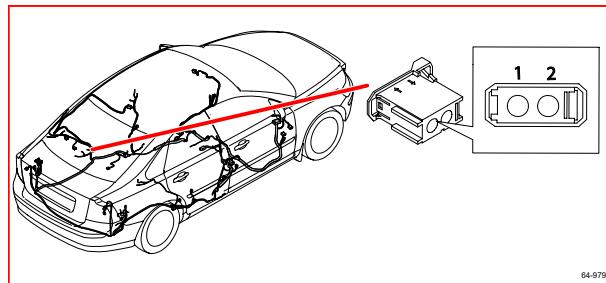


64/817 Connector

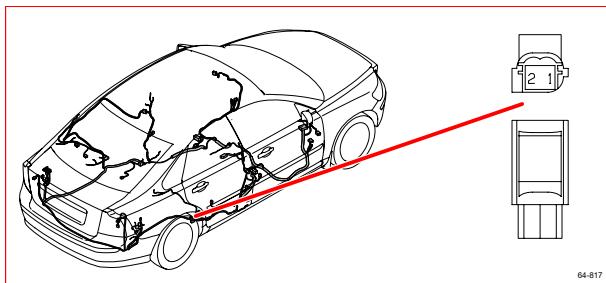


64/1300 Connector

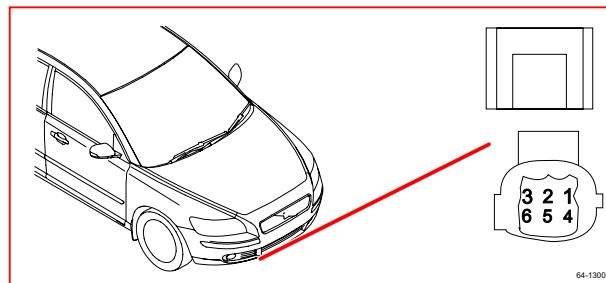


64/861 Connector

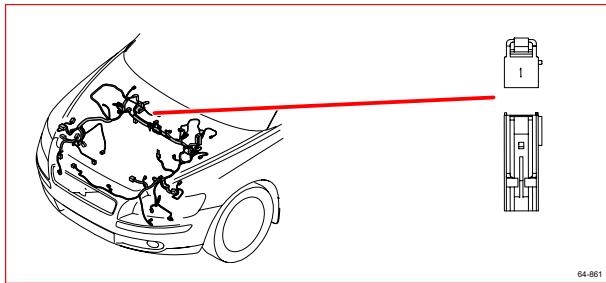


64/1400 Connector

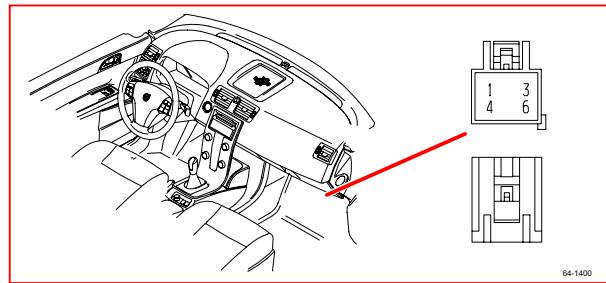

64/862 Connector

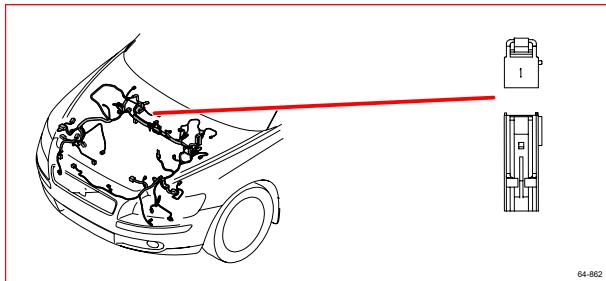


F/no. Fuse, passenger compartment

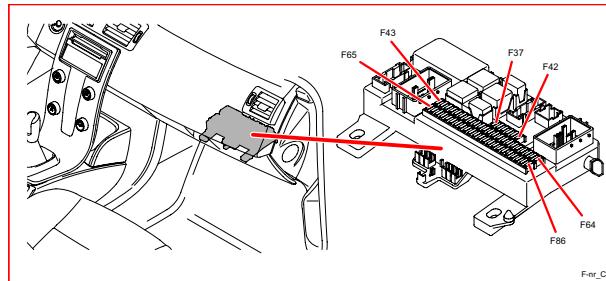


Component illustrations

F/no. - 64X/322


F/no. Fuse, engine compartment

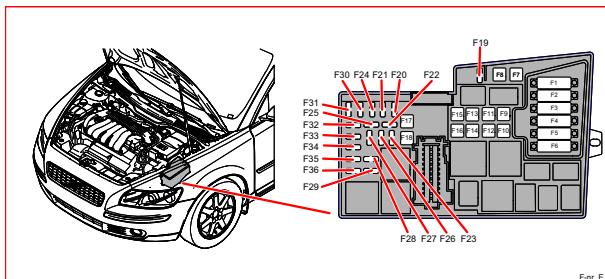

R/no. Relay, engine compartment

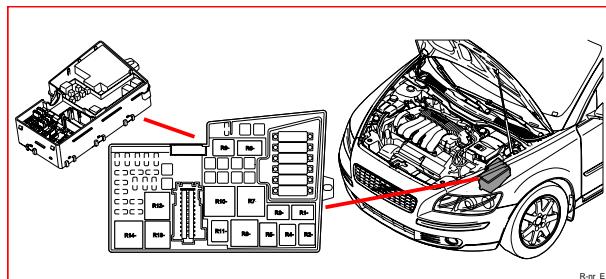


FH/no. Fuse in holder

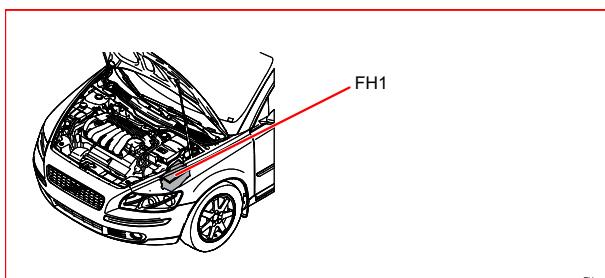


10X/17C Connector interface, original car
10X/18C Connector interface, original car
16X/1A Connector interface, original car
16X/105A Connector interface, original car
16X/105B Connector interface, original car
17X/19 Connector interface, original car
64X/322 Connector interface, original car


PF/no. Main fuse by battery

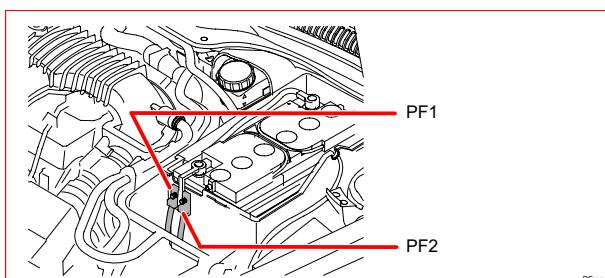

R/no. Relay, passenger compartment

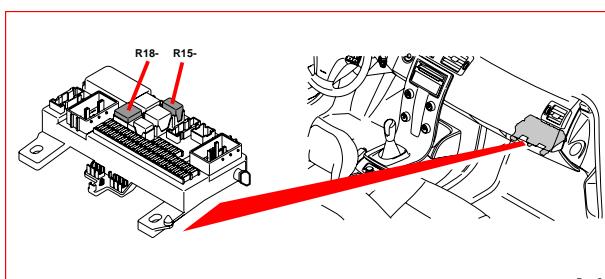

R/no. Relay, soldered

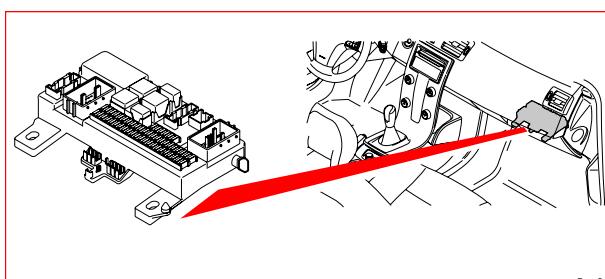

Index 1:2

12V outlet 117, 118

A

Abbreviations 7
Accessories 97, 116, 120, 121, 122, 140, 141, 142, 143, 144, 189, 190
Accessory Electronic Module (AEM) 46, 116
Alternator and voltage regulator, Group 32 70
Anti-theft alarm 114, 115
Audio 126, 128
Audio High Performance/Premium Sound 130, 132
Auto-dimming rearview mirror 191
Automatic beam length adjustment (Bi-Xenon) 79
Automatic transmission AW55-51 145
Auxiliary lights 97

B

Blind Spot Information System 169
Brake control system 148
Brake control system & DSTC 149
Brake lights 88, 89
Brake system, Group 59 148
Branching points 229

C

Cable harness routing in vehicle 240
Cellular phone 134
Central Electronic Module 36
Central locking system C70 153
Central locking, front doors 151
Central locking, fuel filler flap 158
Central locking, rear doors 152
Central locking, storage compartment 156
Central locking, tailgate 154
Child safety lock 157
Climate control system 184
Climate control system PTC elements 181
Climate control system, 4-cyl 182
Climate control system, Diesel 186
Climate control system, Group 87 181
Color abbreviations 7
Component illustrations 261
Connectors 195
Control modules 34
Cooling fan 66
Cooling fan, Diesel 67
Cooling system, Group 26 66
Countries/Markets, abbreviations 7
Cruise control, 4-cyl. 1.6 69
Cruise control, 5-cyl 68

D

Dashboard harness 245
Data communication, High speed CAN 40
Data communication, LIN 43
Data communication, Low speed CAN 38
Data communication, MOST 41
Diagnostics system 119
Differential Electronic Module (DEM) 147
Direction indicators 98, 100
Direction indicators, Bi-Xenon 99, 101
Doors and openings, Group 83 151
Driver information module 123
Driver's door harness 255
Driver's seat memory function 170, 171

E

Electric engine heater Flexifuel 190
Electrical distribution overview 10
Electronic power steering 150
Emission control, 4-cyl. 1.6 62
Emission control, 4-cyl. 1.8 63
Emission control, 5-cyl 64
Emission control, 5-cyl. Turbo 65
Engine compartment harness, 4-cyl. 244
Engine compartment harness, 5-cyl. 244
Engine compartment harness, Turbo 244
Engine control, Group 27 68
Engine harness 240
Engine harness, 4-cyl. 1.6l 240
Engine harness, 4-cyl. 1.8l 240
Engine harness, 5-cyl. 241
Engine harness Diesel 242
Engine harness, Turbo 241
Engine management system Diesel, 4-cyl. 1.6l 58
Engine management system Diesel, 4-cyl. 2.0l 60
Engine management system Diesel, 5-cyl. 2.4l 47, 48, 49
Engine management system, 4-cyl. 1.6l 50
Engine management system, 4-cyl. 1.8l 52
Engine management system, 5-cyl 54
Engine management system, 5-cyl. Turbo 56
Exterior decorative elements, etc., Group 84 165

F

Floor harness 246, 247
Floor harness V50 248
Fog lights 84, 85
Fog lights LHD, Japan 86, 87
Follow-me-home lighting 75
Driver's door harness 254
Front parking assistance 113
Fuel system, Group 23 47
Fuses 12, 15
Fuses by the battery 21
Fuses in the Central Electronic Module (CEM) 17, 18, 19, 20
Fuses in the engine compartment distribution box 12, 13, 14, 15, 16

G

Ground connections 27

H

Handsfree Max 142
Handsfree Universal 140
Hazard warning flashers 98, 100
Hazard warning flashers (Bi-Xenon) 99, 101
Headlight washer 103
Heated door mirrors 167
Heated rear window 168
Heated seats 180
High and low beam 76
High and low beam (Bi-Xenon) 77
Horn 106
How to use the wiring diagrams 8

I

Ignition switch and relays 22
Ignition switch symbols 7
Immobilizer 107
Instrument and control illumination 96
Instruments, Group 38 123, 125

Index 2:2

Interior lighting 92, 93, 94
Internal equipment, Group 88 191, 192

K

Keyless Vehicle Module (KVM) 108, 110

L

Lighting, Group 35 75

M

Manual beam length adjustment 78
MOST 41, 46
Multimedia 137

O

Other, abbreviations 7
Other, Group 39 126
Overview of control module designations 35
Overview of control module locations 34
Overview of ground connections 27

P

Parking heater, auxiliary heater 188
Passenger door harness 254, 255, 256
Position/Parking lights 80
Position/Parking lights, (Bi-Xenon) 81
Power door mirrors 165
Power driver's seat with memory function 170, 171, 172
Power passenger seat with memory function 174, 175
Power roof 164
Power seat 176, 178
Power sunroof 163
Power supply 71
Power supply, 4-cyl 70
Power windows, front doors 160, 161
Power windows, rear doors 162
PTC element 181

R

Rear door harness 257
Rear parking assistance 112

Rear window wiper/washer 104
Relay, electric engine heater 189
Relays 22
Relays in Engine compartment distribution box 23
Relays in the Central Electronic Module (CEM) 24
Relays, general 22
Reversing lights 90, 91
Roof harness S40 252
Roof harness V50 252

S

Satellite radio 136
Seat belt reminder 124, 125
Signal receiver, remote-control, central locking 159
Soldered relays 25
SRS 192, 193
Start Control Module (SCU) 45
Starting system, 4-cyl 72
Starting system, 5-cyl 73
Starting system, 5-cyl. Diesel 74
Starting system, Group 33 72
Steering column lock module (SCL) 107
Steering, Group 64 150
Supplemental Restraint System Module (SRS) 192, 193

T

Table of Contents 3
Tail lights 80
Tail lights (Bi-Xenon) 81
Tow hitch cable harness, 13-pin 122
Tow hitch cable harness, 7-pin 120, 121
Traffic information 137
Transmission M66 146
Transmission, Group 43 145
Trunk lid/tailgate harness 259
Tunnel harness 253
Turn by Turn navigation 138

W

Windshield wiper/washer 102
Wiring and fuses, Group 37 117

List of components 1:6

1/1	Battery	3/111	Light Switch Module (LSM)
2/16	Relay, rear window wiper	3/112	Climate Control Module (CCM)
2/17	Relay, horn	3/117	Switch unit, ceiling light
2/22	Relay, climate control system	3/126	Driver Door Module (DDM)
2/23	Relay, fuel pump	3/127	Passenger Door Module (PDM)
2/32	Main relay, engine management system	3/128	Rear Left Door Module (LDM)
2/34	Relay, front fog lights	3/129	Rear Right Door Module (RDM)
2/35	Relay, starter motor	3/155	Program selector, automatic transmission
2/63	Relay, high beam	3/156	Gear Selector Module (GSM)
2/64	Relay, auxiliary lights (accessory)	3/157	Switch, passenger side airbag
2/80	Relay, reversing light	3/173	Switch, trunk lid/tailgate private lock
2/82	Relay, heated rear window	3/174	Switch, reduced alarm
2/89	Relay, interior lighting	3/217	Belt buckle contact, rear left
2/92	Relay, windshield washer motor	3/218	Belt buckle contact, center rear
2/93	Relay, rear window washer motor	3/219	Belt buckle contact, rear right
2/142	Fuel filter preheater relay	3/254	Steering Wheel Module (SWM)
2/157	Relay, subwoofer control module	3/255	Position sensor, driver's seat
2/159	Relay, infotainment	3/256	Position sensor, passenger seat
2/182	Relay, headlight washer motor	3/258	Contact, locking front left
2/192	Relay, electric engine heater, 4-cyl.	3/259	Contact, locking, front right
2/192	Relay, electric engine heater, 5-cyl.	3/260	Contact, locking, rear left
2/193	Relay, comfort functions	3/261	Contact, locking, rear right
2/238	Relay, audio disconnection	3/262	Contact, unlocking, front left
3/1	Ignition switch	3/263	Contact, unlocking, front right
3/4	Switch unit, cruise control (SWS)	3/264	Contact, unlocking, rear left
3/6	Switch, hazard warning flashers	3/265	Contact, unlocking, rear right
3/8	Switch, heated rear window/exterior rearview mirrors	3/267	Switch unit, telematics
3/8	Switch, heated rear window/exterior rearview mirrors	3/268	Load assistance switch
3/8	Switch, heated rear window/exterior rearview mirrors	3/271	Contact, immobilizer, clutch pedal
3/8	Switch, heated rear window/exterior rearview mirrors	3/286	BLIS switch
3/9	Contact brake light	4/7	Combustion Preheater Module (CPM)
3/10	Reversing light contact	4/9	Supplemental Restraint System Module (SRS)
3/25	Switch, power sunroof	4/16	Brake Control Module (BCM)
3/25	Switch, power roof, C70	4/28	Transmission Control Module (TCM)
3/26	Switch unit, power driver's seat	4/31	Fan control module
3/27	Switch unit, power passenger seat	4/33	Sunroof control module
3/35	Switch, handle, trunk lid/tailgate	4/46.1	Engine Control Module (ECM), 5-cyl
3/37	Contact horn	4/46.2	Engine Control Module (ECM), 5-cyl. Turbo
3/39	Clutch pedal contact	4/46.3	Engine Control Module (ECM), 5-cyl. 2.4l D
3/46	Seat contact, passenger seat	4/46.4	Engine Control Module (ECM), 4-cyl. 2.0l D
3/47	Parking brake contact	4/46.5	Engine Control Module (ECM), 4-cyl. 1.6l D
3/60	Switch, auxiliary lights	4/46.6	Engine Control Module (ECM), 4-cyl. 1.8l
3/62	Hood alarm contact	4/46.7	Engine Control Module (ECM), 4-cyl. 1.6l
3/74	Lock unit, driver's door	4/52	Power Seat Module (PSM)
3/75	Lock unit, passenger door	4/56	Central Electronic Module (CEM)
3/76	Lock unit, rear left door	4/56 A-H	Central Electronic Module (CEM)
3/77	Lock unit, rear right door	4/59	Convertible Roof Module (CRM)
3/78	Lock unit, trunk lid/tailgate	4/71	Cooling fan control module
3/80	Switch, central locking driver's door	4/78	Accessory Electronic Module (AEM)
3/81	Power window switches, driver's door	4/82	Differential Electronic Module (DEM)
3/82	Switch, central locking passenger door	4/83	Control module fuel pump
3/83	Switch, power window passenger door	4/86	Parking Assistance Module (PAM)
3/85	Power window switch, rear left door	4/93	Keyless Vehicle Module (KVM)
3/86	Power window switch, rear right door		
3/93	Belt buckle contact, driver's seat		
3/94	Belt buckle contact, passenger seat		

List of components 2:6

4/102	Steering Column Lock Module (SCL)	6/103	Damper Motor Module (DMM), floor/ventilation
4/103	Remote Receiver Module (RRX)	6/104	High pressure headlight washer motor
4/103	Signal receiver, keyless vehicle (RKE)	6/114	Vacuum pump
4/109	Glow plug control module	6/117	Interior temperature sensor
4/110	Trailer Module (TRM)	6/118	Regulator motor, swirl throttle
4/111	Additive Dosing Module (ADM)	6/120	Engine throttle body
4/112	Control module, gas discharge lamp master, left	6/143	Regulator motor, Turbo
4/113	Control module, gas discharge lamp slave, right	6/149	Electric catch motor
4/126	Left Camera Module (LCM)	6/155	Pump unit, roof operation
4/127	Right Camera Module (RCM)	7/4	Brake fluid level sensor
5/1	Driver Information Module (DIM)	7/5	Washer fluid level sensor
6/1	Wiper Motor Module (WMM)	7/6	Oil pressure monitor, 4-cyl
6/2	Washer pump	7/6	Oil pressure monitor, 5-cyl
6/16	Motor driver's seat, backrest angle	7/8	Oil pressure monitor, Turbo
6/17	Motor driver's seat, up/down front edge	7/12	Oil pressure monitor, Diesel
6/18	Motor driver's seat, up/down rear edge	7/15	Pressure sensor, climate control system
6/19	Motor driver's seat, fore/aft	7/16	Solar sensor, twilight sensor and indicator alarm
6/20	Motor passenger seat, fore/aft	7/17	Heated oxygen sensor, front
6/25	Starter motor	7/17	Sensor, coolant temperature
6/26	Alternator	7/17	Mass air flow sensor (MAF), 5-cyl
6/28	Motor, passenger compartment fan	7/17	Mass air flow sensor (MAF), Turbo
6/29	Motor, electric cooling fan	7/21	Camshaft position sensor
6/32	Rear window wiper motor	7/24	Front knock sensor, 4-cyl
6/33	Fuel pump	7/24	Front knock sensor, 5-cyl
6/35	Fuel pump, auxiliary heater	7/24	Front knock sensor, Turbo
6/37	Lock motor, fuel filler flap	7/25	Impulse sensor, 4-cyl
6/38	Motor, left headlight adjustment	7/25	Impulse sensor, 5-cyl
6/39	Motor, right headlight adjustment	7/25	Impulse sensor, Turbo
6/48	Damper Motor Module (DMM), recirculation	7/25	Impulse sensor, Diesel
6/62	Power rear-view mirror driver's door	7/31	Sensor ABS, front left
6/63	Power passenger door mirror	7/32	Sensor ABS, front right
6/64	Motor, passenger seat backrest angle	7/41	Temperature sensor evaporator
6/65	Motor, passenger seat, front edge up/down	7/51	Accelerator pedal sensor
6/66	Motor passenger seat, up/down rear edge	7/56	Sensor ABS, rear left
6/67	Pump, fuel leakage control	7/57	Sensor ABS, rear right
6/71	Electrical Power Steering Module (EPS)	7/61	Sensor input speed
6/73	Coolant pump, auxiliary heater	7/62	Sensor output speed
6/95	Damper Motor Module (DMM), temperature, left side	7/69	Sensor outdoor temperature
6/96	Damper Motor Module (DMM), right-hand side	7/71	Sensor boost pressure
6/99	Engine EGR	7/74	Sensor oil temperature, automatic transmission
6/102	Damper Motor Module (DMM), defroster	7/77	Temperature sensor, intake air 1
		7/77	Temperature sensor, intake air 2
		7/81	Pressure sensor, intake manifold
		7/82	Heated oxygen sensor, rear
		7/86	Intake air temperature sensor, Diesel
		7/93	Occupant Weight Sensor (OWS)

List of components 3:6

7/100	Level sensor alarm, S40	8/3	Electromagnetic clutch, climate control system
7/100	Level sensor alarm, V50		Injection valves
7/100	Level sensor, alarm, C70	8/6-10	EVAP valve
7/108	Side impact sensor, rear left	8/18	Solenoid, variable valve timing, intake
7/109	Side impact sensor, rear right	8/19	Turbocharger control valve
7/110	Sensor temperature driver's seat	8/28	Airbag igniter, driver's side
7/111	Sensor temperature passenger seat	8/30	Airbag igniter, passenger side
7/115	Side impact sensor, left B-post	8/31	Igniter, airbag stage 2, passenger side
7/116	Side impact sensor, right B-post	8/32	Igniter, belt tensioner, driver's side
7/120	Angle sensor, Bi-Xenon rear	8/33	Igniter, belt tensioner, passenger side
7/121	Angle sensor, Bi-Xenon front	8/34	Solenoid shift lock
7/122	Mass Movement Sensor module (MMS), front, S40/V50	8/36	Automatic transmission
7/122	Mass Movement Sensor module (MMS), front, C70	8/37	Shift solenoid 1
7/123	Clutch pedal sensor	8/38	Shift solenoid 2
7/124	Sensor brake pedal	8/39	Lock-up solenoid
7/130	Fuel level sensor, ejector side	8/40	Pressure solenoid
7/131-		8/41	Solenoid, variable valve timing, intake
7/134	Rear parking assistance sensor	8/45	Auto-dimming rearview mirror
7/143	Sensor fuel level, pump side	8/48	Igniter side airbag, driver's side
7/149	Rain Sensor Module (RSM)	8/51	Igniter side airbag, passenger side
7/154	Sensor fuel temperature	8/52	Igniter, rear left belt tensioner
7/156	Fuel pressure and temperature sensor, 5-cyl	8/55	Igniter, rear right belt tensioner
7/156	Pressure and temperature sensor fuel, Turbo	8/56	Igniter, left anti-roll bar
7/158	Rear mass movement sensor, S40/V50	8/57	Igniter, right anti-roll bar
7/158	Rear mass movement sensor, C70	8/58	Igniter, airbag stage 2, driver's side
7/159	Air Quality Sensor (AQS)	8/61	Pressure monitor, power steering, S40-V50
7/162	Pressure sensor, fuel line	8/65	Igniter, left inflatable curtain, S40/V50
7/163	Camshaft position sensor 2	8/66	Igniter, left inflatable curtain, C70
7/164	Body Sensor Cluster Stability Sensor (BSC)	8/67	Igniter, right inflatable curtain, S40/V50
7/165	Pressure and temperature sensor, intake manifold	8/71	Throttle solenoid
7/166	Oil level sensor	8/72	Shift solenoid 3
7/172	Position sensor camshaft, intake side	8/73	Shift solenoid 4
7/173	Position sensor camshaft, exhaust side	8/74	Shift solenoid 5
7/174	Differential pressure sensor, particle filter	8/77	Control valve, fuel volume
7/178	Front impact sensor, right	8/81	Solenoid, variable valve timing outlet
7/179	Front impact sensor, left	8/82	Solenoid, variable turbo geometry
7/182	Remote control IR sensor, RTI	8/84	Switch, vacuum pump
7/186	Heated oxygen sensor, rear	8/92	Lap belt tensioner, driver
7/187	Center heated oxygen sensor	8/98	Control valve fuel pressure
7/190	Temperature sensor, exhaust gases upstream of particle filter	8/99	Igniter, steering column
7/191	Temperature sensor, exhaust gases downstream of particle filter	8/111	High-pressure solenoid valve, Diesel
7/192	Water detection sensor	8/113	Bypass valve, EGR cooling
7/193	Position sensor turbo	8/114	Valve mixing air/fuel
7/194	Sensor belt roller, driver	8/119	Pressure monitor, climate control system
7/195	Sensor belt roller, passenger	8/120	EGR valve
7/198	Detector, windshield frame	8/121	Valve coolant
7/204-		8/122	Bypass valve, intercooler
7/207	Front parking assistance sensor	8/127	Pressure switch, climate control system
7/208	Side impact sensor, left door, C70	8/128	Driver's belt force limiter
7/209	Side impact sensor, right door, C70	8/129	Passenger belt force limiter
7/220	Hall sensor, cargo compartment, C70	8/132	Control valve inlet
7/221	Position sensor, rear roof section, C70	8/133	Control valve fuel pressure
7/222	Position sensor, front roof section, C70	8/134	Solenoid, reverse interlock, manual
7/223	Cargo compartment detector, C70	8/137	Lock motor, left door compartment
7/224	Hall sensor, roof, C70	8/138	Lock motor, right door compartment
7/230	Sensor, folding of backrest	8/139	Lock motor, ski hatch
7/231	Sensor, folding of backrest	8/140	Lock motor, rear left seat compartment
		8/141	Lock motor, rear right seat compartment

List of components 4:6

9/1	Front 12V outlet	10/25	Cargo compartment lighting
9/2	Heated rear window	10/26	Reading light, rear left
9/12	Seat Heating Module (SHM), driver's side	10/27	Reading light, rear right
9/13	Seat Heating Module (SHM), passenger side	10/29	Glove compartment lighting
9/16	Heating element, driver's seat backrest	10/43	Right brake light, S40/V50
9/17	Heating element, passenger seat backrest	10/44	Right brake light, C70
9/18	Heating element, driver's seat cushion	10/45	Right tail light 1, S40/V50
9/19	Heating element, passenger seat cushion	10/46	Right tail light 1, C70
9/25	Rear 12V outlet	10/47	Right tail light 2, S40/V50
9/30	Auxiliary heater	10/48	Right tail light 2, C70
9/32	PTC resistor, oil trap	10/49	Rear right fog light, S40/V50
9/33	Electrically heated rear-view mirror, driver's door	10/50	Rear right fog light, C70
9/34	Electrically heated rear-view mirror, passenger door	10/51	Rear right direction indicator, S40/V50
9/38	Electrically heated fuel filter	10/52	Rear right direction indicator, C70
9/41	PTC-element	10/53	Right reversing light, S40/V50
9/41.1	Electric engine heater	10/54	Right reversing light, C70
10/1	Lamp housing, front left	10/55	Left brake light, S40/V50
10/2	Lamp housing, front right	10/56	Left brake light, C70
10/3	License plate lighting	10/57	Left tail light 1, S40/V50
10/5	Fog light, front left	10/58	Left tail light 1, C70
10/6	Fog light, front right	10/59	Left tail light 2, S40/V50
10/11	Position/parking light, front left	10/60	Left tail light 2, C70
10/12	Position/parking light, front right	10/61	Rear left fog light, S40/V50
10/13	Direction indicator, front left	10/62	Rear left fog light, C70
10/14	Direction indicator, front right	10/63	Rear left direction indicator, S40/V50
10/15	Direction indicator, rear-view mirror driver's door	10/64	Rear left direction indicator, C70
10/16	Direction indicator, passenger door mirror	10/65	Left reversing light, S40/V50
10/17	Lamp housing, rear right, S40/V50	10/66	Left reversing light, C70
10/17	Lamp housing, rear right, C70	10/67	High beam, right
10/18	Lamp housing, rear left, S40/V50	10/68	Auxiliary light, front right
10/18	Lamp housing, rear left, C70	10/69	Low beam, right
10/19	Auxiliary brake light, S40/V50	10/70	High beam, left
10/19	Auxiliary brake light, C70	10/71	Auxiliary light, front left
10/22	Ceiling light, S40/V50	10/72	Low beam, left
10/22	Ceiling light, C70	10/73	Courtesy lighting, left
10/24	Cargo compartment lighting, S40	10/74	Courtesy lighting, right
10/24	Cargo compartment lighting, C70	10/75	Vanity mirror lighting, left
		10/76	Vanity mirror lighting, right
		10/77	Lighting, rear-view mirror driver's door
		10/78	Lighting, rear-view mirror passenger door
		10/79	Rear reading light
		10/80	Lock indicator, left door
		10/81	Lock indicator, right door
		15/31	Distribution box in engine compartment

List of components 5:6

16/1	Integrated Audio Module (IAM)	16/145	Remote Digital Audio Receiver (RDAR)
16/1.2	Infotainment Control Module (ICM)	16/150	AM/FM antenna and amplifier, rear right fender
16/3	Speaker, passenger door	16/151	Distribution filter, front left door
16/4	Speaker, driver's door	16/152	Distribution filter, front right door
16/5	Speaker, rear right door		
16/6	Speaker, rear left door		
16/9	Window antenna	17/13	Data link connector
16/9.1	TMC antenna	17/19	12V outlet, cargo compartment
16/10	Horn 1	17/37	4-pin outlet, tow hitch cable harness
16/11	Horn 2	17/38	7-pin outlet, tow hitch cable harness
16/16	Window antenna amplifier	17/39	13-pin outlet, tow hitch cable harness
16/26	Speaker, dashboard middle	17/40	External equipment input (AUX)
16/35	Siren Control Module (SCM), S40		
16/35	Siren Control Module (SCM), V50		
16/35	Siren Control Module (SCM), C70		
16/45	Road Traffic Information module (RTI)	18/4	Contact reel
16/46	RTI Display	20/3-7	Spark plug and ignition coil
16/46.1	RTI Display	20/17	Transformer, ignition coils
16/47	GSM/GPS/RDAR antenna, S40/V50	20/22-26	Glow plug
16/47	GSM/GPS/RDAR antenna, C70	26/5	DC/AC converter, fuel tank
16/49	Traffic Message Channel Module (TMC)		
16/49.1	Traffic Message Channel Module (TMC)	31/3	Ground connection, left MacPherson strut tower
16/55	Treble speaker, driver's door	31/4	Ground connection, engine
16/56	Treble speaker, passenger door	31/6	Ground connection, A-post, driver's side
16/60	Phone Module (PHM)	31/10	Ground connection, A-post, passenger side
16/62	Hand unit, cellular phone	31/11	Ground connection, rear left side
16/64	Cellular phone antenna, S40/V50	31/12	Ground connection, rear right side
16/64	Cellular phone antenna, C70	31/52	Ground connection, left MacPherson strut tower
16/67	Antenna amplifier, bumper	31/66	Ground connection, front left seat riser
16/68	TMC and FM subantenna, bumper	31/67	Ground connection, front right seat riser
16/79	Subwoofer Module (SUB), S40/V50	31/80	Ground connection, left MacPherson strut tower
16/79	Subwoofer Module (SUB), C70		
16/93	Control module, cellular phone handsfree	31/83	Ground connection, A-post, driver's side
16/98	Microphone	31/84	Ground connection, A-post, passenger side
16/105	Audio Module (AUD)	31/88	Ground connection, engine
16/108	Multimedia Module (MMM)	31/89	Ground connection, engine
16/126	Holder, handsfree cellular phone	31/102	Ground connection, front member, 4-cyl.
16/127	Microphone, handsfree cellular phone	31/102	Ground connection, front member, 5-cyl.
16/128	Antenna, front left door lock	31/107	Ground connection, tailgate (V50)
16/129	Antenna, door lock, front right	31/110	Ground connection, right MacPherson strut tower
16/130	Antenna, rear left door lock	31/112	Ground connection, right MacPherson strut tower
16/131	Antenna, rear right door lock	31/114	Ground connection, left MacPherson strut tower
16/132	Antenna, door lock, bumper	31/115	Ground connection, left A-post
16/133	Antenna, rear door lock cabin 1, S40/V50	31/116	Ground connection, right A-post
16/133	Antenna door lock cabin 1 rear, C70	31/119	Ground connection, left MacPherson strut tower
16/134	Antenna, door lock cabin 2, S40/V50		
16/134	Antenna, door lock cabin 2, C70		
16/135	Antenna, door lock cabin 3, S40/V50		
16/135	Antenna, door lock cabin 3, C70		
16/136	Treble speaker, rear left door		
16/137	Treble speaker, rear right door		
16/138	Rear window antenna, right		
16/139	Global Positioning System module (GPS)		
16/140	SIM card reader		
16/141	Interference filter, rear window, left		
16/142	Interference filter, rear window, right		

List of components 6:6

63/no.	Branching point	64/599	Connector
64/25G	Connector	64/600	Connector
64/30	Connector	64/660	Connector
64/31	Connector	64/661	Connector
64/34	Connector	64/662	Connector
64/40	Connector	64/663	Connector
64/41	Connector	64/707	Connector
64/43	Connector	64/708	Connector
64/45	Connector	64/816	Connector
64/47	Connector	64/817	Connector
64/48	Connector, S40/V50	64/861	Connector
64/49	Connector	64/862	Connector
64/50	Connector	64/978	Connector
64/51	Connector	64/979	Connector
64/53	Connector	64/1300	Connector
64/60	Connector	64/1400	Connector
64/70	Connector		
64/79V	Connector	F/no.	Fuse, passenger compartment
64/80	Connector	F/no.	Fuse, engine compartment
64/80A	Connector		
64/90	Connector	FH/no.	Fuse in holder
64/111	Connector		
64/112	Connector	PF/no.	Main fuse by battery
64/113	Connector		
64/114	Connector	R/no.	Relay, passenger compartment
64/120	Connector	R/no.	Relay, soldered
64/179	Connector	R/no.	Relay, engine compartment
64/233	Connector	10X/17C	Connector interface, original car
64/245	Connector	10X/18C	Connector interface, original car
64/246	Connector	16X/1A	Connector interface, original car
64/250	Connector	16X/105A	Connector interface, original car
64/322	Connector	16X/105B	Connector interface, original car
64/425	Connector	17X/19	Connector interface, original car
64/545	Connector	64X/322	Connector interface, original car
64/596	Connector		



TP 3999202 (US English). Printed in Sweden, Gothenburg 06-2006